

Compatibility for ECM-W1M

Camcorders Windows 8 & Windows 8.1 Compatibility Information

Article ID:521103(modified 30-Dec-2013)

Applicable Models

- [Action Cam](#)
- [Full HD Interchangeable Lens Camcorders](#)
- [HD Handycam Camcorders \(Memory Card\)](#)
- [HD Handycam Camcorders \(HDD\)](#)
- [HD Handycam Camcorders \(HDV\)](#)
- [HD Handycam Camcorders \(DVD\)](#)
- [SD Handycam Camcorders \(Memory Card\)](#)
- [SD Handycam Camcorders \(HDD\)](#)
- [SD Handycam Camcorders \(DVD\)](#)
- [SD Handycam Camcorders \(DV\)](#)
- [SD Digital 8 Handycam Camcorders \(DV\)](#)
- [SD MICROMV Handycam Camcorders](#)
- [Digital Recording Binoculars](#)
- [Net Sharing Cam](#)

Regarding the operating environment:

- The Operating System must be factory installed on your PC.
- Operation cannot be guaranteed if an upgrade from the previous OS has been performed.
- Operation is not guaranteed for all PC model.

Important Notes:

- Windows Movie Maker 2012 is used to confirm the operation of the i.LINK connection.
- USB stream function does not support Windows 8/8.1.
- System and product names used in this website are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the ™ or ® marks are not used in all cases in this website.

Legend:

O : Compatible
X : Not Compatible
– : Not Verified
NA: Not Applicable

Model Name	Windows 8				Windows 8.1			
	USB Connection	Notes	i.LINK	Notes	USB Connection	Notes	i.LINK	Notes
Action Cam								
HDR-AS30V	O				O	*5		
RM-LVR1	O				O			
HDR-AS15	O				O	*5		
Back to Top								
Full HD Interchangeable Lens Camcorders								
NEX-VG30	O				O			
NEX-VG30E	O				O			
NEX-VG30H	O				O			
NEX-VG30EH	O				O			
NEX-VG900	O				O			
NEX-VG900E	O				O			
NEX-VG20	O				O			
NEX-VG20E	O				O			
NEX-VG20H	O				O			
NEX-VG20EH	O				O			
NEX-VG10	O				O			
NEX-VG10E	O				O			
Back to Top								
HD Handycam Camcorders (Memory Card)								
FDR-AX1	O				O			
FDR-AX1E	O				O			
HDR-MV1	O				O	*5		
HDR-CX220	O				O			
HDR-CX220E	O				O			
HDR-CX230E	O				O			
HDR-CX280	O				O			
HDR-CX280E	O				O			
HDR-CX290	O				O			
HDR-CX290E	O				O			
HDR-CX380	O				O			

HDR-CX380E	0				0			
HDR-CX430V	0				0			
HDR-CX430VE	0				0			
HDR-GW66E	0				0	<u>*5</u>		
HDR-GWP88	0				0	<u>*5</u>		
HDR-GWP88V	0				0	<u>*5</u>		
HDR-GWP88VE	0				0	<u>*5</u>		
HDR-PJ230	0				0			
HDR-PJ230E	0				0			
HDR-PJ380	0				0			
HDR-PJ380E	0				0			
HDR-PJ430	0				0			
HDR-PJ430E	0				0			
HDR-PJ430V	0				0			
HDR-PJ430VE	0				0			
HDR-PJ660	0				0			
HDR-PJ660E	0				0			
HDR-PJ660VE	0				0			
HDR-PJ790	0				0			
HDR-PJ790E	0				0			
HDR-PJ790V	0				0			
HDR-PJ790VE	0				0			
HDR-TD30	0	<u>*1</u>			0	<u>*1</u>		
HDR-TD30E	0	<u>*1</u>			0	<u>*1</u>		
HDR-TD30V	0	<u>*1</u>			0	<u>*1</u>		
HDR-TD30VE	0	<u>*1</u>			0	<u>*1</u>		
HDR-CX190	0	<u>*1</u>			0	<u>*1</u>		
HDR-CX190E	0	<u>*1</u>			0	<u>*1</u>		
HDR-CX200	0	<u>*1</u>			0	<u>*1</u>		
HDR-CX200E	0	<u>*1</u>			0	<u>*1</u>		
HDR-CX210	0	<u>*1</u>			0	<u>*1</u>		
HDR-CX210E	0	<u>*1</u>			0	<u>*1</u>		
HDR-CX250	0	<u>*1</u>			0	<u>*1</u>		

HDR-CX250E	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX260E	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX260V	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX260VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX580V	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX580VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX760E	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX760V	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX760VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-GW77	O	<u>*1</u>			O	<u>*1 *5</u>		
HDR-GW77E	O	<u>*1</u>			O	<u>*1 *5</u>		
HDR-GW77V	O	<u>*1</u>			O	<u>*1 *5</u>		
HDR-GW77VE	O	<u>*1</u>			O	<u>*1 *5</u>		
HDR-PJ200	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ200E	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ260	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ260E	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ260V	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ260VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ580	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ580E	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ580V	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ580VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ710	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ710V	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ710VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ720E	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ760	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ760E	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ760V	O	<u>*1</u>			O	<u>*1</u>		
HDR-PJ760VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-TD20	O	<u>*1</u>			O	<u>*1</u>		
HDR-TD20E	O	<u>*1</u>			O	<u>*1</u>		
HDR-TD20V	O	<u>*1</u>			O	<u>*1</u>		

HDR-TD20VE	O	<u>*1</u>			O	<u>*1</u>		
HDR-CX130	O				O			
HDR-CX130E	O				O			
HDR-CX160	O				O			
HDR-CX160E	O				O			
HDR-CX360	O				O			
HDR-CX360E	O				O			
HDR-CX560	O				O			
HDR-CX560E	O				O			
HDR-CX700	O				O			
HDR-CX700E	O				O			
HDR-CX700VE	O				O			
HDR-PJ10	O				O			
HDR-PJ10E	O				O			
HDR-PJ30	O				O			
HDR-PJ30E	O				O			
HDR-PJ30VE	O				O			
HDR-TD10	O	<u>*1</u>			O	<u>*1</u>		
HDR-TD10E	O	<u>*1</u>			O	<u>*1</u>		
HDR-AX2000	O				O			
HDR-AX2000E	O				O			
HDR-CX110	O				O			
HDR-CX110E	O				O			
HDR-CX150	O				O			
HDR-CX150E	O				O			
HDR-CX300E	O				O			
HDR-CX350	O				O			
HDR-CX350E	O				O			
HDR-CX350VE	O				O			
HDR-CX550	O				O			
HDR-CX550E	O				O			
HDR-CX550VE	O				O			
HDR-CX500	O				O			
HDR-CX500E	O				O			

HDR-CX500VE	O				O			
HDR-CX520	O				O			
HDR-CX520E	O				O			
HDR-CX520VE	O				O			
HDR-CX100	O				O			
HDR-CX100E	O				O			
HDR-TG5	O				O			
HDR-TG5E	O				O			
HDR-TG5VE	O				O			
HDR-CX12	O				O			
HDR-CX12E	O				O			
HDR-TG1	O				O			
HDR-TG1E	O				O			
HDR-CX7K	O				O			
HDR-CX7EK	O				O			

[Back to Top](#)

HD Handycam Camcorders (HDD)

HDR-PJ600E	O	*1			O	*1		
HDR-PJ600V	O	*1			O	*1		
HDR-PJ600VE	O	*1			O	*1		
HDR-XR260E	O	*1			O	*1		
HDR-XR260V	O	*1			O	*1		
HDR-XR260VE	O	*1			O	*1		
HDR-PJ50	O				O			
HDR-PJ50E	O				O			
HDR-PJ50VE	O				O			
HDR-XR160	O				O			
HDR-XR160E	O				O			
HDR-XR150	O				O			
HDR-XR150E	O				O			
HDR-XR350	O				O			
HDR-XR350E	O				O			
HDR-XR350VE	O				O			
HDR-XR550	O				O			

HDR-XR550E	O				O			
HDR-XR550VE	O				O			
HDR-XR100	O				O			
HDR-XR100E	O				O			
HDR-XR200	O				O			
HDR-XR200E	O				O			
HDR-XR200VE	O				O			
HDR-XR500	O				O			
HDR-XR500E	O				O			
HDR-XR500VE	O				O			
HDR-XR520	O				O			
HDR-XR520E	O				O			
HDR-XR520VE	O				O			
HDR-SR10	O				O			
HDR-SR10E	O				O			
HDR-SR11	O				O			
HDR-SR11E	O				O			
HDR-SR12	O				O			
HDR-SR12E	O				O			
HDR-SR5	O				O			
HDR-SR5E	O				O			
HDR-SR7	O				O			
HDR-SR7E	O				O			
HDR-SR8	O				O			
HDR-SR8E	O				O			
HDR-SR1	O				O			
HDR-SR1E	O				O			

[Back to Top](#)

HD Handycam Camcorders (HDV)

HDR-FX1000	O		X	*2	O		X	*2
HDR-FX1000E	O		X	*2	O		X	*2
HDR-HC9	O		X	*2	O		X	*2
HDR-HC9E	O		X	*2	O		X	*2
GV-HD700	O		X	*2	O		X	*2

GV-HD700E	O		X	*2	O		X	*2
HDR-HC5	O		X	*2	O		X	*2
HDR-HC5E	O		X	*2	O		X	*2
HDR-HC7	O		X	*2	O		X	*2
HDR-HC7E	O		X	*2	O		X	*2
HDR-FX7	O		X	*2	O		X	*2
HDR-FX7E	O		X	*2	O		X	*2
HDR-HC3	O		X	*2	O		X	*2
HDR-HC3E	O		X	*2	O		X	*2
HDR-HC1	O		X		O		-	
HDR-HC1E	O		X		O		-	
HDR-FX1	O		X		-		-	
HDR-FX1E	O		X		-		-	

[Back to Top](#)

HD Handycam Camcorders (DVD)

HDR-UX10E	O				O			
HDR-UX20	O				O			
HDR-UX20E	O				O			
HDR-UX5	O				O			
HDR-UX5E	O				O			
HDR-UX7	O				O			
HDR-UX7E	O				O			
HDR-UX1	O				O			
HDR-UX1E	O				O			

[Back to Top](#)

SD Handycam Camcorders (Memory Card)

DCR-PJ6	O				O			
DCR-PJ6E	O				O			
DCR-SX22	O				O			
DCR-SX22E	O				O			
DCR-PJ5	O				O			
DCR-PJ5E	O				O			
DCR-SX21	O				O			
DCR-SX21E	O				O			

DCR-SX45	O				O			
DCR-SX45E	O				O			
DCR-SX65	O				O			
DCR-SX65E	O				O			
DCR-SX85E	O				O			
DCR-SD1000E	O				O			
DCR-SX20	O				O			
DCR-SX20E	O				O			
DCR-SX20K	O				O			
DCR-SX20EK	O				O			
DCR-SX43	O				O			
DCR-SX43E	O				O			
DCR-SX44	O				O			
DCR-SX44E	O				O			
DCR-SX63	O				O			
DCR-SX63E	O				O			
DCR-SX83	O				O			
DCR-SX83E	O				O			
DCR-SX40	O				O			
DCR-SX40E	O				O			
DCR-SX41	O				O			
DCR-SX60	O				O			
DCR-SX60E	O				O			

[Back to Top](#)

SD Handycam Camcorders (HDD)

DCR-SR21	O				O			
DCR-SR21E	O				O			
DCR-SR20	O				O			
DCR-SR20E	O				O			
DCR-SR68	O				O			
DCR-SR68E	O				O			
DCR-SR88	O				O			
DCR-SR88E	O				O			
DCR-SR47	O				O			

DCR-SR47E	0				0			
DCR-SR67	0				0			
DCR-SR67E	0				0			
DCR-SR87	0				0			
DCR-SR87E	0				0			
DCR-SR45	0				0			
DCR-SR45E	0				0			
DCR-SR46	0				0			
DCR-SR46E	0				0			
DCR-SR65	0				0			
DCR-SR65E	0				0			
DCR-SR85	0				0			
DCR-SR85E	0				0			
DCR-SR220	0				0			
DCR-SR220E	0				0			
DCR-SR42	0				0			
DCR-SR42E	0				0			
DCR-SR62	0				0			
DCR-SR62E	0				0			
DCR-SR82	0				0			
DCR-SR82E	0				0			
DCR-SR200	0				0			
DCR-SR200E	0				0			
DCR-SR300	0				0			
DCR-SR300E	0				0			
DCR-SR40	0				0			
DCR-SR40E	0				0			
DCR-SR80	0				0			
DCR-SR80E	0				0			
DCR-SR60	0				0			
DCR-SR60E	0				0			
DCR-SR100	0				0			
DCR-SR100E	0				0			

[Back to Top](#)

SD Handycam Camcorders (DVD)								
DCR-DVD650	0				0			
DCR-DVD650E	0				0			
DCR-DVD850E	0				0			
DCR-DVD610	0				0			
DCR-DVD610E	0				0			
DCR-DVD710	0				0			
DCR-DVD710E	0				0			
DCR-DVD810	0				0			
DCR-DVD810E	0				0			
DCR-DVD910	0				0			
DCR-DVD910E	0				0			
DCR-DVD608	0				0			
DCR-DVD608E	0				0			
DCR-DVD708	0				0			
DCR-DVD708E	0				0			
DCR-DVD808	0				0			
DCR-DVD808E	0				0			
DCR-DVD908	0				0			
DCR-DVD908E	0				0			
DCR-DVD405	0				0			
DCR-DVD755	0				0			
DCR-DVD755E	0				0			
DCR-DVD805	0				0			
DCR-DVD805E	0				0			
DCR-DVD905	0				0			
DCR-DVD905E	0				0			
DCR-DVD7	0				0			
DCR-DVD7E	0				0			
DCR-DVD653	0				0			
DCR-DVD653E	0				0			
DCR-DVD703	0				0			
DCR-DVD703E	0				0			
DCR-DVD803	0				0			

DCR-DVD803E	O				O			
DCR-DVD101	X				X			
DCR-DVD101E	X				X			
DCR-DVD201	X				X			
DCR-DVD201E	X				X			
DCR-DVD100	X				X			
DCR-DVD100E	X				X			
DCR-DVD200	X				X			
DCR-DVD200E	X				X			

[Back to Top](#)

SD Handycam Camcorders (DV)

DCR-VX2200E	NA		X	*2	NA		X	*2
DCR-HC52	NA		O	*3	NA		O	
DCR-HC52E	NA		O	*3	NA		O	
DCR-HC54	NA		O	*3	NA		O	
DCR-HC54E	NA		O	*3	NA		O	
DCR-HC62	O		O	*3	O		O	
DCR-HC62E	O		O	*3	O		O	
DCR-HC28	NA		O	*3	NA		O	
DCR-HC28E	NA		O	*3	NA		O	
DCR-HC38	NA		O	*3	NA		O	
DCR-HC38E	NA		O	*3	NA		O	
DCR-HC48	O		O	*3	O		O	
DCR-HC48E	O		O	*3	O		O	
DCR-HC26	O		O	*3	O		O	
DCR-HC26E	O		O	*3	O		O	
DCR-HC36	O		O	*3	O		O	
DCR-HC36E	O		O	*3	O		O	
DCR-HC46	O		O	*3	O		O	
DCR-HC46E	O		O	*3	O		O	
DCR-HC96	O		O	*3	O		O	
DCR-HC96E	O		O	*3	O		O	
DCR-HC21	NA		O	*3	NA		-	
DCR-HC21E	NA		O	*3	NA		-	

DCR-HC32	O		O	<u>*3</u>	-		-	
DCR-HC32E	O		O	<u>*3</u>	-		-	
DCR-HC42	O		O	<u>*3</u>	-		-	
DCR-HC42E	O		O	<u>*3</u>	-		-	
DCR-HC43E	O		O	<u>*3</u>	-		-	
DCR-HC90	O		O	<u>*3</u>	-		-	
DCR-HC90E	O		O	<u>*3</u>	-		-	
DCR-PC55	O		O	<u>*3</u>	-		-	
DCR-PC55E	O		O	<u>*3</u>	-		-	
DCR-PC1000	O		O	<u>*3</u>	-		-	
DCR-PC1000E	O		O	<u>*3</u>	-		-	
DCR-HC88	O		O	<u>*3</u>	-		-	
DCR-PC350	O		O	<u>*3</u>	-		-	
DCR-PC350E	O		O	<u>*3</u>	-		-	
DCR-HC15	NA		O	<u>*3</u>	NA		-	
DCR-HC15E	NA		O	<u>*3</u>	NA		-	
DCR-HC20	NA		O	<u>*3</u>	NA		-	
DCR-HC20E	NA		O	<u>*3</u>	NA		-	
DCR-HC30	O		O	<u>*3</u>	-		-	
DCR-HC30E	O		O	<u>*3</u>	-		-	
DCR-HC40	O		O	<u>*3</u>	-		-	
DCR-HC40E	O		O	<u>*3</u>	-		-	
DCR-HC65	O		O	<u>*3</u>	-		-	
DCR-HC85	O		O	<u>*3</u>	-		-	
DCR-HC85E	O		O	<u>*3</u>	-		-	
DCR-HC1000	O		O	<u>*3</u>	-		-	
DCR-HC1000E	O		O	<u>*3</u>	-		-	
DCR-PC108	O		O	<u>*3</u>	-		-	
DCR-PC108E	O		O	<u>*3</u>	-		-	
DCR-PC109	O		O	<u>*3</u>	-		-	
DCR-PC109E	O		O	<u>*3</u>	-		-	
DCR-PC330	O		O	<u>*4</u>	-		-	
DCR-PC330E	O		O	<u>*4</u>	-		-	
DCR-VX2100	NA		O	<u>*4</u>	NA		-	

DCR-VX2100E	NA		O	<u>*4</u>	NA		-	
DCR-PC104E	NA		O	<u>*4</u>	NA		-	
DCR-PC105	O		O	<u>*4</u>	-		-	
DCR-PC105E	O		O	<u>*4</u>	-		-	
DCR-TRV19	NA		O	<u>*4</u>	NA		-	
DCR-TRV19E	NA		O	<u>*4</u>	NA		-	
DCR-TRV22	O		O	<u>*4</u>	-		-	
DCR-TRV22E	O		O	<u>*4</u>	-		-	
DCR-TRV33	O		O	<u>*4</u>	-		-	
DCR-TRV33E	O		O	<u>*4</u>	-		-	
DCR-TRV38	O		O	<u>*4</u>	-		-	
DCR-TRV38E	O		O	<u>*4</u>	-		-	
DCR-TRV60	O		O	<u>*4</u>	-		-	
DCR-TRV60E	O		O	<u>*4</u>	-		-	
DCR-TRV75	O		O	<u>*4</u>	-		-	
DCR-TRV75E	O		O	<u>*4</u>	-		-	
DCR-TRV80	O		O	<u>*4</u>	-		-	
DCR-TRV80E	O		O	<u>*4</u>	-		-	
DCR-PC101	O		O	<u>*4</u>	-		-	
DCR-PC101E	O		O	<u>*4</u>	-		-	
DCR-TRV16	NA		O	<u>*4</u>	NA		-	
DCR-TRV16E	NA		O	<u>*4</u>	NA		-	
DCR-TRV18	O		O	<u>*4</u>	-		-	
DCR-TRV18E	O		O	<u>*4</u>	-		-	
DCR-TRV25	O		O	<u>*4</u>	-		-	
DCR-TRV25E	O		O	<u>*4</u>	-		-	
DCR-TRV27	O		O	<u>*4</u>	-		-	
DCR-TRV27E	O		O	<u>*4</u>	-		-	
DCR-TRV40	O		O	<u>*4</u>	-		-	
DCR-TRV40E	O		O	<u>*4</u>	-		-	
DCR-TRV50	O		O	<u>*4</u>	-		-	
DCR-TRV50E	O		O	<u>*4</u>	-		-	
DCR-TRV940	O		O	<u>*4</u>	-		-	
DCR-TRV940E	O		O	<u>*4</u>	-		-	

DCR-TRV950	O		O	*4	-		-	
DCR-TRV950E	O		O	*4	-		-	

[Back to Top](#)

SD Digital 8 Handycam Camcorders (DV)

DCR-TRV285E	NA		O	*3	NA		-	
DCR-TRV480E	O		O	*3	-		-	
DCR-TRV265	NA		O	*3	NA		-	
DCR-TRV265E	NA		O	*3	NA		-	
DCR-TRV460	O		O	*3	-		-	
DCR-TRV460E	O		O	*3	-		-	
DCR-TRV461E	O		O	*3	-		-	
DCR-TRV147E	NA		O	*4	NA		-	
DCR-TRV250	NA		O	*4	NA		-	
DCR-TRV250E	NA		O	*4	NA		-	
DCR-TRV350	O		O	*4	-		-	
DCR-TRV351	O		O	*4	-		-	
DCR-TRV355E	O		O	*4	-		-	
DCR-TRV356E	O		O	*4	-		-	
DCR-TRV140	NA		O	*4	NA		-	
DCR-TRV140E	NA		O	*4	NA		-	
DCR-TRV240	NA		O	*4	NA		-	
DCR-TRV240E	NA		O	*4	NA		-	
DCR-TRV340	O		O	*4	-		-	
DCR-TRV340E	O		O	*4	-		-	
DCR-TRV740	O		O	*4	-		-	
DCR-TRV740E	O		O	*4	-		-	
DCR-TRV840	O		O	*4	-		-	

[Back to Top](#)

SD MICROMV Handycam Camcorders

DCR-IP1	O		X		-		-	
DCR-IP1E	O		X		-		-	
DCR-IP210	O		X		-		-	
DCR-IP210E	O		X		-		-	
DCR-IP220	O		X		-		-	

DCR-IP220E	O		X		-		-	
DCR-IP45	O		X		-		-	
DCR-IP45E	O		X		-		-	
DCR-IP55	O		X		-		-	
DCR-IP55E	O		X		-		-	
Back to Top								
Digital Recording Binoculars								
DEV-50V	O				O			
DEV-3	O	*1			O	*1		
DEV-5	O	*1			O	*1		
Back to Top								
Net Sharing Cam								
NSC-GC1	O				O			
Back to Top								

Notes:

- *1 : Images may not be imported properly if the PC is powered on after the USB connection is made. In this case, unplug the USB cable and then reconnect it.
- *2 : When using Windows Movie Maker 2012 in iLINK connection, movies cannot be imported from a tape. Use the latest version of [PlayMemories Home](#).
- *3 : When using Windows Movie Maker 2012 in iLINK connection, DV format movies cannot be played back. Use the latest version of [PlayMemories Home](#).
- *4 : When using Windows Movie Maker 2012 in iLINK connection, DV format movies cannot be played back.
- *5 : USB charging with a computer may not be available. Update the driver from Windows Update.