

TRU

LARGE CAPACITY
BURR GRINDER



MODEL BG-82 INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not leave product unattended while in use.
3. To protect against fire, electrical shock, or injury to persons DO NOT immerse cord, plug or appliance in water or other liquid.
4. To reduce the risk of severe injury to persons or damage to the appliance, keep hands and utensils out of the bean hopper while grinding, and when the grinder is plugged in.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
7. Avoid contacting moving parts.
8. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Do not use appliance for other than intended use.
14. To disconnect, turn Off, then remove plug from wall outlet.
15. Do not operate the grinder when empty.
16. Check grinding mechanism for presence of foreign objects before operating.
17. Always operate the grinder with the lid in place and all parts properly attached.
18. Do not attempt to defeat the safety interlock mechanism of the grind container and lid.

SAVE THESE INSTRUCTIONS

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, and;
- 2) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.


POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet. Do not pull on the line cord.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undo stress on the cord where it enters the appliance and cause it to fray and break.

BURR GRINDER FEATURES

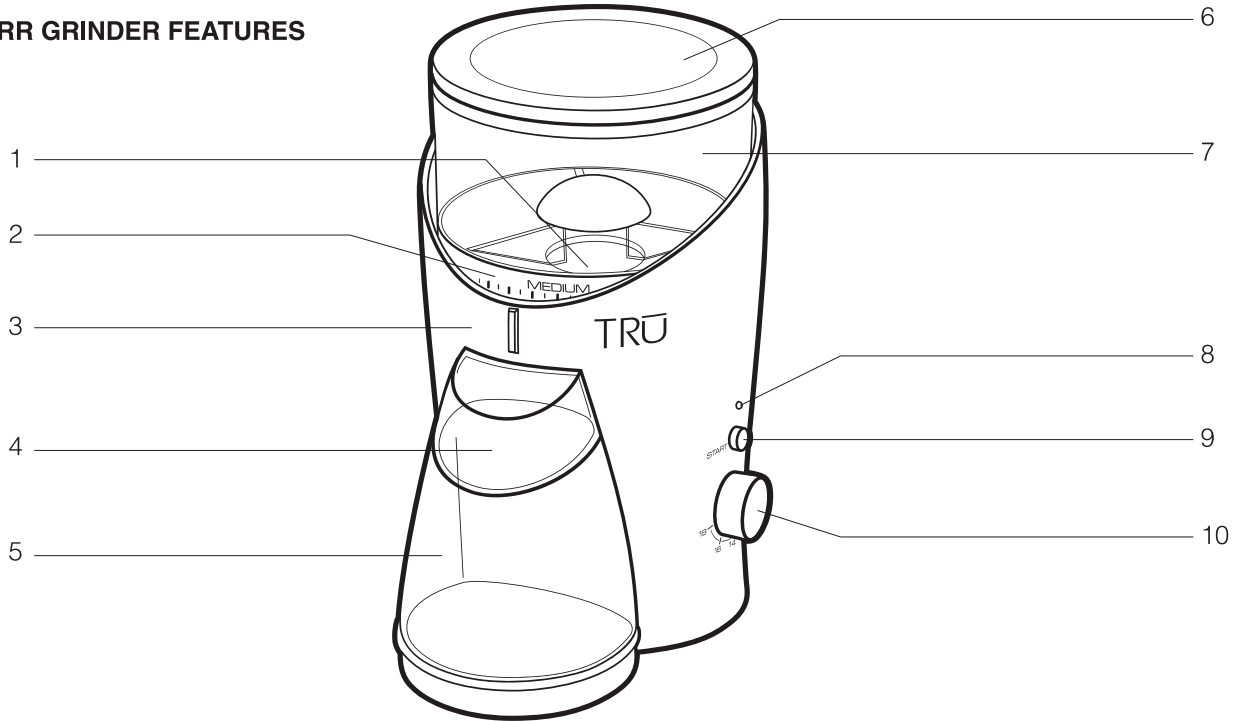

1. GRINDING MECHANISM

2. COARSENESS SELECTOR

3. GRINDER BASE

4. GRIND CONTAINER LID

5. GRIND CONTAINER

6. BEAN HOPPER LID

7. BEAN HOPPER

8. POWER INDICATOR LIGHT

9. START / STOP BUTTON

10. CUP SELECTOR DIAL

PREPARING FOR USE

1. Carefully unpack the Coffee Grinder and all parts. Remove any tape, labels or packaging materials.
2. Disassemble the Coffee Grinder and hand wash all parts, except for the main base with warm, soapy water. Wipe with a clean, damp cloth and dry thoroughly.
3. Wipe exterior surfaces of the main base with a soft, moist cloth to remove dust particles collected during packing and handling. NEVER IMMERSSE THE COFFEE GRINDER, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.
4. Be sure all parts are properly assembled and in place before use.
5. Place Coffee Grinder on a solid, level, dry surface.

GRINDING COFFEE

1. Make sure the Coffee Grinder is on a solid, level, dry surface.
2. Remove Bean Hopper Lid and fill the Bean Hopper with coffee beans. The maximum capacity is approximately 250 grams (or 1/2 pound) of whole coffee beans. Do not overfill and make sure the Bean Hopper Lid fits flat and securely.

Cups of Coffee to Brew	Whole Beans Required
2 cups	2 tsp, 10 grams, or 0.35 oz.
4 cups	4 tsp, 20 grams, or 0.7 oz.
6 cups	6 tsp, 30 grams, or 1.05 oz.
8 cups	8 tsp, 40 grams, or 1.4 oz.
10 cups	10 tsp, 50 grams, or 1.75 oz.
12 cups	12 tsp, 60 grams, or 2.1 oz.
14 cups	14 tsp, 70 grams, or 2.45 oz.
16 cups	16 tsp, 80 grams, or 2.8 oz.
18 cups	18 tsp, 90 grams, or 3.15 oz.

3. Plug cord into wall outlet.

NOTE: The Bean Hopper and the Grind Container must both be engaged with the safety interlocking mechanism in order to operate the Coffee Grinder. When both are properly engaged, the blue Power Indicator Light will illuminate when plugged in. If either the Bean Hopper or the Grind Container are not properly engaged, or are removed while the base is plugged in, the blue Power Indicator Light will not illuminate.

4. Select desired grind setting from FINE to COARSE by rotating the Bean Hopper accordingly.

NOTE: On the first use of Coffee Grinder, it is recommended to start with a MEDIUM setting and later adjust the coarseness selection for personal preference.

Grind Setting	Type of Coffee Brewing System
FINE	Espresso Maker
MEDIUM-FINE	Drip Coffee Maker with Cone Style Filter
MEDIUM	Drip Coffee Maker with Basket Style Filter
MEDIUM-COARSE	Vacuum Pot; Percolator
COARSE	French Press

5. Select the amount of coffee beans to grind by rotating the Cup Selector Dial.

NOTE: The markings on the Cup Selector Dial indicate the number of cups of coffee to be brewed.

6. Press the Start / Stop Button to begin grinding process. To pause or cancel grinding during use, press the Start / Stop Button again.

NOTE: Do not rotate the Bean Hopper to adjust the coarseness selection during the grinding process.

7. The Coffee Grinder will automatically stop upon completion of the grinding cycle.

8. Pull the Grind Container out to use fresh coffee grinds.

WARNING: THIS APPLIANCE IS INTENDED TO GRIND ROASTED COFFEE BEANS ONLY. GRINDING OTHER SUBSTANCES, SUCH AS NUTS, SPICES OR RAW COFFEE BEANS MAY DULL THE GRINDING STONE, RESULT IN POOR GRINDING RESULTS OR INJURY.

USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed. The Coffee Grinder should be cleaned on a regular basis to prolong the life of the machine and to guarantee optimal performance.

TO CLEAN:

- Before cleaning, be sure the cord is unplugged from the wall outlet.
- Remove the bean hopper lid and pour out any remaining coffee beans.
- The bean hopper, bean hopper lid, grinds container and grinds container lid should be washed by hand using hot, soapy water. Dry thoroughly. **NEVER** immerse Coffee Grinder base in water or any other liquid.
- To remove the bean hopper, rotate counter-clockwise past the COARSE setting several turns and then lift upward.
- Use a brush to remove grinds or wipe by hand.
- Replace the bean hopper by aligning with the grinding mechanism and rotate clockwise until the rotation stops at the FINE setting.
- Wipe base of grinder with damp cloth.

TO STORE:

- Be sure all parts are clean and dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is wet. Never wrap cord tightly around the appliance; the line cord should be loosely coiled around the Coffee Grinder.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied

warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

To register this product and view other fine products, visit us online at www.selectbrands.com

TRU is a registered trademark of Select Brands, Inc. 66219
Made in China

