


ZOSI

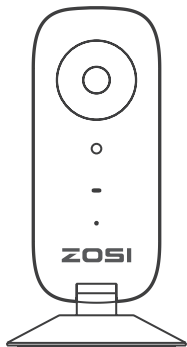


User manual

www.zositech.com

1 Product Overview

Thank you for choosing ZOSI IP camera.
For more instructions, please visit www.zositech.com.

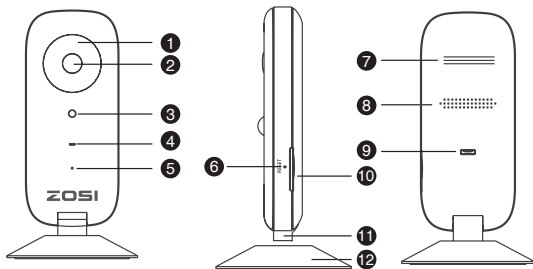

- | | | |
|--------------------|------------------|-------------------|
| 1 Infrared LEDs | 2 Lens | 3 Infrared sensor |
| 4 Indicating lamp | 5 Mic | 6 Reset |
| 7 Ventilation hole | 8 Out-speaker | 9 Power socket |
| 10 TF-card slot | 11 Magnetic base | 12 Base |

Notice: Use an unfolded paper clip or needle to hold the reset down for 3-5 seconds to reset the camera. Please allow 3-5 minutes for the camera to complete reset.

2

Set up your Camera

2.1 Download and install App

- 1 Scan QR code to download App



Android user
Scan QR



iOS user
Scan QR

- 2 Go to the App Store or Google Play Store and search for ZOSI HOME



Google play





App Store



ZOSI HOME


2.2 Register a new account

Before start viewing your camera, you need to register a ZOSI HOME account first. Run the ZOSI HOME App, tap "Sign Up" button to create an account.

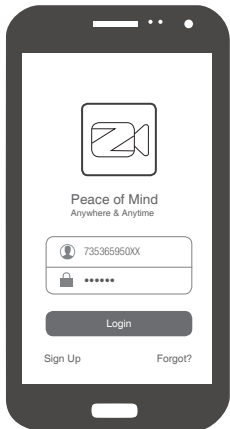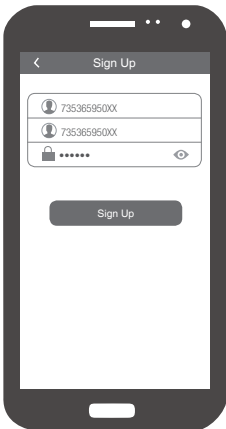

2.3 Power on Camera

- 1 Connect the DC power adapter to the camera.
- 2 Turn on your wireless router.

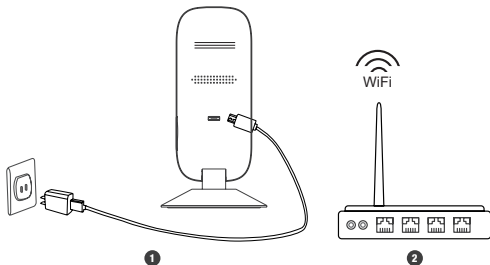

2.4 Add Camera on ZOSI HOME


- 1 Camera status introduce

Connect the camera device with the power adapter supply, then hardware setup is done. Different LED lamp colors indicating different camera status:

- (1) Yellow: The camera system is starting-up. Please be patient and wait 1-2 minutes for the camera to start.
- (2) Green
 - a. Flash green slowly(flash once per second):Binding mode
 - b. Flash green fast(flash three times per second):Connecting Wi-Fi
 - c. Always green: Camera is working properly.
- (3) Always blue: The camera is on Offline Mode.



2 Binding by Sound Wave

- (1) Choose the wireless network for internet connection, input the password.
- (2) Move the phone speaker to the camera closely.

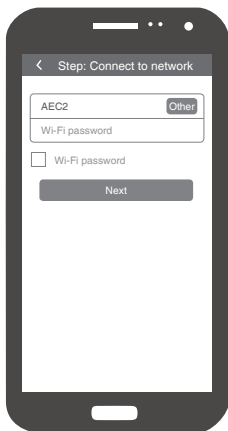

(3) Receiving sound wave to bind camera.

(4) After binding successfully, the app will redirect to the video list-view interface automatically.

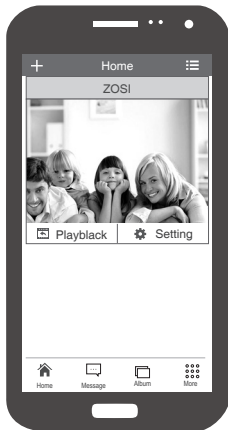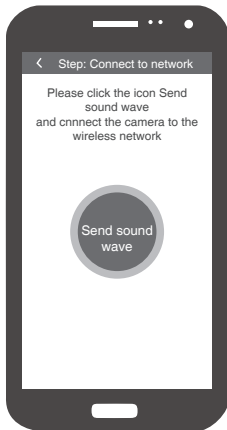

3 App Video View



HD Mode (Switchable)



Image Capture



Mobile phone online video recording




Enable/Disable Microphone



Enable/Disable Speaker

2.5 Playback

Click "Playback" icon and chose the time to replay the video recorded by camera. You can Fast Forward/Fast Backward/Screen Shot buttons when replaying the video to your desire time slot. Refer to photos below.

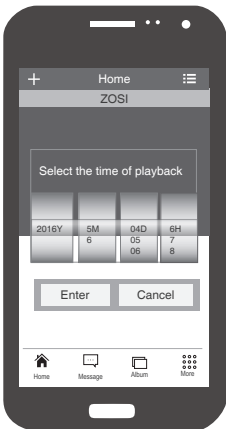

3 Set up your Camera


You can click "Settings" button, Then you can set up your camera features . Such as: Alarm, Video lock, Sub - account, Working mode and so on.



3.1 Alarm

Camera uses infrared sensor, when someone or other object appears within its detection space range, the alarm on camera will ring for 5 seconds and at the same time, your phone will also ring and get receive an alarm message, press


open the alert message, it will show you the video that trigger the alarm.

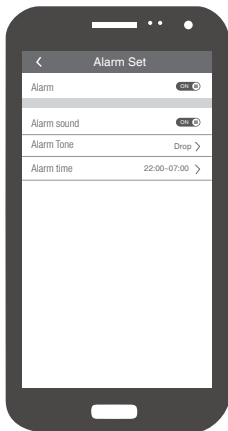

3.2 Video Lock

This function allows you to watch live video and replay video only after a password has been setup.

- 1) In the "Camera Settings" screen, click on the "Video Lock" button into the "Create Video Lock" interface
- 2) You can create a Gesture Lock, which you have kept in your mind firmly.

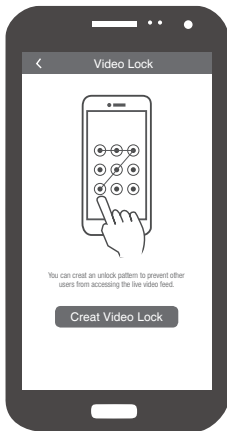

3.3 Sub-Account Management

Each camera can support up to 15 accounts (including the Administrator account). Administrator can add and delete sub-account using "Sub-Account". New sub-account can be created by clicking on the "Add" button. Existing sub-accounts can be deleted by swiping left onscreen the sub-account that you want to delete and press the "Delete" button as it appears onscreen.

3.4 Working Mode

There are two working modes: Network mode and Offline mode. When bind the camera successfully, camera is in running the working mode.



In the "Camera Settings" screen, click on the "Working Mode" button.

(1) Click on the "Offline Mode" button, then choose the video definition (Smooth/ SD/ HD) quality for the offline video storage. Once selected, the device will automatically disconnect the Wi-Fi and the LED light on front of camera will become blue. Then camera will run in Offline mode.



Notice: When enabling "Offline Mode" function, your device must be online at that time and a micro SD card must be inserted. Otherwise, you cannot turn on "Offline Mode".

(2) Click on the "Offline Mode" button on settings, and also "Turn Off Offline Storage" then disable the Offline Storage mode using sound wave by pointing the speaker of the phone to the front of camera for a few seconds.

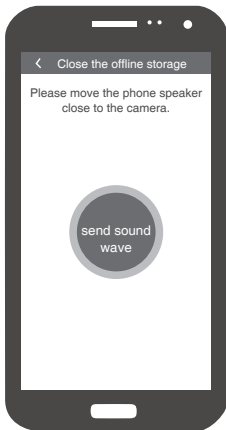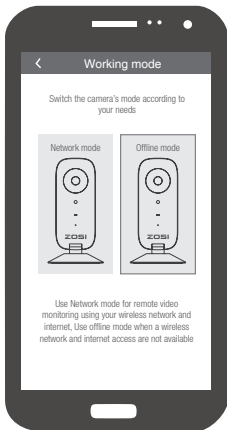

4 Snapshot Share

Our camera provides a function to share any snapshot photos to Twitter/Facebook/SMS. Press the camera icon on the video, and snapshot the photo you like, then go to main page, press "Album", choose the photo you want to share in the album, press the top-right icon on the photo and share it.



1) Cannot bind camera device

- Can only bind when the camera device is in the Binding mode (LED becomes green and flashes once a second). Otherwise, you cannot bind a camera device outside the Binding mode.
- Make sure the environment of Sound Wave Binding is quiet and the outer speaker of your phone is close to the microphone in front of the camera. And please make sure your mobile phone is not in Silent Mode.
- When warning "Wi-Fi does not exist", please make sure your Wi-Fi name is correct.
- When warning "Wi-Fi connection fail", please make sure your Wi-Fi password is correct.
- When warning "Network abnormal please check router configuration", please make sure your router can be connected to Internet.

2) Cannot connect into Internet

- Check the Wi-Fi our device uses can connect into Internet.
- Check whether the name and password of Wi-Fi have been changed.

3) Video is not clear

- Switch between "SD" or "HD" mode.

4) Cannot replay video?

- Please check if there is a micro-SD card, (must be below 32GB).
- Insert a micro-SD card, you can replay video after 10 minutes.

5) If the Wi-Fi is hidden, why cannot find any network and camera?

- Our camera device can only connect a Wi-Fi that is not hidden.

Notes:

- You can just pull-down the screen of your phone to refresh camera list.
- Support a 32GB micro-SD card, and store videos up to 24 days.
- You can replay video after 10 minutes after a micro-SD card has been inserted.
- You can bind up to maximum of 15 accounts to each camera.
- The first account binding the camera is default as the management account.
- Please bind in a quite environment when using sound wave binding.
- When binding (Sound Ware), do not leave the binding page, waiting for the camera finish automatically.
- Pull out the micro-SD card, Offline Mode will be unavailable automatically.

Warning:

When use camera, please avoid rain, fire and thunder. Camera working humidity range: 20%-50% indoor, 20%-70% outdoor; working temperature range: -10°C to +50°C indoor: -20°C to +55°C outdoor.



PROFESSIONAL SECURITY MADE EASY

www.zositech.com
service@zositech.com

All rights reserved. No part of this publication may be reproduced by any means without written permission from ZOSI.

ZOSI cannot assume responsibility for any consequences resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.



PACKAGING

