



QUICK START SETUP GUIDE FOR WIRED XROCKERS/VROCKERS & CONNECTIONS GUIDE

- 1** Open the box by the top. Turn the box over and slide the box up off of the unit.*

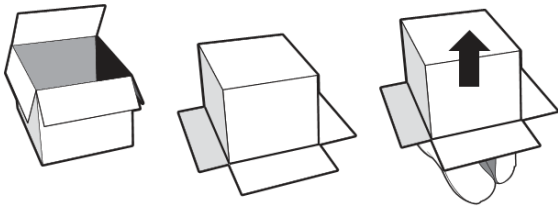

* Do not let the unit fall out • Do not grab sides, which may lead to accidental speaker damage.


- 2** Unfold and set the unit on the ground. The seating area should be facing down.

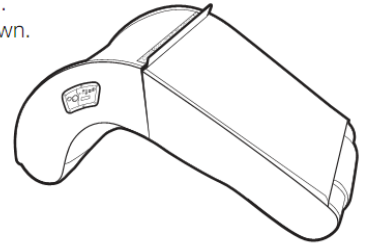


- 3** Insert pin into closure. Pull and attach the flap to hide the pin and closure.



- 4** Carefully turn chair over.

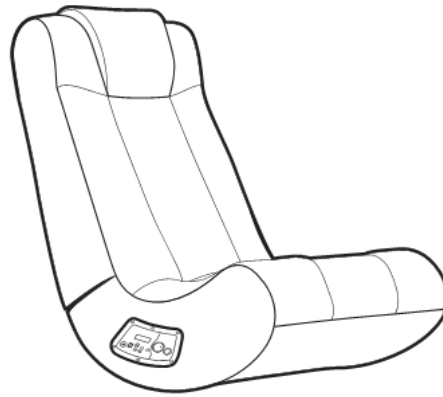


- 5** Plug in the power adaptor to power outlet, then to the power pack on the control panel.

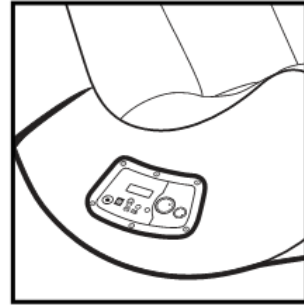

Connections Guide • GAME SYSTEMS

• Xbox™ • Xbox360™ • Playstation2™ • GameCube™

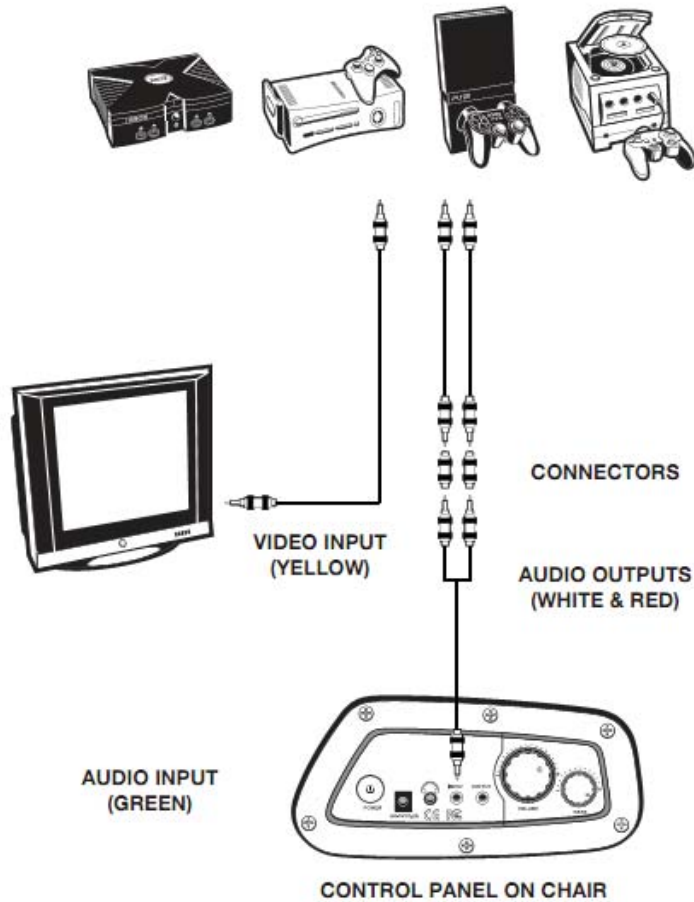

Connect the game system video output to the television video input.

Connect the game systems audio outputs to the audio input located on the chairs control panel.




Connections Guide • PORTABLE DEVICES

• MP3 • CD-DVD • GAMES • PSP™



Connect the portable system headphone jack output to the audio input located on the chair's control panel.

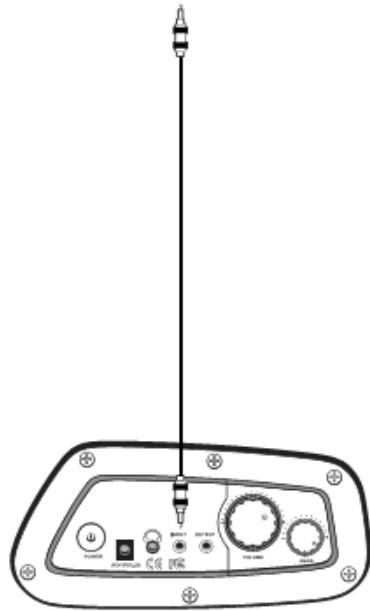

CONTROL PANEL ON CHAIR




Connections Guide • HOME THEATER

• TV • DVD • VCR • SATELLITE • RECEIVER




Connect the audio outputs from your home theater system to the audio input located on the chairs control panel.

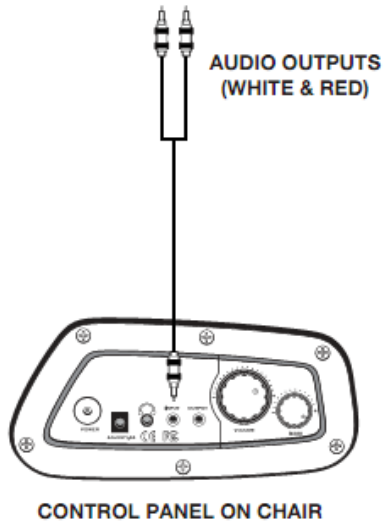

Connections Guide • MULTI-USER SYSTEM

APPLICABLE TO ALL SYSTEMS

HOME THEATER • GAME SYSTEMS • PORTABLE DEVICES

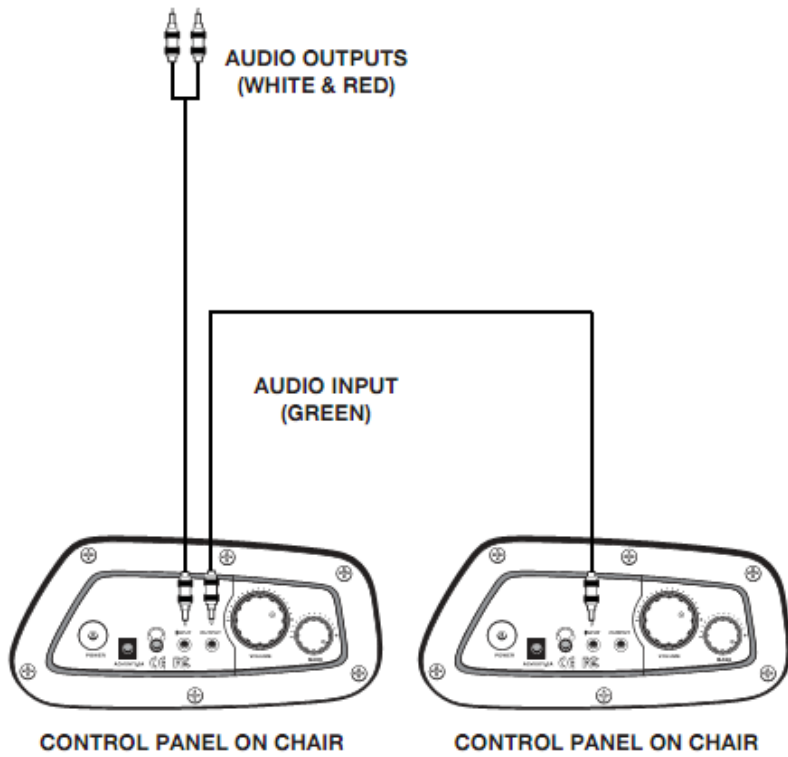

Connect the audio outputs from your home theater system or gaming device to the audio input located on the chairs control panel.

Connect the first chairs audio output to the second chairs audio input.

Up to eight chairs can be connected.

