

Which BeaterBlade® do I need?

Mixer Type	Model Numbers (Match first 3-4 digits only)	You Need
<p>KitchenAid® 4.5 and 5-Quart Tilt-Head</p> 	<p>Artisan; Classic; Classic Plus; Ultra Power; Accolade 400; 90th Anniversary Glass Bowl. K45, K45SS, KSM75, KSM90, KSM95, KSM100, KSM103, KSM110, KSM150, KSM151, KSM152, KN15E1X, Others. Motor shaft must be ½" diameter. "C" models may not work.</p> 	<p>BeaterBlade® KA-TH</p> 
<p>KitchenAid® 5-Quart Bowl-Lift</p> 	<p>Heavy Duty; Professional 5 & 500: K4SS, K5SS, KSM5, KP50PS, KPM5, KPM50, KSM50HDP, KSM500, KSMC50, KG25H3X, KG25H7X, KG25HOX, KM25GOX, RRPK50KG25GOX, 4KSM50PWH, K5-A (post 1950). Note: For the Professional 5 Plus, you need the KA-6L. Traditionally has a bare metal crank handle. KA Flat Beater has a Long Neck & 2 Internal Legs.</p> 	<p>BeaterBlade® KA-5L</p> 
<p>KitchenAid® 6-Quart Bowl-Lift</p> 	<p>Professional 6 & 600; Deluxel Epicurean: KD2661X, KP2671X, KP26M1X, KP26M8X, KB26G1X, KL26M8X, KT2651X, KP26N9X KSM7990 (7 Qt) KP26N9X and KSM7581. Professional 5-Plus: KV25GOX, KV25G8X, KV25HOX. *May not work on Sam's Club or Costco KitchenAid mixers. Traditionally has a rubber grip crank handle. KA Flat Beater has 3 Internal Legs.</p> 	<p>BeaterBlade® KA-6L</p> 