



# HOW TO OPERATE PRESSURE COOKING ON THE



CZ7200 Picture box

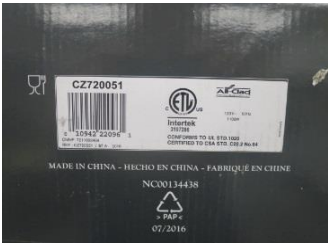

CZ7200 label on box

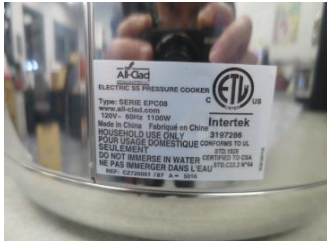

CZ7200 label on product



Attach condensation collector



Place ingredients in pot  
Here using water.



Plug the cord into socket.  
Here using a watt meter.



Push the start/stop button to  
light up cooker.



Press the function button to  
move through the different  
functions



Using the pressure cooker  
Timer & pressure buttons will  
light. Pressure button will flash.





Press start/stop button to start heating. Watt meter shows cooker is heating



Display will show circling dashes



When beginning to pressurize the little pin ( float valve ) will pop up locking the lid.



A little steam may be released thru the pressure limit valve when the CZ7200 is under pressure.



Steam / pressure being released



When pressure has been released floating valve will descend and lid can be opened.


## E CZ7200



CZ7200 Parts & accessories



Plug cord into the CZ7200

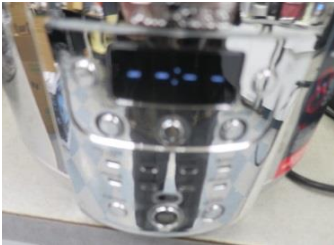

Display will show dashes



Set pressure from 1 - 7 by pressing plus/minus buttons.  
Set timer, by pressing plus/minus buttons to cooking time.





When pressure is reached the timer will start counting down the cooking time.



If using the pressure limit valve to release pressure it will pop up.