




Linklike

User Manual

Linklike Classic 2

Walk through this user manual before the first use.

Overview

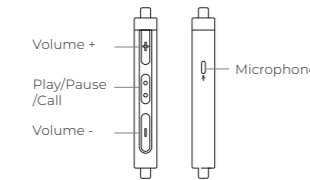

Get Started

1. Plug this pair of headphones into your audio device with a 3.5mm stereo jack.
2. Check the earbuds to find the left (L) and right (R) pods, and insert them gently into corresponding ears. Try rotating the pods to make sure the pods fit comfortably and securely.
3. Turn on your audio device to enjoy your Linklike Classic 2.

Controls

Button	Control
	Increase Volume Press to adjust
	Play/Pause Press once
	Switch to Next Song Press 2 times
	Switch to Previous Song Press 3 times
	Answer/Hang Up Call Press once
	Reject Call Press and hold for 3s
	Voice Control* Long press and hold
	Decrease Volume Press to adjust

* Voice commands only work after the voice assistant was activated.

Specifications

Model No.	Classic 2
Headphone Type	Wired
Connector Type	3.5mm Jack
With Mic	Yes
Cord Length	1.2m
Input Power	3mW, Max 5mW
Frequency Response Range	20Hz - 20KHz
Resistance	18Ω±15%
Distortion Rate	<3%
Sensitivity	105dB±3dB (IEC711 at 1KHz 1mW)
Compatible Platform	Android & Windows & iOS

* Based on the test results of Linklike Lab, for reference only.

Warning

- This product did not install any spare parts that can be maintained. Please do not disassemble, or refit the product on your own.
- Do not place or use this product in a hot or humid environment.
- Please do not throw this product into fire or water to avoid fire and explosion.
- Do not use this product for a long time, so as not to damage the hearing.
- Do not use this product in noisy environments or in situations that requires special attention (e.g. in traffic or when

doing skilled work), to avoid danger.

- If there are any abnormal phenomena such as leakage from the drums, please don't hesitate to stop using this product and contact the official customer service immediately.

Warranty Clause

- Users can enjoy free warranty service within 6 months of the date of purchase.
- Please contact us with the **Warranty Card**.
- The limited warranty does not apply in the following cases:
 - ① All damages caused by human factors, misuse of the product, unauthorized alternation to or change of parts or components of the product, etc.
 - ② All damages caused by bad transportation or other irresistible factors such as floods, fire, lightning, earthquakes, etc.

③ The company reserves the right, at its discretion, to change, modify, add, or remove portions of these terms at any time.



Warranty Card

Buyer Name: _____

Phone Number: _____

Order ID: _____

Date of Purchase: _____

Address: _____

Issue: _____



Link what you like

linklike-audio.com

support@linklike-audio.com

Linklike is a trademark registered in the USA and other countries. All rights reserved.