

ASSEMBLY



1 Packaging

2 Parts

3 Remove water stop

4 Pull collar back to release Water Stop



5 Water stop removed

6 Screw water stop on to male thread of the timer

7 Timer with water stop

8 Snap water stop back on to the sprinkler base



9 Timer assembled

10 Screw head on to sprinkler base

11 Sprinkler Assembled

Sprinkler operation



1 Width adjustments on both sides

2 Length adjustment



3 Flow Control

Option 2 Hookup **Timer To Tap**





1 Connect timer to the tap

2 Connect hose to Timer

3 Screw water stop to other end of hose

4 Connect Water stop to sprinkler

Timer

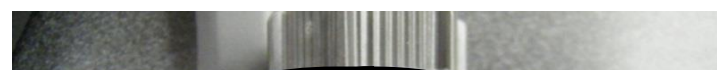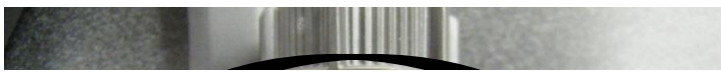



Turn right for timed running from 1 min to 120 min



Turn left for continuous manual running