 




SMARTCLEAN® ROBOT

REMOTE INSTRUCTIONS

Getting to Know the Remote Control

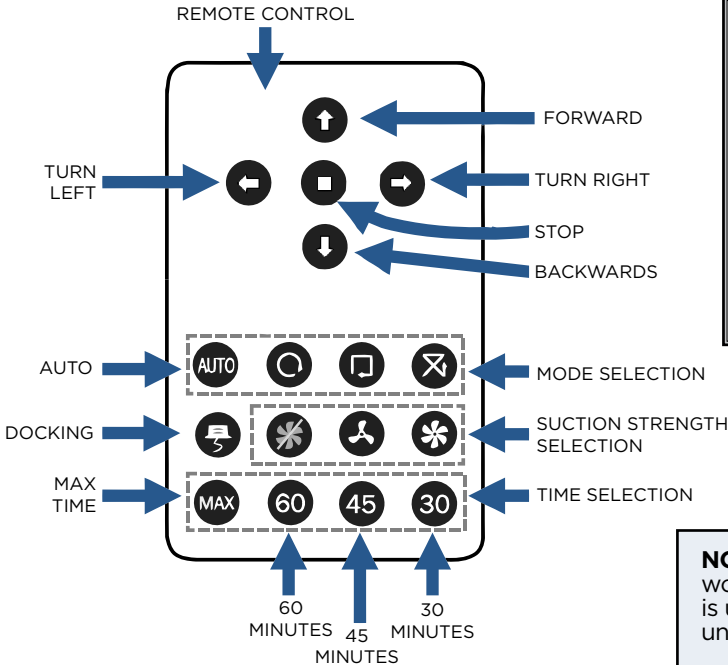










For How-To videos, go to
www.BISSELL.com



Sections marked with this video icon have more information online.


NOTE: Remote only works when cleaner is undocked and unplugged.

Movement	
Key Pressed/Control Key	Action
FORWARD	Vacuum will move forward until it encounters an obstacle and then it will stop or it will move forward until another command is given.
LEFT	Turn left. Pressing and holding the button makes it turn left continuously.
RIGHT	Turn right. Pressing and holding the button makes it turn right continuously.
BACKWARD	Vacuum will move backward for 6 inches and then stop. NOTE: Vacuum does NOT have cliff sensors on the back of the unit to prevent it from falling down stairs when moving in reverse.
STOP	Stop the unit.
Suction Power	
Key Pressed/Control Key	Action
	Adjust suction level: High
	Adjust suction level: Low

Cleaning Mode	
Key Pressed/ Control Key	Action
 AUTO	Set the unit in auto clean mode. This mode will cycle through Spiral, Along the Wall following, "Z" formation and Random modes.
 SPIRAL	Vacuum will work in circles until it encounters an obstacle. Once the unit encounters an obstacle, it will transition to AUTO mode.
 RANDOM	Vacuum will move randomly around the room.
 ALONG THE WALL	Vacuum will clean along walls and edges.
Timer	
Key Pressed/ Control Key	Action
 MAX	Product continues to clean until the battery becomes low. Then returns to its docking station.
 60	Product cleans for 60 minutes then returns to its docking station.
 45	Product cleans for 45 minutes then returns to its docking station.
 30	Product cleans for 30 minutes then returns to its docking station.
 DOCKING	Sends the vacuum to begin looking for its docking station to recharge.


Changing the Battery in the Remote Control

1

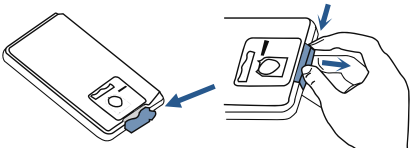


Press and hold in tab on the battery tray and pull outward with the tray to remove

2

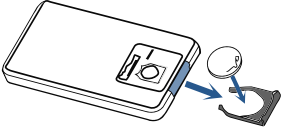

Remove old battery from the tray and replace with a new battery. (Uses one CR2025 battery).

3

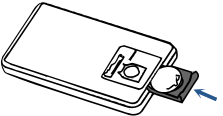

Replace the battery tray in to the remote

NOTE: Be sure to remove the insulation sheet before using your remote. It will be sticking out of the back of the battery door.

Troubleshooting

Remote control doesn't work	Check the remote battery.	Check if insulation sheet is still in the remote. Remove by pulling the tab. If not, replace with a new CR2025 battery per the instructions above.
	The robot is off	Turn the power switch on the robotic vacuum to the ON position

NOTE: For additional information, please refer to the SmartClean Robotic Vacuum User Guide.