

Congratulations on your purchase of a Professionally Refurbished PC from **ReCircuit**.

Please see the **Quick Start Guide** on the inside of this booklet for helpful information



Microsoft[®]
REGISTERED
Refurbisher

Quick Start Guide



For Laptops and Tablets



Plug in A/C Adapter before powering on the system for the first time.

.....



Charge the battery for at least 8 hours before disconnecting the A/C Adapter.

.....



Turn unit on and initialize Windows.

.....



Do not connect any peripheral devices (Printers, External Displays, USB Devices) until the initial startup is completed.

.....



Connect to the Internet through your home or business network to let Windows update.



For Desktops and Workstations



Turn unit on and initialize Windows setup.

.....



Do not connect any peripheral devices (Printers, External Displays, USB Devices) until the initial startup is completed.

.....



Connect to the Internet when prompted and allow Windows to update.



Common Questions



How do I setup my PC?

The PC arrives pre-installed with the operating system and only needs to be setup and plugged in (Mouse, Keyboard, Power Cable & Monitor).

.....



Do I need to activate or authenticate my copy of Windows?

No, Windows has been activated by our technicians. You will only need to re-activate should the hard drive later be reformatted.

.....



Are there any programs other than the operating system installed?

For your convenience the system will be installed with a few select programs to get you up and running including Open Office, 7-Zip and two additional browsers (Firefox and Google Chrome).

.....



My PC has a dual monitor card (DMS-59), how do I connect it?

PCs featuring a DMS-59 Pin video card will also come with an adapter that will allow for using extended desktop across multiple displays. The adapter will plug into the card at the back of the PC and split to 2x VGA or DVI in order to connect to your monitor(s).



How do I connect to my Wireless (WiFi) Network?

Your WiFi Network connection may be checked by selecting the WiFi icon in the task bar (). Refreshing the list will display the available networks. You will be prompted for the password upon the initial connection and any subsequent time the password is updated.

.....



Why is there no sound when an Audio or Video is played?

The PC does not come by default with an external or internal speaker. Headphones, Speakers or a monitor equipped with Speakers will need to be plugged into one of the computer's audio out ports.

.....



Why am I receiving Pop-Ups to upgrade to Windows 10?

Microsoft is looking to transition from Windows 7 & 8 to their newest operating system, Windows 10. These reminders appear that an upgrade is possible each time the PC is restarted. This upgrade is a free download until July 29, 2016. Currently, however, many devices and components may not yet have drivers in Windows 10. Please check with the manufacturer of external components before upgrading.



THANK YOU VERY MUCH For Your Commitment to the Environment!

The average desktop computer requires 10 times its weight in fossil fuels and chemicals to be manufactured. By buying Certified Refurbished you are helping to reduce carbon emissions and conserve the earth's natural resources. **Thank You!**

