



# Ozeri®



## GRAVITI PRO Electric Grinder

Model #: OZG8 User Guide

Pepper grinder shown throughout for illustration purposes.  
Same instructions apply to the salt grinder.

Congratulations on your purchase of the Ozeri Graviti Pro Electric Grinder. Your Graviti Pro is designed for one-handed operation and automatically activates when inverted for dispensing of your ground seasonings. The Graviti Pro has a top-mounted grind adjuster that allows for adjustments without accidental dispensing and a convenient transparent storage container for your fresh salt and peppercorn. Your Graviti Pro Electric Grinder consists of the following parts:



2

## Installing the Batteries

Note: While holding the Storage Chamber still with one hand, remove the Outer Shell by twisting it clockwise with your other hand. Twist approx 0.5 inch to release. Do not attempt to unscrew. Insert 4 AA batteries into the Battery Compartment, taking care to ensure the +/- battery polarities are correctly aligned.



Note: If after installing new batteries the Graviti Pro fails to automatically activate when inverted, press the Lock/Unlock Button located at the bottom of the Outer Shell to unlock the device.

3

Front Cover

Front Spread Left

Front Spread Right



# Ozeri

## Model #: OZG8 User Guide

### Filling your Graviti Pro Electric Grinder

To fill your Graviti Pro Electric Grinder, first disable automatic dispensing by engaging the Lock/Unlock button located at the bottom of the Outer Shell. After turning off automatic dispensing, remove the Outer Shell by following the previously illustrated instructions. Invert the Graviti Pro so that the Battery Compartment is on top of the Chamber Housing. Then separate the Battery Compartment from the Storage Chamber by gently pulling them apart:



After filling the Storage Chamber, re-attach the Battery Housing taking care to ensure that the wire loops from the Battery Housing are aligned with the 2 screws on the Storage Chamber. Then re-attached the Outer Shell and enable automatic dispensing by pushing the Unlock/Lock Button.

4

### Using your Graviti Pro Electric Grinder

To use your Graviti Pro Electric Grinder, remove the Top Lid and simply invert or flip Graviti Pro for automatic dispensing of salt or pepper. When activated, the Graviti Pro's LED light will also turn on to illuminate the dispensing.



Note: If after installing new batteries the Graviti Pro fails to automatically activate when inverted, press the Lock/Unlock Button located at the bottom of the Outer Shell to unlock the device.

5

### Caring for your Graviti Pro Electric Grinder

If your Graviti Pro Electric Grinder jams during use, it may be due to an excess of salt or peppercorns in the grinder. Try shaking the unit to clear the grinder. To clean this device, simply wipe with a clean damp cloth and allow it to dry naturally. Do not use abrasive cleaners and do not immerse in water or liquids. This product is for indoor household use only. Keep this unit away from dust and oil. This unit is not a toy. Keep away from children.

### Ozeri Warranty

Your Ozeri Graviti Pro Electric Grinder is warranted to the original owner for 1 year from the date of purchase against defects in material and workmanship under normal use and service. Should your Ozeri Graviti Pro Electric Grinder prove defective within 1 year from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim to Ozeri. Please pack carefully to avoid damages in transit. Under this warranty, Ozeri will repair or replace any parts found to be defective due to a manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Ozeri is not responsible in any way for damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use not in accordance with the "User Guide" or any additional safety, use, or warnings included in the product materials. Further, Ozeri is not liable for incidental or consequential damages of any nature resulting from the use of this product and any liability shall not exceed the purchase price of the product. This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

#### THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modification or commercial use.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Ozeri Customer Service:  
Email: support@ozeri.com  
Phone: 1-877-299-1296

6

Copyright 2014

Back Cover

Back Spread Left



Back Spread Right