

# Wireless Wi-Fi Setup for Internet Access

## 1 Connect the Wireless Wi-Fi USB Adapter

Insert the wireless Wi-Fi USB Adapter into the USB host port on the left side of the KTC.



## 2 Set up Wireless Network on KTC

1. With the HOME screen displayed, press **SETUP**.
2. Use the arrows to highlight **Network Setup**, and then press **ENTER**.
3. Use the arrows to highlight **Search for Network**, and then press **ENTER**.
4. Select the desired wireless network, and then press **ENTER**.
5. Enter your wireless network **Password**; use the arrows to navigate the virtual keyboard and press **ENTER** to select highlighted characters.
6. Select **Done**.
7. When your MAC and IP addresses appear on the screen, setup is complete. Press **EXIT** until you return to the HOME screen.



The wireless network to which you are connected should be displayed at the bottom of the menu options.

## 3 Establish accounts with Google Picasa™ and Windows Live Framelit

Visit <http://picasaweb.google.com> to set up an account, create folders, and upload your photos.  
Visit <http://frameit.live.com> to set up an account, create folders, and assign desired RSS feed content.

## 4 Connect to the Internet and Access Picasa and Framelit

1. With the HOME screen displayed, use the arrows to highlight **INTERNET**, and then press **ENTER**.
2. Refer to the **INTERNET** section in the KTC User Guide for full setup instructions and usage for both Picasa and Framelit.



# PANDIGITAL® Quick Start Guide




## To mount on Wall or Under Cabinet

Use the wall mount kit and 'Flat Panel TV Mounting's Installation and Assembly' instructions (separate doc).


## 1 Attach the Countertop Stand



1. Place the KTC monitor face down on a soft cloth with the bottom edge of the monitor facing you along the surface. Tilt stand slightly to insert

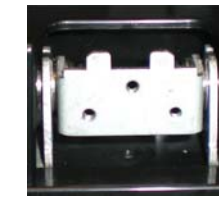

the two tabs on the stand assembly into the slots on stand, and then lower stand so it lays flat against the edge of the flat surface.

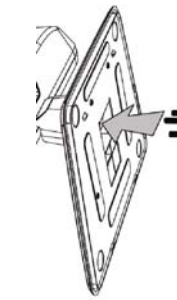


2. Use a Phillips head screwdriver to insert three small screws from bottom and hand tighten.



3. Turn the KTC upright and remove the protective plastic sheet from the front of the monitor.


## 2 Install Batteries in Remote Control

Remove the back battery cover and insert two AAA batteries (included) into the remote control, matching the (+) and (-) symbols.

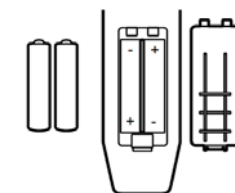

## 3 Plug in and Power On KTC

1. Plug the power adapter into a wall outlet and then into the power connector on the back of the KTC.

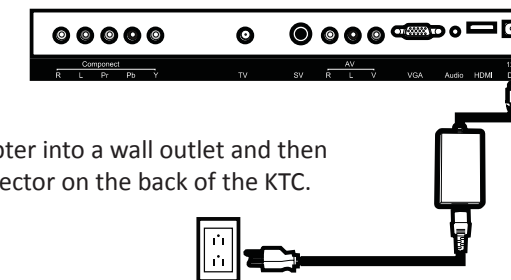

2. Press the **POWER** button on the remote control or the power button on the KTC located in the middle of the speaker bar on the bottom of the KTC screen.

### IMPORTANT: 'Proceed with Auto Scan' or 'No Signal' Messages

Since you have not yet connected to the TV source, you may see these messages the first time you power ON the KTC.


To clear, press the **SOURCE** button on the remote control, Use **CH+** or **CH-** to highlight **DPF**, and then press **ENTER**.



# Television Mode

## 1 Connect to Digital Cable


1. Power OFF the KTC.
2. Connect the Coaxial RF cable from your digital cable (wall) or from the cable box to the TV port on the back of the KTC.
3. Power ON the KTC.
4. Press the **SOURCE** button on the remote control.
5. Use the **CH+** and **CH-** to highlight **TV**, and then press **ENTER**.

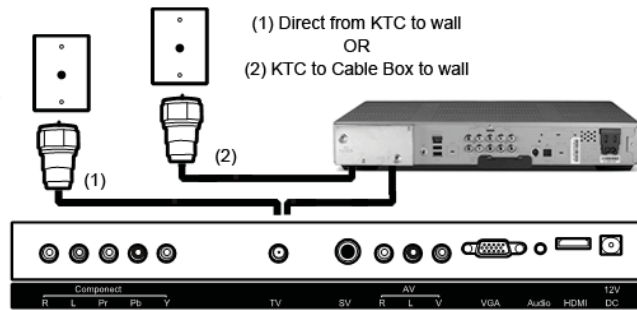

**TIP:** The Television Section in the User Guide shows other connection options (i.e., DVD player)

## 2 Initial Tuner Setup

1. Press the **MENU** button on the remote control to display the On Screen Display (OSD) menu.
  2. Press **VOL+** or **VOL-** to highlight the **TV** option.
  3. Press **CH-** to highlight **TUNER MODE** and then press **VOL+** to select **Cable**.
  4. Press **CH-** to highlight **AUTO SCAN**.
  5. Press **VOL+** to highlight **START TO SCAN** and then **VOL+** again to start the scan which searches for strong channel signals within range.
- When the scan finishes you can begin to watch TV.

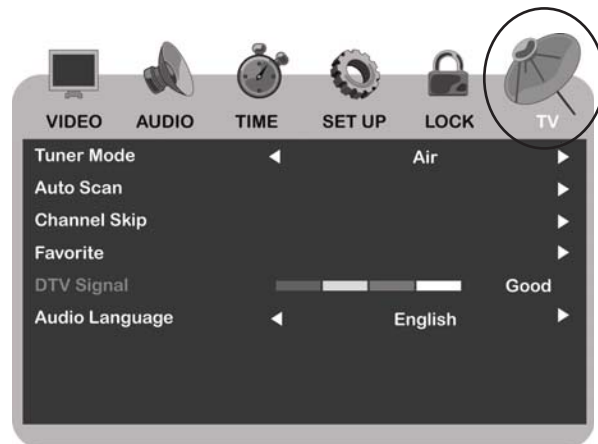

## 3 Browse Channels


Press **CH+** and **CH-** to scroll through the channels.  
(The only channels available are those on the scanned list.)

## 4 Create Favorite Channels List

1. Press the **MENU** button on the remote control.
2. Press **VOL+** or **VOL-** to highlight the **TV** option.
3. Press **CH-** to highlight **Favorite**, and then press **ENTER**.
4. Press **CH+** or **CH-** to scroll through the list of channels and press **ENTER** on the channels you want to add to the Favorites list.

## 5 Browse Favorites List

1. Press the **FAV CH** button on the remote control.
2. Press **CH+** or **CH-** to highlight the channel you want to view, and then press **ENTER**.

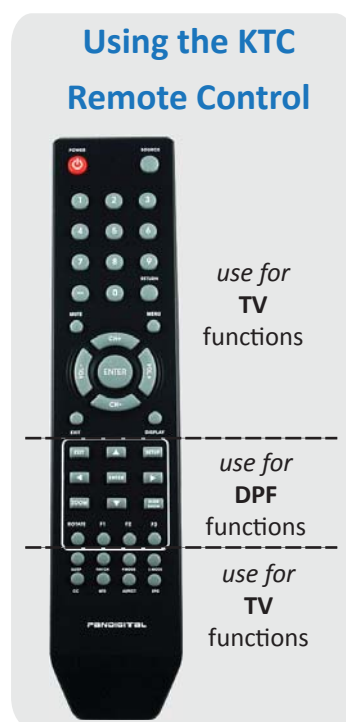


Refer to the Television section in the KTC User Guide for full TV features and functionality

# Digital Photo Frame (DPF) Mode

## 1 Enter DPF Mode


1. Press the **SOURCE** button on the remote control.
2. Use the **CH+** and **CH-** to highlight **DPF**, and then press **ENTER**.

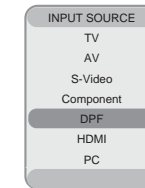

A slideshow of internal memory images will automatically begin to play.

## 2 Insert your Memory Card or USB Flash Drive

The media slots are on the left side panel. After inserting your memory card or flash drive, the photo slideshow will automatically begin displaying your photos.

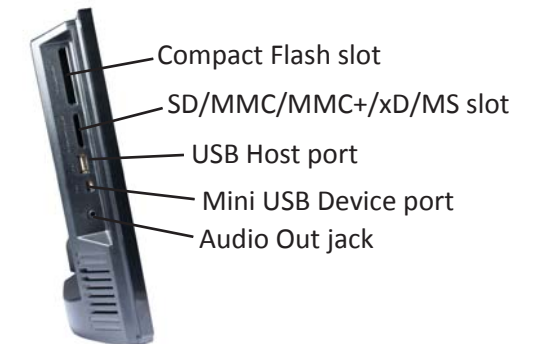

## 3 PanTouch Interface

The PanTouch interface is a touch menu system with the menu icons conveniently hidden until you touch the activation point.



Simply touch the frame in the upper right corner to activate the PanTouch interface and access the touch menus.

## 4 Access the HOME Screen

Activate the PanTouch interface, touch **BACK**, and then touch **HOME**.  
or  
Press **EXIT** on the remote control until the HOME screen is displayed.



Refer to the Digital Photo Frame section in the KTC User Guide for full DPF features and functionality

**PANDIGITAL®**

**CUSTOMER SUPPORT**

Updated documentation is available on our website:  
<http://www.pandigital.net>

Call us toll free:

**1-800-715-5354**