

Electric Honey Extractor

Instruction Manual



SKU: BEE-V004E



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/bee-v004e>



help@vivo-us.com



www.vivo-us.com



1-800-371-5654



WARNING: IMPORTANT SAFETY INFORMATION

READ AND FOLLOW ALL SAFETY REQUIREMENTS

KEEP THIS MANUAL IN A SAFE AND DRY PLACE FOR FUTURE REFERENCE

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual and do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.


PREPARATION

1. After carefully removing the machine from the packing carton, remove all protective film and clean the honey extractor thoroughly with mild soap and water BEFORE first use.
2. The honey extractor should be placed on a dry, flat stable surface



CAUTION: SHARP EDGES

MACHINE STRUCTURE

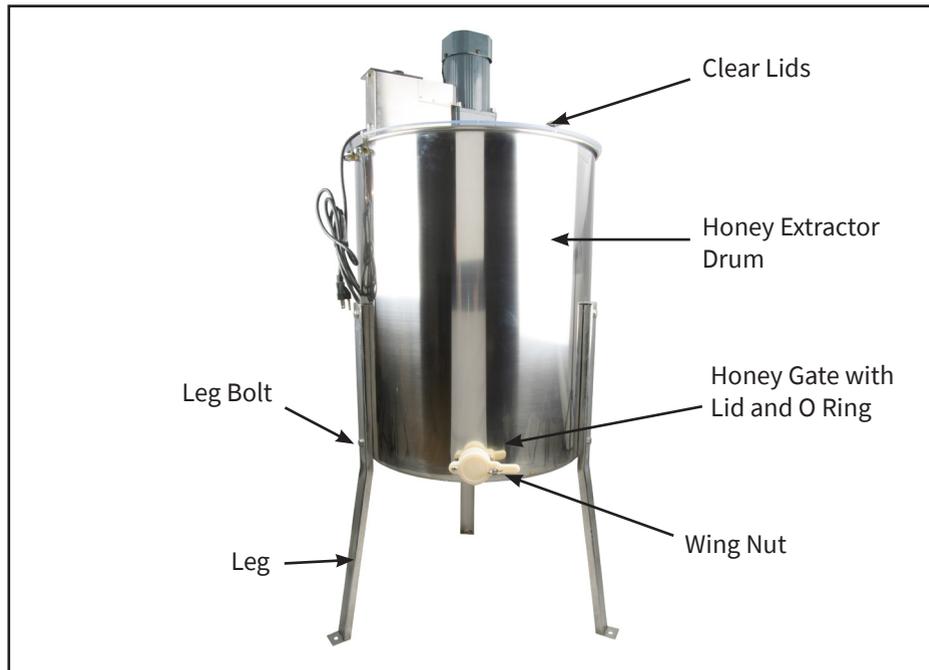

PACKAGE CONTENTS

1 (x1)	Honey Extractor
2 (x1)	Honey Gate with Lid
3 (x1)	Hex Nut (on Honey Gate)
4 (x1)	O Ring (Pre-installed on Honey Gate)
5 (x3)	Leg
6 (x6)	Leg Bolt
7 (x6)	Washer
8 (x2)	Lid (with a Safety Switch)
9 (x8)	M4 Bolt
10 (x8)	M4 Nut
11 (x3)	Stability Bolt

ASSEMBLY STEPS

STEP 1

Attach legs to extractor using the included bolts (6) and washers (7).




STEP 2

To install honey gate, remove large hex nut from gate piece. Insert gate through the front side hole and secure backside with hex nut (tighten enough to seal O ring).




STEP 3

Close both lids to engage safety switches. Flip the power switch to the on (I) position, and turn the dial until the basket is spinning at the desired speed. Each lid has a built in safety switch that will cut power the moment it is opened, and power will not be restored until both lids are closed. Turn the dial back to "0" when frames have been emptied and remove the frames from the extractor.

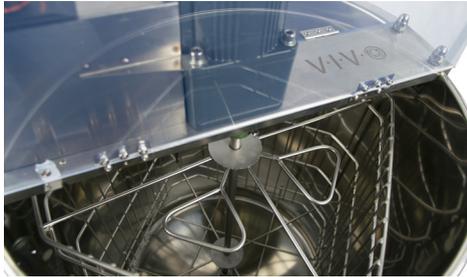


STEP 4

Extractor is ready to operate. (see Operating Instructions)

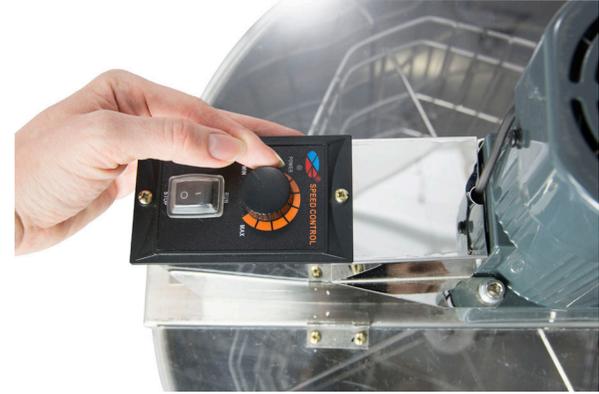

STEP 5

If needed, adjust coupling using the attached bolts.

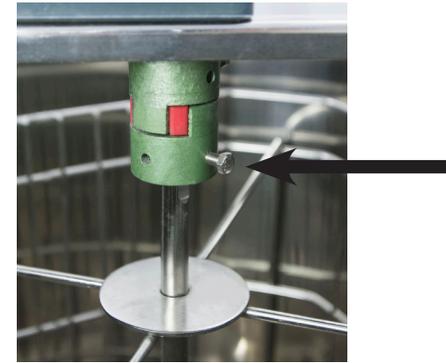

STEP 6

(Optional) Bolt feet down to floor or surface for added stability (hardware included).



OPERATING INSTRUCTIONS

- STEP 1** With the control dial set to “0” and power switch set to off (O), plug the power cord into a standard AC wall outlet.
- STEP 2** Place honey frames in extractor basket. Load either two or four sides to keep extractor balanced as this will reduce any possible shaking. Small and medium size frames can be placed radially in the extractor basket, allowing both sides to be drained at once.
- STEP 3** Close both lids to engage safety switches. Flip the power switch to the on (I) position, and turn the dial until the basket is spinning at the desired speed. The front lid has a built in safety switch that will cut power the moment it is opened, and power will not be restored until lid is closed. Turn the dial back to “0” when frames have been emptied and remove the frames from the extractor.
- STEP 4** (Large frames only) Once the frames have been emptied on one side, remove the frames, turn the frames around, and place them back in the extractor. Repeat step 2, then remove the frames from the extractor.
- STEP 5** With the drain positioned over a bucket or other container, open the honey gate to begin draining honey. Tip the extractor forward to drain as much honey as possible.



WARNING: KEEP HANDS CLEAR OF MOVING PARTS TO REDUCE RISK OF INJURY



DISASSEMBLY

To disassemble the extractor, remove the four cap nuts on the top of the extractor (two on each side), then pull the top brace up and off. The basket can then be lifted out.

A steel ball bearing rests below the basket shaft to improve rotation. Set this aside in a safe place (such as a cup) so it does not roll away and become lost.

CARE & MAINTENANCE

QUICK CLEANING

Option 1: Rinse extractor out with cold water from a hose. If available, a pressure washer is very effective. Empty excess water to prevent possible surface rust.

Option 2: Place open extractor next to hive. Bees will clean it out and use the materials.

IN-DEPTH CLEANING

Disassemble extractor (see Disassembly instructions). Using mild dish soap and warm water, scrub drum and basket clean. Completely rinse the parts and dry with a soft cloth. Reassemble the extractor when dry.

NOTE: PLEASE AVOID GETTING MOTOR AND CONTROLLER WET AS THE ELECTRONIC COMPONENTS ARE NOT FULLY WATERPROOF

CARE

- When not in use, store the extractor in a dry place. Although stainless steel is highly resistant to rust and corrosion, light surface rust can form in wet conditions.
- If surface rust forms, clean with a light abrasive to remove rust.
- If the extractor begins making squeaking noises, lightly lubricate all bearings with a food safe grease or oil. Wipe away any excess.
- If the roller bearing in the crank shaft support block does not turn freely, lubricate with a light grease (such as white lithium) or oil.
- The gearbox is permanently sealed and requires no maintenance.

WARRANTY

We offer a ONE YEAR warranty for this product. If you have any problems with the machine, please contact us directly. We have a 90 Day Return Policy.



Love your new VIVO setup and want to share?

Tag us in your photo! **@vivo_us**

Last Updated: 11/05/2018



If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



help@vivo-us.com



www.vivo-us.com



1-800-371-5654

For more VIVO products, check out our website at:
www.vivo-us.com.