



Outdoor Wicker Furniture




SKU# 1854



ASSEMBLY MANUAL

Revised April 2015

The parts and hardware below have been included for assembly:

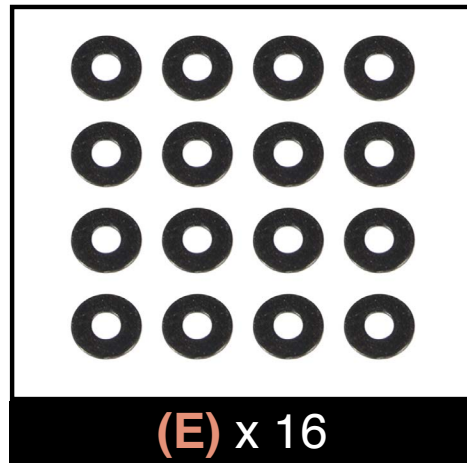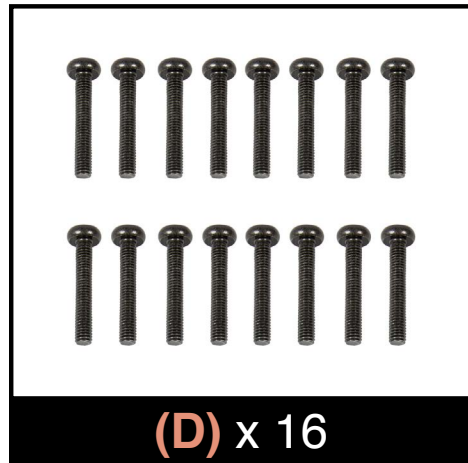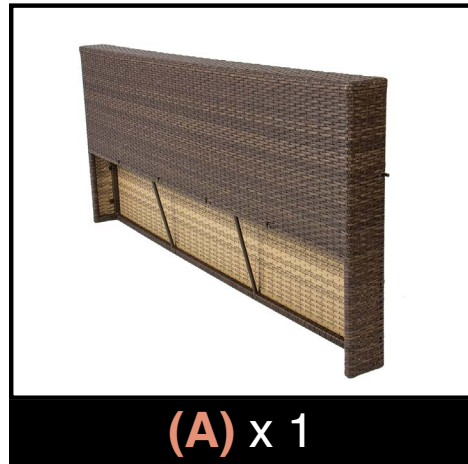


WARNING:

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.


ASSEMBLY STEPS:



Start by placing the center backrest (*part A*) between the two arm rests (*part B*).

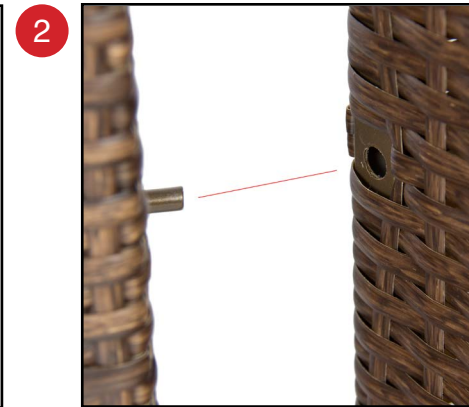


On the right side, align the post on part (*A*) with the hole on part (*B*).

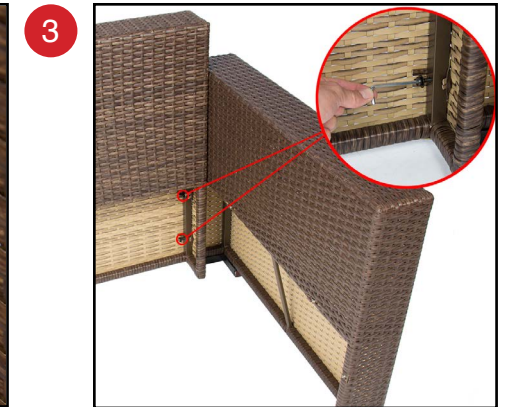


Next, tighten the arm rest with 2 screws and washers from parts (*D*) and (*E*) and repeat for opposite arm rest. Use part (*F*) to tighten.



Lay the assembly on its back as shown.

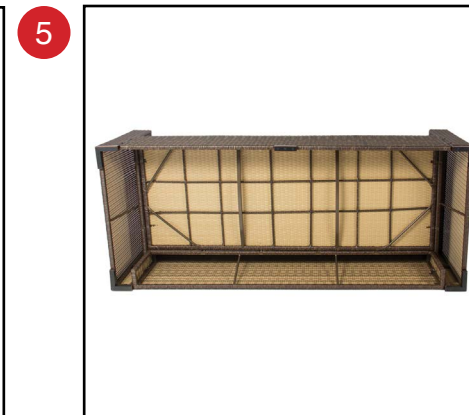

Place the seat rest (*part C*) on the assembly.

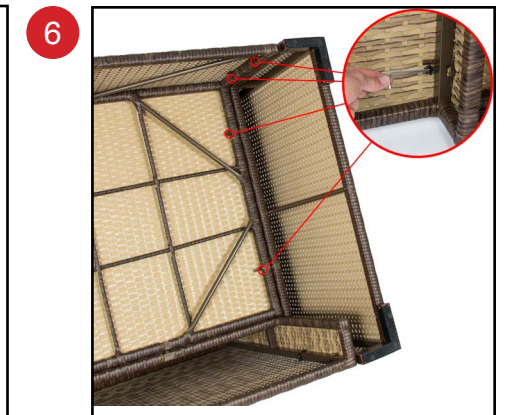

Connect the left and right side of the seat rest (*part C*) using four screws and washers for parts (*D*) and (*E*). Tighten with part (*F*) the Allen wrench.



Lastly, connect the back of the seat rest (*C*) with four screws and washers from part (*D*) and (*E*).



..... *Call Us!*

WE'RE HERE 7 DAYS A WEEK TO HELP YOU!

(909)-948-8400

.....

MONDAY-FRIDAY 5:00AM-5:30PM PST
SATURDAY AND SUNDAY 7:00AM-3:30PM PST