




PERLESMITH

Tripod Speaker Stand

V1.0

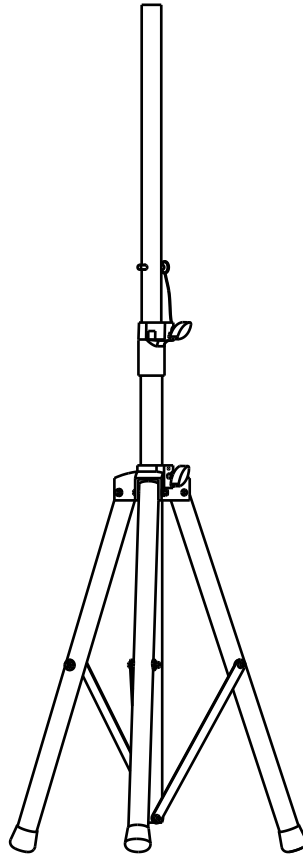

PSTSS1



Thank you for choosing our product! We strive to provide the best quality and services for our customers. Would you kindly share your experience on Amazon if you are satisfied? Should you have any issues, please don't hesitate to contact us.
Telephone: 800-5566-806 Mon-Fri 10am - 6pm (PST) (USA) (CAN)
Email: supportus@perlesmith.com (US/CA/DE/UK/FR/IT/ES/JP/AU)


WARNING!

- In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
- Should not be used outdoors if it is raining or snowing. Keep the stand out of salty spray and excessive humidity. Avoid metal rubbing. Store the stand in a dry place.
- Do not exceed the maximum weight capacity for this product. To avoid danger keep the product away from babies and children.

ATTENTION

1. Avoid metal rubbing.
2. Should not be used outdoors if it is raining or snowing. Keep the stand out of salty spray and excessive humidity.
3. Store the stand in a dry place.
4. To avoid danger keep the product away from babies and children.

INSTALLATION

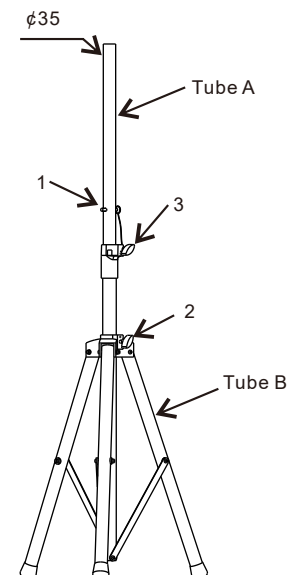

Step 1

Loose knobs 1 and 2, and extend the three tubes (B), and pull tube A vertically, stand the product horizontally.

Step 2

Pull tube A to desired height, lock bolt 3, tight knobs 1 and 2.

Note:

The bottom of boom speaker should be with adaptor. The Product suits to 35mm diameter adaptor.