

First Alert[®]

3035DF / 3040DF



DELUXE SECURITY BOX

WITH DIGITAL ELECTRONIC LOCK

INDEX

Overview 1

Battery Maintenance 3

Getting Started 4

Programming your Personal Passcode 5

Closing and Securing your Security Box, Troubleshooting 6

Security Cable, Customer Support 7

Replacement Keys, Limited Warranty 8

FOR YOUR SECURITY, YOU SHOULD

- ✓ Immediately set your own personal combination.
- ✓ Store the keys and personal combination away from security box.
- ✓ The pre-set factory code for your safe is:

3*

OVERVIEW

 
Welcome to the First Alert® Family of Products

All First Alert® safes are designed and built using the highest manufacturing standards to ensure maximum user satisfaction under a variety of conditions. Along with peace of mind, your First Alert® Digital Security Box will provide many years of secure storage for your valuables.

PACKAGE CONTENTS



(1) Key lock cover




(4) "AA" Batteries




(1) Foam pad



 
(2) Override keys

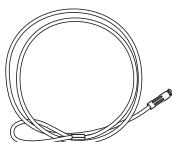

 (1) 4 foot steel secure cable
(3040DF)



 (1) Security cable attachment
hole plug (3040DF)

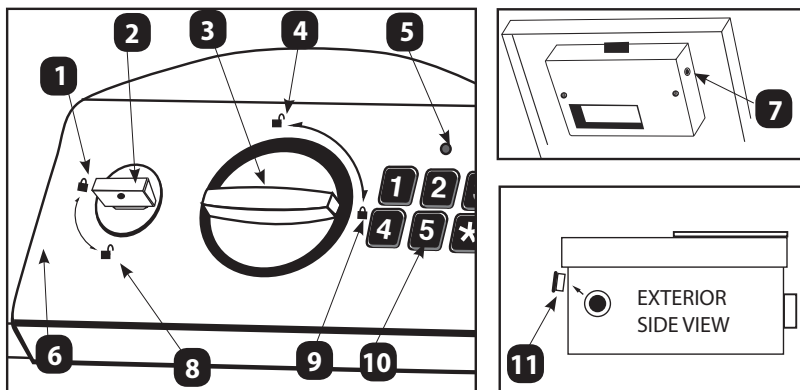

OVERVIEW

- ❶ Locked override key icon
- ❷ Override key lock
- ❸ Rotating knob or latching handle
- ❹ Unlocked knob icon
- ❺ LED Indicator light
- ❻ Security box lid
- ❼ Red code setting button (see diagram to the right)
- ❽ Unlocked override key icon
- ❾ Locked knob icon
- ❿ Digital keypad buttons
- ⓫ Security cable attachment hole plug

BATTERY MAINTENANCE

- ❶ Always purchase and use the batteries as specified by this User's manual.
- ❷ Always replace **all** batteries at the same time. It is recommended to replace all batteries at least once a year or sooner depending on amount of use.
- ❸ Always clean the battery contacts in the battery compartment and on the batteries before installing new batteries.
- ❹ Always make sure all batteries match the polarity (+ and -) signs in the open battery compartment.
- ❺ If your safety box will not be used for an extended period of time, it is recommended that you remove the batteries.
- ❻ Always promptly remove and properly discard of all used batteries.

GETTING STARTED

LOCATE OVERRIDE KEYS

① Keys and batteries are stored in the packing material. Remove them before discarding the box.

OPENING YOUR SECURITY BOX USING YOUR OVERRIDE KEY

① Remove cover from key lock.

② Insert Override Key into key lock and turn the key counter clockwise one quarter turn to the unlocked position.

③ Turn the knob counter-clockwise one quarter turn to the unlocked position. (Fig.1)

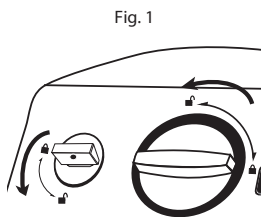 


Fig. 1

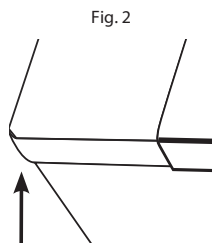 


Fig. 2

④ To open, lift from the outer edge of the lid. (Fig.2)

INSTALLING BATTERIES

① Locate the battery cover on the back side of the lid. (Fig.4)

② Slide the cover off the battery compartment.

③ Properly insert batteries, noting correct direction, replace cover and close the Security Box lid.

④ Return the Override Key and the knob to the locked position.

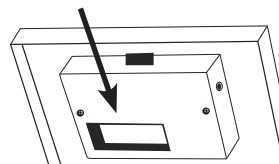 


Fig. 4

⚠ IMPORTANT Clean the battery contacts in the battery compartment and on the batteries before installing new batteries.

OPENING YOUR SECURITY BOX USING THE PRE-SET FACTORY CODE

THE PRE-SET FACTORY CODE IS 3*

❶ Using the keypad, enter the factory pre-set code. The LED will flash a green light and stay green for 5 seconds after the * button is pressed. You will hear the Security Box unlock.

❗ IMPORTANT You have 5 seconds to open the Security Box. If the green light goes out, you will have to re-enter the code.

❷ To open, turn the knob from the locked position to the unlocked position, one quarter turn counter-clockwise. To open, lift from the outer edge of the lid. (fig.2)

 
❸ If the LED light flashes red after you enter the code, this means the code was entered incorrectly and the Security Box will not open.

❗ IMPORTANT If an incorrect code is entered 3 times in a row, the Security Box will automatically shut down for 4 minutes before it can be opened again using the correct code. During this delay, the Override Key can be used to open the Security Box.

PROGRAMMING YOUR PERSONAL PASSCODE

❗ IMPORTANT For your security, immediately re-program the digital lock to your Personal Passcode. Open your Security Box with the Override Key or with the pre-set factory Passcode.


❶ On the inside of the lid, find and press the red button located to the side of the battery compartment (Fig.3). The LED light above the keypad will flash orange.

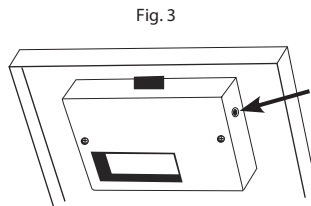

❷ Enter your personal Passcode, up to 5 digits, followed by the * button and then repeat a second time. You must enter the number twice.

For example: 1 2 3 4 5 * - 1 2 3 4 5 * After the first entry, the LED will flash orange. After the second entry, the LED will flash green and then go out.

 ❸ Your Personal Passcode is now saved. Write it down and store it in a secure place away from the Security Box.

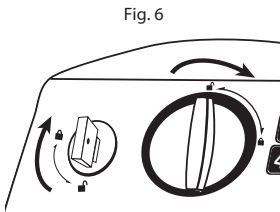

❹ Close the lid of your Security Box and return the knob to the locked position (Fig. 6). If the Override Key was used, turn to the locked position, remove and replace the lock cover.


❗ IMPORTANT The factory pre-set code is no longer active and cannot be used to open the Security Box.

CLOSING AND SECURING YOUR SECURITY BOX

Be careful not to overfill your Security Box or obstruct the door from completely closing.

- ❶ Make sure knob is in the unlocked position.
- ❷ Make sure lid is closed completely. (Fig. 5)
- ❸ Turn the knob from the unlocked position one quarter turn clockwise to the locked position. Your Security Box should now be secured.

 Fig. 5

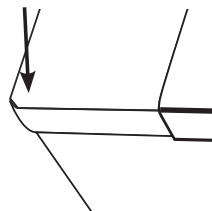

⚠ IMPORTANT While the Override Key is in the unlocked position you can open and close the Security Box by turning the knob from the locked to the unlocked position and back again without entering your personal code. To secure your Security Box, make sure that you have turned the Override Key to the locked position and have stored the key away from the Security Box in a safe place.

TROUBLESHOOTING

No light from LED: This indicates that the batteries are expired and need to be replaced. To change the batteries, see Installing Batteries on page 4.

⚠ IMPORTANT Replacing batteries does not erase your personal code.

The LED is blinking a red light: This means that your batteries are low. To change your batteries, see Installing Batteries on page 4.

⚠ WARNING **DO NOT FORCE THE KNOB** If forced, the knob will break and your Security Box will be damaged. When operated correctly, the knob will function so that it can be turned easily into the opened position.

If you have additional questions while operating your Security Box, please call Consumer Affairs at 1-800-323-9005. Please call our Consumer Affairs line prior to returning your Security Box to the retailer.

SECURITY CABLE

MODEL 3040DF INCLUDES SECURITY CABLE.

1 Remove the plug from security cable attachment hole. (Fig. 7)

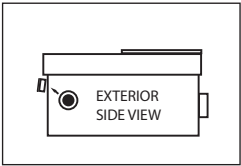 


Fig. 7

2 Loop cable around desired object and then through itself. (Fig. 8)

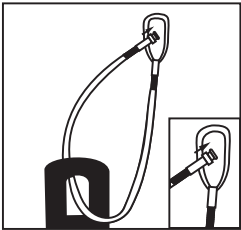 


Fig. 8

3 Depress cable release button and while holding down, insert security cable into the hole as shown in diagram, then release button. (Fig. 9)

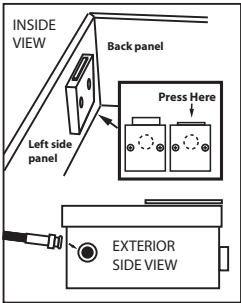 


Fig. 9

CUSTOMER SUPPORT

How to Obtain Warranty Service

If service is required, do not return the product to your retailer. In order to obtain warranty service or if you have additional questions about your Security Box, contact Consumer Affairs at 1-800-323-9005. To assist us in serving you, please have the model number and date of purchase available when calling.

For Warranty Service return to: First Alert, Inc.

**Attn: Warranty Safe Returns
1301 Joe Battle,
El Paso, TX 79936**

PLEASE CALL US AT 1-800-323-9005 TO ESTABLISH A WARRANTY RETURN SET-UP

ORDERING REPLACEMENT KEYS

If you lose the Override Keys or would like additional keys, you can purchase them from First Alert, Inc. You must supply the following information to assure accurate processing:

1. Name / Address / Telephone Number
2. Safety box Model Number / Serial Number
3. Key Number (located on the key and on the Override Key Lock)
4. Notarized statement of ownership
5. Indicate number of keys requested

Please send all the information via fax at 630-851-7995 or mail First Alert, Inc., 3901 Liberty Street Road, Aurora, IL 60504-8122. Checks or Money Orders are required for orders received by mail and should be made payable to First Alert. Contact our Consumer Affairs Department for costing information prior to ordering.

Mail To: First Alert, Inc.

**Attn: Consumer Affairs
3901 Liberty Street Road
Aurora, IL 60504-8122**

APPROPRIATE USE OF YOUR SECURITY BOX

Your steel Security Box is designed to provide minimal security against theft and is insulated with fire retardant material. For safes that provide maximum protection from fire or water damage, see your Security retailer, or visit our First Alert® web site: **www.FirstAlert.com**.

LIMITED WARRANTY

BRK Brands, Inc., ("BRK") warrants its Steel Boxes to be free of defects in material and workmanship for a period of 90 days from the date of purchase. If your Steel Box should fail to work during the first 90 days due to any factory defects, it will be repaired or replaced free of charge. Return the defective Steel Box in its original carton, freight prepaid, using a traceable method along with an explanation of the problem to the address listed below. Upon examination, the unit will either be repaired or replaced and shipped back to you prepaid. This warranty is void if the item has been misused in any way. This warranty only applies to the original purchaser. Please allow 2-4 weeks for the reshipment to arrive.

© 2016 BRK Brands, Inc., a Jarden Corporation company (NYSE: JAH)
3901 Liberty Street Road, Aurora, IL 60504-8122
All rights reserved.

First Alert[®]

MANUAL # M08-0290-002

www.FirstAlert.com