 


WE Walker[®]
Edison
furniture company

 
Item # : C48PSTRW
Assembly Instructions

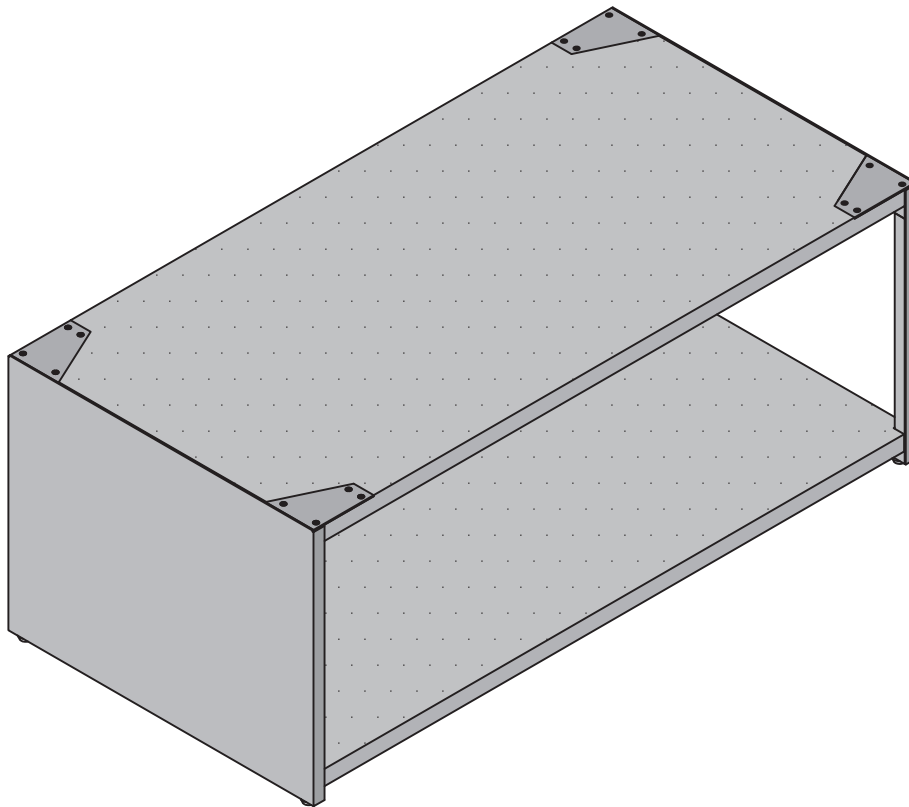


 

 
 

*To request missing, lost or broken parts , or for any other customer service issues,
please visit our website at www.walkeredison.com or call us at 877-207-5906.*


Revised 11/2016

Parts List

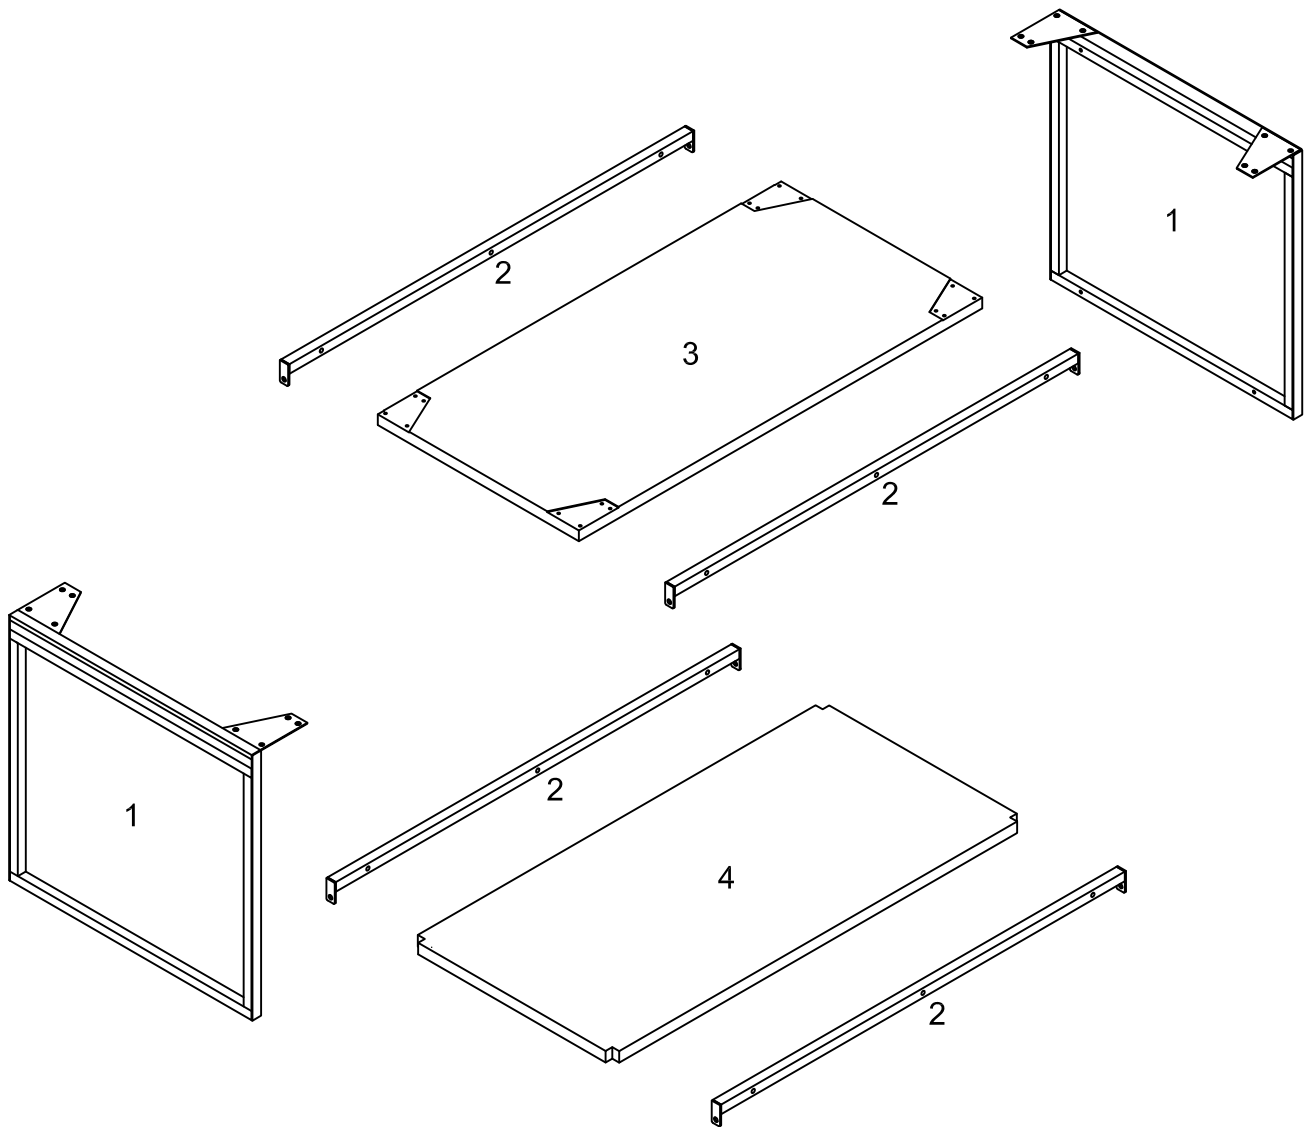

Hardware List


A		Ø1/4"*5/8"	Bolt	8 pcs
B		Ø1/4"*1-1/4"	Bolt	12 pcs
C		M4*13mm	Screw	16 pcs
D		Ø16	Washer	20 pcs
E		Ø1/4"	Feet	4 pcs
F		M4*4mm	Wrench	1 pc

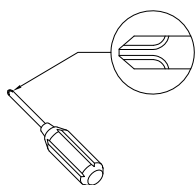 


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

 
Step 1

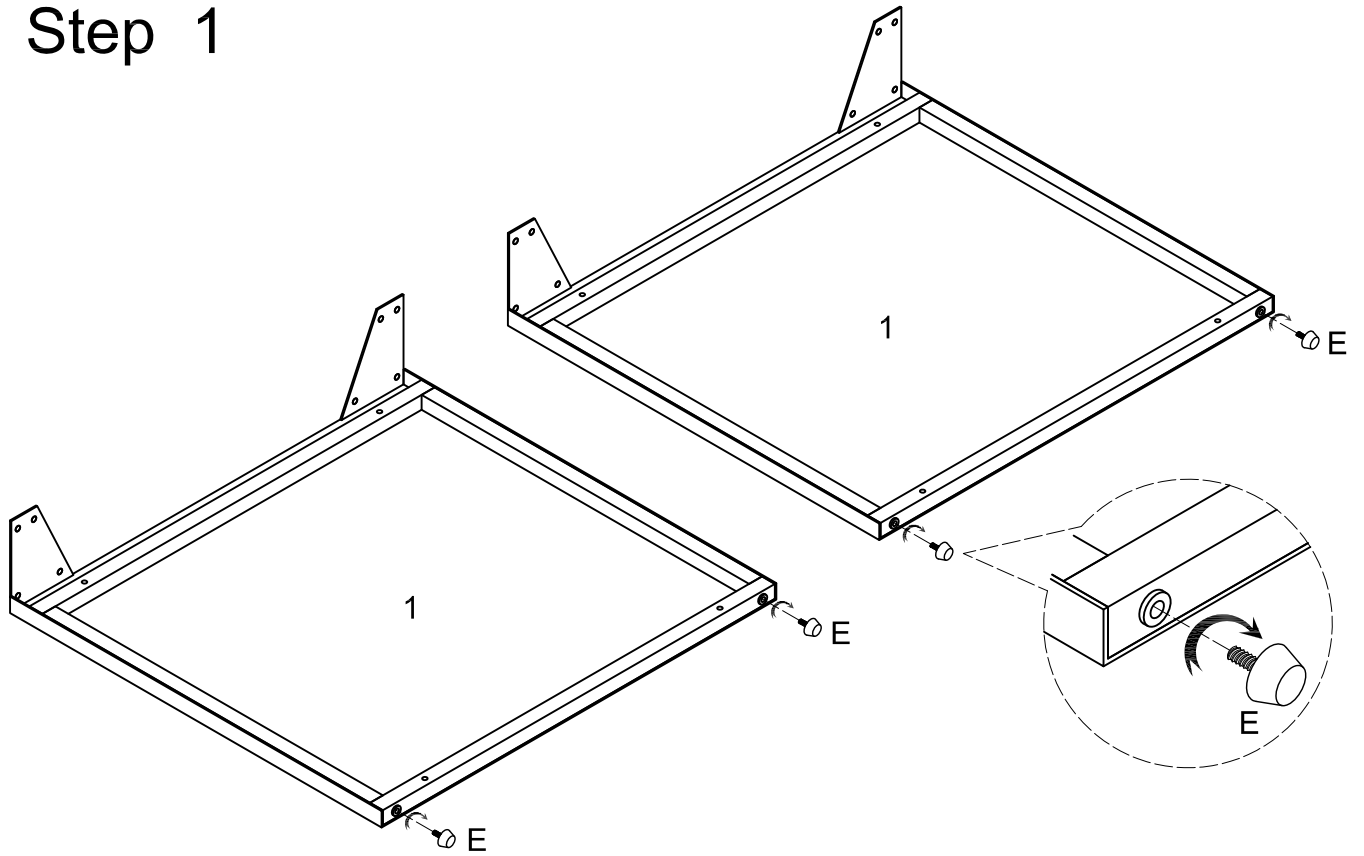

 
Step 2

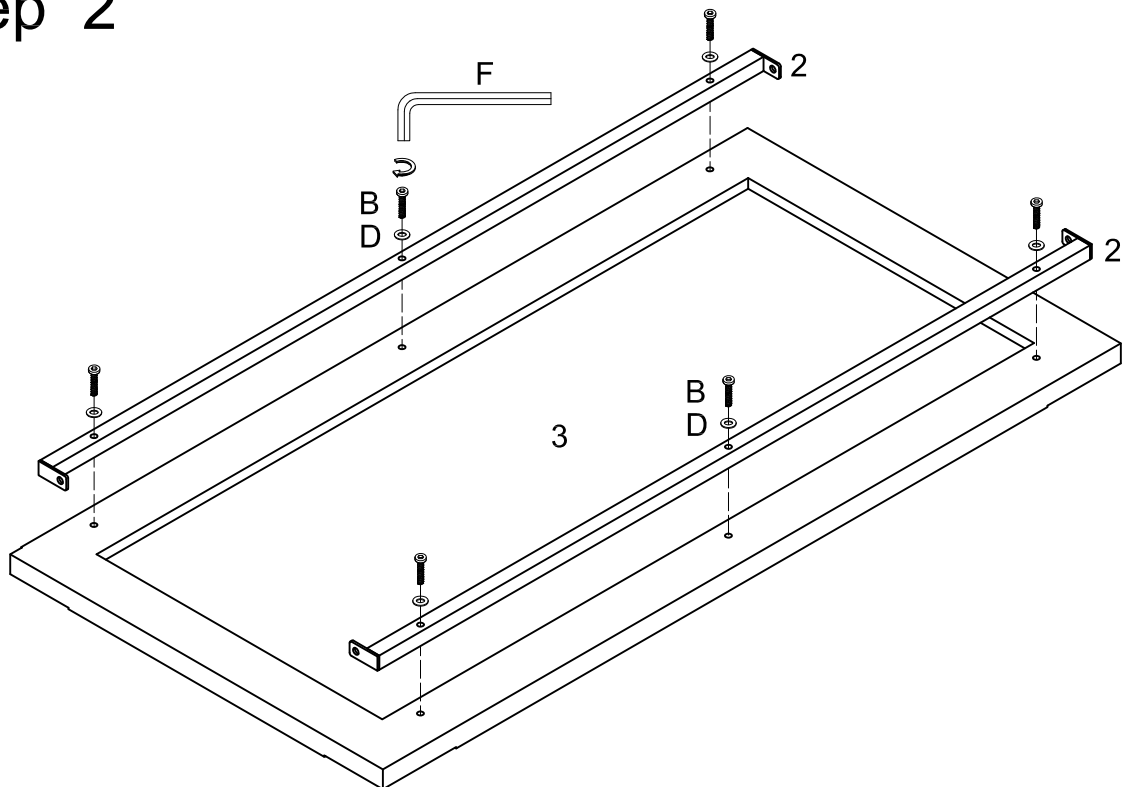

 
Step 3

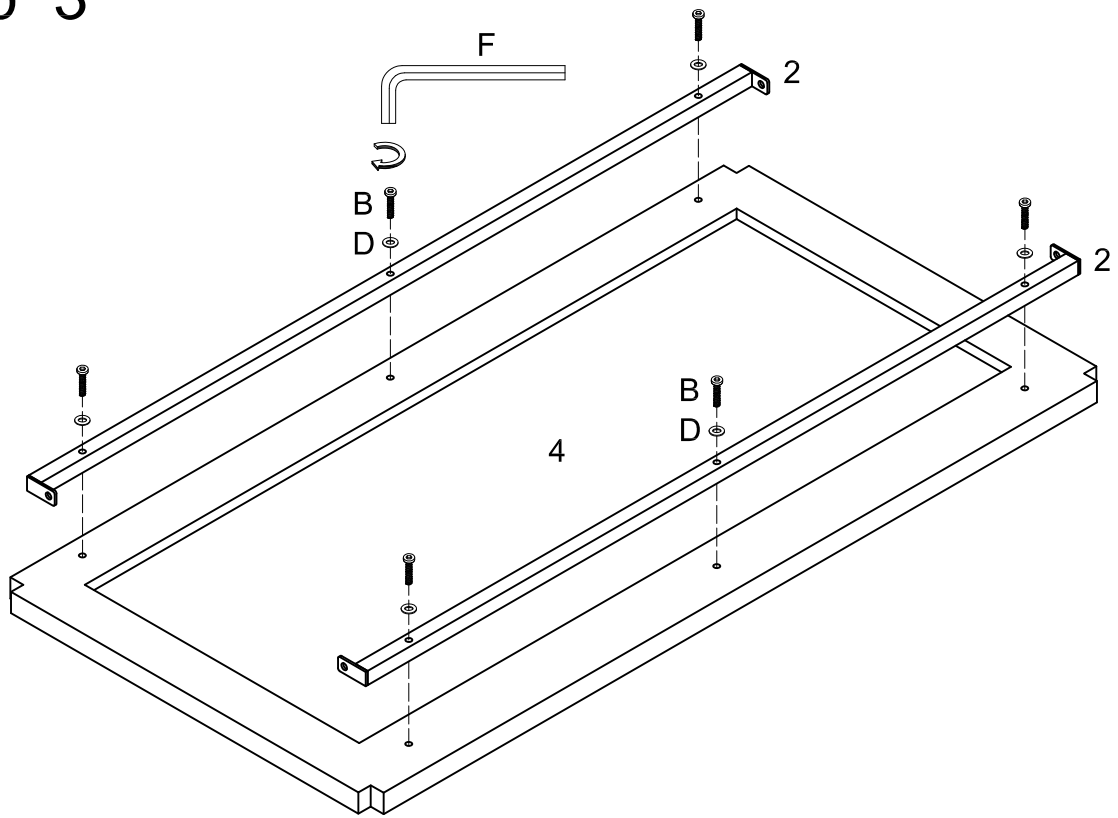

 
Step 4

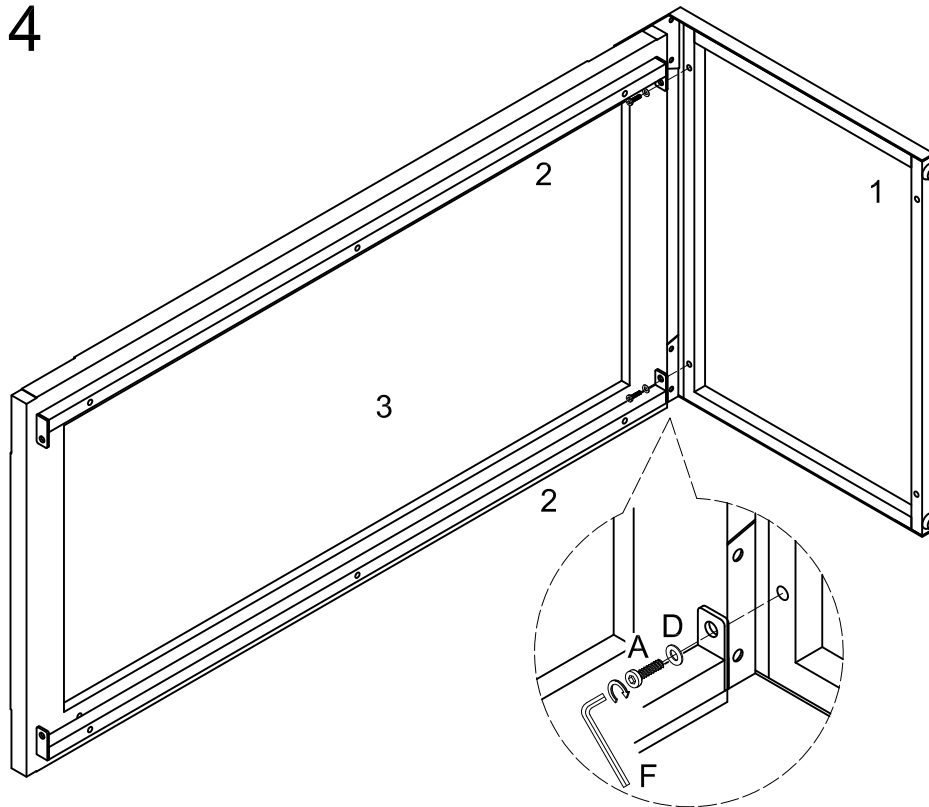

 
Step 5

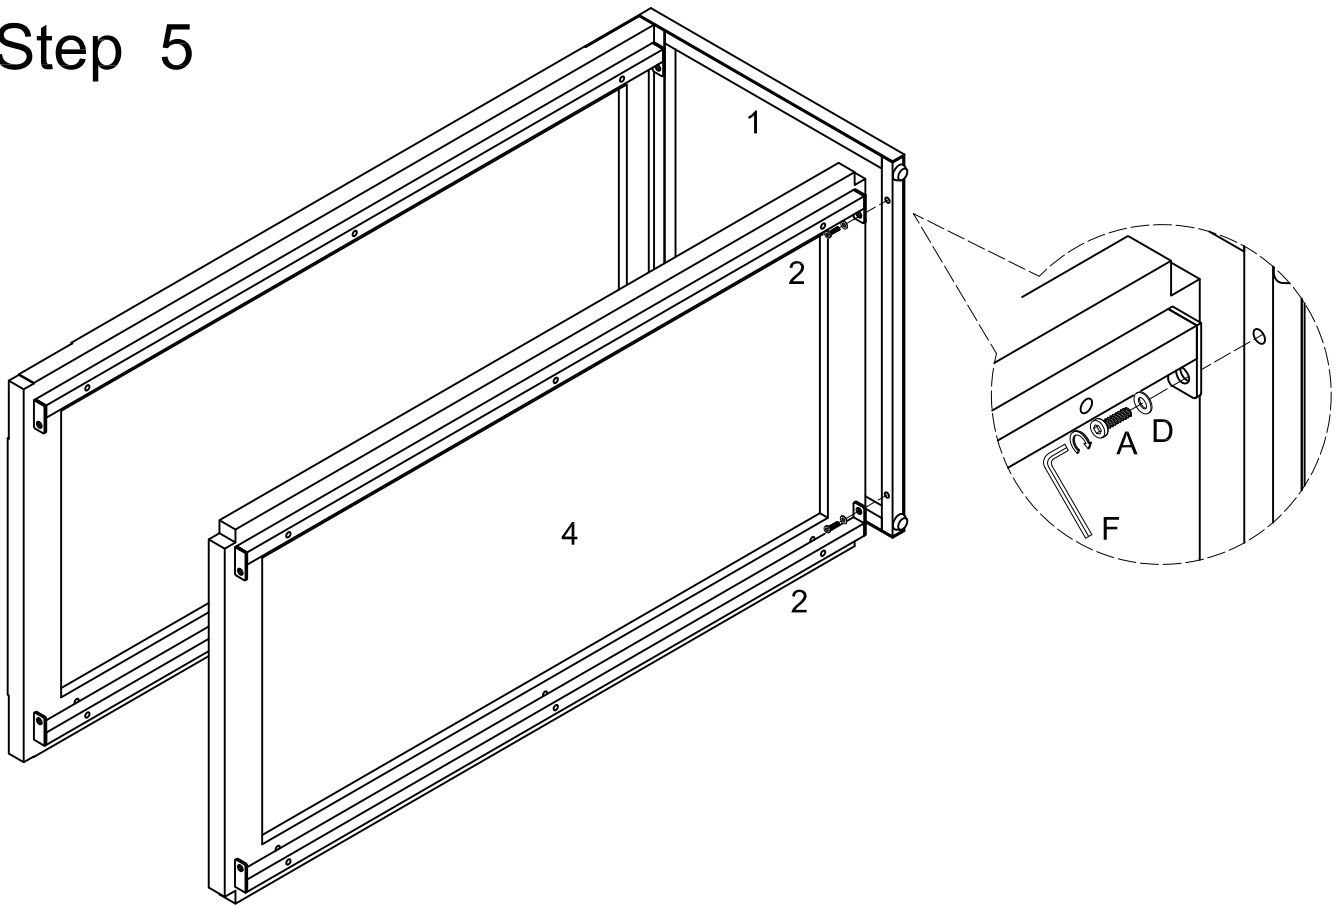

 
Step 6

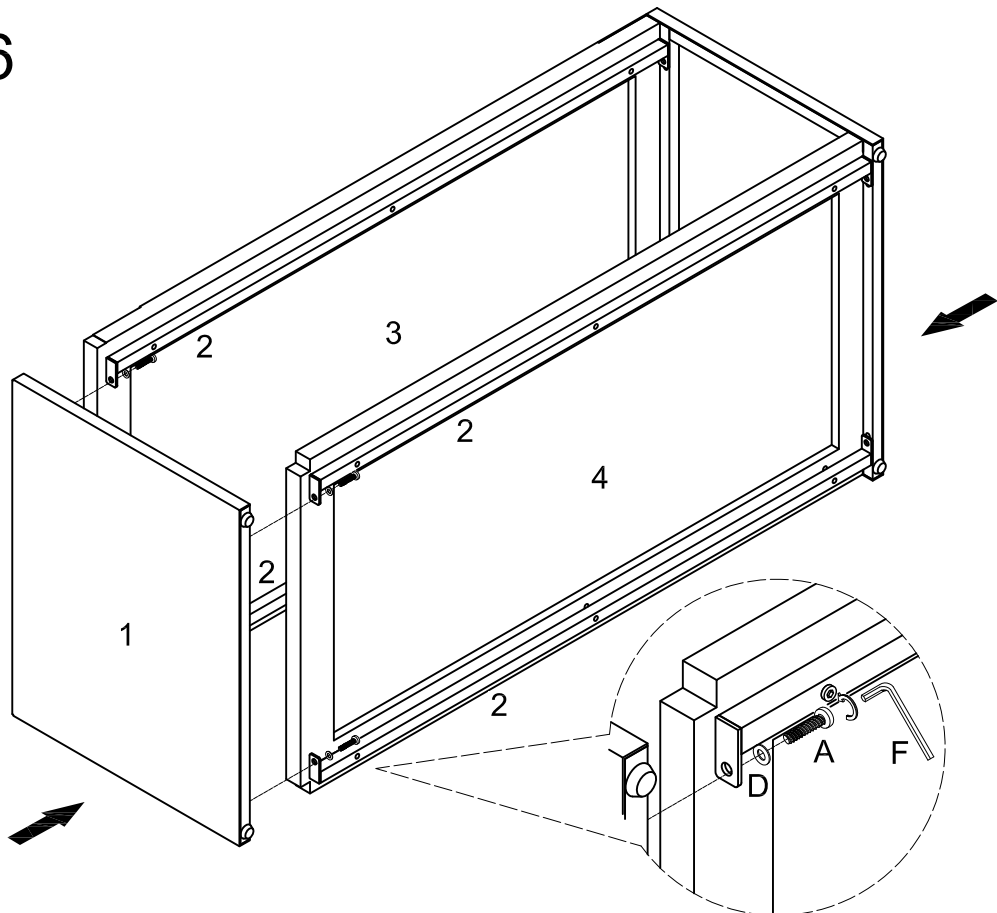

 Step 7

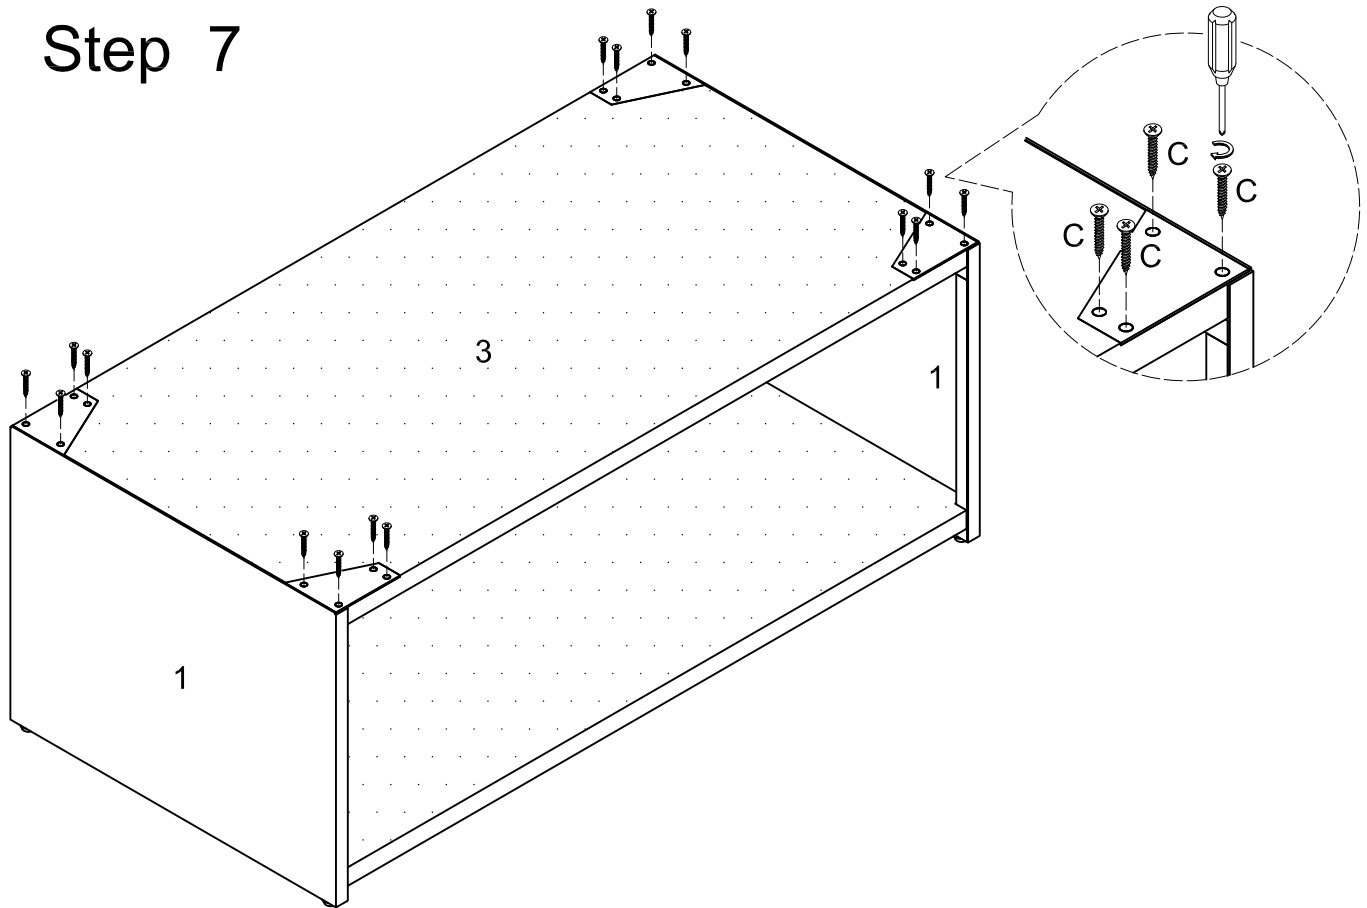

 Step 8

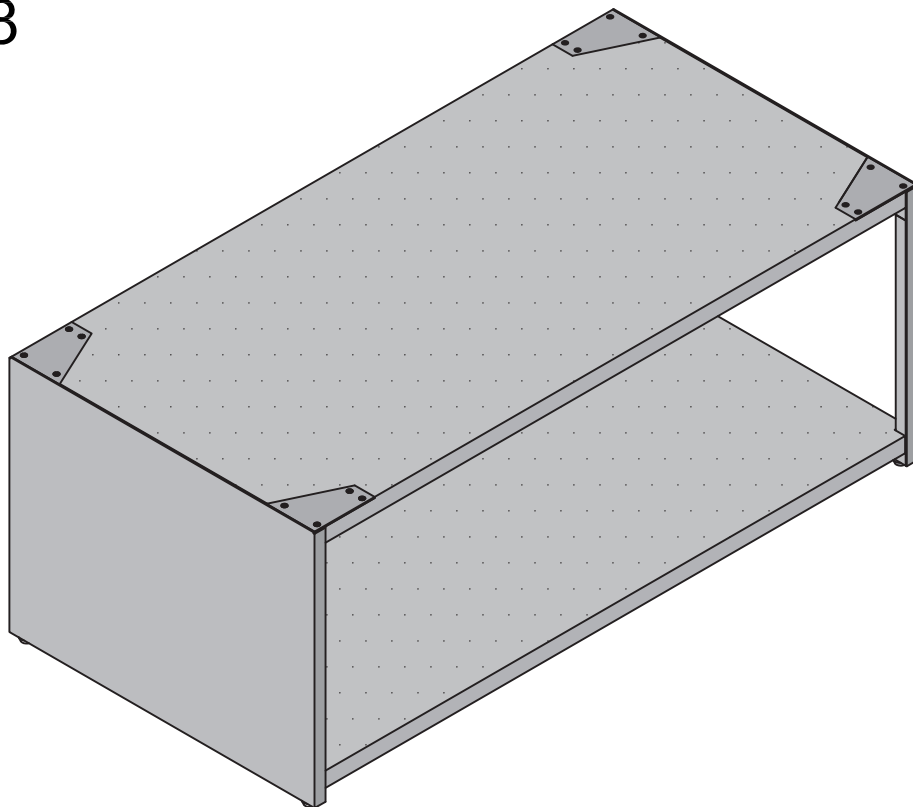

Final Assembly