

Gear 360

(2017)

Quick Start Guide SM-R210

Printed in Korea
GH68-47686Y Rev.1.0
English (USA), 03/2017



IMPORTANT INFORMATION: This product is subject to Samsung terms and conditions (including an arbitration agreement). If you open the package, or use or retain the device, you accept the terms and conditions. For more information about your rights, obligations, opt-out opportunities and the full terms, see www.samsung.com/us/Accessory-Legal and the enclosed materials.

 
About the Gear 360

Use the Gear 360 to record 360-degree panoramic videos and take 360-degree panoramic photos. Use your mobile device with the Gear 360 to control it remotely, view videos or images, and more.

Package contents

- Gear 360
 - USB Cable (USB Type-C)
 - Strap
 - Pouch
 - Quick start guide
- The items supplied with the Gear 360 and any available accessories may vary depending on the region or service provider.
- Always store the Gear 360 in its pouch. If its lenses are scratched, image quality may decrease.

Device layout

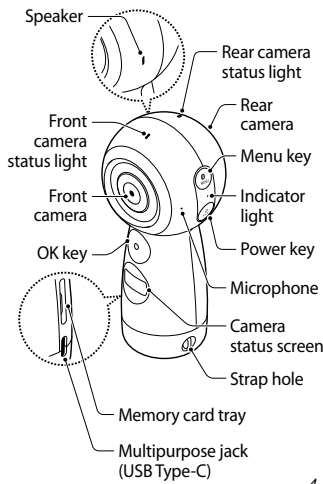

Keys


Key	Function
BACK	<ul style="list-style-type: none"> • Press and hold to turn the Gear 360 on or off. • Press to return to the previous screen on the camera status screen.
MENU	<ul style="list-style-type: none"> • Press repeatedly to move to the menu you want. • Press and hold to access connection modes.
OK	<ul style="list-style-type: none"> • Press to record a video or take a photo, or select the option you want.

Installing a memory card

A memory card must be inserted to record videos or take photos.

Pull out the memory card tray and gently press the memory card into the tray to secure it.

 ⚠ Be careful not to damage your fingernails when you remove the memory card tray.

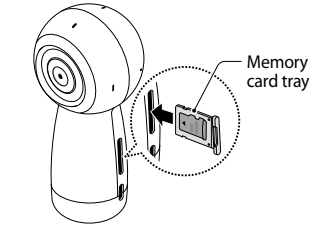


Memory cards are sold separately.

Charging the battery

Charge the battery before using the Gear 360 for the first time.

- 1 Plug the small end of the charger into the multipurpose jack of the Gear 360, and plug the large end of the charger into an electric socket.

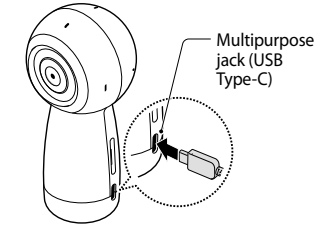

- Chargers are sold separately.
- The charger should remain close to the electric socket and easily accessible while charging.

- 2 After fully charging, disconnect the Gear 360 from the charger. First unplug the charger from the Gear 360, and then unplug it from the electric socket.



- Some content may differ from your device depending on the region, manufacturer, or software version, and is subject to change without prior notice.
- This product includes certain free/open source software. To see the instructions for viewing the open source licence, go to the Samsung website (opensource.samsung.com).

 
Copyright © 2017 Samsung Electronics America, Inc.

Samsung and Gear are trademarks of Samsung Electronics Co., Ltd. Other company or product names mentioned herein are the property of their respective owners and may be trademarks or registered trademarks. Screen images simulated. Appearance of devices may vary.

Attaching the strap to the Gear 360


Insert the strap into the strap hole, and then pull the loop.

You can also use the strap's rubber ring to fix the Gear 360 to record videos or take photos.

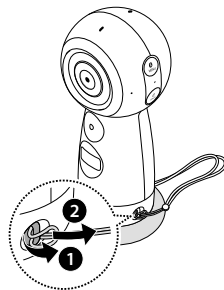

Checking the Gear 360's status

 You can check the Gear 360's status on the camera status screen when device is powered on.

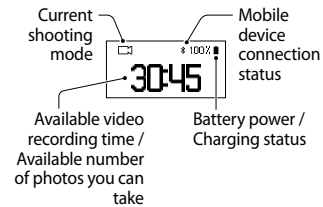


If you want to know which camera you are using, check the camera status light. When you use the front and rear cameras, both of the camera status lights will be turned on.

Recording videos and taking photos with the Gear 360 without a mobile device

You can use the Gear 360 to record videos and take photos without connecting to any other devices.

- 1 Press the Menu key to select a shooting mode and press the OK key.

 - 2 Press the OK key to record a video or take a photo. To stop recording a video, press the OK key.

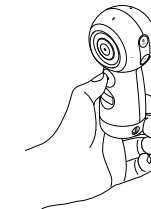

Connecting the Gear 360 to a mobile device

To connect your Gear 360 and mobile device, install the Samsung Gear 360 app or Gear 360 app on the mobile device.

Download the Samsung Gear 360 (New) app from **Galaxy Apps** or **Play Store**.

For iOS devices, download the Samsung Gear 360 app from **App Store**.

Gear 360

- 1 Turn on the Gear 360.
- 2 Press and hold the Menu key.

- When **Connect to Android** appears on the camera status screen, press the OK key.
For iOS devices, press the Menu key again, and when **Connect to iOS** appears on the camera status screen, press the OK key.

Mobile device



- Launch the **Samsung Gear 360** app on the mobile device.
For iOS devices, launch the **Gear 360** app and make sure your mobile device is connected to the Gear 360's Wi-Fi network.
- Tap **CONNECT TO GEAR 360**.


- Follow the on-screen instructions to complete the connection.
 - Connection methods may vary depending on your mobile device and software version. To connect with an iOS device, connect the Gear 360 with the mobile device in the Wi-Fi settings, launch the Gear 360 app, and then complete the connection.
 - Depending on your mobile device, it may not be compatible with the Gear 360 or may not support some features. Visit www.samsung.com to see a list of compatible mobile devices.

14

Recording videos and taking photos with the mobile device

You can record videos and take photos remotely using your mobile device's viewfinder.

- Launch the **Samsung Gear 360** app on the mobile device.
For iOS devices, launch the **Gear 360** app.
- Tap **Camera**.
The viewfinder will appear.
- Tap  or  to record a video or take a photo.
To change shooting modes, tap **MODE**.

-  Videos and photos taken with the Gear 360 are saved in the Gear 360's memory card.



16

Viewing videos or images

View videos or images on the remotely connected mobile device.

- Launch the **Samsung Gear 360** app on the mobile device.
For iOS devices, launch the **Gear 360** app.
- Tap **Gallery**.
- Tap **PHONE** or **GEAR 360**.
 - PHONE**: View videos or images saved on your mobile device.
 - GEAR 360**: View videos or images saved on the Gear 360's memory card.




17

- Select a video or an image and tap  or .
Drag your finger around on the video or image to view it from other angles.
 -  You can save the Gear 360's videos or images to your mobile device. While viewing a video or an image, tap **Save**.
 - You can share your videos or images saved on your mobile device with others. In **PHONE**, select the videos or images you want to share, tap **Share**, and then select a sharing method.


18

Live Broadcast

Invite your family and friends to watch the videos you record with the Gear 360 in real time.

- Launch the **Samsung Gear 360** app on the mobile device.
- Tap **Live broadcast**, select the service you want to use, and then sign in to the account.
- Tap  to invite contacts.
- Tap  to start broadcasting.
- Tap  to end your broadcast.

19


-  This feature may not be available depending on the mobile device, software version, or service region.
- Some features may be different depending on the service provider.
- You may incur additional charges for broadcasting via the mobile network.

20

Using the computer program


On your computer, you can watch videos or create 360-degree videos by stitching together wide-angle videos taken with the front and rear cameras. You can broadcast live videos in real time.


Windows OS supports the Gear 360 ActionDirector program and Mac OS supports the Gear 360 program. For more information, refer to the program's help menu.

-  You can download these programs from www.samsung.com/gear360.
- The Gear 360 ActionDirector program provides the video editing feature.


21

Accessing more information

For more information, launch the **Samsung Gear 360** app and tap  → **User manual** on the mobile device.

For iOS device, launch the **Gear 360** app and tap  → **User manual**.

Visit www.samsung.com to view the Gear 360 information, the user manual, and more.

-  The method for accessing the user manual from the Samsung Gear 360 app may vary depending on your mobile device.
- The user manual may not be available depending on the web browser.

15

Safety information

Read all safety information before using the device to ensure safe and proper use.



Warning

Follow the warning information provided below to prevent incidents such as fire or explosion

- Do not expose the device to physical impact or damage.
 - Do not carry your device in your back pockets or on your waist.
- Use manufacturer-approved batteries, accessories, and supplies.
- Prevent the multipurpose jack and battery terminals from contacting conductive elements, such as metal or liquids.

23

- Do not touch the device with wet hands. Also, do not use the device in humid environments, such as rest rooms, or during water-based activities, such as swimming.
- If any part of the device is cracked or broken, stop using the device immediately.


Follow the warnings below to prevent injury to people or damage to the device

- Do not allow children or animals to chew or suck the device.
- Do not insert the device or supplied accessories into the eyes, ears, or mouth.
- The device can be used in locations with an ambient temperature of 0 °C to 35 °C. You can store the device at an ambient temperature of -20 °C to 50 °C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.
- Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers.
- Keep your device dry.

24

- Do not use your device outdoor during a thunderstorm.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.

To view more information about device and battery disposal, launch the **Samsung Gear 360** app and tap  → **User manual** on the mobile device.

For iOS device, launch the **Gear 360** app and tap  → **User manual**.

18

FCC Warning Statement

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Part 15.105 (B)

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates, uses and can radiate radio frequency energy

19

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operated the equipment under FCC rules.

20

21

22

25

26