

Setup – Set Up Process 3




Position the smoker

- A good WiFi signal is crucial so make sure to set up the smoker according to these guidelines
- Note: These guidelines were not included in the original shipments so some consumers may not have them. They can be accessed online at Charbroil.com


WiFi Set-Up

Try to keep the distance between the router and the smoker around 30-40 ft with as few walls/obstructions in the way as possible.

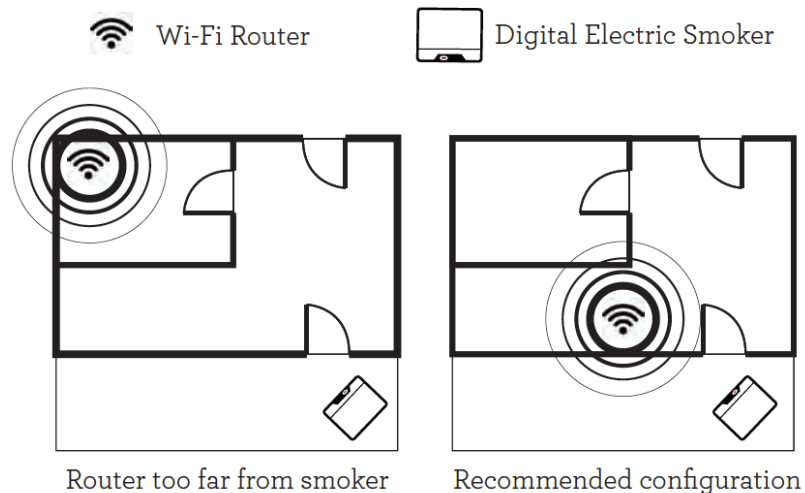

WiFi Extender/Repeater

If you do not want to move your router, a WiFi extender/repeater can be used to expand the reach of your network.

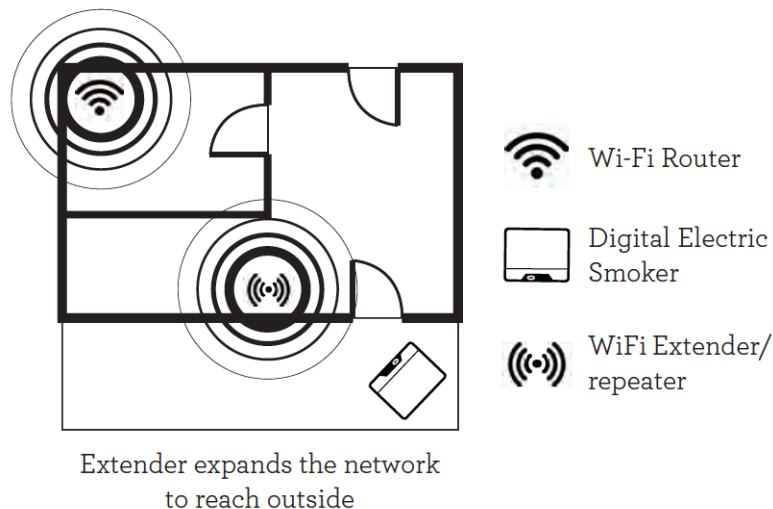

Setup – Set Up Process 3




Position the smoker


- A good WiFi signal is crucial so make sure to set up the smoker according to these guidelines
- Note: These guidelines were not included in the original shipments so some consumers may not have them. They can be accessed online at Charbroil.com

Smoker Positioning

To allow your WiFi enabled smoker to get the best possible connection to your WiFi network, position the smoker so that the control panel faces towards the location of the WiFi router in your home.

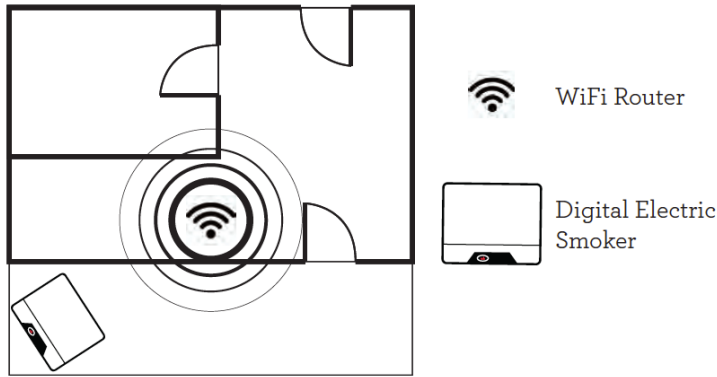

NOT Recommended - Control panel facing away from router

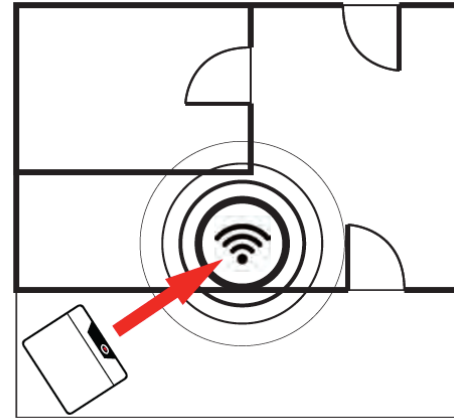


Recommended positioning - control panel facing router

This positioning is Critical!

Setup – Set Up Process 4

Configure New Network


Note: User must be on home network before configuring smoker!

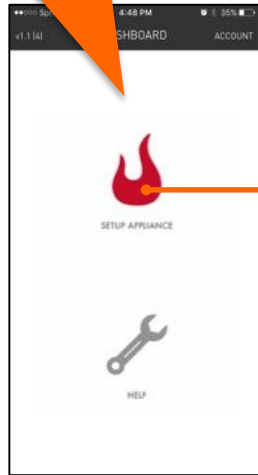


Dashboard
From the dashboard tap the
"Setup Appliance" icon.



Recommended Setup
This screen shows the proper positioning described in the previous slides –
-Smoker within range of router
-Control facing toward the router

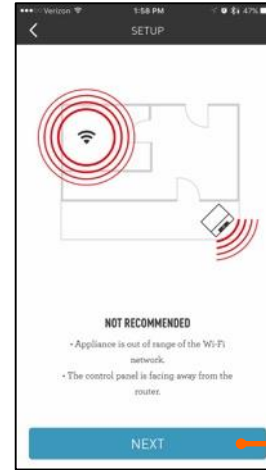

NOT Recommended
This screen shows scenario in which the appliance positioning would not be expected to work properly

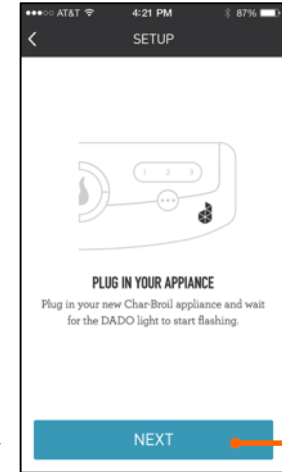



Set up screen 1
Plug in cooker in a location based on WiFi setup guidelines

Using the App – Starting a Guided Cook pg2




Status Screen

- Pushing the start button will start the chip burn, which lasts for 1:10.
- Use this time to prepare the meat you will be cooking.
- When the chip burn is complete you will receive a notification that instructs you to add food and push the preset button to continue

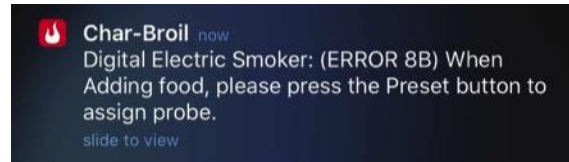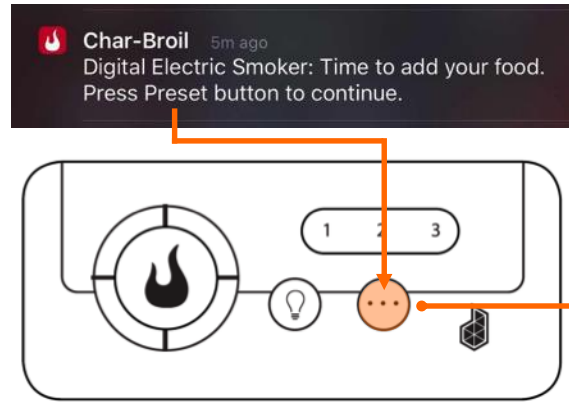

The user will continue to receive a reminder to push the preset button every 2 mins until they do. (Error 8B)

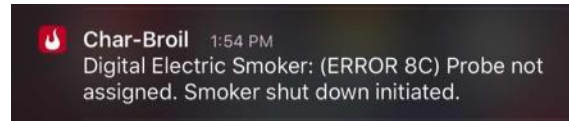

After 20 mins without the preset button being pushed, the smoker will shut down (Error 8C)



Status Screen

After successfully pushing the preset button, the cook will begin. The user will now be able to let the cook run and monitor its progress via the app.