

**TIPS & ADVICE FOR CLEANING**

- Before initial use & after, hand wash with mild soapy water and dry immediately. Do not allow to air dry and do not store while still wet.
- Always allow your cookware to cool before submersing in water. Never submerge a hot pan into cold water.
- To prevent the removal of seasoning, dishwashers, strong detergents, abrasive cleaners and metal scouring pads are not advised.
- To remove stuck-on foods, allow cookware to cool then soak in hot, soapy water up to one hour and use a non-abrasive sponge recommended for use with non-stick surfaces. Extended soaking is not recommended.
- Rub with a light coating of vegetable oil to restore the sheen after every wash.
- Store cast iron cookware in a cool, dry place. If you store with the lid in place, lay a paper towel between the lid and base to allow for air flow.

**TIPS & ADVICE FOR RE-SEASONING OUR CAST IRON PRODUCT**

If food seems to be consistently sticking to your cookware or you notice a dull, gray colored appearance, you may need to re-season your cookware by doing the following:

- Wash your cookware in warm, soapy water and scrub away all signs of rust with a stiff brush. Rinse & dry the cookware immediately.
- Apply a thin coating of melted vegetable shortening or cooking oil to the inside & outside of your cookware and lid (if applicable).
- Place aluminum foil on the bottom rack of your oven and preheat oven to 350 degrees Fahrenheit.
- Place cookware upside down on the top rack of the oven and bake for at least one hour. When done, turn the oven off and let the cookware cool in the oven.
- Remove cookware and wipe the cookware with a towel to remove excess oil.
- Remove and dispose of the foil from the bottom rack of the oven.
- Store the cookware, uncovered, in a dry place.



© 2016 W APPLIANCE COMPANY LLC. ALL RIGHTS RESERVED.  
 WESTINGHOUSE, and INNOVATION YOU CAN BE SURE OF are trademarks  
 of Westinghouse Electric Corporation. Used under license  
 by W Appliance Company LLC. All rights reserved.  
 MADE IN CHINA

INNOVATION YOU CAN BE SURE OF



**SELECT SERIES**



SEASONED TO PROTECT AGAINST RUST & PROVIDE A NON-STICK SURFACE



USE IN THE OVEN, IN THE BROILER OR EVEN OVER A CAMPFIRE

**15" SEASONED CAST IRON SKILLET**  
 THE PERFECT ADDITION TO ANY KITCHEN  
**WFS1500**



MADE IN CHINA

8 19813 01348 6



**USE & CARE  
INSTRUCTIONS TIPS &  
ADVICE FOR COOKING**

- Do not boil water in cast iron cookware, especially when it is relatively new. It can cause the removal of layers of seasoning and the product to rust.
- Without protective seasoning, cast iron can rust. If this occurs, scour the rust off, dry, and apply a little vegetable oil.
- Some foods may stick when new. Use extra vegetable oil or butter to help prevent it.
- Avoid acidic foods like tomatoes, beans and some sauces that can damage the seasoning when your cast iron product is relatively new and additional seasoning has yet to build up.
- Cast iron rarely needs to go above the moderate/medium heat setting to obtain the most effective heating properties. High heat is not necessary.
- Cast iron is suitable for most heat sources—electric, induction and gas cooktops, even on the campfire or the grill. Flames should not extend up the sides of the cookware.
- Not recommended for ceramic and/or glass smooth top ranges.
- Always select a burner or element that is equal, or smaller than, the bottom of your cast iron product, not larger.
- Place your cast iron product on the burner and bring up to temperature together. Do not place a cold pan on a hot burner or add cold food to a hot pan.
- Do not use in the microwave.
- When using for deep frying, fill the cast iron cookware to only one third capacity.
- Cast iron handles and lids get hot so use oven mitts to protect your hands.
- Use trivets to protect countertops from the hot bottom surface of the cast iron.
- Lift rather than slide the cast iron products so as not to damage, or scuff, the stove, counters or cast iron product.
- Metal utensils should not be used with cast iron products. Instead, wood, nylon or heat resistant silicone tools are recommended.



**LIMITED LIFETIME WARRANTY**

Westinghouse brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to

W Appliance Co. at 1 (855) 855-0294 from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the life of your product.

The warranty commences the day the product is purchased.

W Appliance Co. agrees that it will, at its option, replace the defective product with either the same unit or product equivalent to your original purchase.

**EXCLUSIONS: THIS WARRANTY DOES NOT APPLY TO THE BELOW:**

1. Minor imperfections, surface markings as the result of shipping and slight color variations are normal and do not constitute a defective product.
2. Damage from ordinary wear and tear such as scratches, dents, stains or discoloration to all surfaces or other damage that does not impair the function of the cast iron product.
3. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
4. If damage is due to general misuse, accidents or acts of God.
5. If damage or breakage is due to dropping or impact.
6. Using your cast iron products on high heat for extended period of time.
7. Washing your cast iron products in the dishwasher, improper cleaning, or neglect.
8. Using metal utensils on any surface of your cast iron product.
9. Using scouring pads, steel wool, abrasive cleaners and/or bleach on any surface of your cast iron product.
10. On units that have been transferred from the original owner.
11. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
12. To products used in a commercial or rental setting.
13. To products used in settings other than ordinary household use or used other than in accordance with the provided use and care instructions.
14. Transportation and shipping costs.
15. Product when used outside the United States or Puerto Rico.

**LIMITED LIFETIME  
WARRANTY CONTINUED**

**PLEASE RETAIN PURCHASE RECEIPT TO  
CONFIRM PURCHASE AND OWNERSHIP**

REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call 1 (855) 855-0294 to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at 1- 855-855-0294.

W Appliance Co.,  
1356 Broadway  
New York, NY 10018