



Mini MPL Candle Lighter Instructions

English USA - en

Zippo Manufacturing Company 2013. All Rights Reserved.

For great tips and hints on the care of your new lighter, visit zippo.com/care.

Zippo products are legally protected by patents and trademark registration, visit zippo.com/patents for details.



WARNING

KEEP AWAY FROM CHILDREN. Ignite utility lighter away from face and clothes. Do not use to light cigarettes, cigars or pipes. Be sure flame is out after use. Never expose to heat source above 50°C or prolonged sunlight. Do not puncture or put in fire. Do not keep lit for more than 30 seconds. Follow all instructions and warnings of the manufacture of the appliance or any other item when using this product. Wait two minutes after refilling before using the utility lighter. When filled will contain flammable gas under pressure.

No lighter is childproof. There is no substitute for proper adult supervision.

Initial Fill Instructions

WARNING: This lighter does not contain butane – be sure to carefully fill lighter according to these instructions.

1. Set flame adjustment to minimum position (C).
2. Fill with Zippo Premium Butane or other premium butane gas. Do not use lighter for a minimum of 4 hours. This is to let the butane and internal parts stabilize before use. Igniting the lighter prematurely could cause an excessive and dangerous flame height.
3. When igniting lighter for the first time, be sure that the flame adjustment is set to the minimum position. Use with caution and aim safely away from person and combustible materials.
4. After the flame is stabilized, adjust to preferred flame height setting.

Instructions:

Our classic design of the Zippo Mini MPL features a patented child resistant safety lock button (A), which releases and allows the ignition switch (B) to engage.

To operate:

- 1) Depress and hold safety lock button (A).
- 2) Slide ignition switch (B) forward to ignite and hold to maintain flame.
- 3) Release the ignition switch to extinguish flame and stop fuel flow.

To adjust flame:


Turn regulator (C) to + (higher) or to – (lower).

Do not refill near flame, heat source or sparks. Use only in well ventilated area.

To refill with butane fuel:

- 1) Use only a premium grade butane fuel to refill. Use of other than Zippo Premium Butane Fuel may result in damage to the filling valve and could cause clogging.
- 2) Always refill Mini MPL in the position shown. Place butane fuel nozzle into filling valve (D) and depress several times with firm, even pressure. Hold for several seconds. Repeat if necessary.
- 3) Wait at least two minutes after refueling before using.

Zippo Premium Butane Fuel is recommended for your Zippo Mini MPL and other refillable butane products.

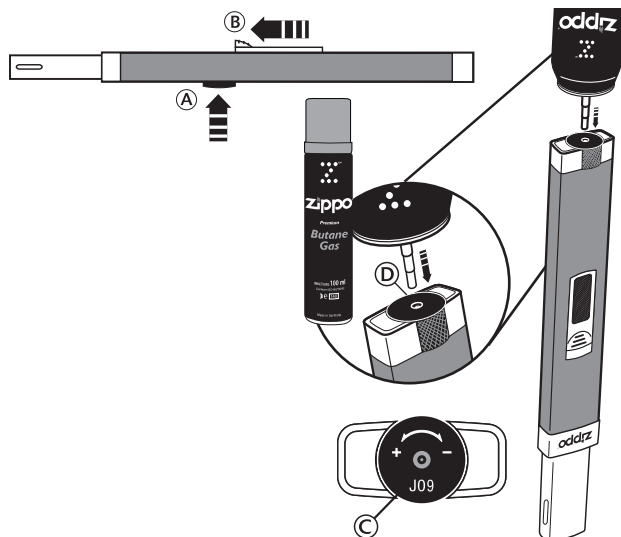

WARRANTY

Any Zippo Mini MPL returned to us for warranty repair within three years of purchase will be repaired free of charge or replaced, at our discretion. A \$5.00 shipping and handling fee applies to repairs of the Zippo Mini MPL.

This warranty gives you specific legal rights. You may also have other rights which vary state to state. Other Zippo products carry their own specific warranties. To obtain service under this warranty, refer to repair instructions at Zippo.com or contact Consumer Relations at 814-368-2700.

UNDER NO CIRCUMSTANCES CAN YOU MAIL A ZIPPO MINI MPL TO ZIPPO