

All Content ▼ Search Support

MX Vertical Advanced Ergonomic Mouse

GETTING STARTED

We've put everything you need to get started with your MX Vertical Advanced Ergonomic Mouse right here. If you still have questions browse the topics on the left.



Time to make yourself comfortable!

Thank you for getting the new MX Vertical. We hope you will enjoy this ergonomic mouse. Please download Logitech Options (<https://support.logitech.com/software/options>) to unlock the full potential of your MX Vertical.

Let's get started

MX Vertical can be connected to your computer via Bluetooth, the USB cable, or wirelessly using Bluetooth or the USB receiver.

SUPPORT (/en_us/home) Connect with the USB cable

us/home)

CREATE AN ACCOUNT
(/EN_US/CREATE-ACCOUNT)



To connect through the USB cable please make sure your MX vertical is turned on. Then plug the USB cable into your MX Vertical to use it corded.

Connect Wirelessly using Bluetooth or USB receiver

You can connect your MX Vertical wirelessly using Bluetooth or the Unifying USB receiver. Below you can find the instructions to get connected:

Connect via Bluetooth

1. Make sure the cable is unplugged and then turn on your MX Vertical.
2. Press the Easy-Switch button to select the channel you want to pair to. (Make sure the LED is blinking fast – if it's not, press and hold the button for 3 seconds.)
3. Open Bluetooth settings on your computer.
 - On MacOS: Open **System Preferences > Bluetooth > Add "MX Vertical"**
 - On Windows: Select **Start > Settings > Devices > Add Bluetooth device > Add "MX Vertical"**
4. MX Vertical is connected.



Connect via Unifying USB Receiver

1. Make sure the cable is unplugged and then turn on your MX Vertical.
2. Press the Easy-Switch button to select the channel you want to pair to.
3. Plug the Unifying USB receiver into a port on your computer.
4. MX Vertical is connected.



Product Overview

MX Vertical at a glance



1 – Natural angle

2 – Precision scroll-wheel

3 – Island keys

4 – USB-C charging port

5 – High precision sensor

6 – Textured thumb rest

7 – Customizable shortcuts

8 – Cursor speed switch

Advanced Features

Ergonomic shape (http://buy.logitech.com/store/logib2c/DisplayShoppingCartPage/locale.en_us/)

(<http://www.logitech.com/en-us/home>)

SUPPORT (/en_us/home)

CREATE AN ACCOUNT
(/EN_US/CREATE-ACCOUNT)



MX VERTICAL is designed to promote a natural handshake position through a unique 57-degree vertical angle. The textured rubber panel provides a soft comfortable feel while giving a good grip.

Try to keep your hand in a natural, relaxed position while using, to avoid any unnecessary extension in your wrist. Also, use the cursor speed switch to increase the speed to reduce the overall movement needed.

Learn more about the ergonomic design (<http://ergo.logi.com>).

High precision sensor and cursor speed switch



MX Vertical has an advanced high-precision sensor with 4000 adjustable DPI and an instant cursor speed switch.

Cursor speed switch

The cursor speed switch allows you to toggle between two cursor speeds with the press of a button.

Cursor speed 1	1000 DPI
Cursor speed 2	1600DPI

With Logitech Options, you will receive an on-screen notification when switching between cursor speed 1 and cursor speed 2. (https://www.logitech.com/store/logib2c/DisplayShoppingCartPage/locale/en_us/)

You can also fully customize the speed full to your needs. All you have to do is to press and hold the cursor speed switch until the overlay appears (see example below) and then simply move the mouse left or right to adjust the speed. (<http://www.logitech.com/en-us/home>)



Power Management

MX Vertical has a rechargeable battery.

- Battery life — four months on a full charge
- Fast charge — one minute of charge gives three hours of battery

The battery indicator LED will let you know when the power is low, and when to recharge. You can install Logitech Options to get on-screen notifications.

LED	Description
Green	More than 10% battery life
Red	Less than 10% battery life
Breathing effect	Charging

NOTE: When charging MX vertical will be connected through the cable.

Easy-Switch



MX Vertical can connect up to three devices and seamlessly switch between them with a press of a button.

The Easy-Switch button is located on the bottom of the MX Vertical.

Downloads

Use Logitech Options (https://support.logitech.com/en_us/software/options) software for MacOS and Windows (https://buy.logitech.com/store/logib2c/DisplayShoppingCartPage/locale/en_us/)

SUPPORT (/en_us/home)
Additional Information

(<http://www.logitech.com/en-us/home>)

CREATE AN ACCOUNT
(/EN_US/CREATE-ACCOUNT)

1. Natural Grip

MX VERTICAL is designed to promote a natural handshake position through a unique 57-degree vertical angle. The textured rubber panel provides a soft comfortable, yet solid grip.

2. Precision Wheel

The precision scroll wheel provides a precise line-by-line scrolling and has an integrated middle click.

3. Island Keys

Island keys with quality switches that last up to 10 million clicks.

4. Rechargeable USB-C

MX Vertical is rechargeable and lasts up to four months. One minute of charge will give three hours of usage.

5. High Precision Sensor

4000 adjustable DPI.

 
6. Textured Thumb Rest

7. Customizable Shortcuts

Easily accessible shortcuts. All extra buttons and shortcuts can be customized using Logitech Options.

8. Cursor Speed Switch

The cursor speed switch allows you to switch cursor instantly with a press of a button.

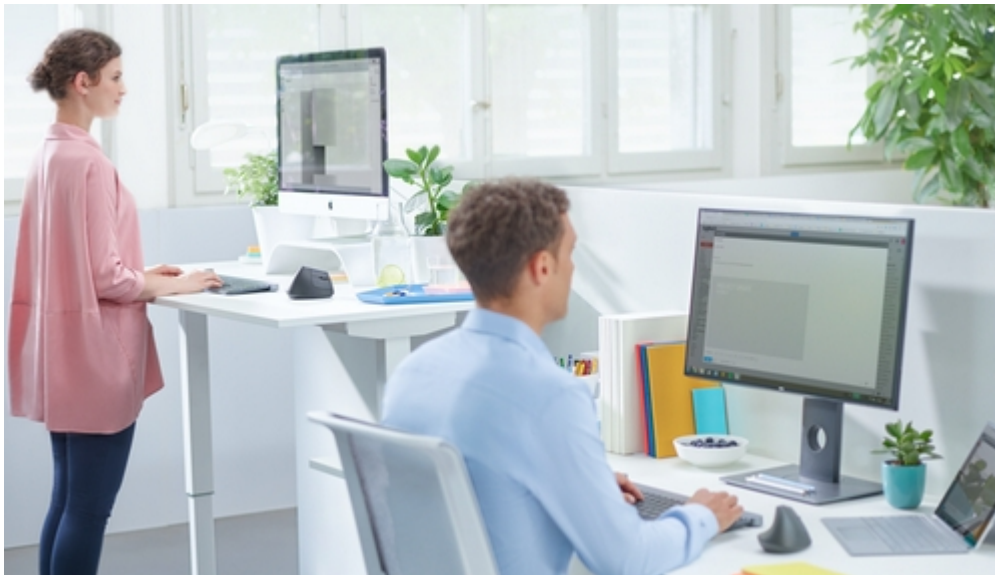

Downloads