



1 Connect the Home Dock and Dock the Radio

Select a location in close proximity to your stereo system or powered speakers, and also where the cable from the Indoor/Outdoor Home Antenna can reach the Home Dock. The location should be easily accessible and provide good visibility of the display, but should not be located where it will be in direct sunlight, which will reduce the visibility of the display screen.


A. Connect the Indoor/Outdoor Home Antenna to the **silver ANT** connector at the rear of the Home Dock.

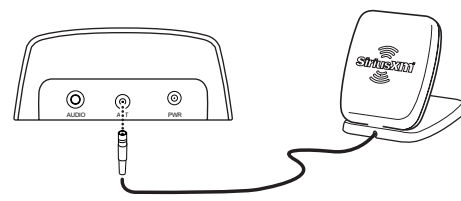


B. Connect the Home Power Adapter to the **red Power** connector at the rear of the Home Dock, and plug it into a wall outlet.

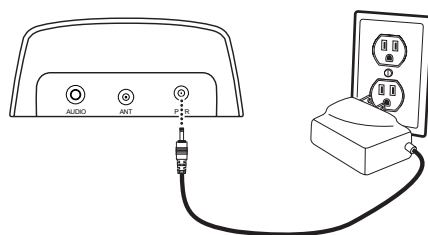

C. Place your Onyx Plus in the Home Dock.

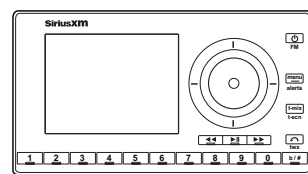


D. Power on your Onyx Plus by pressing the **Power** button.

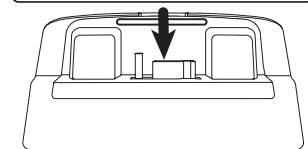


2 Place & Aim the Indoor/Outdoor Home Antenna

- A.** Check the signal strength indicator on the Radio's screen. If there are 2 or 3 bars of signal strength, continue with step 3. If not, continue with step B below.
- B.** Access the **Signal Indicator** screen by pressing **menu** and then pressing ▼ to scroll to and highlight **Signal Indicator**. Press the **Select** button.
- C.** Try experimenting with the Indoor/Outdoor Home Antenna to get a feel for the reception in your location. If either the Satellite or the Terrestrial signal bar (or both) are more than half filled, you are receiving a good signal and are done aiming the antenna. Press and hold **menu** to exit the **Signal Indicator** screen. The radio should be tuned to channel 1, the XM Preview channel. Continue with step 3.
- D.** If you are not yet receiving a good signal, move the antenna around the room or from room to room. Aim it at different windows, try moving the antenna closer to a window, ideally one that is facing due south.

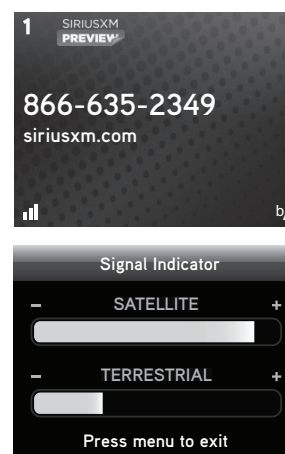

Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? Place the antenna on the windowsill making sure it faces the glass and not the window frame. If you are receiving a good Satellite or Terrestrial signal (or both), you're done aiming the antenna. Press and hold **menu** to exit the **Signal Indicator** screen. The radio should be tuned to channel 1, the XM Preview channel. Continue with step 3.

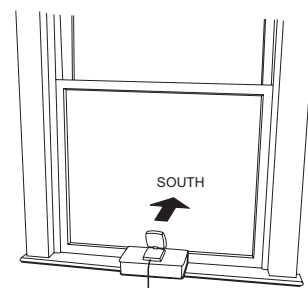


If you were unable to find an indoor location for the antenna, you will need to place it outdoors. Refer to "Step 2: Place and Aim the Indoor/Outdoor Home Antenna" in the User Guide for outdoor location options. Go to www.siriusxm.com/guides for the Onyx Plus User Guide (with Home Kit).

3 Connect the Audio

The Home Dock can be connected to your stereo system, or to a set of powered speakers.


To Connect the Home Dock to Your Stereo System:

- A.** Take the provided Stereo Audio Cable and connect the single connector to the **green AUDIO** connector at the rear of the Home Dock.
- B.** Connect the white left and red right Stereo Audio Cable connectors to any available input other than PHONO on your stereo system. (If your stereo's inputs are marked red and black, connect the white plug to the black input.)
- C.** Turn the stereo system On, and make sure you select the correct input on your stereo system for the AUX In or LINE In connection.
- D.** If you have connected everything correctly, and you are receiving the XM signal, you should hear the XM audio from channel 1.
- E.** The audio level of your Radio can also be adjusted, if necessary. Refer to "Set Audio Level" in the User Guide to adjust the audio level. Go to www.siriusxm.com/guides for the Onyx Plus User Guide (with Home Kit).

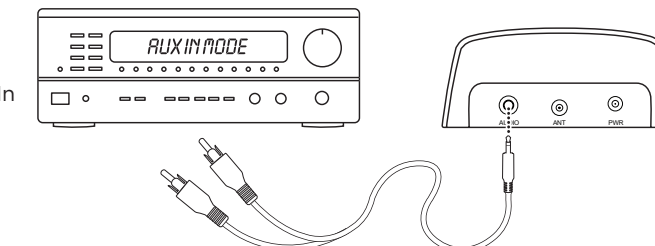

To Connect the Home Dock to Your Powered Speakers:

- A.** Connect the powered speakers to the **green AUDIO** connector at the rear of the Home Dock.
- B.** Plug the powered speakers into a wall outlet.
- C.** Turn On the powered speakers.
- D.** If you have connected everything correctly, and you are receiving the XM signal, you should hear the XM audio from channel 1.
- E.** The audio level of your Radio can also be adjusted, if necessary. Refer to "Set Audio Level" in the User Guide to adjust the audio level. Go to www.siriusxm.com/guides for the Onyx Plus User Guide (with Home Kit).

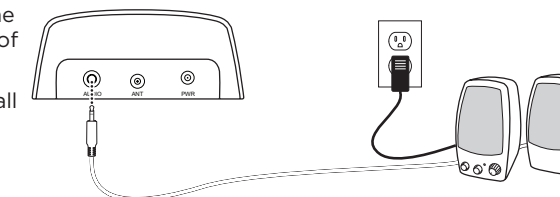

4 Subscribe

You can either follow the general activation and subscription process or use the on-board activation guide to activate your Onyx Plus and subscribe to the XM service.

General activation and subscription process:

- A.** Make sure your Onyx Plus is turned on, receiving the XM signal, and tuned to XM channel 1 so that you can hear XM audio.
- B.** Make a note of your XM Radio ID. You can find it by selecting **Radio ID** in menu items, by tuning to channel 0, on a label on the bottom of the gift box, and on the label on the back of your Onyx Plus.
- NOTE!** The XM Radio ID does not use the letters I, O, S, or F.
- C.** To subscribe:
 - Online: Go to www.siriusxm.com/activatenow to access or set up an online account, subscribe to the service, and activate your Radio.
 - OR**
 - By phone: Call **1-866-635-2349**.

Activation usually takes 10 to 15 minutes after you have completed the subscription process, but may take up to an hour. We recommend that your



*The phone number shown above may differ from the one shown on your Onyx Plus. All numbers are valid.

Radio remain on until subscribed. Once subscribed, the Radio will receive and you can tune to channels in your subscription plan.

Press ▲ or ▼ to tune to other channels, and ◀ or ▶ to browse the different categories of channels. Learn what all the buttons do on the opposite side of this Quick Start Guide.

Activation guide:

For your convenience, Onyx Plus has an on-board activation guide. You can activate your radio and subscribe to the XM service by using this guide, where you will be guided step-by-step through the subscription process. To access and use the guide, simply follow these steps:

- A.** Turn Onyx Plus on and press the **menu** button.
- B.** **Activate Radio** will be highlighted. Press the **Select** button.
- C.** Follow the directions on each successive screen until you complete the subscription process.





HOME KIT INCLUDED

Dock & Play Radio

ONYX PLUS QUICK START GUIDE



Sirius XM Radio Inc.
1221 Avenue of the Americas
New York, NY 10020

siriusxm.com

1.866.635.2349

© 2017 Sirius XM Radio Inc.

SPPL1H1QSG 170401a

Onyx Plus Main Display

When listening to a channel, information about the channel and what is currently playing is displayed.

Channel Name/Logo Album Art

Channel Number — 25
Favorite Channel Indicator — ☆A5

Artist Name or Talk Show Host or Sports Teams/Score
Song/Program Title or Talk Show Schedule or Game Time/Game Details
Antenna Signal Strength

Pause and Replay Timebar —
Sports Ticker

Informational Messages Informational Icons

Remote Control Functions

Power Button
Press to turn Onyx Plus on and off.

Pause and Replay Buttons
Pause, rewind, and replay live radio and smart favorite channels.

Select Button
When in a menu or list, press to confirm selection of highlighted item; When in TuneMix or TuneScan, press to end TuneMix/Scan and continue playing the currently tuned channel, or press and hold to end Tune Mix/Scan and return to the previously tuned channel.

TuneMix
Press to begin TuneMix.

FM Button
Press to access and cycle through FM presets; Press and hold to display the FM settings menu (Vehicle Dock only).

Number Buttons
Press to tune to a stored favorite channel; Press and hold to store a favorite channel; also enter a channel number.

Jump/Traffic Weather Button
Press to go back to the previous channel to which you were listening.

Arrow Buttons Up/Down
Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight menu items.

Arrow Buttons Left/Right
Press to search for channels by category.

Menu/Alerts Button
Press to access advanced features and configuration options; When in configuration options, press and hold to return to main display screen; press and hold to save a Song, Artist, or Game alert.

TuneScan
Press to begin TuneScan.

Direct Button
Press to enter a channel number using the number buttons and directly tune to the channel.

Mute Button
Press to silence the XM audio.

Bank Button
Press to switch between favorite channel banks.

IMPORTANT!
Pull tab and remove before using Remote Control.

Important Legal Information

© 2017 Sirius XM Radio Inc. "Sirius", "XM" and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. "BBC" and "Radio One" are trademarks of the British Broadcasting Corporation and are used under license. BBC logo © BBC 1996. Radio 1 logo © BBC 2001. Cosmopolitan is a registered trademark of Hearst Communications, Inc. Elvis Radio logo © EPE Reg. U.S. Pat & TM of. IndyCar (and Design) are registered trademarks of Brickyard Trademarks, Inc., used with permission. Major League Baseball trademarks and copyrights are used with permission of Major League Baseball Properties, Inc. Visit the official website at MLB.com. Games subject to availability and change and may not include all spring training games. All rights reserved. NASCAR is a registered trademark of the National Association for Stock Car Auto Racing, Inc. The NBA identifications are the intellectual property of NBA Properties, Inc. and the respective NBA member teams. © 2017 NBA Properties, Inc. © 2017 NFL Properties LLC. All NFL-related trademarks are trademarks of the National Football League. NHL and the NHL Shield are registered trademarks of the National Hockey League. © NHL 2017. All NHL logos and marks and NHL team logos and marks depicted herein are the property of the NHL and the respective teams and may not be reproduced without the prior written consent of NHL Enterprises, L.P. The Home Ice® channel is a registered trademark of XM Satellite Radio Inc. The Swinger Golfer logo is a registered trademark of PGA TOUR, Inc. Visit www.siriusxm.com/channellineup for updates. All programming/channel lineup/XM service subject to change or preemption. All other marks and logos are the property of their respective owners. All rights reserved. Certain features depend on subscription package. Subscription sold separately.

IMPORTANT NOTICE: REQUIRED SUBSCRIPTION
Hardware and subscription sold separately, and activation fee required. Other fees and taxes may apply. **Subscriptions governed by SiriusXM Customer Agreement; see www.siriusxm.com.** Prices and programming are subject to change. **Service automatically renews into the subscription Package you choose (which may differ from the Package which arrived with the Radio), for additional periods of the same length, and automatically bills at the then current rates, after any complimentary trial or promotional period ends, until you call us at 1-866-635-2349 to cancel.** XM U.S. Satellite service available only to those at least 18 years of age in the 48 contiguous USA and DC, while SiriusXM Internet Radio is available throughout our satellite area and also AK, HI and PR.

FCC Statement: The user is cautioned that changes or modifications not expressly approved by Sirius XM Radio Inc. can void the user's authority to operate this device. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: •Reorient or relocate the receiving antenna of the affected receiver. •Increase the separation between the SiriusXM equipment and the affected receiver. •Connect the SiriusXM equipment into an outlet on a circuit different from that to which the affected receiver is connected. •Consult the dealer or an experienced radio/TV technician for help. **WARNING!** The FCC and FAA have not certified this Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, Sirius XM Radio Inc. cannot support this type of application or installation.

What's in the Box?

Onyx Plus Radio

Home Dock

Remote Control

Indoor/
Outdoor Home
Antenna

Home Power
Adapter

Stereo Audio
Cable

Onyx Plus Button Functions

Up and Down Buttons
Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight items in lists.

Left and Right Buttons
Press to search for channels by category.

Power/FM Button
Press to turn Radio on and off; Press and hold to quickly access FM channel presets (Vehicle Dock only).

Select Button
When in a menu or list, press to confirm selection of highlighted item; When in TuneMix or TuneScan, press to end TuneMix/Scan and continue playing the currently tuned channel, or press and hold to end Tune Mix/Scan and return to the previously tuned channel.

Menu/Alerts Button
Press to access advanced features and configuration options; When in configuration options, press and hold to return to main display screen; Press and hold to save a Song, Artist, or Game alert.

TuneMix/TuneScan Button
Press to begin TuneMix; Press and hold to begin TuneScan.

Number Buttons 0-9
Press to tune to a stored favorite channel; Press and hold to store a favorite channel. Also used to enter channel numbers when the Direct button is pressed.

Pause and Replay Buttons
Pause, rewind, and replay live radio and smart favorite channels.

Jump/Traffic Weather Button
Press to go back to the previous channel to which you were listening.

Banks/Direct Button
Press to switch between favorite channel banks (A/B); Press and hold to enter a channel number using the number buttons and directly tune to the channel.

Channels stored in buttons 1 - 9 in banks A & B are smart favorites used for enhanced pause and replay, and for advanced music features TuneStart, TuneMix, and TuneScan. Channels stored in button 0 in banks A & B are regular favorites.

Specifications

System	Power Requirements: 110 V AC, 400 mA (max) Operating Temperature: -4°F to +140°F (-20°C to +60°C) Audio Output: 1.5 V _{rms} (max)	Home Power Adapter	Input: 100-240 V AC, 50-60 Hz, 0.2 A Output: 5.0 V DC, 1.0 A
Onyx Plus Radio	Dimensions: 4.5 in (W) x 2.4 in (H) x 0.7 in (D) 115 mm (W) x 61 mm (H) x 17 mm (D) Weight: 3.4 oz (96 g)	Indoor/Outdoor Home Antenna	Type: SiriusXM Indoor/Outdoor Connector: SMB female Cable Length: Approximately 20 ft (6.1 m)
Home Dock	Dimensions: 4.1 in (W) X 1.8 in (H) X 1.7 in (D) 105 mm (W) X 45 mm (H) X 44 mm (D) Weight: 1.9 oz (54 g)	Stereo Audio Cable	Connectors: 1/8 in (3.5 mm) stereo male to RCA left & right Cable Length: Approximately 5.9 ft (180 cm)
Audio Connector: 1/8 in (3.5 mm) female Antenna Connector: SMB male		Remote Control	Dimensions: 1.6 in (W) x 4.7 in (H) x 0.63 in (D) 41 mm (W) x 120 mm (H) x 16 mm (D) Weight: 2.1 oz (60 g) Battery: CR2032 (3V)