



CURA LUXE

User Guide

Hair dryer

Model No. 76840, 76841, 76842, 76843, 76844, 76845, 76846,
76847, 76848, 76849

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:



DANGER

KEEP AWAY FROM WATER

Electricity and water are a dangerous combination and can cause death by electric shock. Do not allow electrical cords to come into contact with water or other liquids.

ELECTRICAL APPLIANCES ARE ELECTRICALLY LIVE WHEN PLUGGED IN, EVEN IF TURNED OFF.

To reduce the risk of death by electric shock:

1. Always unplug the appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store the appliance where it can fall or be pulled into a bath tub or sink.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into the water.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

 
- 10. Do not use an extension cord with this appliance.
- 11. Do not direct hot air toward eyes or other heat sensitive areas.
- 12. Attachments may be hot during use. Allow them to cool before handling.
- 13. Do not place the appliance, while it is operating, on any surface.
- 14. While using the appliance, keep hair away from the air inlet.
- 15. Do not operate with a voltage converter.



Do not use the appliance near a bath tub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.

SAVE THESE INSTRUCTIONS

GROUND FAULT CIRCUIT INTERRUPTERS

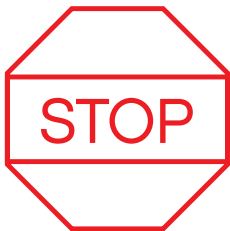

This Message About...

 
GROUND
FAULT
CIRCUIT
INTERRUPTERS

... can save a life!

GROUND FAULT CIRCUIT INTERRUPTERS

If you must use your hair dryer in the bathroom, install a GFCI now! Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathroom, garages and outdoor outlets of all new homes.

Why do you need a GFCI?

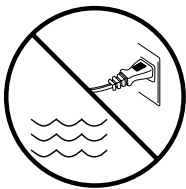

Electricity and water don't mix. If your hair dryer falls into water while the dryer is plugged in, the electric shock can kill you, **EVEN IF THE SWITCH IS "OFF"**.

A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small!

Don't wait...Install one now!

* GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

OPERATING INSTRUCTIONS

CURA LUXE

This appliance is intended for household use.

Use on Alternating Current (60 Hz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified technician. Do not attempt to defeat this safety feature.

 
OPERATING INSTRUCTIONS

CHECK ALCI EVERY TIME YOU USE THIS HAIR DRYER

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water.

To make sure the ALCI is functioning properly and the exclusive water sensing system (ALCI) is working, perform the following test:


1. Plug in the hair dryer and press the test button on the plug.
2. The hair dryer will stop working. There will be an audible click and the reset button will pop out
3. To reset the ALCI with a Reset button: Unplug the unit. Then push the Reset button in, and reinsert the plug into the outlet.
4. Be sure to repeat the test every time you use this hair dryer to confirm the ALCI is operational.
5. If the ALCI is not functioning properly, return the hair dryer to a service center.
6. If a water immersion occurs, bring this unit into a service center. Do not try to reset.

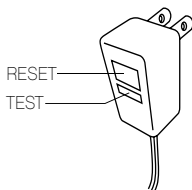

Should the dryer go off and the Reset button pop out during use, this could indicate a malfunction in the dryer. Remove the plug from the outlet and allow the dryer to cool. Reset the ALCI. Reinsert the plug into the outlet. The dryer should function normally. If not, return it to a service center for examination and repair.

OPERATING INSTRUCTIONS

 CURA LUXE

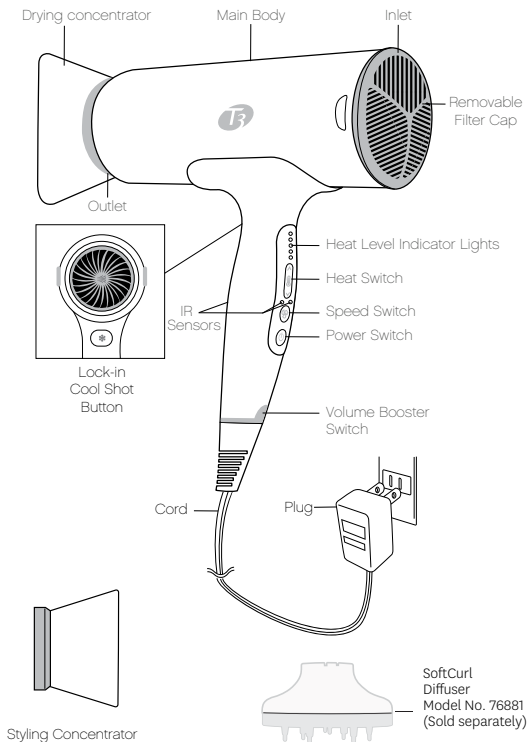


OPERATING INSTRUCTIONS

CURA LUXE


- 1 Press the Power Switch once to turn on the dryer. When turning the dryer on for the first time, it will start at the highest heat and speed setting.

To turn off the dryer, press the Power Switch once again.

 
NOTE: Each time you turn the dryer on, it will start on your last set temperature and speed.

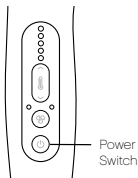

 - 2 To alternate between high and low speed settings, press the Speed Switch once.

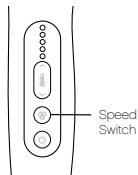

 - 3 To change the temperature, press the $\wedge$ or $\vee$ arrow on the Heat Switch to reach the desired heat setting.

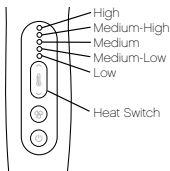

- 4 To activate the cool shot, press and release the Lock-in Cool Shot Button once. To deactivate it, press the button again.



 
Lock-in Cool
Shot Button

OPERATING INSTRUCTIONS

CURA LUXE

AUTO PAUSE SENSOR

Your Cura LUXE dryer comes with a convenient Auto Pause Sensor that pauses airflow when the dryer handle is released. To maintain airflow, ensure at least one of the three IR Sensors is covered during use. If you do not cover at least one IR Sensor, the airflow will enter **Auto Pause Mode**: the airflow will pause and all five LED lights will blink. The dryer will resume airflow with pre-selected settings when one of the three sensors is covered.

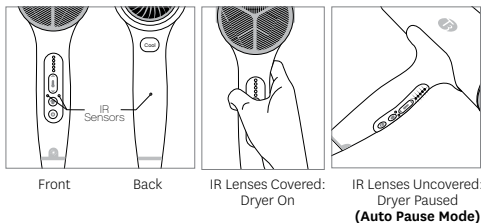


NOTE: To disengage the Auto Pause Sensor, please see the following page.

OPERATING INSTRUCTIONS


CURA LUXE

 HOW TO DISENGAGE THE AUTO PAUSE SENSOR

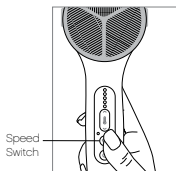


1.

 Hold Speed Switch for
about 5 seconds.

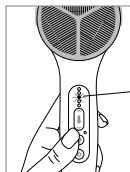

2.

 3rd light will blink
to disable feature.

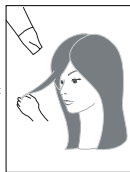

3.

Use dryer
as normal.

To re-engage the Auto Pause Sensor, hold the Speed Switch down for another 5 seconds until the 3rd light blinks again. The feature will now be enabled.

OPERATING INSTRUCTIONS

 
CURA LUXE

AUTO SHUT-OFF

When the Auto Pause Sensor feature is activated and the unit is on, the unit will automatically shut itself off after approximately five minutes of not being used. To reactivate the unit, press the Power Switch.

VOLUME BOOSTER SWITCH

For a boost of volume and body, turn on the Volume Booster by pressing the switch once.* The switch LED light will turn on. To turn off, press the switch again. The LED light will turn off.





* Results may vary by hair type.

OPERATING INSTRUCTIONS


CURA LUXE

FILTER CLEANING INDICATOR

  
For optimal performance, this dryer features a filter cleaning indicator. When it is time for the filter to be cleaned, lights will blink at a fast pace. (Lights blink slowly when in Auto Pause Mode.)

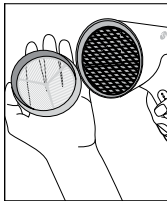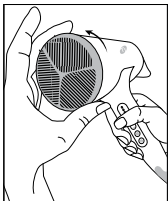

 1. Twist the filter cap counterclockwise to release it from the air intake of the dryer body.

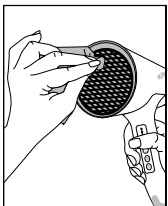

 2. Brush or wipe away dust buildup on the interior screen and filter cap with a soft cloth or small brush.

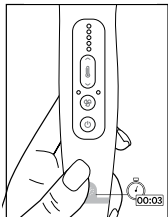


3. To reset the filter cleaning indicator, hold the  on the Volume Booster switch for 3 seconds until the lights stop blinking.

HOW TO USE YOUR

CURA LUXE

 - 1 Attach the Drying Concentrator to dry hair evenly with a wide volume of air.



Drying Concentrator

- 2 Turn on the dryer and select your desired heat and speed settings.
For a boost of volume and body, press the Volume Booster Switch.*

*Results may vary by hair type

 


Volume Booster Switch

- 3 Aiming the Drying Concentrator in a downward direction, rough dry hair until it is 70-90% dry.



- 4 Remove the Drying Concentrator and attach the Styling Concentrator to style one section at a time with concentrated airflow.



Styling Concentrator

- 5 Divide hair into 3-4 inch sections. Applying tension with a round bristle brush, brush through each section while following with the dryer. To smooth the ends, slip the brush underneath the curve and blow over the curve.



- 6 Finish by pressing the Lock-in Cool Shot Button and applying cool air to your hair to set your style.



Lock-in Cool Shot Button

MAINTENANCE INSTRUCTIONS

CURA LUXE

1. Make sure that the inlet and outlet grills are clear of dust and lint for proper operating performance.
2. Your hair dryer is virtually maintenance free. No lubrication is needed.
3. Always remove the plug from the outlet and allow the dryer to cool before cleaning.
4. Twist the filter cap counterclockwise to release it from the air intake of the dryer body. Use a soft cloth or a small brush to remove dust and lint that may have accumulated on the metal mesh.
5. The hair dryer exterior may be wiped clean with a damp cloth.
6. **CAUTION:** Never allow the power supply cord to be pulled, twisted or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the hair dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible, if the unit stops or if it operates intermittently.
7. If the cord or hair dryer is damaged or does not operate properly, return it to a service center for repair.
8. This hair dryer has no user serviceable parts. Do not attempt to repair the appliance yourself.

STORAGE

When not in use, your hair dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap the cord around the dryer. Allow the cord to hang or lie loose and straight at the point of entry into the hair dryer.

T3 LIMITED WARRANTY TERMS & CONDITIONS

T3 Micro will repair or replace (at our option) T3 products for twenty-four (24) months from the date of purchase if they are defective in workmanship or materials. This limited warranty does not cover (1) damage due to misuse or abuse, such as incorrect voltage supply, dropping, or failure to follow enclosed instructions or (2) tampering, such as repair or attempt to repair. To obtain service under this warranty, please visit t3micro.com/warrantyclaim to submit a warranty claim, or call us at (866) 376-8880 to receive detailed instructions. You will be required to provide proof of purchase.

THIS LIMITED WARRANTY IS ONLY VALID IF THE PRODUCT IS PURCHASED FROM AN AUTHORIZED SELLER OF T3 GOODS AND IF THE ORIGINAL SERIAL NUMBER ON THE PRODUCT HAS NOT BEEN REMOVED OR OTHERWISE TAMPERED WITH.

Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this written limited warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL T3 BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED.

Visit www.t3micro.com/register to complete your warranty registration.

Model No.

76840, 76841, 76842, 76843, 76844, 76845, 76846,
76847, 76848, 76849

SPECIFICATIONS

Operating Voltage: 125V

Power Consumption: 15A

T3 Micro, Inc.

Venice, CA USA

Made in China



Do not use the appliance near a bath tub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.



0184-76840-B



Model: 76840, 76841, 76842, 76843, 76844, 76845, 76846,
76847, 76848, 76849

This device complies with Part 15 of the FCC Rules:

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference,
- (2) and (2) this device must accept any interference received, including interference that may cause undesired operation.