

IMPORTANT SAFETY INSTRUCTIONS


When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

TOURMALINE IONIC™ 1875 Watt Portable Salon Dryer

Model 1059

Use and Care Instruction Manual

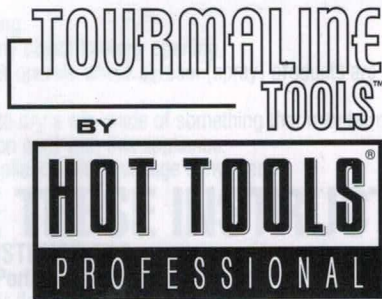

USER MAINTENANCE INSTRUCTIONS

Care and cleaning of your Portable Salon Dryer

To clean: Always unplug hair dryer before cleaning. The outside of the hair dryer may be cleaned with a cloth moistened with a solution of mild detergent and water followed by drying with a soft dry cloth. Avoid probing any object into the air intake grill as this may damage the unit.

To store: Detach the cord and store in the special cord storage niche. Press column release latch while grasping wifflet handle with one hand, then lower bonnet to base. While lowering bonnet, pull latch down on front of hair dryer base.

WARNING: If any malfunction occurs, do not attempt to repair it yourself. This appliance has no user-serviceable parts.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER: To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not use near, place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.
6. Do not use an appliance whose cord has become twisted, bent or otherwise damaged.

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in. Turn off switch and unplug electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or immersed in water. Return the appliance to a service center for examination and repair.

NOTE: Helen of Troy L.P. does not have an authorized service center. However, if this appliance is still under warranty, return it to Helen of Troy L.P. Consumer Service Department for replacement.

5. Keep the cord and appliance away from heated surfaces. Do not pull, twist or wrap cord around appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use this dryer to dry a wig made of something that may burn easily.
11. Do not use an extension cord with this appliance.
12. Do not operate this appliance with a voltage converter.

SAVE THESE INSTRUCTIONS

USER MAINTENANCE INSTRUCTIONS

Care and cleaning of your Portable Salon Dryer.

To clean: Always unplug hair dryer from electrical outlet before proceeding with the cleaning steps. The outside of the hair dryer may be cleaned with a cloth moistened with a solution of mild detergent and water followed by drying with a soft dry cloth. Avoid probing any object into the air intake grill as this may damage the unit.

To store: Coil the cord and store in the special cord storage niche. Press column release latch while grasping bonnet handle with one hand, then lower bonnet to base. While lowering bonnet, pull latch down on front of hair dryer base.

WARNING: If any malfunction occurs, do not attempt to repair it yourself. This appliance has no user-serviceable parts.

Important safety instructions	3
User maintenance instructions	3
Operating instructions	4
Recommended use procedures	6
Limited warranty	7

2 Speed /
4 heat options

Ion on / off
feature

Removable
Lint filter

Large bonnet

U-shaped
arm

Attachment
ring

Adjustable
front visor



Two lockable
wheels

OPERATING INSTRUCTIONS

Assembling the Stand and Adjusting the Dryer's Position


- Remove the legs, stand and bonnet from the box (A)
- With the stand still in its compact position, place the top of the stand into the attachment ring at the bottom of the bonnet's U-shaped arm (B)
- Hold the bonnet steady while you rotate the stand clockwise approximately 13 turns. This should tighten the bonnet completely, securing it atop the stand
- Test to ensure the bonnet is securely attached to the stand by pulling on the stand. The bonnet should not slide off the top of the stand
- Unscrew the bolt and remove the plate from the underside of the stand's hub (C)
- Insert the legs into the hub, making sure they are pushed up as far as possible (D)
- Replace the plate and tighten the bolt so the legs are secure. Use pliers if necessary

- Place the stand and bonnet assembly upright on the floor and loosen the stand's upper adjustment ring by turning it to the right (E)
- When the upper adjustment ring is loose, raise the upper portion of the stand to the desired height, then tighten the upper adjustment ring. Test for security by pushing down lightly on the upper section of the stand. It should not move
- Repeat the process above on the lower section of the stand
- Adjust the bonnet's angle, lower the rear and front visors into place
- **NOTE:** The front visor may be adjusted up and down to the desired position. The rear visor will be fixed in position once you have lowered it into place.

(A)




(D)

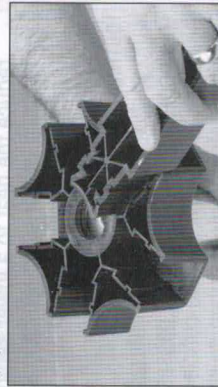

(B)



(E)

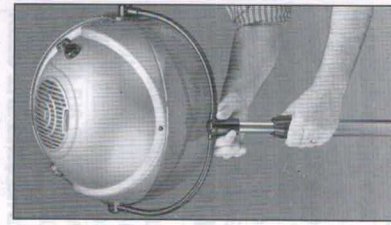

(C)



Note: This appliance may have a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to force the plug into an improper outlet.

How to use your Portable Salon Dryer

1. Adjust heat control knob to off position and plug cord into an electrical outlet.
2. Tilt the visor up slightly as you seat the client, then place the visor in the down position.
3. To further adjust the bonnet, adjust its angle by swiveling it on the U-shaped arm or adjust the height of the stand.
4. Adjust the heat and speed control knobs to the desired setting.
5. Adjust heat control button to "HIGH." As the hair dries, you may desire to reduce the heat to a lower setting.
6. To dry a wig of synthetic hair, always use the "LOW" setting. To dry a wig made of natural or human hair, use only the setting marked "HIGH."

Tourmaline

Nano particles of Tourmaline naturally emit far-infrared energy when heated. This penetrating form of heat passes through the hair cuticle, going directly to the cortex to dry it first. The cuticle is not over-dried and resists brittleness and cracking, helping hair maintain its shine and softness. Tourmaline also helps cleanse hair of odors and impurities.

KEEP THE LINT FILTER CLEAN TO EXTEND THE DRYER'S LIFE!

To clean the lint filter, remove the lint filter cover by pushing the flexible tab at the rear of the cover forward and lift the cover from the bonnet. Clean the inside grill with a small brush or with a vacuum. Replace the cover by sliding the small tab at the front of the cover into the slot at the front of the grill. Lower the cover into place and snap down the flexible tab so the cover is secure.

Direct ION TECHNOLOGY®

The IONIC® hair dryer dries hair fast. Negative ions reduce the size of water droplets on hair, allowing more water to be absorbed. This helps condition, soften and make hair shinier while adding volume. The ion switch must be in the "On" position to use the ION TECHNOLOGY® feature.

Recommended use procedures

- This is a high wattage appliance. To avoid a circuit overload, another high wattage appliance should not be operated on the same circuit.
- To avoid damaging the hair dryer, do not block air intake grill on top of hair dryer base during operation.
- This hair dryer is designed to operate on 120 volts, 60 CPS (cycles per second), AC only. Use of hair dryer on 50 CPS current will damage the motor.

One Year Limited Warranty

Hot Tools® warrants to the original purchaser that this appliance is free from defects in workmanship for one year from the date of purchase.

This warranty does not cover damages resulting from accident, misuse, abuse, attempts at repair or the use of unauthorized attachments. If this appliance fails to operate properly under normal use within 30 days from purchase because of defect, simply return it to the place of purchase with proof of purchase for a no charge replacement.

If found defective after 30 days and within the warranty period, you must mail it postpaid and properly packaged against possible damage to the address below. **IMPORTANT:** Your returned appliance must be accompanied by (a) Proof of Purchase: your bill of sale indicating the purchase date, (b) the completed Service Request Tag indicating the nature of the problem, (c) a check or money order in the amount of \$20.00 to cover postage, handling and insurance (California residents are not required to send in \$20.00).

A return not under warranty is subject to a return fee of \$150.00 to cover postage, handling, insurance and product cost. Hot Tools® will replace the appliance and return it prepaid.

Send to:

Helen of Troy L.P.
Consumer Service Department
1 Helen of Troy Plaza
El Paso, Texas 79912 USA

Service Request Tag

Should appliance servicing during warranty period, please complete form below. Attach tag to defective unit. Mail product postpaid with proof of purchase. Include check or money order to cover postage, insurance and handling as indicated in warranty. Send to: Helen of Troy L.P., Consumer Service Department, 1 Helen of Troy Plaza, El Paso, Texas 79912.

Name _____ Phone _____
Address _____ Purchase Date _____
City _____
State _____ Zip _____
APPLIANCE MODEL NO. _____
Nature of problem _____

