

Cuisinart®

INSTRUCTION
BOOKLET



Kitchen Pro Food Slicer

FS-75 Series

For your safety and continued enjoyment of this product, always read the Instruction Book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **Read all instructions.**
2. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
3. **Blade is exceptionally sharp. Handle very carefully.**
4. To protect against risk of electrical shock, do not put appliance in water or other liquids.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Avoid contact with moving parts.
7. Never put the unit near a hot burner, in an oven, or in a dishwasher.
8. Do not operate the Cuisinart® Food Slicer, or any other electrical equipment, with a damaged cord or plug or after the unit malfunctions or is dropped or damaged in any manner. Return unit to the nearest authorized service center for examination, repair, or adjustment.
9. Do not use outdoors.
10. Do not let cord hang over edge of a table or counter, come into contact with sharp edges, or touch hot surfaces.
11. Do not pull on the power cord to disconnect.
12. Never plug in the appliance where water may flood the area.
13. Place the appliance on a firm and stable surface.
14. **NEVER PUT YOUR FINGERS NEAR THE BLADE WHILE IT IS IN OPERATION.**
15. Ensure that the appliance is not placed close to the edge of the table, worktop, etc., where it can be pushed off or fall.
16. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
17. Never use abrasive cleaning agents or abrasive cloths when cleaning the unit.
18. The Cuisinart® Food Slicer has a sharp blade. To avoid injury, never hand-feed food to be sliced. Always use the unit when completely assembled with food carriage and food press.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit the outlet perfectly, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
20. Do not leave the Cuisinart® Food Slicer unattended while it is running.
21. Always place hand on food guide when slicing.
22. Never place hand behind food carriage.
23. Do not use this food slicer without food guide.
24. To avoid injury, never use hand to push food when slicing.
25. Unplug before cleaning.
26. Do not use for any other purpose than it's intended use.
27. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

In case of any maintenance operations or repairs not specifically stated in this manual, please refer to a qualified service center recommended by Cuisinart. Always read the instructions for use carefully before using and keep them in a place where they can be referred to whenever necessary.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit the outlet perfectly, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

IMPORTANT UNPACKING INSTRUCTIONS

CAUTION: THE SLICING BLADE HAS A VERY SHARP EDGE.

To avoid injury when unpacking the unit, please follow these instructions:

1. Put the box on a large, sturdy, flat surface.
2. Remove the instruction book and any other literature.
3. Position box on its side. Slide the packaged unit out of the box.
4. Remove the Styrofoam® inserts.
5. Carefully take the Cuisinart® Food Slicer out of the plastic bag. Please use extreme caution in removing the rubber guards from slicing blade area. We suggest you save all the packing materials in the event that future shipping of the machine is needed.

Keep all plastic bags away from children.

REPACKING INSTRUCTIONS

1. Put food slicer on a large, sturdy, flat surface.
2. Put food slicer into plastic bag.
3. Position Styrofoam® inserts on each end of food slicer.
4. Put the packaged unit into the upright box.
5. Replace top corrugation, instruction book and any other literature.

Contents

Important Safeguards 2

Unpacking and Repacking Instructions 3

Introduction 4

Tips..... 4

Parts 5

Use and Care 6

Cleaning and Maintenance 6

Technical Data 6

Warranty 7

INTRODUCTION

ANY WAY YOU SLICE IT!

The Cuisinart® Food Slicer eliminates one of the most time-consuming jobs in food prep. This commercial-quality slicer adjusts from 1/32"(0.8mm) to 1/2"(15mm) to let you slice everything from paper-thin pepperoni to perfect servings of roast beef. It makes life a little more fun, and entertaining as easy as 1-2-3!

TIPS FOR USING YOUR CUISINART® FOOD SLICER

The Cuisinart® Food Slicer does a great job on a variety of foods. Throwing a great dinner party is as easy as 1-2-3. Start with a simple and delicious antipasto appetizer of sliced cheese, salami and French bread. For best results, always use a hard cheese that has been refrigerated. Slicing the salami and then the French bread will allow for an easier cleanup. Then, move on to slice salad ingredients, potatoes for potatoes au gratin, and even roast beef.

Homemade apple pie can be fast and delicious when the Cuisinart® Food Slicer does all the slicing work for you.


A child's birthday party can be fun and easy. Just slice all your ingredients for pizza in advance, and the children can have a great time making their own pizzas.

Having a summer barbecue is effortless with the Cuisinart® Food Slicer. Tomatoes, onions, cheese and even lettuce take no time at all to prepare.

For all your slicing needs, from paper thin to extra thick, the Cuisinart® Food Slicer makes food preparation fast and easy.

PARTS

- 1. ON/OFF Switch
- 2. Slice Control Knob
- 3. Non-Slip Feet
- 4. 7.5" Stainless Steel Blade
- 5. Food Guide
- 6. Plastic Safety Guard
- 7. Removable Stainless Steel Slicing Carriage
- 8. Center Hub for Blade Removal

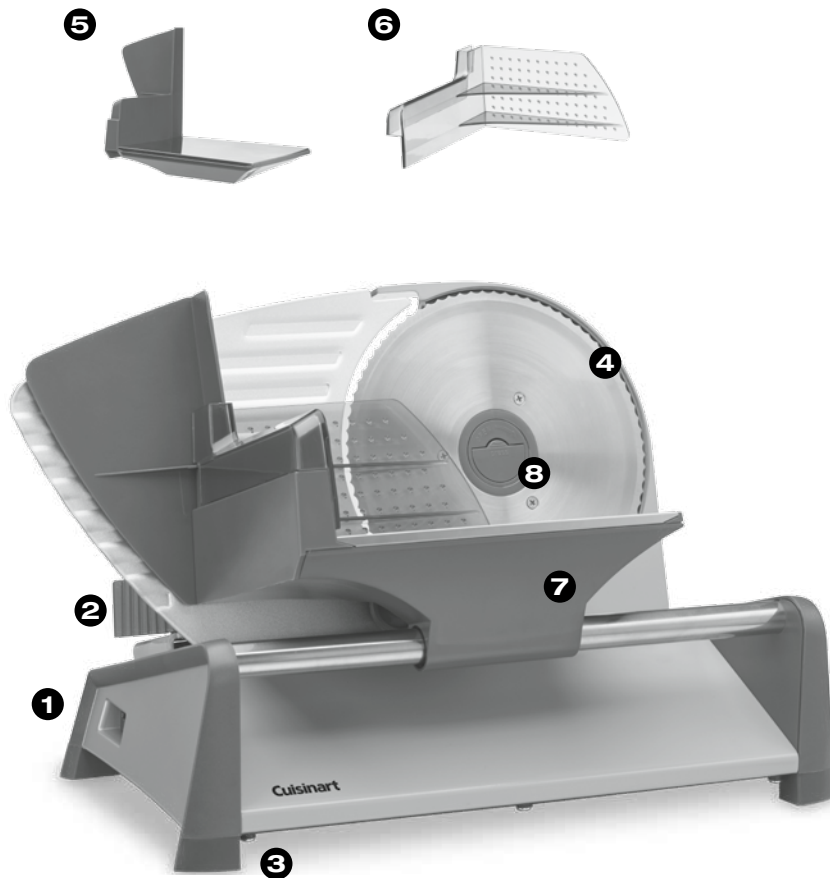

USE AND CARE

1. To use your Cuisinart® Food Slicer, place on a sturdy, flat surface.
2. Check that the switch is turned OFF before plugging in the appliance.
3. Adjust the slice control knob to desired slicing thickness ($\frac{1}{32}$ " 0.8mm to $\frac{1}{2}$ " 15mm).
4. Position food to be cut on the stainless steel carriage and secure with plastic safety guard.
5. Turn the Cuisinart® Food Slicer ON.
6. Position hand on food guide handles and smoothly slide carriage backward and forward. NEVER USE YOUR FINGERS.
7. To ensure even slicing, do not press the food against the blade too firmly.
8. At this point, check for desired thickness and adjust accordingly with the slice control knob.
9. Continue to slide food carriage back and forth in an even and steady motion. NOTE: Food carriage is removable for cleaning.
10. After all your slicing is done, turn the slicer OFF and unplug.

The Cuisinart® Food Slicer has been designed to operate for short periods (maximum 10 minutes). Do not run for more than 10 minutes in constant use. Allow it to cool before using it again. If the power cord is damaged, a service center recommended by the manufacturer must repair it.

CLEANING AND MAINTENANCE

Always unplug your Cuisinart® Food Slicer and turn the slice control knob back to zero before cleaning the appliance. DO NOT PUT THE APPLIANCE IN WATER. This could cause damage to electrical parts.

1. Clean and dry all parts immediately after use.
2. Fold out food carriage away from the base for easy cleaning of crumbs, seeds, etc.
3. To remove food carriage for cleaning, hold food carriage with two hands and tilt frontward toward you. There is a button to release the carriage marked "Press to release." Press, release, and wash with warm, soapy water. Dry thoroughly. To reassemble, align top part of food carriage to bottom part of food carriage and click into place.
4. To remove blade, press in tab where indicated in center hub; twist clockwise and carefully lift and remove blade.
5. With a soft sponge or cleaning cloth, clean both sides of blade with mild soap and water. Rinse and dry blade thoroughly.
6. To replace blade, hold tab, aligning the blade with the drive gears so it engages fully. Turn tab counterclockwise to tighten.
7. Any other servicing should be performed by an authorized service representative.

DO NOT WASH ANY PART OF THIS SLICER IN A DISHWASHER.

TECHNICAL DATA

CARRIAGE SURFACE:	Stainless Steel
Blade:	Stainless Steel
POWER:	130W 120V/60Hz

WARRANTY

LIMITED THREE-YEAR WARRANTY

(U.S. and Canada ONLY)

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Food Slicer that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Food Slicer will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Food Slicer should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Consumer Service Representatives, or send the defective product to Consumer Service at Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product.

Please pay by check or money order payable to Cuisinart (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer

may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190.

Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart product, we suggest that you call our Cuisinart Service Center at 1-800-726-0190 before returning the product for service. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart® Food Slicer has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as by use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

©2015 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China

15CE016188

IB-13907-ESP-A