

NW-700 Condenser Microphone Instruction Manual



About This Manual

Thank you for purchasing **NEEWER** NW-700 Condenser Microphone. This Manual can help you know:

- the basic operation procedure and function of NW-700.
- the application environment and safe use of NW-700.
- the accessories' installation methods of NW-700.

Table of Contents

1.Package Contents	1
2.Accessories	2
3. Applications	3
4.Setup of 48V Phantom Power	4
5.Installation Procedures	5
6.Recording Setting on Computer	6
7.How to Position the Microphone	7
8.Q & A for customers	8
9.Precautions	9
10.Notes	10
11.Specifications	10
12.Warranty Policy	11
13.Trademark and Statement	12
14.Contact Us	12

1.Package Contents



Please check the package content carefully. Please feel free to contact us if there is any missing or damaged items.

2.Accessories



Scissor Arm Stand and Table Mounting Clamp



Shock Mount



Foam Wind Cap



Pop Screen Filter



XLR to 3.5mm Cable



Power Adapter

3. Applications



Live broadcast



Studio Recording



Karaoke



Online video Chat/Gaming




Podcast or Radio Show Hosting



Windows-based PC's

4.Setup of 48V Phantom Power

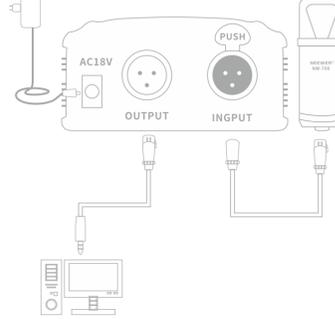

⚠ The 48V phantom power is NOT included in the package contents.

5.Installation Procedures


Installation of Table Mounting Clamp and Scissor Arm Stand



1 Arm Stand Tightening Knob
2 Desk Clamp Tightener



Turn the Desk Clamp Tightener clockwise to securely clamp it to the desk.

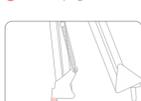


Make sure the Arm Stand Tightening Knob 1 is loosened by turning the knob counter clockwise. Insert the base of the Scissor Arm Stand into the Table Mounting Clamp as pictured, then secure it by turning the Arm Stand Tightening Knob 1 in a clockwise direction.




Attach the shock mount to the other end of the boom stand by threading the two pieces together and turning it in a clockwise rotation until it is securely fastened.

Installation of Shock Mount

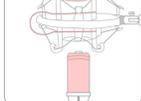


Squeeze the two tabs together on the microphone shock mount to expand the opening, slide the microphone in then release the tabs. This will clamp the microphone securely in the shock mount.

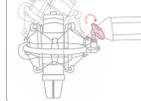

Adjust the angle of the microphone as desired by counter-clockwise loosening the screw on the shock mount bracket. Once it is in the desired position tighten the screw again.



Secure the pop screen filter to the arm stand near the end with the microphone on it; then tighten the pop filter by clockwise turning its rotating knob.

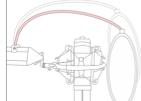


Use the gooseneck to position the pop filter in the desired location where it is comfortable to speak through.

6.Recording Setting on Computer

How to conduct a recording setting without independent sound card and amplifier?
Take the Recording Setting for Windows 10 as an example:




Right click the speaker icon. Pick "Recording Devices".

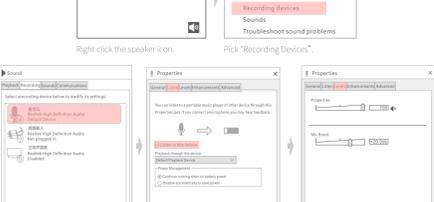

Click once on the microphone to select it, then click "properties". Click on the "Listen" tab then tick "listen to this device" to turn on audio input via the microphone. Click on the "Levels" tab to adjust the microphone volume.

7.How to Position the Microphone

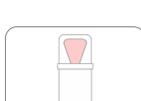

Position the microphone so that audio is being directly applied to one of the red locations in the diagram above.



⚠ The Microphone can only pick up sound on two FLAT SIDES, not from 360 degrees around them.

8.Q & A for customers

- Why is the audio recorded by the microphone so quiet?
This could be due to improper microphone positioning (make sure to speak into one of the red areas illustrated above) or it could be a low quality sound card in your computer. If the problem is determined to be with the computer's sound card, we recommend using an external sound card or amplifier so that the audio can be precisely tuned as desired.
- Why is there a buzzing or other background noise on my recording?
This is caused by electronic interference within your computer due to fans and other electronics in close proximity to your internal sound card. To reduce and eliminate this sound we recommend an external sound card.
- Why is there a loud noise as soon as the microphone is plugged in?
This is feedback created by computer speakers being too close to the microphone. These three steps can be used to eliminate squealing noise:
1. Lower the speaker volume.
2. Move the speakers and the microphone further apart.
3. Use headphones instead of speakers. Professional studio monitor headphones is recommended.
- Why does this microphone only pick up my voice and not other sounds around me like my guitar or other instruments?
This microphone is designed to pick up vocals, to add further instruments or sounds to your recording we recommend using a mixer to combine the various audio inputs and fine tune the volume of each input to your specification.

9.Precautions



⚠ Do not drop the microphone.



⚠ Avoid stepping on or otherwise crushing the audio pickup of microphone.



⚠ Do not use the microphone too close of a range, the most ideal range is 5-10cm



⚠ Keep the microphone away from speakers when in use or it may create loud feedback

10.Notes

- For the best recording quality reduce background noise as much as possible. Keep the microphone clean by wiping it with a damp cloth. Do not spray anything directly into the microphone or it will damage the audio pickups.
- Do not tap or blow into the microphone. Use a normal voice to check the microphone instead.
- Keep the microphone away from speakers to avoid squealing noise.
- Record at a distance of 5-10cm for the best sound quality.
- Do not pull, drag or twist the microphone cable, this can quickly cause damage to the cable or to the microphone connection.
- Store the microphone in a cool dry place and away from heat sources or strong magnets.
- When using the microphone speak directly into one of the flat sides for the best audio quality.
- When using the microphone speak directly into one of the flat sides for the best audio quality.

11.Specifications

Product Name	NW-700 Condenser Microphone
Frequency Response	20Hz-20KHz
Sensitivity	-32dB±3dB
Output Impedance	≤100Ω
Load Impedance	≥1000Ω
Power Supply Method	48V Phantom Power
Dimension	47 x 15.5mm (Diameter x Length)

12. Warranty Policy

— .Warranty Period
You can register your NEEWER product for its free 1year warranty at www.neewer.com.Thanks!
Your questions or suggestion are highly valued and appreciated. Please feel free to contact us, and we will do our best to fully satisfy you. E-MAIL: support@neewer.com
Reminder: Please keep the package box for at least 15 days because it is necessary to use the package box to protect the product during transportation.

— .Warranty Regulations

- (1)The product has expired the one-year warranty period;
- (2)The product is malfunctioned or damaged because the user did not follow the NW-700 Instruction Manual to use, adjust, or operate the product;
- (3)The product is malfunctioned or damaged due to rain, hailstorm, fumigation, medicine, chemicals or natural wastage; and due to force majeure (include but not limited to earthquake, Typhoon, fire, flood, violent crime);
- (4)The user modify, dismantle, repair the product and its parts without permission;
- (5)user damaged the parts of by using non-original accessories, or changed the circuit The L line configuration without permission;
- (6)The product is malfunctioned or damaged by collision or fall-off due to the user;
- (7)Warranty Card, After-sale Service Card, invoice or item No does not conform to the product.
- (8)The user change the warranty service date of the product and its parts without permission;
- (9)The panel and main parts are beyond maintenance range. The security label on the product is missing or damaged.
- (10)NW-700 is used as a commercial product.

13.Trademark and Statement

NEEWER is a registered trademark of Neewer Technology Company, Ltd, which is protected by law. NEEWER company reserves all rights for this trademark.

Neewer has continuously devoted itself to develop new products, upgrade existing products and decrease defect product rate. If you meet any questions or problems about our product, please refer to our after-sale service team or authorized service provider for help.

The actual product may differ from the picture in this manual in color and appearance.

14.Contact Us

Your questions or suggestion are highly valued and appreciated. Please feel free to contact us, and we will do our best to offer satisfying services for you.

E-MAIL: support@neewer.com
WEB: www.neewer.com