



 
## User Manual

Dear User, please follow the guide before operating the camera.  
Please also save this guide for future reference.



Customer Service Email: csactioncamera@outlook.com

MADE IN CHINA 中国製



- 6. Page Up
- 7. Power On/Off
- 8. Shutter
- 9. Page Down
- 10. LCD
- 11. Busy Indicator Light(LED)
- Charge Indicator Light(LED)
- 12. Speaker
- 13. Microphone
- 14. Micro SD Card Slot

3

You can short-press Page Up and Page Down to change modes. Then short-press Shutter to confirm mode you choose. Then short-press Power On/Off to exit.

- Video mode
- Playback mode
- Photo mode
- System settings
- Game mode

Please view the captured videos and photos in one of the following ways.

1. Enter the Playback mode as above steps, then press button to select the video or photo as desired.

To playback a video, press Shutter to start, press Shutter again to pause playing video and press Power On to stop playing videos. In playback section, press Page Up or Page Down to scroll the photos and videos. You can press Power On to enter to the inside choice.

2. Connect your camera to a computer with the supplied USB cable to view your captured videos and photos.

9

### Start to use

#### 1. Charge the built-in lithium battery

The camera is equipped with internal 3.7V lithium battery. Please ensure power available for the camera and timely charge it in case of low power.



Connect the camera to a computer for charging under shutdown status. The charging indicator light will be on when charging and off after fully charged. Generally, the battery can be fully charged after about 3 hours.

4

#### 2. How to use the memory card

2.1 Properly insert the TF card into the card holder in the right direction.

2.2 To remove the TF card, press the end of memory card gently, the card will be ejected.



Note: The camera is not equipped with memory card, you need to insert an memory card before using.

5

#### 4.5 System settings

You can enter system settings as above steps, short-press page up button or page down button to choose and short-press the shutter button to confirm. Then short-press power on button to exit menu. The functions as follows:

1. Resolution: 1M(1280X960), 3M(2048X1536), 5M(2592X1944).
2. Slow-Size: FHD(1920X1080), HD(1280X720), 640X480(X480)
3. Power Frequency: 50HZ/60HZ
4. Power Save: Select OFF/1 min/3 min/5 min/10. To conserve battery power. The camera will shut off if no key is pressed within the selected time.
5. Date& Time: Setting the date and time of the camera.
6. Language: Setting the language of the camera.
7. Invert Mode: You can set to change the image upside down.
8. Format: Erase all data on the SD card.
9. Reset All: Reset setting of the camera to factory default.

10

#### 5. Connect to PC

The camera has a plug-and-play function. Connect the power on device to the computer with the USB cable, and the mode can be automatically switched to the removable hard disk. Removable disk icon will appear in the "My Computer" window. The pictures and videos files you shot stored in the removable disk. H:\DCIM\100MEDIA folder(H) is the required removable disk.

**Note:** During file being downloaded, disconnecting USB connection is prohibited, and plugging out the memory card when USB connected is also prohibited to avoid loss of data.

#### Technical Parameters

Image Sensor	1.3 Mega-pixel CMOS Image Sensor
Function Mode	Recording, Photo, Playback, Game
LCD Screen	1.7" LCD Screen
Picture Resolution	1M(1280X960), 3M(2048X1536), 5M(2592X1944)

11

### contents

 
English	01-12
日本語	13-24



## User Manual

1

### Appearance



- 1. Micro USB Port
- 2. Battery Power Switch
- 3. Lens
- 4. Video Button
- 5. Photo Button

2

#### 3. Power on/off

Please switch the battery power switch to "1" status before you turn on the camera.



3.1 Power on: Short-press the power button the screen will be on and the camera will be started.

3.2 Power off: Long-press Power Button for 3 seconds when the camera is in the side state to turn it off.

3.3 Auto screen off: The screen will be turned off automatically when the time that the camera is in the side state for automatic screen off to save power.

3.4 Power off when the camera is lack of electricity: When electrical capacity of the battery is very low, an icon of "C" will be displayed on the LCD screen, prompting you to charge it in time. When the icon flickers the camera will be turned off automatically.

Tips: Under long time not using camera and protecting battery, please switch the battery power button to "0" status.

6

#### 4. Recording Mode, Photo Mode, Playback Mode and System Settings

##### 4.1 Recording Mode

After power is on, the camera will enter video recording mode directly and in preview mode, short-press Recording Button to start video recording, short-press it again to stop shooting. Short-press page up button or page down button to choose color effect of images. There are seven kinds of color effects, such as normal, black and white, retro, negative and green blue.

##### 4.2 Photo Mode

When you turn on your camera, you can short-press the Photo Button to enter photo mode, short-press it again to capture your photos. Then short-press Page Up or Page Down to select different frames.

##### 4.3 Playback mode

In recording mode or photo mode, you can short-press the power on button . The LCD display will show as follow:



##### 4.4 Game mode

When you turn on the camera, short-press the Power switch to the menu mode, press the Page Up/Down to select the game menu, then press the Shutter to enter the snake game mode. While you play, press Video Photo Page Down to move up, move down, move left and move right respectively, press Shutter to stop/play, press Power to exit.

8

Video Resolution	FHD(1920X1080), HD(1280X720), 640X480(X480)
Storage Medium	TF Card(Minimum supporting 32GB)
USB Port	USB 2.0
Power Supply	3.7V 700mAh Rechargeable Lithium Battery
Menu language	English/Simplified Chinese/Japanese
Power Save	1 min / 3 min / 5 min / OFF
Operating System Requirement	Windows XP/Vista/7/8, Mac 10.8

12