

## HDMI CLONER BOX

Record Videos For Colorful Life

Keep all videos in your hands via HDMI



# Safety Precautions

Before using HDML-Cloner Box, please ensure that you read and understand the safety precautions below:

- Do not attempt to open the case of HDML-Cloner Box or modify it in any way, as this will void the warranty.
- Keep HDML-Cloner Box away from water and other liquids, as this may cause the unit to malfunction.
- HDML-Cloner Box may become warm during use. This does not indicate malfunction.
- Do not place heavy objects on HDML-Cloner Box, as this may cause the unit to overheat and malfunction.
- If the exterior of HDML-Cloner Box requires cleaning, wipe it with a soft dry cloth.
- Do not dispose of the unit via conventional domestic waste.


# Product Diagram



1. ON/OFF: Press and hold this button to turn on/turn off the power.
2. 5V/2A: Plug the power adapter into this port and power on HDML-Cloner Box.
3. IN: Connect an HDMI cable between the source video player and HDML-Cloner Box.
4. OUT: Connect an HDMI cable between HDML-Cloner Box and TV.
5. Storage: Insert the USB flash drive or mobile hard disk and record videos to this storage medium.
6. REC/STOP and 1080p/720p: Press this button to start or stop recording. If you press and hold this button for a few seconds, it will work as a switch between 720p and 1080p.
7. MIC: Insert the microphone plug into this jack to input voice.

# Connection Guide

Xbox 360 and Xbox One

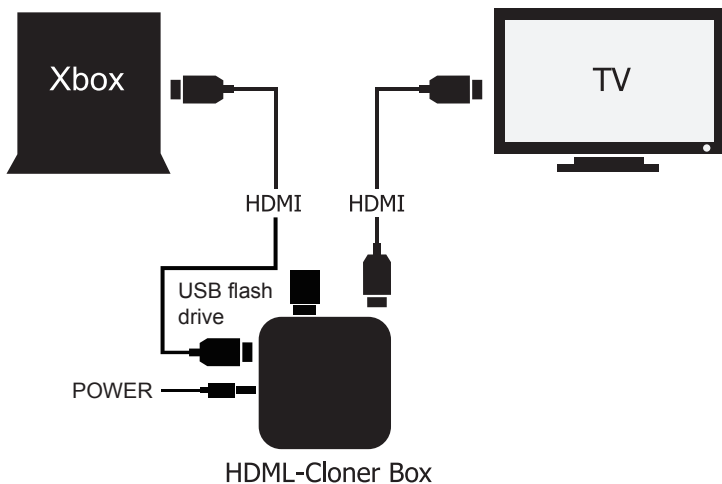


3

NOTE: The USB flash drive is not included in the product box. You need to purchase it separately.

1. Connect Xbox 360/Xbox One to IN on HDML-Cloner Box via an HDMI cable.
2. Connect HDML-Cloner Box from OUT to TV via an HDMI cable.
3. Connect the HDD or USB stick to the USB port of HDML-Cloner Box.
4. Plug the power adapter into the power socket and plug the other end into the 5V/2A port of HDML-Cloner Box.


Nintendo Wii

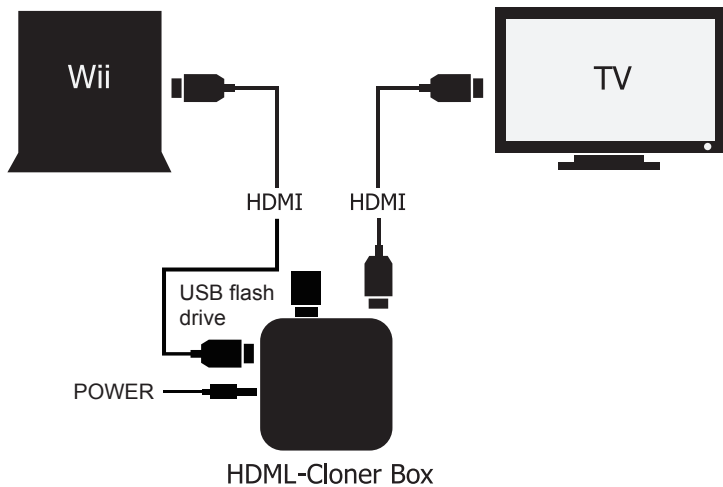

NOTE: The USB flash drive is not included in the product box. You need to purchase it separately.

1. Connect Wii to IN on HDML-Cloner Box via an HDMI cable.
2. Connect HDML-Cloner Box from OUT to TV via an HDMI cable.
3. Connect the HDD or USB stick to the USB port of HDML-Cloner Box.
4. Plug the power adapter into the power socket and plug the other end into the 5V/2A port of HDML-Cloner Box.

Set-top box/DVD/Blu-ray player/PC/HD video output devices

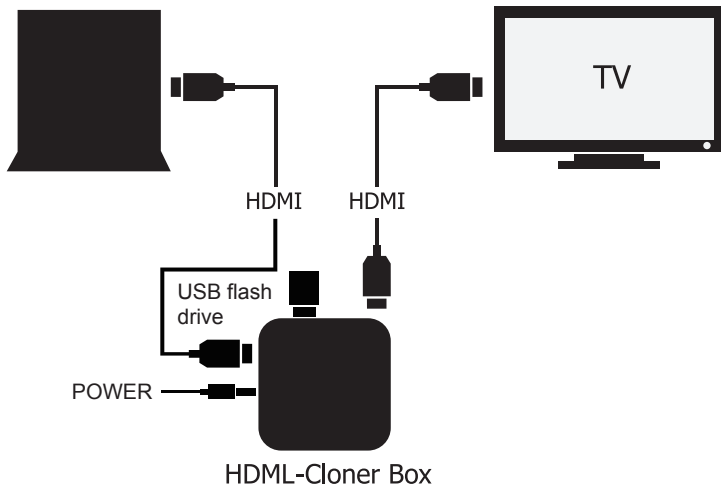

7

NOTE: The USB flash drive is not included in the product box. You need to purchase it separately.

Your HDML-Cloner Box can capture any video from any video source/device and all you need is the right ports/connections!

1. Connect the set-top box, DVD/Blu-ray player, PC or any other device to IN on HDML-Cloner Box via an HDMI cable.
2. Connect HDML-Cloner Box from OUT to TV via an HDMI cable.
3. Connect the HDD or USB stick to the USB port of HDML-Cloner Box.
4. Plug the power adapter into the power socket and plug the other end into the 5V/2A port of HDML-Cloner Box.

# How to record/capture videos?

1. Turn on HDML-Cloner Box. The LED light will illuminate solid Blue or Green.
2. Prior to gameplay or video playback, press the REC/STOP button. Start playing game or video, then recording will start simultaneously. The LED light will blink Blue or Green.
3. When gameplay or video playback is completed, press the REC/STOP button again to stop recording.
4. The LED light will blink blue/green alternately several times. DO NOT remove the USB device as the file is being saved. The LED light will illuminate Blue or Green after the file is saved.

The LED light of HDML-Cloner Box will illuminate different colors/ways to indicate functions.

<b>LED Status</b>	<b>Indication</b>
Solid Green	The current video is 720p/others.
Solid Blue	The current video is 1080p.
Blink Blue/Blink Green	Recording
Blink Blue/Green alternately	Buffering, please wait.

# Tips

1. When the storage space of the USB flash drive or mobile hard disk is full, HDML-Cloner Box will stop recording.
2. If you press and hold the REC/STOP button for a few seconds, it will work as a switch between 720p and 1080p.

**Note:** You can switch between 720p and 1080p only with the input resolution of 1080p/1080i.

## USB Storage

Please use a mobile hard disk or USB flash drive with the storage capacity of 2TB or less in NTFS or FAT32 format. Please make sure the disk boot format is MBR.

### **Tips on selecting a proper USB flash drive:**

1. Recommended brands: Toshiba, SanDisk, Kingston
2. Interface specifications: USB 2.0, USB 3.0
3. Connector type: Type A
4. Make sure the actual reading speed is not less than 30Mbps, and the writing speed is not less than 10Mbps.
5. It is recommended that you format the USB flash drive or erase data before connecting it to our product.
6. It is recommended that you use a USB flash drive with the LED indicator, so that you can easily understand the working status of the USB flash drive. Don't unplug the USB flash drive in the process of reading and writing, otherwise your data will be damaged.
7. FAT32 format is recommended. Due to the special properties of FAT32, the single video file will be 2GB at most, and the recorded video will be split into multiple files but more stable (You can use our bonus software MP4-Cloner from <https://www.cloner-alliance.com/download.html> to combine them into one file easily). For NTFS, the recorded video will be stored as a single large file, but will be more prone to error than FAT32, resulting in unsuccessful storage or file corruption. Please contact our customer service for help when you encounter such problems. Therefore, it is strongly recommended that you format the USB flash drive to FAT32 in order to get a better experience.
8. After formatting the USB flash drive using PC, please make sure to safely remove the USB device instead of unplugging it directly, otherwise the USB flash drive will be damaged and not work properly.
9. If the recorded video is 0KB or cannot play back normally, please reformat your USB flash drive.

# Supported Resolutions

Input/Output	1920x1080 (50p), 1920x1080 (60p) 1920x1080 (24p), 1920x1080 (25p), 1920x1080 (30p) 1920x1080 (50i), 1920x1080 (60i), 1280x1024 (60p) 1280x720 (60p), 1280x768 (60p), 1280x800 (60p) 720x480 (60i), 720x480 (50i) 640x480 (60p), 720x480 (60p), 720x576 (50p)
Recording	1920x1080 (30p), 1280x720 (60p), 1280x720 (30p) 640x480 (60p), 720x480 (60p), 720x576 (50p)

# Product Specifications

Capture format	MP4 (H.264)
Video standards (input)	NTSC, PAL
Supported disk formats	FAT32, NTFS
Input signals	HDMI
Output signals	HDMI (pass-through), USB
Bitrate	Max: 10Mbps
Note:	HDML-Cloner Box will record several 2GB files if the USB is in FAT32 format. If in NTFS format, HDML-Cloner Box will record only 1 file with greater size.
Maximum storage capacity	2TB
Power supply	DC 5V, 2A
Weight	5.3 oz
Dimensions	4.4 x 4.4 x 1.0 inches

# Microphone Function

For best quality voice recording, please use good quality microphone.

To control voice recording, please adjust the volume of HDMI input source.



Note: Please use a microphone with a plug like this.

## **Frequently Asked Questions**

Please refer to <https://www.cloner-alliance.com/faq.html>

## **Contact Us**

- If you encounter any problem when using our products, please contact us by [support@cloner-alliance.com](mailto:support@cloner-alliance.com) or call 1-844-9-CLONER (toll free) and we will serve you with utmost satisfaction.
- We'll offer you a satisfying discount on batch purchase and affiliate program. If you are interested, please contact us by [market@cloner-alliance.com](mailto:market@cloner-alliance.com)

## **Disclaimer**

HDMI is a registered trademark of HDMI Licensing, LLC. Xbox is a registered trademark of Microsoft Corporation. Wii is a registered trademark of Nintendo Inc. HDMI®, Xbox®, Wii®, DVD®, Blu-ray® and USB® are trademarks of their respective companies. ClonerAlliance Inc. is not affiliated with those companies.



Toll free: 1-844-9-CLONER



support@cloner-alliance.com



market@cloner-alliance.com

<https://www.cloner-alliance.com>



Live Chat