

User Guide

Model: iBall Slide Enzo V8



Legal Information

All rights are reserved. Reproduction, transfer, distribution of the contents herein in any manner without the prior written permission of Best IT World (India) Pvt. Ltd. is prohibited. Best IT World (India) Pvt. Ltd. reserves the right to add, modify or delete, any of the contents herein or withdraw this document at any time without prior notice and without assigning any reasons thereof. For detailed terms and conditions refer www.iBall.co.in



Safety Precautions

Operate Safely

- Please do not use Slide while charging. Disconnect Slide from charger before use.
- Make sure to charge the battery full for the first time usage.
- Keep the Slide at least an inch away from your body while dialing / answering calls.
- Do not use the Slide if the screen is cracked or broken. Cracked and / or broken screens could cause injury to hands and / or face.
- To reduce the risk of motion injuries:
 - While using your Slide, hold it with a relaxed grip and press the keys lightly.
 - Do not handle the Slide with wet hands.
 - Use of special keys / features reduce the number of keys pressed
 - Take regular breaks in between calls.
 - Use hands-free accessories.
 - Switch off the Slide before cleaning it.
 - Switch off the Slide and external power sources before any attempt to change SIM Cards or any other accessories.
 - Keep your Slide and all accessories out of reach of small children and animals.



When using the device, mind the following

- Hold the device upright, as you would with a traditional Slide.
- Speak directly into the microphone.



Careful handling

- Avoid potential damage to your Slide under:
 - Keep away from liquids.
 - Avoid using and / or storing in dusty and / or dirty places / environments.
 - Do not drop, knock, throw or otherwise handle the Slide roughly.
 - Avoid exposing your Slide to extreme temperatures. Extreme temperatures reduce the charging capacity and life of batteries and Slide.

- Never use damaged chargers.
- Do not use chemicals or other cleaning solutions to clean the Slide.
- Use moist or anti-static cloth.
- Avoid using Slide with camera flash or light close to the eyes.
- Do not dismantle the Slide and accessories without permission.
- Avoid handling by unauthorized personnel.
- Do not use damaged power cords or plugs, or loose electrical sockets.
- Do not use your device outdoor during a thunderstorm.
- Do not use your device near devices or apparatuses that emit radio frequencies, such as sound systems or radio towers.



Turn Off your Slide in Restricted Areas

Use of Slide in certain areas / places / conditions can be hazardous.

- Switch off your Slide:
 - Inside aircrafts;
 - In Medical hospitals / clinics;
 - Areas where chemicals are used or stored;
 - Fuel and gas stations;
 - In and around areas having electrical / electronic equipment;
 - Areas where any kind of blasting activity is being carried out.
- Turn off the device in potentially explosive environments.
- Charging batteries in such areas is hazardous as potential sparks may result in explosion and / or fire and may cause damage to property and / or life and can also prove fatal.



Keep your device dry

Humidity and liquids may damage the parts or electronic circuits in your device.

Do not turn on your device if it is wet. If your device is already on, turn it off (if the device will not turn off and since you cannot remove the battery, leave it as it is). Then, dry the device with a towel and take it to a -service centre.

Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.



Drive Safety

Avoid using your Slide while driving and respect and obey all regulations that restrict the use of Slide or similar devices while driving. Primary consideration while driving should be safety.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic speed control, and air bag systems. Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. The use of wireless tele devices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.



Interference with Electronic Devices

Mobile phones/Slide emit Radio Frequency (RF) signals that may interfere with unshielded or improperly

Shielded electronic equipment, such as pace makers, hearing aids, other medical devices and other electronic devices in homes and / or vehicles and may prove to be hazardous.



Protect Your Hearing

Excessive exposure to high volumes may cause hearing problems. Maintain proper volume levels for conversations and / or music.



Precautions

In order to use Slide correctly, please read the following statement of the user manual carefully before using the device.

Do not store your device with metal objects, such as coins, keys, and necklaces

-Your device may be scratched or may malfunction.

-If the battery terminals come into contact with metal objects, this may cause fire.

Do not store your device near magnetic fields

-Your device may malfunction or the battery may discharge from exposure to magnetic fields.

-Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.

Do not use your device or applications for a while if the device is overheated

-Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

If your device has a camera flash or light, do not use it close to the eyes of people or pets

-Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

Use caution when exposed to flashing lights

-While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.

-Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based -games for extended periods. If you feel any discomfort, stop using the device immediately.

-If anyone related to you has experienced seizures or blackouts while using a similar device, consult a physician before using the device.

-If you feel discomfort, such as a muscle spasm, or disorientation, stop using the device immediately and consult a physician.

-To prevent eye strain, take frequent breaks while using the device.



Protect your personal data and prevent leakage or misuse of sensitive information

While using your device, be sure to back up important data. iBall is not responsible for the loss of any data.

When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.

Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information.

Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.

In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.

Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

Using this Guide

This guide has been specially designed to guide you through the basics of your device, such as getting started with the device. Please read this guide carefully before using your device to ensure safe and correct use.

The descriptions in this guide are based on the default settings of your device.

Please keep this guide for future reference.

Protect environment save energy

You do not need to charge your Slide battery so often if you do the following:

Close applications and data connections, for example, your Bluetooth connection, when not in use.

Deactivate unnecessary sounds, such as touch screen and key tones.

SAR

This device is SAR accredited adheres to international quality benchmarks and safety measures concerning the harmful impact of radiations. It complies with applicable safety requirements for exposure to radio waves. The radio waves exposure guidelines employ a unit of measurement called Specific Absorption Rate (SAR). SAR is a measure of the rate at which energy is absorbed by the body when exposed to a radio frequency (RF). SAR is usually averaged either over the whole body, or over a small sample volume (typically 1g or 10g of tissue). The recommended SAR limit for a mobile handset/similar device is 1.6 W/Kg averaged over a volume containing a mass 1g of human tissue.

SAR Value

- Your Mobile is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (Specific Absorption Rate) is the measurement of body-absorbed RF quantity when the Slide is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the Phone or Slide may depend on factors such as proximity to the network tower, use of accessories.

SAR Recommendations

- Use a wireless hands free system (headphone, headset) with lower Bluetooth emitter.
- Make sure the device has a low SAR.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children and pregnant women.
- Prefer to use your Slide when the signal quality is good.

SAR Value

Tested SAR Value of Slide iBall Slide Enzo V8 is as follows:

(2G) GSM 900MHz: 1.311 W/kg (1g)
(2G) GSM 1800MHz: 0.961 W/kg (1g)
(3G) WCDMA 2100MHz: 0.643 W/kg (1g)
(4G) FDD-LTE Band B3/B5/B8: 0.873 W/Kg(1g) (4G)
(4G) TDD-LTE Band B40: 0.614 W/Kg(1g)

Maximum Permitted SAR value is: 1.6 W/Kg (1g)

Index

 
Legal Information	1
Using this Guide	4
SAR	5
Index	6
1. Introduction	7
2. Quick Panel Setting	9
3. Starting up the Device	11
4. Home screen	12
5. Settings	14
6. PC connectivity	35
6. OTG Connectivity	35
7. Communication	36
8. Messaging	40
9. Email	43
10. Internet	45
11. Media	48
12. Connectivity Features	54
13. Others	55

1. Introduction

1.1 Specification iBall Slide Enzo V8


Details	Description
CPU	Powerful Quad Core 1.0GHz ARM Cortex A53 64-bit Processor.
Memory	2GB RAM
Storage	16GB Built-in Storage (Approx. 6.5GB of built in storage is used by OS and other application files &9.5GB free for file storage)
	Micro SD Support up to 32 GB
Operating System	Andorid 7.0 Nougat
Connectivity	Dual SIM (Dual Stand by)Wi-Fi 802.11 b/g/n, Micro USB Port, Bluetooth 4.0, USB OTG function, USB Tethering “Dual USB function with Y cable”.
Sensor	G-Sensor for auto rotate screen
Camera	5.0 MP Rear camera with LED Flash 2.0 MP Front camera with LED Flash
Display	17.78cm (7.0) HD IPS Display (1024*600) Full Capacitive Multi Touch.
USB	Mini USB OTG Port
Support Video	Support 3G2, 3GP,AVI,MP4,MKV, M2TS, WEBM, MOV
Support Image	Support bmp, gif, jpeg, png, wbmp.
Support Audio	Support AAC, AMR, FLAC, MIDI, MP2, MP3, OGG, WAV
Audio Port	Speaker / 3.5mm Earphone Jack / Internal MIC / Receiver speaker
Hardware Keys	Power Switch & Volume Control
Battery	3500mAh Li-Polymer Battery* 3.8V
Power	Input 100-240V~50/60Hz Output DC 5.V - 1.0A
Dimension & weight	192.09 x 109.06 x 10.24mm & 269gm.

1.2 Know Your Device

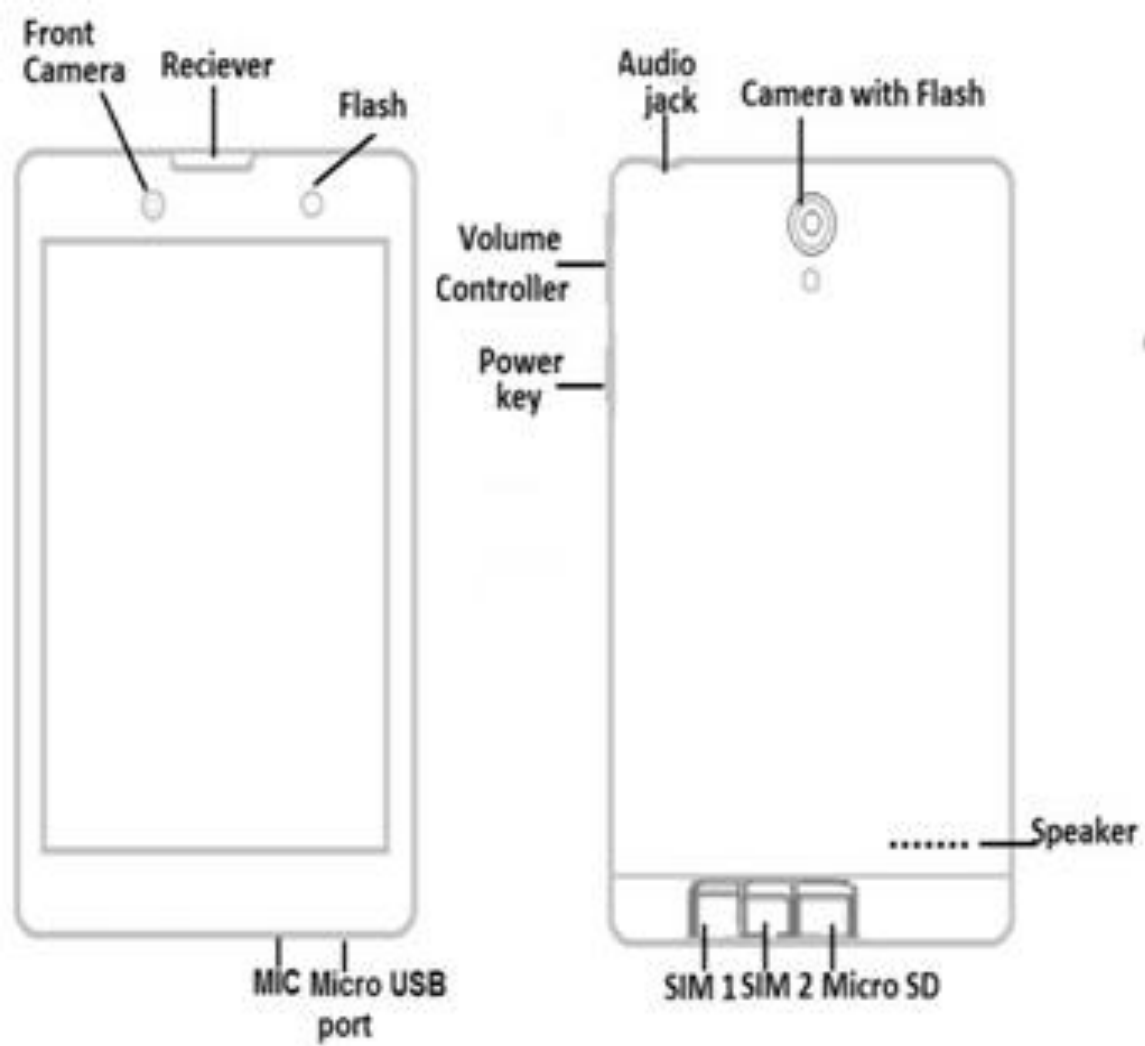

2. Quick Panel Setting

 Use Quick Settings to easily get to frequently used settings, like turning on airplane mode. To open Quick Settings, swipe down from the top of the screen with one finger. To change a setting, just click the icon:

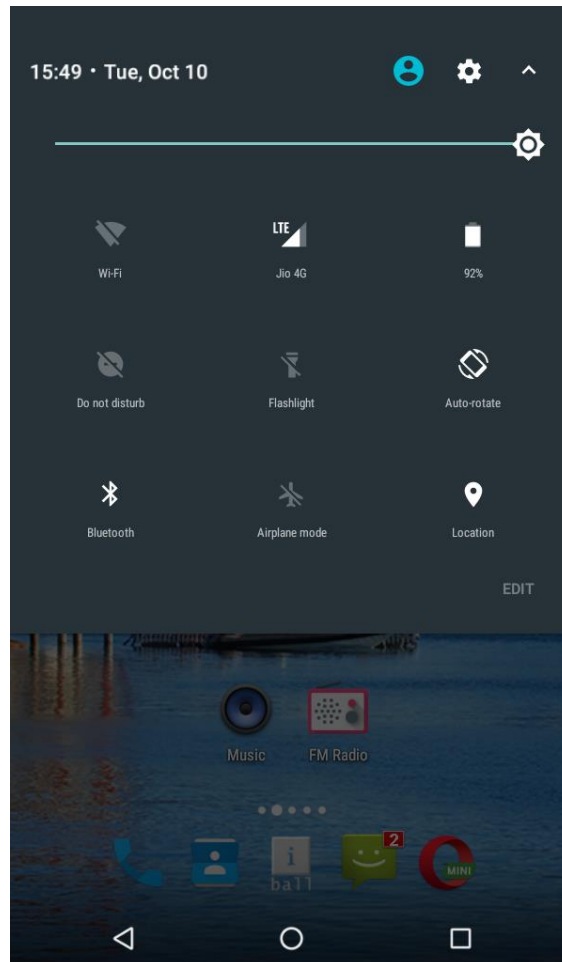

Users: Switching to user

Setting: Click on setting icon to reach system settings.

Brightness: Using this option you can change the brightness level of the display screen according to your needs and usage.

Wi-Fi: Using this you can turn Wi-Fi ON/OFF.

SIM card setting: Using this you can turn the data connection ON/OFF. Data connection helps you access internet using your SIM network.

Battery: It will indicate you the current battery status .

Do not disturb: You'll have options for "Total Silence," "Alarms Only," and "Priority Only," and you can set time limits for how long you want Do Not Disturb to last.

Flashlight: Using this you can turn Flashlight ON/OFF.

Auto Rotation: Using this option you can select whether or not you want to use the auto rotation option.

Bluetooth: Using this you can turn Bluetooth ON/OFF.

Airplane Mode: Selecting this option activates the airplane mode, which means it cuts you OFF from all kind of network connectivity including your SIM network, Bluetooth, WI-FI network or any other network your handset supports.

Location: Using this you can turn ON/OFF location access.

All the functions have been explained in details in their respective sections.

Note: On pressing on some text of these options you will be directed into settings option from there you can operate further if you want to use more related functions.

To install the SIM card

The SIM card contains your phone number, service details, and phonebook/ message memory. Your device supports both 4G,3G & 2G SIM cards.

1. Pull cover from the lower back side.
2. Locate the SIM card slot, and then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.
3. Push the SIM card completely into the slot.

Note:

- Some legacy SIM cards may not function with your device. You should consult with your service provider for a replacement of SIM card. There may be some fees for this service.

To install the Memory card

To have additional storage for your images, videos, music, and files, you can purchase a memory card and install it into your device.

1. Make sure that your device is turned OFF, and then pull the cover from the lower back side.
2. Locate the memory card slot on the upper part of the exposed right panel.
3. Insert the memory card into the slot with its gold contacts facing down until it clicks into place.

Note: To remove the memory card, push outside & eject it from the slot.

Charging the Battery

New batteries are shipped partially charged. Before you start using your device, it is recommended that you charge the battery. Some batteries perform best after several full charge/discharge cycles.

The battery can be charged and discharged many times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, get the battery replaced. Use only iBall approved batteries, and recharge your battery only with iBall approved chargers designated for this device. If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Note: Only the AC adapter provided with your device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync connector on your device, and then plug in the AC adapter to an electrical outlet to start charging the battery.

As the battery is being charged while the device is ON, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a full battery icon appears on the title bar of the Home screen.

Warning!

- As a safety precaution, the battery stops charging before it overheats.

3. Starting up the Device

Power ON / OFF

To power OFF your Slide, press & hold the POWER key. On release, the options menu opens. Select 'Power OFF' from the given options and confirm. This will turn OFF the device.

To power ON again, press & hold the POWER key. The iBall power start up animation will appear on the screen indicating that the device is starting. It takes around 40 seconds to completely reboot the device.

Silent mode

To put your device on silent mode quickly, press & hold the – volume down button to zero volume. The volume level 0 is the Silent mode. On Home screen, click and select Settings→ Sound & notification, select 'Silent' radio button. You can only activate silent profile but cannot customize it. You can also long press the power key and you will get the option to change user profile.

Screen time out

After a period of inactivity, your screen will go to sleep (display will turn black). In sleep, your Slide uses less battery power. You can control this behavior by following the below mentioned steps:

Set screen timeout period

1. On the Home screen, click and select Settings.
2. Select Display option.
3. Select "Screen Time out", to set the time period of sleep mode.

Press POWER key once to OFF display immediately. While on a call, to lock your control buttons and screen from accidental touch activation, press POWER key.

You can increase the security of your Slide by setting Screen Lock pattern. Once set, in order to unlock your screen, you'll have to draw the correct unlock pattern. You can set your screen unlock pattern as follows:

1. On the Home screen, click and select Settings.
2. Select Security and then select Screen lock pattern option.
3. Set or change your unlock pattern by selecting Screen lock pattern, as applicable.
4. Follow the prompts to define your pattern.

Note: You must swipe your finger along the screen to create the pattern, do not select individual dots. Connect at least four dots in order to create a lock pattern.

If you want your pattern to be hidden as you draw it, clear 'Make pattern visible' check box.

4. Home screen

The Home screen is your starting point for using all the applications on your Slide. You can customize your Home screen to display applications, shortcuts, and widgets as you like.



1. Click the application tab with your fingertip to reveal the application icons.
 2. The Home screen actually extends beyond the screen width. On Home screen, swipe your fingertip left and right along the screen to reveal the full width of the Home screen. This additional space gives you more room to customize Home with applications, shortcuts, and widgets.
 3. Create Home screen shortcuts and widgets:
 - Click the Apps tab with your fingertip to reveal the application icons, swipe your fingertip right to show the shortcuts and widgets.
 - Select an Application shortcut, a Shortcut to some of your saved information (such as a play list), a Widget (a clock or picture frame) for your Home screen.
 - The application, shortcut, folder, or widget appears on Home screen.
- Tip: To create an application shortcut quickly, click the application tab to reveal all the application icons, then touch & hold an application icon. Its shortcut is added to the Home screen.
4. To remove a shortcut or widget from your Home screen, touch& hold the item to enter “move mode”. The application tab turns into a Trash button. Drag the item to the Trash button and release. You will know when your item is in the Trash because the item and the tab will turn red.
 5. Move objects on the Home screen
 - To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it's ready to be moved.

- Without lifting your finger (or you'll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

 **Back:** Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further in your history.

 **Home:** Open Home. If you're viewing a left or right Home screen, opens the central Home screen.

 **Overview:** Opens a list of thumbnail images of apps and Chrome tabs you've worked with recently. To open an app, click it. To remove a thumbnail from the list, swipe it left or right.

If you don't use these buttons often, they may shrink to dots or fade away, depending on the current app. To bring them back, click their location on your device.

4.1 Read your notifications

	SIM network		GPS		Event reminder
	3G network		Screenshot captured		Call on hold
	4G network		Headset Mode		Missed call
	VoLTE network		USB connected		Speaker on
	No SIM		Alarm set		New message
	Brightness		Battery indication		Do Not Disturb
	Bluetooth		Battery charging		New Gmail message
	Uploading data		Music playback		Google search
	Downloading data		FM Radio playback		New What's App message
	Airplane Mode		Data sync		New Hangouts message
	Wi-Fi		Warning		Playstore update available

On the upper side of your Slide screen is the status bar. On the left side, icons will appear, notifying you of a new message, upcoming calendar event, or something else you should notice. On the right side of the status bar, you'll see connection status icons.

4.2 Connection status icons

Icons in status bar: At the top of the screen, you'll see the status bar. The icons on the left let you know that you have new notifications. The icons on the right are system icons for things like Wi-Fi and battery level.

Notifications shade: To read your notifications, swipe down from the status bar at the top of the screen.

Lock screen: When you wake up your device, you'll see your notifications on the lock screen.

4.3 Open & dismiss notifications

From the notifications shade or the lock screen, you can manage your notifications:

 
Open the app: click a notification to open the app.

Dismiss: Swipe a notification right or left to dismiss it. Some notifications can't be dismissed right away.

Clear all: You can dismiss all your notifications at once by touching the Dismiss icon at the bottom  .


If you aren't ready to dismiss a notification, you can swipe up to close the notifications shade.

5. Settings

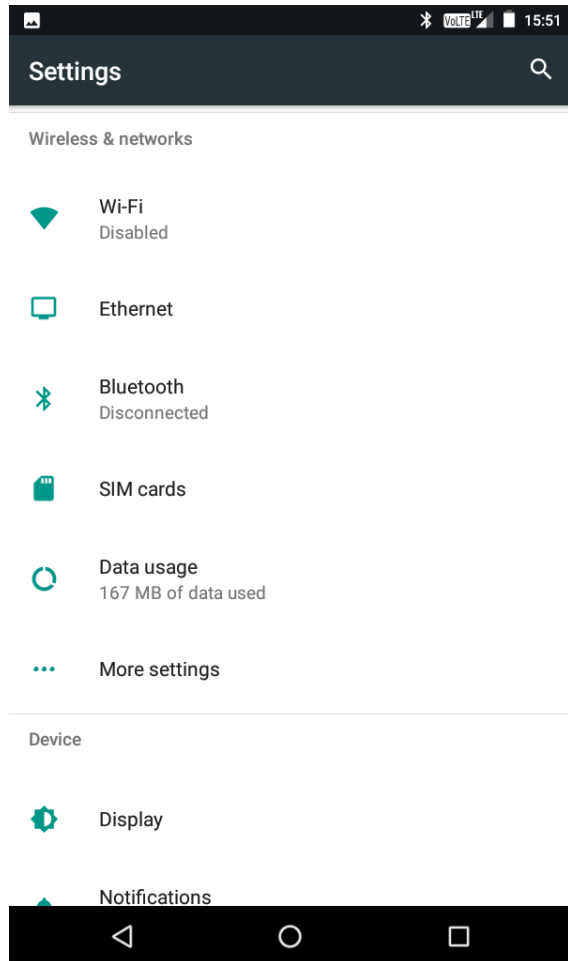

5.1 Wi-Fi

 You can connect to Wi-Fi networks with your device, as well as add networks you use often or remove networks you don't use any longer. You can also change the settings for saved Wi-Fi networks on your device.

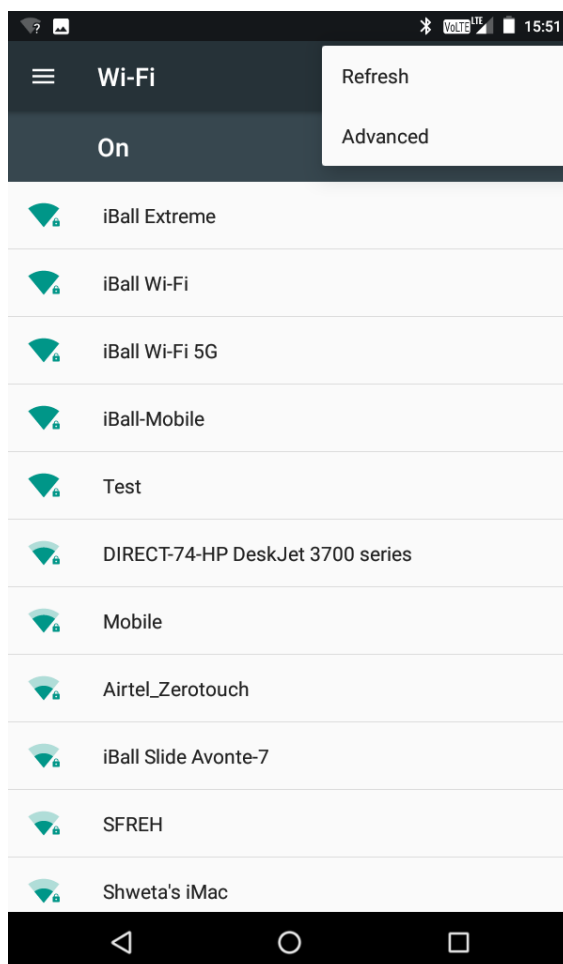

Turn on Wi-Fi and connect to a network

Keep in mind that your device will remember networks you connect to, along with security details, and connect automatically when in range.

Steps to connect to Wi-Fi on your Slide device:

1. Open your device's **Settings** app .
2. Under "Wireless & networks," click **Wi-Fi**.
3. Click the Wi-Fi switch icon to turn it **On**.
4. You'll see a list of saved and available networks.
5. Click a network name from the list of available networks to connect to it. You'll see a lock icon  if the network is secured and you need to enter a password to connect.
6. Once connected, your device will say "Connected" under the network name and it will show up in your saved networks list. Your device will automatically connect to it when in range.

Tip: If your saved network you want to connect to isn't showing up in the list of networks, click the Menu icon  in the top right corner of the screen. Then click **Refresh** to reload the list of networks. Click **Add network** and enter the network's name (SSID) and other security details, if needed, then click **Save**.

Add, change, or remove saved Wi-Fi networks

Add a Wi-Fi network

You can add a Wi-Fi network that isn't showing up in the list of networks on your screen, doesn't broadcast its name (SSID), or is out of range. To add a Wi-Fi network, follow these steps:

1. Open your device's **Settings** app .
2. Under "Wireless & networks," click **Wi-Fi**.
3. Make sure the Wi-Fi is switched **On**. Click the Menu icon  in the top right corner of the screen. Then, click **Add network**.
4. Enter the network name (SSID) and other security details, if needed.
5. Click **Save**.
6. Once connected, your device will say "Connected" under the network name.

Your device will connect to this network automatically the next time you are in range.

Remove Wi-Fi network

You can forget a saved Wi-Fi network if you don't want your device to connect to it automatically. To remove a Wi-Fi network from your device, follow these steps:

1. Open your device's **Settings** app .
2. Under "Wireless & networks," click **Wi-Fi**.
3. Make sure the Wi-Fi is switched **On**.
4. In the Wi-Fi settings screen, click the name of a saved network. If you don't see the network in the list, click the Menu icon , then click **Saved networks** and click the network.
5. Click **Forget**.

View Wi-Fi network details and change network settings

You can view your saved Wi-Fi networks' details and change network settings by following these steps:

1. Open your device's **Settings** app .
2. Under "Wireless & networks," click **Wi-Fi**.
3. Connect to the network you want to view details for.
4. Click the network name. You can see information about:
 - Connection status
 - Signal strength
 - Link speed
 - Frequency
5. To change network settings, touch and hold the network name. You can choose to:
 - Forget network
 - Modify network

Advanced Wi-Fi settings

Configure proxy settings

For each Wi-Fi network you add, you can connect via a proxy by following these steps:

1. Open your device's **Settings** app .
2. Under "Wireless & networks," click **Wi-Fi**.
3. Touch and hold a Wi-Fi network in the list of networks.
4. Click **Modify network**.
5. Select **Show advanced options**. (You may have to lower the keyboard first. To do so, click the modified back button .)
6. Click **None** under Proxy Settings, then click **Manual** in the menu that opens.
7. Enter the proxy settings.
8. Click **Save**.

Proxy settings for each Wi-Fi network must be set up separately.

You can choose to change the advanced Wi-Fi settings on your device. Follow these steps to edit advanced Wi-Fi options:

 
1. Open your device's **Settings** app .
 - **Network notification:** Turn ON to receive a notification in the Status bar when your device finds a Wi-Fi network it can connect to.
 - **Keep Wi-Fi on during sleep:** Touch to choose how your device handles Wi-Fi when it's asleep. You can choose to keep Wi-Fi on all the time, only if your device is charging, or turn it off completely. If you turn Wi-Fi off, you may increase the amount of data you use.
 - **MAC address:** The Media Access Control (MAC) address of your device when connected to a Wi-Fi network.
 - **IPv4 & IPv6 address:** The Internet Protocol (IP) address assigned to the device by the Wi-Fi network you are connected to (unless you used the IP settings to assign it a static IP address).
2. Click **Wi-Fi**.
3. In the Wi-Fi settings screen, touch **Menu**  > **Advanced**. Click one of the setting options below
 - **Install certificates:** You can use digital certificates to identify your device for a variety of purposes, including VPN or Wi-Fi network access.
 - **Wi-Fi Direct:** Allow your devices to connect with other Wi-Fi Direct capable devices.
 - **WPS Push Button:** Select to turn on Wi-Fi protected setup for a Wi-Fi protected setup capable network.
 - **WPS Pin Entry:** Any wireless computer or wireless adapter that will connect to the modem router wirelessly is a client. The client must support a WPS PIN, and must have a WPS configuration utility.

5.2 Ethernet:

Now user can connect LAN cable to access network/internet through USB port {USB to LAN converter required}

5.3 Bluetooth

To connect to a Bluetooth device, first turn ON your device's Bluetooth. Then, the first time you use a new Bluetooth device, you need to "pair" it with your device so that both devices know how to connect securely to each other. After that, they connect automatically.

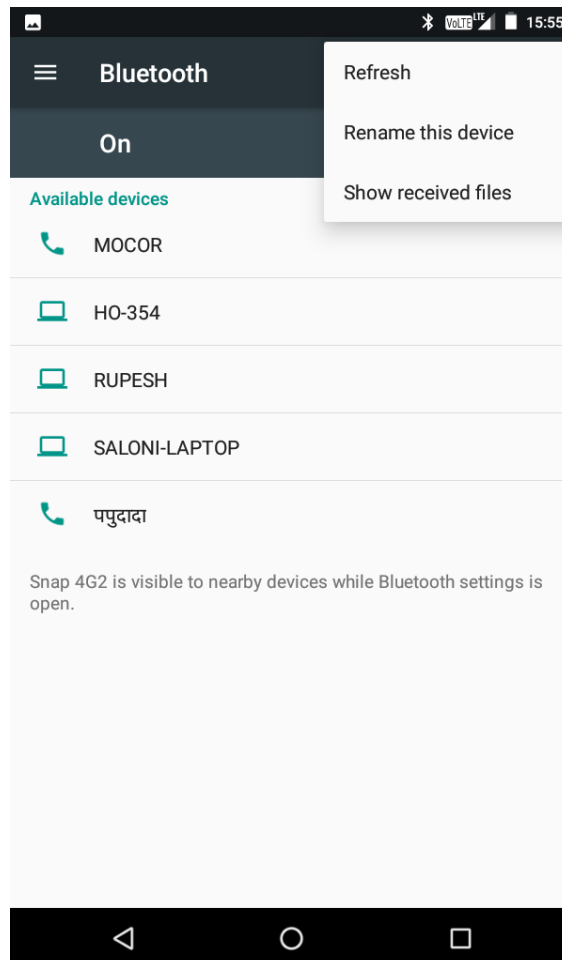

Turn Bluetooth ON or OFF

1. Open your device's Settings menu .
2. Click **Bluetooth**.
3. Click the switch to turn Bluetooth **ON** or **OFF**.
4. A Bluetooth icon  at the top of your screen will indicate when Bluetooth is turned ON.

Pair your Slide with a Bluetooth device

You have to pair your Slide with a Bluetooth device before you can connect to it. Once you pair your Slide with a Bluetooth device, they'll stay paired until you unpair them.

Pair with a Bluetooth device

1. Open your Slide Settings menu .
2. Click **Bluetooth**.
3. Make sure Bluetooth is turned ON.

4. Your device will scan for and display all available Bluetooth devices in range under "Available devices." If your Bluetooth device isn't showing in the list, click the Menu icon  , then click **Refresh**.
5. Click the name of the Bluetooth device you want to pair your device with.

Connect to a Bluetooth device

Once you've paired with a Bluetooth device, you can connect to it manually—for example, to switch devices or to reconnect after it's back in range.

Connect to a Bluetooth device

1. Open your device's Settings menu .
2. Click **Bluetooth**.
3. Make sure Bluetooth is turned ON.
4. In the list of paired devices, click a paired but unconnected device.
5. When your device and the Bluetooth device are connected, the device is displayed as connected in the list.

Configure or unpair a Bluetooth device

Some Bluetooth devices have multiple profiles. You can also change the name of the Bluetooth device as it appears on your device.

Configure or unpair a Bluetooth device

1. Open your device's Settings menu .
2. Click **Bluetooth**.
3. Make sure Bluetooth is turned ON.
4. Select the Bluetooth device you want to configure.
5. Click the Settings icon  beside the paired Bluetooth device you want to configure.
6. On the screen that opens, you can change the device's name, unpair it, or select profiles. Click the back button when you're finished.

Change your device's Bluetooth name

Your device has a generic Bluetooth name by default, which is visible to other Bluetooth devices when you connect them. You can change the name so that it's more recognizable to you.

Change your device's Bluetooth name

1. Open your device's Settings menu .
2. Click **Bluetooth**.
3. Make sure Bluetooth is turned ON.
4. Click the Menu icon .
5. Click **Rename this device**.
6. Enter a new name for your device.
7. Click **Rename**.

SIM Cards

You can select to activate or deactivate the SIM card you want to keep in use. From here you can set the default SIM to use voice call and messaging and Cellular Data. You can also select always ask, which means that the device will ask you which SIM do you want to use, every time you perform a function.

5.4 Data Usage

It provides a graphical representation of the data usage for a specified Data Usage cycle through SIM Internet or Wi-Fi.

Data usage refers to the amount of data uploaded or downloaded by your device during a given period. Depending on the device and your wireless plan, you may be charged additional fees when your data usage exceeds your plan's limit. To monitor your data usage, adjust your data usage settings. First check your plan and determine what data limits may apply.

Warning! The usage displayed on the data usage settings screen is measured by your handset. Your carrier's data usage accounting may differ. Usage in excess of your carrier plan's data limits can result in steep overage charges. The feature described here can help you track your usage, but is not guaranteed to prevent additional charges.

Data usage settings allow you to:

- Set the data usage level at which you'll receive a warning.
- Set a data usage limit.
- View or restrict data usage by app.

 
To adjust the settings described here:

Click the Settings icon on a Home or All Apps screen.

Click **Data usage**.

By default, you see the settings for mobile data, that is, the data provided by your network carriers.

5.5 More settings

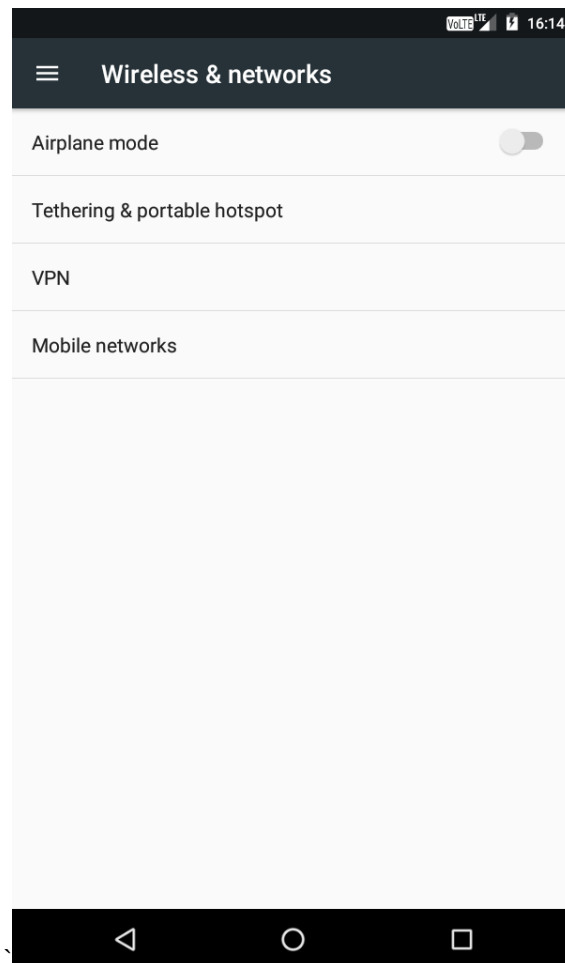

Airplane mode on/off: When airplane mode is selected, all wireless connectivity will be turned OFF. This icon will display in the status bar when airplane mode is selected.

Tethering & portable hotspot: The device is used as a wireless modem for a PC, when it's connected to the PC using a USB cable.

Tethering refers to connecting one device to another. In the context of mobile phones or Internet tablets, tethering allows sharing the Internet connection of the phone or tablet with other devices such as laptops. Connection of the phone or slide with other devices can be done over wireless LAN (Wi-Fi), over Bluetooth or by physical connection using a cable for example, through USB.

Using hotspot, you can share your Slide network with other Wi-Fi enabled devices. Also You can connect and block the User.

Wi-Fi hotspot: Select the Wi-Fi networks which are Slide hotspots. Apps can be restricted from using these networks when in the background. Apps may also warn before using these networks for large downloads.

USB tethering: Tethering refers to connecting one device to another. Tethering allows sharing the Internet connection of the phone or slide with other devices such as laptops. Sharing internet connection using USB cable is called USB tethering.

Steps to perform USB tethering

USB tethering allows sharing the Internet connection of the phone or slide with other devices such as laptops via USB.

In Slide→go to Settings→More settings→Tethering & portable hotspot→select USB tethering.

You will get an indication on the laptop/PC that USB is connected.

Right click on Update Drivers→Install from a list or specific location (Advanced) →next→Search for the best drivers in these locations→browse→iBall tethering drivers→ok→next→finished.

Now you can use the Slide's internet on your system using USB connection.

Bluetooth Tethering: Tethering refers to connecting one device to another. Tethering allows sharing the Internet connection of the phone or slide with other devices such as laptops. Sharing internet connection using Bluetooth is called Bluetooth tethering.

→Steps to perform Bluetooth tethering

Bluetooth tethering allows sharing the Internet connection of the tablet with other devices such as laptops via Bluetooth.

In Slide→go to settings→turn on Bluetooth.

In settings→go to More Setting→tethering & portable hotspot→check Bluetooth tethering.

In PC→turn on the system's Bluetooth.

Dial up→search for all available Bluetooth devices→add your Bluetooth device→select your device (Slide).

Now go to network access point service→perform pairing of the devices.

Now you can use the Slide's internet on your system using Bluetooth connection.

VPN: VPN stands for Virtual Private Mode. Using this feature, you can connect to your private network through a public network in a secured way. You can add a VPN connection, customize it as per your requirement and then save the settings. Once the network is created, select the network again to connect to it.

Add a VPN

To add a VPN, you need to get the details from your network administrator. Your organization may need you to install a VPN app from Google Play or your administrator, which you may need to configure directly from that application.

To add a VPN from the Settings apps:

1. Open the Settings app .
2. Click **More Settings> VPN**.
3. From the top right, click **Add VPN +**.
4. Enter the information from your network administrator.
5. Click **Save**.
6. You'll see the VPN listed on the VPN screen.

Connect to a VPN

1. Open the Settings app .
2. Click **More Settings > VPN**.
3. Click the name of the VPN.
4. Enter your username and password and click **Connect**. If you're using a VPN app, the app will open and then you can connect.
5. Once you're connected, your notification drawer will show the VPN On icon .

Disconnect a VPN

1. Open the Quick Settings menu by swiping down from top of the screen using two fingers.
2. Next to "Network may be monitored," click the VPN icon .
3. Next to the VPN you want to disconnect, touch Settings .
4. Click the VPN you want to disconnect.
5. Click **Disconnect**.

Edit a VPN

1. Open the Settings app .
2. Click **More Settings > VPN**.
3. Next to the VPN name, click the Settings icon . If you're using a VPN app, it'll open and then you can make changes.
4. Edit the VPN settings.
5. Click **Save**.

Delete a VPN

1. Open the Settings app .
2. Click **More Settings > VPN**.
3. Next to the VPN name, click Settings .
4. Click **Delete**.

Mobile networks

Data roaming: Prevents your device from transmitting data over other carriers' networks when you leave an area that is covered by your own carrier's networks. This is one way to control expenses if your cellular data contract doesn't include data roaming. When you disable "Data roaming," you can still transmit data over Wi-Fi.

Preferred network type: Select your preferred network type from options like 4G(Recommended), 3G & 2G.

Access Point Names: You can create new APN for using internet facility on your handset

Network operators: Choose your network operator from available networks.

5.6 Display

MiraVision: This feature makes the picture quality optimize for better experience.

Brightness level: To set your screen's brightness level, tap **Brightness level** and move the slider .

Wallpaper: Choose from Gallery, Photos and Wallpapers on your device.

Gallery: You can set the Wallpapers from Gallery, which will include wallpapers as well your camera images present in the gallery.

Wallpapers: You can set the default embedded Wallpapers present in the handset.

Screen Time out: Select to decide how long your phone must be inactive before the screen turns OFF.

Press power button twice for camera: Quickly open camera without unlocking your screen.

Screen Saver: You can select from the provided widgets to be displayed when the screen is left idle for a long time.

Font Size: Select to choose the font size of characters on your screen.

Display size: Select to choose the display size of characters on your screen.

When device is rotated: Whether you want to rotate contents of the screen when orientation of screen changed.

5.7 Notification

When device is locked: Manage whether notifications can be seen when your slide is locked, and whether sensitive content in a notification can be seen. Sensitive content includes things like the title of a song you downloaded, who sent you an email, or the details of a calendar event.

App Notifications : Modify the notification settings individually for apps such as Gmail. The setting under when device is locked will always take precedence over the setting for an individual app.

Notification access: See which apps can access your notifications.

5.8 Sound

Media, Alarm & Ringtone volume: Drag your finger along the volume bar to set an incoming call ringtone & alarm volume.

Also Vibrate for calls: On activating this option Vibrate device for incoming calls is activated.

Do not disturb: You'll have options for "Total Silence," "Alarms Only," and "Priority Only," and you can set time limits for how long you want Do Not Disturb to last.

Voice call ringtone: Select to decide on a ringtone to use for incoming calls. Note that you can override this setting for individual contacts in the Edit contact details screens.

Default Notification sound: Select a ring tone to use for a notification (e.g., new message). Note that you can override this setting for new Calendar event notifications, text and multimedia message notifications. Go to the applications settings screens to select specific ring tones.

Default alarm ringtone: Select a ringtone to use Alarm.

Other sounds

Dial pad touch tones: You can select from here if you want the dial pad touch tones to be activated.

Screen locking sounds: On activating this option the screen lock sound is activated.

Touch sounds: You can activate this option if you want the touch tones to be activated on your device.

Vibrate on tap: You can select from here if you want the Vibrate on touch to be activated.

Sound enhancement:

BesLoudness: This tool enhances audio for earphone and loudness of loudspeaker.

5.9 Apps

Get information on app memory usage

You can use the Apps screen to adjust several aspects of the way your device uses memory. To view these settings, follow these steps:

1. Open your device's Settings  from main menu.
2. Under "Device," click **Apps**.

Here you will see all applications present in slide, you can manage app from here, you can uninstall, view storage, grant permission from this option.

Show system : On selecting this option, it will show all system applications

Reset app preferences: On selecting this option it will reset all apps preferences set earlier.

5.10 Storage

This option helps you to view and manage the data stored on your device. You can view the total internal storage capacity and the capacity of the external memory card here.

Default Write disk: You can change default write disk location as SD card/internal memory for captured image/videos, received files, downloaded files etc.

If you're running out of free space on your device or see the error "Insufficient storage available," you can check your device's storage:

1. Open your device's **Settings** app .
2. Scroll down and click **Storage& USB**.
3. You'll see a breakdown of how your storage is being used.
4. Click an item from the list to see more details. For example, click Apps to see the storage used by each app or Explore to see the files on your device.

Internal storage: Monitor and manage the use of your internal phone memory from this screen

External Storage : Monitor and manage the use of your Memory card from this screen:

1. View how much space you are using on your memory card.
2. Select to use your memory card as USB mass storage when your Slide is connected to your computer (selected by default)
3. Format as portable/eject your memory card from your Slide. Note that when your Slide is connected to your computer via USB, you cannot view pictures or play any media stored on the card from your Mobile.

External USB Storage: Monitor and manage the use of your Pen Drive from this screen:

1. View how much space you are using on your memory card.
2. Unmounts/eject your PEN Drive from your slide.

5.11 Battery

Battery Percentage: You select this to view the level of battery in Percentage on your Notification Bar.

It gives you the current battery level, along with the distribution of battery consumption by different apps.

Turn ON battery saver

1. Open your device's **Settings** app .
2. Click **Battery**.
3. Click menu , then **Battery PowerSaving**
4. At the top, set the switch **ON**. The top and bottom of your screen will turn orange when battery saver is turned ON.
5. To turn ON battery saver automatically when your battery is low, click **Turn on automatically** and select "at 5% battery" or "at 15% battery."

Turn OFF battery saver

Battery saver turns OFF automatically when you connect charger to your device. You can also turn OFF battery saver from the notification at the top of your screen.

Warning! If you stop some apps or services, your device may not work correctly. Battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen. The discharge graph shows battery level over time since you last charged the device, and how long you've been running on battery power.

Check battery life and usage

1. Swipe down from the top of the screen to open Quick Settings.
2. Click the battery . You can also open your device's **Settings** app  → **Battery**.
3. You can check the following settings:
 - Percent of battery life left
 - How long until your battery dies
 - How you used your battery since last full charge

5.12 Memory

You can see here total RAM and distribution of RAM across applications for specified period of time.

5.13 Users:

This gives the information of the owner logged in the device. Here you can set the owner name & Add another user.

5.14 Location

My Location: Select a source for determining your location, Wireless networks, or GPS satellites. Typically GPS will be more accurate (to street level) but it consumes more battery power.

Steps to turn location ON or OFF for your device

1. On your mobile device, open Settings menu .
2. Click **Location**.
3. Use the switch to turn Location services ON or OFF. When the switch at the top of the screen is **OFF**, your device location isn't shared with any apps. When the switch at the top of the screen is **ON**, you can choose one of the following modes:
 - **High accuracy:** High accuracy mode uses GPS, Wi-Fi, cellular networks to get the highest-accuracy location for your device. It uses Google's location service to help estimate your location faster and more accurately.
 - **Battery saving:** Battery saving mode estimates your location using low battery-intensive location sources, such as Wi-Fi and cellular networks. It uses Google's location service to help estimate your location faster and more accurately.
 - **Device only:** Device only mode estimates your location using GPS only. It doesn't use Google's location service to provide location information. This mode may use more battery power and take longer to determine your location.

You'll see the location icon  at the top of your screen when your device's precise location is being used by any app. This icon doesn't necessarily indicate GPS activity — it just means that a mode using more power to determine your location is turned ON.

5.15 Security

You can manage most of the security settings for your device by following these steps:

1. Open your device's **Settings** app .
2. Scroll down to **Security**.

Device security

Set up or change a screen lock

1. Open your device's **Settings** app .
2. Scroll down and click **Security**.
3. Click **Screen lock**. If you've already set a lock, you'll need to enter the Pattern, PIN, or password before you can choose a different lock.
4. Click the screen lock you'd like to use and follow the instructions.

 
Screen lock options

You can choose from the following screen locks:

None: Select this option if you don't want a lock screen. It provides no protection, but lets you get to the Home screen quickly.

Swipe: Swipe your finger across the screen to unlock your device. It provides no protection, but lets you get to the Home screen quickly.

Pattern: Pattern lets you draw a simple pattern with your finger to unlock the device.

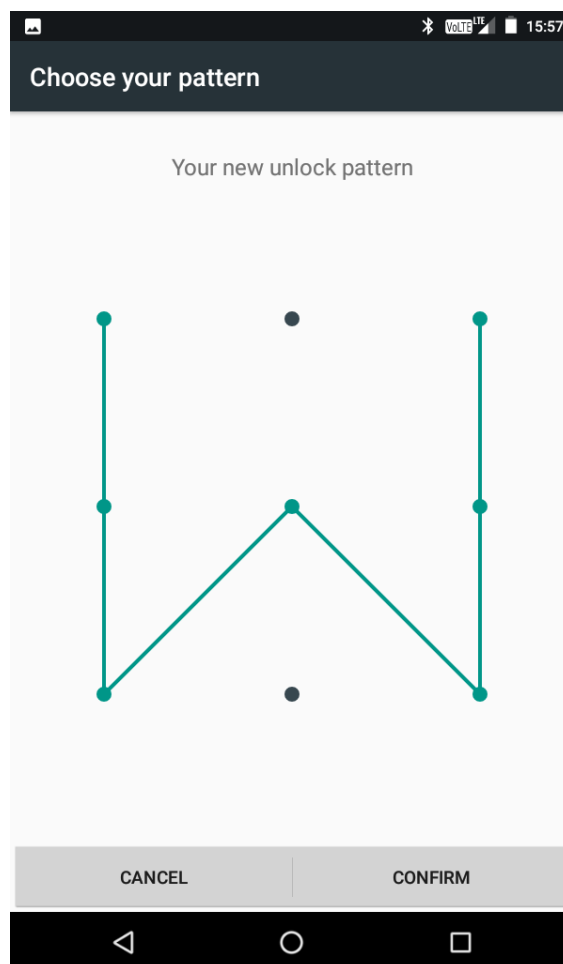

PIN: PIN requires four or more numbers. Longer PINs tend to be more secure.

Password: Password requires four or more letters or numbers. This is the most secure option, as long as you create a strong password.

Remove screen lock device protection

Using a screen lock is important for securing your device, so we recommend continuing to use a screen lock method like Pattern or password. However, if you don't want to use a PIN, pattern, or password, you can follow these steps:

1. Open the **Settings** app .
2. Scroll down to **Security > Screen lock**.
3. Choose **None** or **Swipe**.

Make pattern visible: Enable it to show pattern lock while unlocking.

Automatically lock: You can set automatically lock your device after certain time of screen sleep except when device is unlocked by Smart Lock.

Power button instantly locks: Tap Power button instantly locks to enable the device to instantly lock the screen by pressing the Power/Lock Key or touch to disable it.

Lock screen message: The information of the owner can be stored and then can be displayed on the lock screen.

Smart Lock: Set up your device to automatically unlock when you have a trusted Bluetooth device connected, when you're at a trusted location, when you're carrying it with you, or when it recognizes your face.

SIM card lock: You can lock your device's SIM cards to prevent someone else from using them. After you set it up, you'll need to enter a PIN on the lock screen for each SIM that's locked.

Set up SIM lock: Lock your SIM card for extra security. You can also change your SIM card PIN from this screen. If you don't know your SIM PIN, you can obtain it from your SIM service operator.

Make password visible: Make passwords visible as you type, which helps you to enter a password that is more complex and secure.

Device administrators: Manage device administrators, allow apps to be installed from sources other than the Play Store, and choose to verify apps from all sources.

Unknown Sources: Manage installation of apps from sources other than the Play Store.

Credential storage: Manage, install, or clear certificates on your devices.

Trust agents: Manage trust agents for features like Smart Lock.

Screen pinning: You can use screen pinning to keep an apps screen in view until you unpin it. For example, you could pin a game so that you don't accidentally exit the game while you're playing. Then, when you're done with the app, you can unpin the screen to get back to the rest of your apps.

Turn screen pinning on or off

Before you start pinning screens, you'll need to turn on the screen pinning setting for your device:

1. Open your device's Settings app .
2. Scroll down and click **Security**.
3. Click **Screen pinning**.
4. At the top, switch the setting ON or OFF.
5. If you turned screen pinning ON, you'll also see an option to "Ask for unlock pattern before unpinning."

Pin a screen

1. Make sure that screen pinning is turned ON for your device (see directions above).
2. Open an app and go to the screen you want to pin.
3. At the bottom, click the Overview button .
4. Swipe up to reveal the pin icon . It will be in the bottom right corner of your selected screen.
5. Click the pin icon .

Unpin a screen

1. When you're on the pinned screen, touch and hold Back  and Overview  at the same time.
2. Release both buttons and the screen will be unpinned.
3. If you required that the lock screen show after an app is unpinned, you will need to enter your pattern, PIN, or password.

Apps with usage access: Manage what apps have access to app-usage data on your device.

5.16 Gesture Control

It allows you to control your device with simple gestures. Just swipe your finger across the screen, and the action you want will be performed.

Double click : Double click on the screen to turn on screen.

Sliding up : Swipe your finger in upward direction to open camera directly.

Sliding down : Swipe your finger down to open system setting directly.

Sliding to the left : Swipe your finger to left from right to open Browser directly.

Sliding to the right : Swipe your finger to right from left to open Music directly.

Note: To Gesture work your device should not be locked as Pattern, PIN, password and you can change application for particular getsure as per your convenience

5.17 Accounts

This option allows you to add new account on to your device. You can add new Gmail or personal web mail account. You can also add your account of Email, Google and many more. You will find this option in settings. All your accounts that are present on the device will be displayed here. You can also remove the account from the device from this location.

Note: Removing the account will not delete the account permanently. It will just remove the account from the device. You can log in to that account from any other device or the same device also.

For removing the account, go to settings select the account that you want to remove tap on that particular account select the option key. Here, you will get two options sync now & remove account. Select remove account, it will ask for confirmation. Select remove account again and your account will be removed from the device.

5.18 Google

Google Search for Android is an application by Google which integrates Google search and Google Now into an application for Android devices. Search for Android implements Google Now, Google's voice recognition and intelligent personal assistant software for Android, into a Google Search application. Users can speak to their slide in the app to search. Users can, alongside normal Google Search results, receive interactive weather results and flight information, among calculations and more features.

In this Ads, Location, Nearby, Search, Security, Set up nearby device and Smart Lock for Passwords options are present.

5.19 Language & input

Language: On selecting this option you can choose the required system language of the slide from the given list of languages. This slide supported 22 Indian Regional language.

Spell Checker: On selecting this option you can turn ON the Android spell check feature on your slide.

Personal Dictionary: With Google Keyboard, you can see word suggestions from dictionaries in different languages. You can even add words to your own personal dictionary.

Keyboard & input methods

Android keyboard(ASOP): It is the default input method on your slide.

Google voice typing: On selecting this option, you can convert the voice message into a text message.

Speech

Text-to-Speech output: Here you can change the text to speech out engine settings like Speech rate, Default language status.

Use your voice to type text

 
1. Click where you want to type.
2. In the onscreen keyboard, click the Microphone key .

3. When you see the microphone image, speak what you want to type. Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.
4. When you pause, your device's speech-recognition service transcribes what you said into words in the text field. What you said last will be underlined.
5. To delete what you last said, click **Delete** .

Mouse/track-pad

Pointer speed: On selecting this option, you can control the pointer speed.

5.20 Backup & Reset

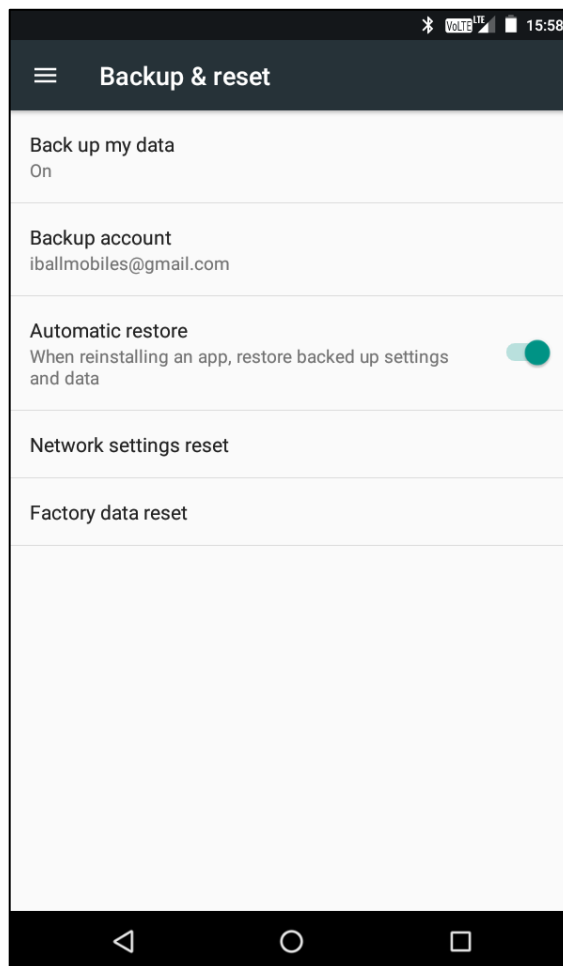

Back up my data: You can use Android Backup Service to back up data connected to one or more of your Google accounts. If you had to replace your device or erase its data, you can restore your data using any account that you backed up.

Backup account: You can set backup account

Automatic restore: When re-installing an app, restore backed up settings and data.

Network settings reset : This will reset all network settings including: Wi-Fi, Cellular data and Bluetooth.

Factory Data Reset: You can select this option to reset your Slide to factory settings. This will erase all your data from the internal memory of your device and the settings also will be restored to default. It will require you to sign in and go through the set-up screens to use any of the applications. You will also need to sign in with your Google account to use any application that requires your email account. All the accounts that you were using will also get removed and you will have to set up all the accounts again including play store.

5.21 Date & Time

According to the pre-set, system will voluntarily apply the date, zone, and time provided by internet.

Manually set date, time and time zone.

- **Automatic date & time:** You can set your Slide date & time settings, which can detect automatically by following option
- **Automatic time zone:** The time zone will detect automatically with this option. If you not select this, then you have to set the date & time with zone manually.
- **Set date:** Slide up or down to adjust date, month, and year, click OK when you finish selection.
- **Set time:** slide your figure in clock or anti clock direction to adjust hour and minute, click OK when you finish selection.
- **Select time zone:** Set it to GMT+05:30, India Standard Time.
- **Use 24-hour format,** switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.

5.22 Accessibility

These are certain special features which help people with certain disabilities. These options help the users who are visually impaired and cannot access through the functions properly. These features are great help for such users. You can activate the talk back function which guides the user by speaking feedback or you can set the font size as extra-large for low vision users.

Mentioned below are all the options that are present in the handset for the users to guide them.

Services

Talk back: Talk Back is a screen reader that's included on your Android device. Talk Back uses spoken feedback to describe your actions and to tell you about alerts and notifications.

Switch Access: Switch access enables you to control your device with one or more switches. For users with limited mobility, switch access provides an alternative for using the touch screen.

System

Magnification gestures: Using this feature you can zoom in & out by triple tapping the screen.

Font Size: Select to choose the font size of characters on your screen.

Display size: Select to choose the display size of characters on your screen.

High contrast text: High contrast makes text easier to read on your device. This feature fixes the text color as either black or white, depending on the original text color.

Power button ends call: When this setting is enabled, you can simply press your device's power button to end a call. This setting can make it faster and easier to hang up.

Auto-rotate screen: When this setting is enabled, the screen automatically rotates when you move your Slide between portrait mode and landscape mode.

Speak Password: This setting controls Talk Back spoken feedback as you type passwords.

- **Enabled:** Password characters are announced audibly like any other typed characters.
- **Disabled:** Password characters are only audible via headset. (To protect your privacy, this setting is disabled by default.)

Accessibility Shortcut: The accessibility shortcut allows you to enable Talk Back quickly, without the use of sight.

Text-to-speech output: The text is spoken for the user convenience.

Touch & hold delay: Lets you adjust the delay required for the slide to notice that you're touching and holding an item (for example, to move an app to a Home screen).

Display

Color inversion: Color inversion exchanges color values. For example, black text on a white screen becomes white text on a black screen.

Color correction: The color correction setting enables your device to compensate for color blindness.

5.23 Printing:

Some printers let you print from your Android tablet over a Wi-Fi, Bluetooth, or USB connection. However, if your printer doesn't have such capabilities, you can register your printer to Google Cloud Print, a technology and service that lets you connect your printer to the Web, making your printers accessible wherever you are.

***Note:** All the printers may not be compatible. Please contact your printer manufacturer for details

5.24 Developer Options

This option comes after you go to settings→about iBall Mobile→build number→tap on this option 6 to 7 times

Take bug report : This will collect information about your current device state, to send as an e-mail message.

Desktop backup password : Set a password to secure your backup data.

Stay Awake : Screen will never sleep while charging.

Enable Bluetooth HCI snoop : Capture all Bluetooth HCI packets in a file.

OEM unlocking : Allow the bootloader to be unlocked.

Running services : View and control currently running services.

USB debugging : When you connect your slide to laptop/PC, the following image will pop up on your screen, it will sync your slide with Laptop/Pc through USB connectivity.

Revoke USB debugging authorizations : Revoke access to USB debugging from all computers you've previously authorized.

Bug report shortcut : Show a button in the power menu for taking a bug report

Select mock location app : Select mock location and service information to be sent to a location manager service for testing.

Enable view attribute inspection : Inspect views' attributes in Android System Manager.

Select debug app : set application for debugging.

Wait for debugger : Debugged application waits for debugger to attach before executing.

Verify apps over USB : Check apps installed via ADB/ADT for harmful behaviour.

Logger buffer sizes : select Logger sizes per log buffer.

Wireless display certification : Show options for wireless display certification

Enable Wi-fi Verbose Logging : Increase Wi-Fi logging level, show per SSID RSSI in Wi-Fi Picker

Aggressive Wi-Fi to Cellular handover : When enabled, Wi-Fi will be more aggressive in handling over the data connection to cellular, when Wi-Fi signal is low

Always allow Wi-Fi Roam Scans :Allow/ Disallow Wi-Fi Roam Scans based on the amount of data traffic present at the interface

Cellular data always active :Always keep mobile data active, even when Wi-Fi is active (for fast network switching).

Select USB Configuration : MTP (Media Transfer Protocol).

Show taps : Set to show visual feedback for taps.

Pointer Location : Set the Co-ordinates & traces of the pointer when you touch the screen.

Show surface updates : Flash entire window surfaces when they update.

Show layout bounds : Show clip, bounds, margins etc.

Force RTL layout direction :Force screen layout direction to RTL for all locales.

Window animation scale : The ratio by which the animation scale is applied.

Transition Animation Scale : To speed up transitions (and your slide's reaction time), either turn off animations, or reduce the scale.

Animator duration scale : The ratio in which the animation scale is measured.

Simulate secondary displays : Select one option out of the provided four.

Force GPU rendering :Force use of GPU for 2d drawing.

Show GPU view updates : Flash views inside window when drawn with the GPU.

Show hardware layers update : Flash hardware layers green when they update.

Debug GPU overdraw :with options OFF, Show overdraw areas and Show arears for Deuteranomaly.

Debug non-rectangular clip operations :with options OFF, Draw non-rectangular clip region in blue and Highlight commands in green.

Force 4x MSAA : Enable 4x MSAA in OpenGL ES 2.0 apps.

Disable HW overlays : Always use GPU for screen compositing.

Disable USB audio routing:Disable automatic routing to USB audio peripherals.

Strict mode enabled : Flash screen when apps do long operations on main thread.

Show CPU usage : Screen overlay shows the current CPU usage

Profile GPU rendering : Measure rendering time in adb shell dump system graphics info.

Don't keep activities : Set to end a running application when you launch a new application.

Background process limit : Set the standard limit of processes which run in the background.

Show all ANRs :Show apps not responding dialog for background apps

5.25 Scheduled power ON & OFF

This option lets you select the time duration during which you want your device to shut down and then start up. This is useful in enhancing the battery life of the device. You can set the fixed time at which you want it to switch OFF and when you want to switch it ON again. You will find this option in settings.

5.26 About iBall Slide

View the model number and version information for your Slide.

iBall Care: Here you can check if any system update available or not, if available you can download update and install.

Status: You will get the current status like Battery status, Battery level, SIM status, IMEI information, Wi-Fi MAC address, Bluetooth address, Serial number & Up time.

Legal information: You will get open source licenses & Google legal information.

Model Number: It is showing device model number

Android version: It will show you current version of Android.

It will also show you other options like Android security patch level, Baseband version, kernel version and the build number of the Slide. These options help you to know whether your slide is updated to the latest firmware version or not.

6. PC connectivity

You can transfer photos, music, and other files between your computer and device using a USB cable. You can also transfer files from your device to a computer.

Windows transfer

Make sure your device's screen is unlocked.

Connect your device to your computer using a USB cable.

On your device, pull down your notification drawer by swiping down from the top of the screen. Touch the Media device(MTP), this will showing both storage of your device on PC. You can copy files between PC and your slide.

On your device, pull down your notification drawer by swiping down from the top of the screen. Click the Camera(PTP), this will help in transfer photos to PC only.

Eject your device from Windows, then unplug the USB cable.

6 OTG Connectivity

 
This slide supports dual USB port (Y-Cable, which have provided with Box pack), It can support for charging slide and connecting supported peripherals device simultaneously but there is some condition to use as below:

1. If you want to connect charger as well as supported peripherals then you have to connect first charger & supported peripherals to Y-Cable before connecting Y-Cable to slide.

2.If you want to connect only supported peripherals then you can connect Y-Cable with supported peripherals & slide but in this case if you connect charger to Y-Cable after connecting supported peripherals to Slide, charging will not going to work. Note: Supported peripherals are PEN drive, Keyboard, Mouse etc with USB connectivity option. Please check compatibility of USB peripherals before use/purchase.

7 Communication

7.1 Phone

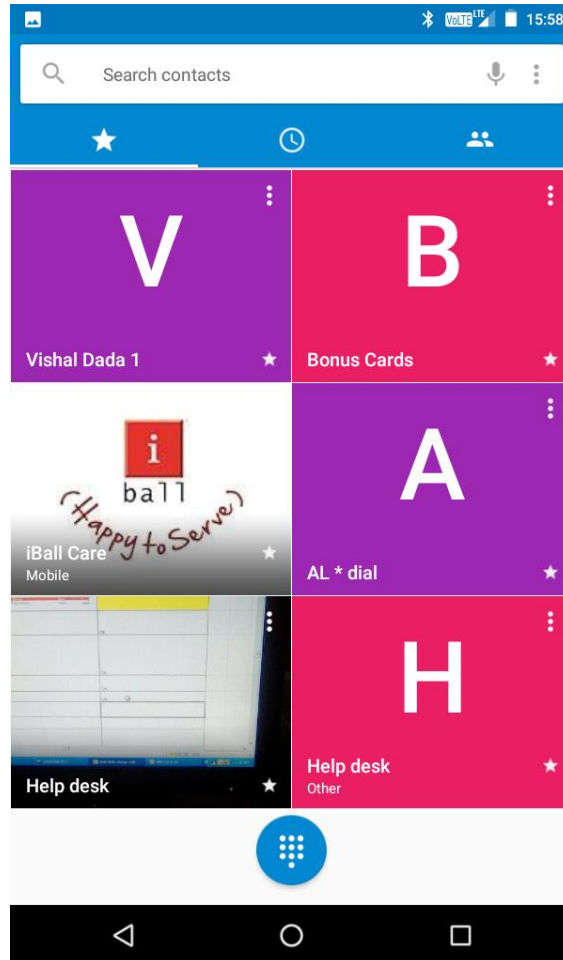

Making a call

Connect the Earphone to your Slide & click Phone icon to enter the dial screen. You can type a number which you want to dial, you can search your particular contact through number and name. You can call with earphone only

To dial a number, click “Voice Call” (green icon) button to make a call. To end a call, click “END” button (Red icon).

1. Call log tab: Select an entry listed in the log to call the number.
2. Contacts tab: Contacts with phone numbers are listed. Select a contact, and then select the phone number to dial the call.

Answering and Ending a call

When you receive a phone call, the incoming voice call screen will appear, allowing you to either answer or ignore the call.

1. To answer an incoming call, swipe “ANSWER” (Blue icon) button rightward.
2. To reject a call, swipe “REJECT” button (Red icon) button leftward.
3. To reject the call with message, swipe the button upwards.

In-call options

While on a call, reveal the in-call options: Call Record, Hold, Mute, Speaker, Dial pad and Add new call.

Note: That if Bluetooth services are on and you are connected to a hands-free device, the moremenu indicator will show Bluetooth on.

Speaker: To use the speaker, click “Sound’ option. To turn it off, select it again.

Mute: To mute your side of the conversation, click “Mute”. To turn it off, select it again. The status bar will display this icon when Mute is ON.

Dial Pad: This provides the dial pad screen while on call.

Hold: To put an active call on hold, click “Hold’. To resume the call, or take the call off hold, select it again. If you take a call while already on a call, the first call will be placed on hold automatically. The status bar will display this icon when a call is on hold.

Add new call: While on call you can dial another call.

Record: If you want to record the conversation you may select last option —Record. On tapping it —Record option, the recording will start and to stop the recording tap on the same option again.

Incoming call: During call in progress, if you are on a call (—call in progress) when another call comes in (—incoming call|)), you have a few choices:

- Answer the incoming call and place the call in progress on hold. To switch calls at any time, click “Swap calls”.
- If you don’t want to interrupt your call in progress, then click “END”.
- If you have one call in progress and one caller on hold, to end both calls, click “End Call”.

Note: Whether the group call function can be used depends on whether the network operators supports and provides such function as well as whether you have applied for such function. Please contact network operator for details.

Using Call history

1. The missed call icon  appears in the title bar when you missed a call.
2. Use —View full call history in Dialer option to check who the caller was, or view all your dialed numbers, and received calls. To open _Call log’ tab, click Dialer button in the phone screen to enter the call history list.
3. Scroll to select the contact or number you want to dial, click “Call’  button
4. Click contact you want to call, and then you can make to do the following options of call, edit number before call, send text message, add to contacts or remove from call log phone on the shortcut menu.

7.2 Call settings

On the dialling screen or call log screen, press Dial Pad Menu in Right bottom corner click on Settings to enter Call settings: You can make the operation of voice call and the other settings.

Please note that when you open _Call settings’ for SIM, your current settings are fetched, which can take a few moments.

Display options

Sort by: To display the name in contact can be set in this option.

Name format: To set the format of the contact to display.

Sounds and vibration

Voice caller ringtone: To set the ringtone for the incoming call.

Also vibrate for calls: Your phone vibrates while outgoing call is connected.

Dialpad tones: To enable the dial pad touch tone.

SMS on call reject

You can reject the call & denied SMS will be sent automatically to calling person.

Call Setting

Auto call record: Turn ON to automatically record all calls(incoming & outgoing) or you can turn ON it during an active call also.

Call record format: You can set call recording file format from available formats as MP3 & 3GPP

Shake to answer: Enable this option, answered incoming call while shake slide.

Emergency calls: Enable this option, on lock screen long press up volume key to call on SOS number.

Out call answer notification: Enable this option, Vibrate when outgoing call is answered.

Flip to mute: Turn over the slide to mute while incoming call. If you put your slide to upside down while incoming call, your slide goes in mute mode.

Voice mail: Select to set a voicemail number that is not being read from the SIM card.

Fixed Dialing Numbers: Your Slide device can set up Fixed Dial Numbers (FDN). When the FDN feature is active, only numbers that are part of the FDN contacts list can be called from your device.

Call forwarding: Select how you want busy, unanswered, and unreachable calls to be handled. There is also an option to Always forward.

Call barring: Restrict to answer or dial the call in any situation. You need to apply to the network operator for opening the international long-distance function and get network restricting code for barring setups.

Additional settings: From this setting you can set your Caller ID preference and turn on/off call waiting.

Caller ID: Use default operator settings to display your number in outgoing calls.

Call waiting: During an active call it will notify you of another incoming call & caller will get the call waiting message. This is operator supported function.

Call Blocking: Add Number in Call Blocking, you won't receive calls or texts from blocked numbers.

Accessibility

TTY mode: A device that allows deaf or hearing-impaired individuals to communicate via the telephone by typing text messages. Cell phones with a TTY mode are compatible with this technology and perform the same service after they're connected to a TTY device

7.3 Contacts

The contacts on your Slide are synced with your account contacts stored on the Web. To view the contacts on your device, click and select Contacts. Contacts belonging to a specific group

(You can choose which group) are listed in the Contacts tab. Only those contacts you star as —favorites are listed in the Favorites tab. Browse through your contacts by sliding your fingertip up and down on the screen. Another way to find a contact quickly is to use —SEARCH button, input the first letter of the name you're looking for and click search icon, the matching contacts are appeared on the screen.

A. From the Contacts tab, you can:

Take action on a contact: Click the contact's name to open the context menu. From the menu you can select to view the Contact details screen, call the contact's number, send a text message, add or remove a star, edit the contact details, or delete the contact.

1. Go to Contact details: Select the contact's name to open the Contact details screen, where all the information you have saved for this contact is displayed.

B. Add a contact

1. On the Home screen, click and select Contact. Your contact list appears.
2. Click the + icon on the bottom of the screen to add new contact.
3. Add all the information you want to store for this contact in the appropriate fields. You must add some information to save a contact. To change a default label, select the label name to open the label menu. Select a different label or create a custom label.
4. You can assign a Caller ID icon to your contact by clicking Caller ID icon. The Gallery opens. Navigate to a picture and select it, crop the image with your fingertips. When finished, click "Save". The picture is associated with your contact. If you do not assign an icon, a default android icon will be assigned.

C. Assign favorites

Use Favorites as a way to display only those contacts you contact most frequently. To add a contact to favorites:

1. From Contacts, click the contact you want to add to favourites and it will open the Contact details screen. (Contact number should be saved in Phone memory only)
2. Click the star icon on the right-top screen, and the colour of star is changed from white to grey.
3. Now your contact will be listed in favourites.

D. Edit contact details

You can always make changes to the information you have stored for a contact:

1. From Contacts, click the contact you want to edit to open the Contact details screen.
2. Click "Edit". The Edit contact screen appears.
3. Make your changes, then click on back key contact will be modified automatically.

E. Communicate with a contact

From Contacts you can quickly call or text a contact's default number, as displayed below their name on the screen. However, to view all the information you have stored for a contact, and to initiate other types of communication with that contact, open the Contact details screen. To open a contact's details screen, simply select their name from Contacts.

1. Call a contact: From the contact list, click the contact you want to open the Contact details screen. Click the call number directly to dial that contact's primary number (first in the list on their details screen).
2. To dial a different number for the contact, select the contact's name, and then select the number on their details screen and then click the number that you want to call.
3. Send a text or multimedia: To send a text or multimedia message to a contact, you must have a message to a contact mobile number stored for them in contact details. From the Contact details screen, select a phone number and click "Message" icon, A Compose screen opens for your new message. Complete your message and click "Send".

4. Send email to a contact: To send an email message to a contact, you must have an email address stored for them in their contact details.
- Select the contact you want to email. Their Contact details screen opens.
 - In the Send email section, select the email address. If you are fetching POP3 or IMAP email accounts to your slide, then select the account you wish to use to send. A Compose screen opens for your new message.
 - Complete your message, click “Send”.

F. SIM contacts Import/ Export

 
If you have stored names and phone numbers on your SIM card, you can add these to the Contacts stored on your phone by selecting this settings option. From the contact list, press MENU , then click on “Import/export” option, you can select to import from SIM card or memory card, once the list of names and numbers appears you can import only certain names/numbers in the list - Select the name/number you want to import, then repeat for others as you wish. (As soon as you select the name/number, it is imported).

8 Messaging

8.1 SMS and MMS messaging

You can manage your messages, conversations, notifications, and contacts right from the Messenger home screen. You can also change your sound, notification, and other settings.

About text and multimedia messages

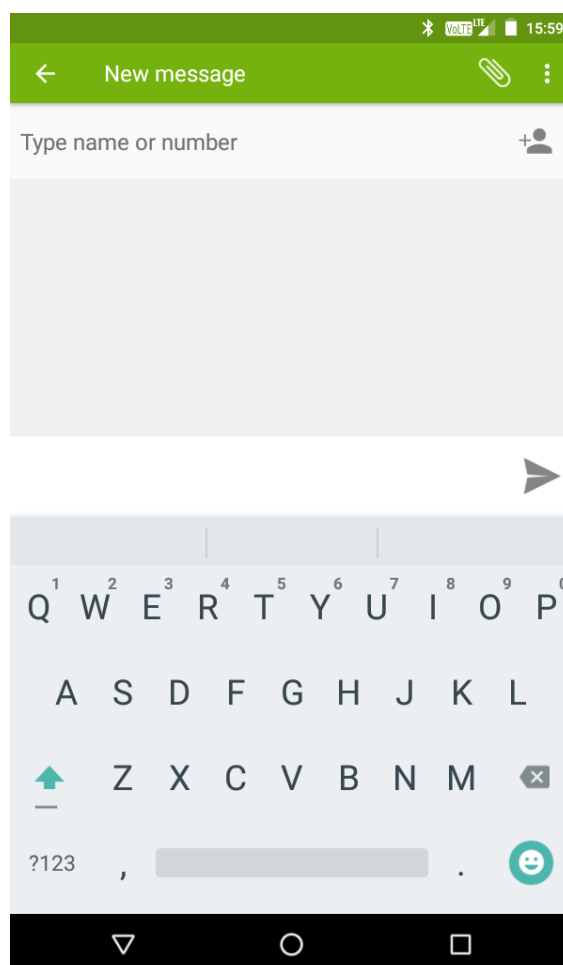

SMS messages are also known as “text” messages and can each be around 160 characters. If you continue to type after the limit is reached, your message will be delivered as one, but count as more than one message. These are called “concatenated” messages.

MMS messages are also known as “multimedia” or “picture” messages and can contain text, picture, audio, and video files.

When you compose a message, the Slide will automatically convert a text message into a multimedia message as soon as you add a subject or an attachment, or if you address the message using an email address rather than a phone number.

View the message from the message list

Select a message thread in the list to open it for reading. When open, the individual messages appear stacked on the screen, much like with instant messaging conversations (or chats).

Note that messages you send are also listed in the Read view.

1. Reading multimedia messages

If you have selected to auto-retrieve your multimedia messages, then both the message header and body will download.

If you are downloading only the headers, then you must first select the Download button to retrieve the message body. If you are concerned about the size of your data downloads, you can check the message size before you download.

Once the message has downloaded, select “Play” button to view the message.

From a message read view, you can do the following:

1. To view details about a particular message, in the Read view, touch & hold the message to open the context menu. Select View details.
2. Reply to a message: Simply start typing your message in the text box at the bottom of the screen to reply to a message. You can always press MENU and select to add a subject or an attachment to convert it to a multimedia message. Select ‘Send’ when ready.
3. Links in messages: If a message contains a link to a Web page, it will be selectable. To view the Web page in the Browser, simply select it.
4. Delete messages: Your messages will be saved until you explicitly delete them.

Delete one message in a thread - With the message thread open in Read view, touch & hold the individual message you want to delete to open the context menu. Delete all messages in a thread - With the message thread open in Read view, press MENU→Delete. You can also delete an entire thread from the message list by pressing & holding the thread to open the context menu, then select ‘Delete’.

Delete all message threads - From the message list, press MENU and select delete all threads.

Compose text and multimedia messages

1. Click ‘Compose’ icon. The Compose screen opens.
2. Add recipients by typing a name, phone number, or email address in the ‘To’ field. Matching contacts will appear. Select the recipient or continue typing. Add as many recipients as you wish. If you send the message to an email address, the message will automatically convert from a text to a multimedia message.
3. To add a subject, press MENU and select ‘Add subject’. If you add a subject, the message will convert to a multimedia message.
4. To add an attachment, touch ‘Attach’ icon on the screen. Adding an attachment will always convert the message to a multimedia message. Select from audio or picture files. You can select to take a new picture if you want, or record an audio file.

Any recordings you make will be stored automatically in the Music application in a play list named “My recordings”. To remove an attachment, select the attachment’s ‘Remove’ button.

5. Type your message. As you type, you will be able to track how many characters/messages you're creating. Remember that text messages have a limit around 160 characters. Once you go over that limit, a new message is actually created but automatically joined into one when received.

6. Select 'Send' when ready. You can also save a draft.

7. As your message sends, progress displays in the title bar. If you see this icon to the right of the message, it means your message is still being delivered.

Save message as draft

While composing, press BACK, your message automatically saves as a draft.

Text and multimedia message settings

To set text and multimedia message preferences, from the message list, press MENU and select 'Settings'. You can set the following from this screen:

SMS Enabled: Select to change default messaging app.

Text Message settings

Request Delivery report: To receive a report on the delivery status of your message, select this check box.

Manage SIM card messages: Text messages can also be stored on your SIM card. The exact SIM card number depends on your card, but it is usually around 25-50. To view messages on your SIM card, delete them, and copy them to your Slide memory, select this setting.

Edit Templates: You can edit the templates using this option.

SMS Service Center: It contains the SMS service center number. Please make sure that this number is not deleted or tempered.

SMS Storage location: You can select whether you want to save the messages in Slide memory or SIM memory.

Multimedia message settings

Group messaging: Use MMS to send a single message when there are multiple recipients.

Request Delivery reports: To receive a report on the delivery status of your message, select this check box.

Request Read reports: To receive a report on whether each recipient has read or deleted the message without reading it, select this check box.

Send Read report: To send a read report if requested by the mms sender

Auto-retrieve: To retrieve all your MMS messages automatically (the header plus the message will download to your Slide), select this check box. If you clear this check box, then only the message headers will be retrieved and display in your message list. You can retrieve the full message by selecting the Download button that displays in the header. Once the message has downloaded, select the "play" button to expand the message.

Roaming auto-retrieve: If you are concerned about data traffic and just want the message headers to download while roaming, clear the Roaming auto-retrieve check box. Otherwise, you can select this check box to have your messages download even while roaming.

Size Limit: You can select size limit of MMS messaging and maximum size of MMS will be 300KB.

Notification settings

You can receive a notification each time you receive a new message.

 
Select 'Notifications' check box to receive a notification in the status bar when a new message arrives. If you want your Slide to ring when a new message arrives, select that check box as well. Select Ring tone to open the ring

tone menu and select a ring tone specific to new text and multimedia message notifications. Note that when you check a ring tone, it plays briefly.

General

Here you can set message font size, delete old messages, text and Multimedia message limits, enable Cell broadcast and Enable WAP PUSH.

9 Email

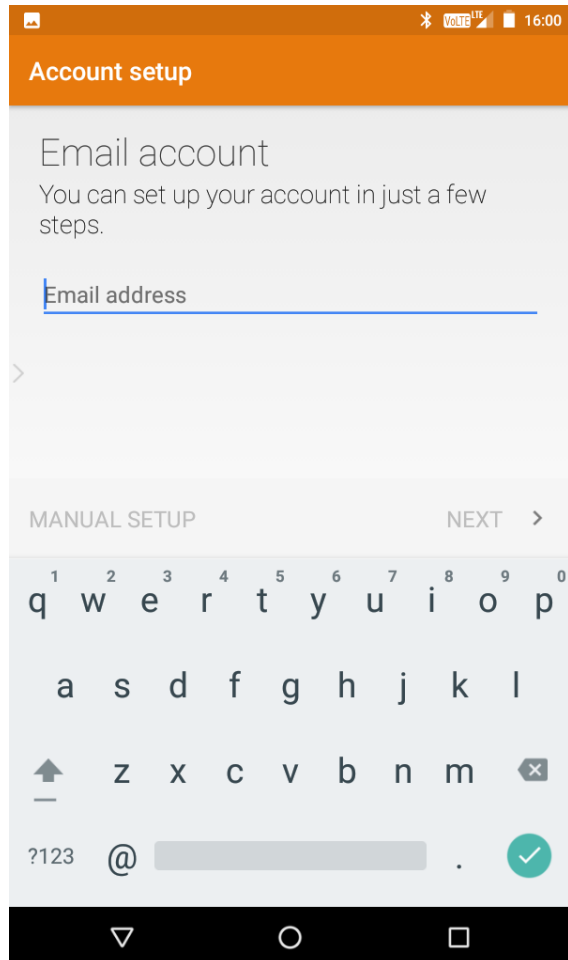

9.1 POP3 and IMAP email accounts

Add an email account

You can fetch messages from up to five POP3 or IMAP accounts. Follow these steps:

1. On the Home screen, then touch and select Email application.
2. The Set up new account screen appears.
3. Type your account email address and password.
4. If you want, select the Send email from this account by default check box. This setting only applies if you have more than one POP3 or IMAP account set up. (For this details please contact your IT support team)
5. Select 'Next'.

If you have a popular email account, the application will set everything up for you! Before you go to your Inbox, you can name the account (if you don't, your email address will be used). You are also asked to type your name as you want it to display on outgoing messages. You must complete this field before you can select 'Next' and go to your Inbox.

For less popular accounts, follow the prompts to type the email server, protocol, and other account information yourself. After your account settings have been verified, select 'Next' to go to your Inbox.

To add more accounts (up to five), from an Inbox or your Accounts screen, press MENU and select 'Add account'.

9.2 Use your POP3 & IMAP email account

Once you have set up an account, you can do the following:

1. Refresh Inbox: From the Inbox, press MENU and then select 'Refresh' to update your Inbox with any previously-un-fetched email.

2. Read email: You can display or collapse the messages in your Inbox by selecting Inbox. Unread messages display with a color band. (Each account you add will use a different color.)

3. Forward, Reply and Reply all: You can forward, reply, or reply all to an email message from the Inbox. From the Inbox, touch & hold the message to open its context menu. Select the action you want to take.

Compose new

From the Inbox:

1. Press MENU and select 'Compose'.
2. Add recipients by typing a name or address in the 'To' field. Matching contacts will appear. Select the recipient or continue typing the address. Add as many as you wish.
3. Type a subject and message.
4. Select 'Send', 'Save as draft', or 'Discard'. Pressing BACK will also save as draft unless you have not typed anything.

Delete message

From the Inbox:

1. Expand the Inbox to display the messages.
2. Touch & hold the message you want to delete.
3. Select 'Delete'.
4. Your message is moved to the Trash.

Empty Trash: Once you have moved a message to the Trash, to empty messages in the Trash you must delete each message individually. Press MENU and select 'Folders' to enter the Trash.

Note that the message is only deleted from your slide, not from the account server.

Remove an email account: You can always remove a POP3 or IMAP email account from your slide. Go to your Inbox, press MENU and select 'Accounts'. Your Accounts screen opens. Touch & hold the account you want to remove to open the context menu.

Select 'Remove account'. You will be asked to confirm before the account is removed.

Edit account settings

To open your Account settings screen, do the following:

1. From your account Inbox, press MENU and select 'Account settings'.
2. The Account settings screen appears. You can do the following from this screen:

Account name: Select to change the name of your account as it appears on your Accounts screen.

Your name: Select to change your name as it appears in outgoing email.

Email check frequency: Select this pop-up menu to set how frequently your email account is checked for new messages. Note that whenever you open a folder, email is refreshed, regardless of this setting.

Default account: If you have more than one POP3 or IMAP email account set up on your Slide and want to use this account by default when selecting Compose from the Accounts screen, select this check box.

Email notifications: If you want an icon to appear in the status bar when a new message arrives, select this check box.

Incoming server settings: Select Incoming settings if you need to edit the username/ password, server, port, or option to delete email from server.

Outgoing server settings: Select Outgoing settings if you need to edit the SMTP server, port, and security type, option to require sign-in or username/password.

9.3 Add another POP3 or IMAP

To add another account (you can add up to five), go to your Inbox, press MENU and select 'Accounts'. Your Account's screen opens.

 
Press MENU and select 'Add account' another account.

10 Internet

10.1 Ways to connect to the internet

Your device's networking capabilities allow you to access the Internet or your corporate network through Wi-Fi, GPRS, EDGE , 3G and 4G networks.

You can also add and set up a VPN or proxy connection. (If required)

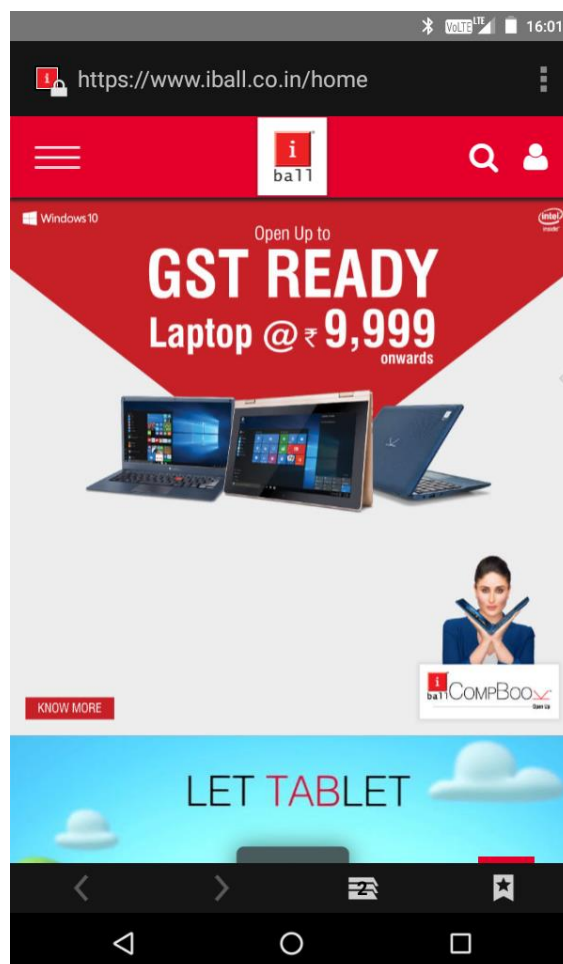

10.2 Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 100 meters (300feet). To use Wi-Fi on your device, you need access to a wireless access point or “hotspot”.

10.3 Browser

To open the Browser, touch and select Browser icon. The Browser always opens to the last Web page you were viewing. The first time you enter the Browser after powering on, your home page will display. You can change your home page by pressing MENU→ Settings→General→Set homepage.

Zoom and navigation in Web pages

While viewing a Web page, you can press MENU and select Settings→Advanced→Default zoom to set the zoom controls.

Swipe your fingertips in any direction to shift your page view.

The Browse screen

From the Browse screen you can do the following:

1. Go to a Web page: Make sure the focus is not on a text box and then start typing the URL.
2. Add a bookmark: Bookmark the Web page you are currently viewing:
 -  Press and to ‘Save to bookmarks’. Confirm the URL and name, and then select ‘OK’.

To view all your bookmarks, press and view bookmarks.

Open pages in separate tabs

You can keep more than one Web page open by using multiple windows to display the pages. You can open up to More tabs by tapping on the  sign on the tab bar & Press new Tab

A. Manage bookmarks

You can store as many bookmarks as you want on your slide.

Press MENU and select ‘Bookmarks’. The Bookmarks screen opens.

1. Bookmark any page: Select ‘Add’. Type a name and location (URL) in the dialog box. Select ‘OK’.
2. Send bookmarked page’s URL: Touch & hold the bookmark you want to open. The context menu opens. Select ‘Share link’. An email Compose screen opens with the URL as the message. Address your message and finish composing and select ‘Send’.
3. View bookmarked page: Touch the bookmark you want to open. Select View page or Open in new window.
4. Edit bookmark: Touch & hold the bookmark you want to open. The context menu opens. Select ‘Edit bookmark’. The edit bookmark dialog box opens. Type your change and select ‘OK’.
5. Delete a bookmark: Touch & hold the bookmark you want to open. The context menu opens. Select ‘Delete bookmark’. You will be asked to confirm.
6. Bookmark current page: Go to a Web page you want to bookmark. Press MENU and select ‘Bookmarks’. The Bookmarks screen opens. Press MENU and select Bookmark Folder. The Bookmark link dialog box opens. Confirm or Add Bookmark the information, then select ‘OK’.

B. Set your home page

You set your home page from the Settings screen:

1. Press MENU and select More→Settings. The Settings screen opens.
2. In the Page content section, select 'Set home page' to open the dialog box.
3. Type the URL of the page you want to set as home, and then select 'OK'.

C. Download Web files and applications

Before you download any files or applications using the Browser, note the following:

1. Before you can download Web applications, you must explicitly “allow” downloading from the Home > Settings screen:

On the Home screen, press and select Settings. Select 'Security', then select 'Unknown sources' check box.

2. All items downloaded from the Web are stored on your memory card, so be sure that you have a card installed in your slide before you download from the Browser.
3. The Browser will only allow you to download items that are supported by an application installed on the slide.

 
Warning! Applications downloaded from the Web can be from unknown sources. To protect your slide and personal data, only download applications from sources you trust, such as Android Market.

11 Media

11.1 Music

To open your music Library, on the Home screen, click and select the Music icon. Your music is organized into four categories: Artists, Albums, Songs, Playlists and Folders.

Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play

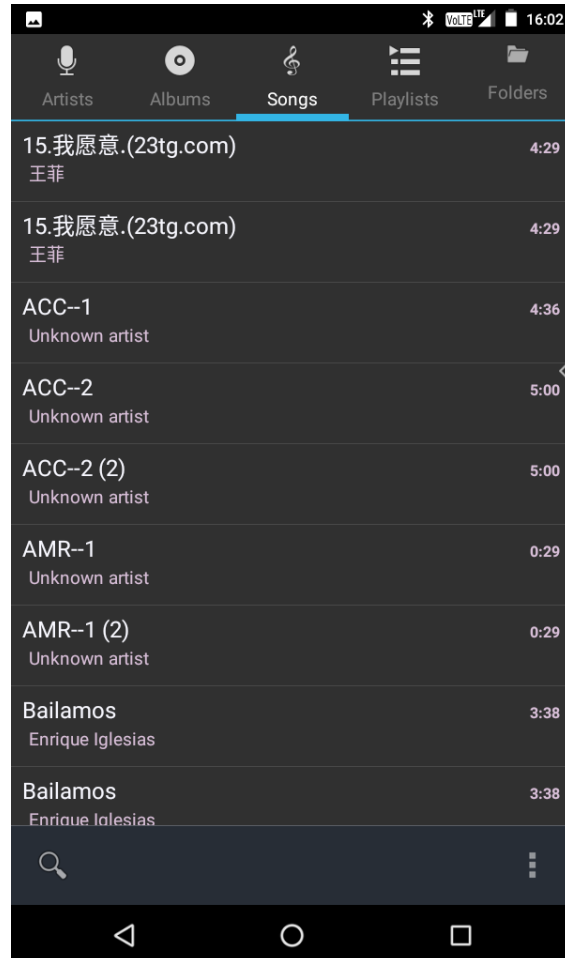

For example, if you select the Artists category, you will see a list of artists in A-Z order. If you select an artist, the list opens to display that artist's albums. Select an album, and the album's song list displays.

Load music into your Memory card

All the music you can listen to on your slide is stored on memory card. Read the instructions below to add music to your memory card.

1. Mount your memory card to your computer by doing one of the following:

Remove the memory card and insert it into a card reader attached to your computer; or, attach your Mobile to your computer using a USB cable that came in the box. If you use this method, make sure the Home→Settings→Storage→SD card is selected.

2. On your computer, find the mounted USB drive and open it.

3. Although your Mobile will find all music files on your memory card, it's advisable to keep the number of files or folders at the root level to a minimum. So, if you wish, create a folder at the top-level called "music" (or whatever you want) to store your files.

4. Open this folder and copy music files into it. If you want, create folders within "music" to organize your music further. If you want to use certain music files as phone, notification, or alarm ring tones.

Note: If you do not want a ringtone to appear in your music Library but if you want it to set as a ringtone, then create the “ringtones”, “notifications”, or “alarms” folder outside your “music” folder.

5. When finished copying, close the USB drive window and unmounts or eject the drive as required by your computer's operating system. Remove the USB cable from your Mobile and computer.

Play back music

At any level in your Library, touch & hold a listing (a song, artist, album, or playlist) to open the context menu. Select Play to begin play and go to the Playback screen. You can do the following using the Playback screen:

1. Shuffle songs: Shuffle plays songs in random order. Touch to toggle shuffle on and off. When the icon is grey, shuffle is off.
2. Repeat mode: Touch to step through repeat modes: repeat all songs, repeat current song, don't repeat (Grey icon).
3. Go to any point in song: Swipe fingertip in progress bar to desired point in a song.
4. Playback control: from left to right icons: Go to beginning song, Pause/ resume play and Go to next of song.

If a song is playing while you are on the Library screen, you can switch to the Playback screen quickly by selecting the lower song bar.

Playlists

You can create as many playlists as you wish. Note that the “Recently added” playlist is a system playlist and cannot be deleted or renamed. Also, if you make any voice recordings as part of a MMS message, they will be stored automatically in a playlist called “My recordings”.

Create a playlist on your Slide

1. From the Library, select a category. From the list that appears, navigate to the artist, album, or song that you want on a playlist.
2. Touch & hold the artist, album, or song to open the context menu.
3. Select Add to playlist.
4. In the Add to playlist menu that opens, select New to create a new playlist, or one of the existing playlists.
5. The song(s) are added.

Manage your playlists

Go to the Library screen and select ‘Playlists’. All your playlists appear.

Touch & hold the playlist to open the context menu. You can do the following from this screen: Play, Add to playlist, Delete and Search.

Create ringtones from songs

You can set any of your songs as a Slide ringtone:

1. From the Library, navigate to a song you want to use as a Mobile ringtone.
2. Touch & hold the song in the list to open the context menu.
3. Select Use as Phone ringtone. The ringtone is set as your default incoming call ringtone.

Delete music from memory card

All the music you play on your slide is stored on the inserted memory card. From your slide, you can delete music stored on the card:

 
1. From the Library screen, select the Artists, Albums, or Songs category.
2. Go to the screen that shows the artist, album, or song that you want to delete.
3. Touch & hold the item to open the context menu.
4. Select 'Delete'. You will be asked to confirm that you want to delete the item from your memory card.

11.2 Videos

Choose application in main Gallery. From the list choose the video you want to play. Tap on the video to select and then play it. You can play/pause the video by single tapping on the screen. By tapping on the option key you will get four options Stop ,Loop,Trim & Subtitle using which you can either stop the video or can make it play in loop over and over again. You can also share the video by different means such as messaging, Bluetooth, Email etc. The display screen frame can also be changed.

11.3 Camera

All the pictures you can capture or view on your slide are stored on memory card, which must be installed in your slide. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed

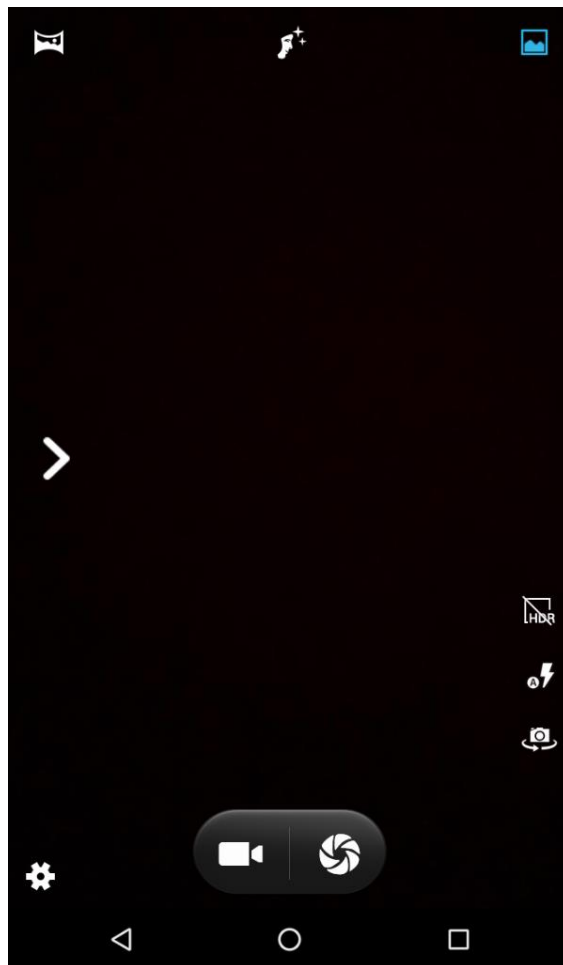

Load pictures onto your memory card

Read the instructions below to add pictures to your Memory card or the device storage.

Take a picture

The following shooting modes are available on your camera:

Panorama:Take panoramic photos made up of a maximum of eight consecutive photos.

Normal mode:The camera determines the ideal mode for the photo.

Captured pictures are saved to the "DCIM" folder on your memory card or the Slide.

1. To open the Camera, on the Home screen, click and select Camera icon.
2. The Camera opens in capture mode. Frame your picture within the screen and hold the Slide steady. Click Camera button to capture. Continue to hold the camera steady for a second after you hear the shutter sound.
3. Immediately after capture, you can select to Share, the applications through which you want to share is given on right top corner of the screen. You get many options to use the image. To find the options, tap on option soft key beside home key. The options are "Delete", "Slide Show, Edit", "Rotate left", "Rotate right", "Crop", "Set picture as", "Details", "Print."
4. If you select to save, set as, or share, your picture is saved to Gallery application. Please check.

View your pictures

To view the pictures you have captured, as well as any you have stored on your memory card or the Slide storage, go to Gallery application:

1. To open Pictures, on the Home screen, click and select Gallery icon.
2. Depending on how many pictures you have stored, they may take a few minutes to load.
3. If you have stored your pictures in folders on your Memory card, then the folders will display as separate "albums". The top left album always contains all the pictures in all the albums.
4. When image open full screen, click on icon to edit image like, colour change, add frame on image, crop image, mirror effect, adjust brightness & more.

Following are the functions available in camera

- HDR mode
- Flash light
- Volume keys
- GPS location info
- Exposure
- Color effect
- Scene mode
- White balance
- Image properties
- Anti-flicker
- Date & time stamp
- Shutter sound
- Zero shutter delay
- Face detection
- Auto scene detection
- Self timer
- Continuous shot
- Picture size
- Preview size
- ISO
- Face beauty

Video functions

- EIS
- Microphone
- Audio mode
- Time lapse interval
- Video quality

Picture options

You can do the following while in Pictures.

Note: In all the instructions below, you can touch & hold a picture to open the context menu to access all actions, rather than open the picture in full-screen view.

1. View full-screen: Select a picture to open it in full-screen view.
2. Share a picture: In full-screen view, select to  share your picture via Messaging (MMS), or another application (if you have another application installed on your slide that supports sharing).
3. Set as wallpaper: In full-screen view, press MENU and select set as. From the menu that opens select Wallpaper. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture. When you're happy with the cropped area, select 'Save'.
4. Set as contact picture: In full-screen view, press MENU and select set as. From the menu that opens, select Contact icon. Your contact list opens. Select the contact you want to associate with the picture. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.

When you're happy with the cropped area, select 'Save'. The picture will now appear in the Contact details screen, as well as on any incoming call notifications.

 
5. Crop picture: In full-screen view, press MENU and select Crop. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture. When you are happy with the cropped area, select apply crop and then 'Save'. If you want to cancel the cropping press back key. The cropped picture is saved to Pictures as a copy. Your original is not touched.
6. Rotate picture: In full-screen view, press MENU and Select from Rotate left (counter-clockwise) or Rotate right (clockwise). Your picture rotates and is saved automatically.
7. Delete picture: In full-screen view, press MENU and select Delete.

The picture will be removed from the Memory card after you confirm.

8. View picture details: In full-screen view, press MENU and select More > Details. The picture details window opens. You can see the title, resolution, file size, and date of the picture.

11.4 FM Radio

This device supports FM Radio. You can search and auto save channels. Also, FM recording function is present. You can record your favorite songs to listen later. The saved songs will be present in the folder FM Recording.

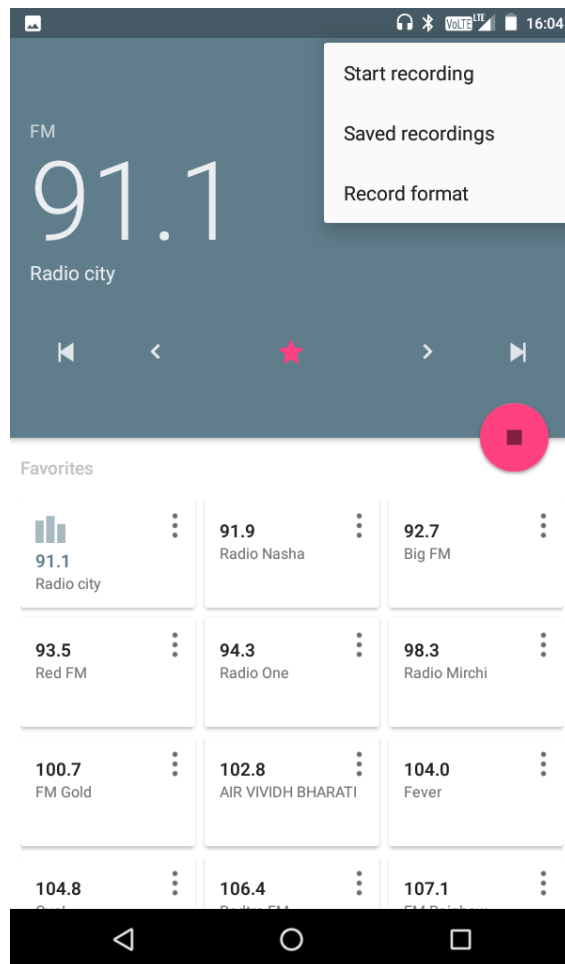


Note: Within doors or shielded environment, the receiving effect of radio may be affected. You can improve the effect in the following ways: Near window, adjust the position of earphone cable or adopt manual adjustment.

11.5 Gallery

Gallery option shows all pictures & videos stored in Internal & external storage. We can preview & access pictures & videos directly from here. On selecting any particular image you will find many options like delete, slide-show, edit, rotate left, rotate right, crop, set picture as, details and Print. You can also share the picture using various means such as Bluetooth, messaging and third party messaging applications such as WhatsApp, Hangouts etc. For videos you have options like delete, Share and details, which will provide you the details of the video like the resolution of the video frame, its size etc. You can also share the video using the same means as of images.

 11.6 Sound recorder

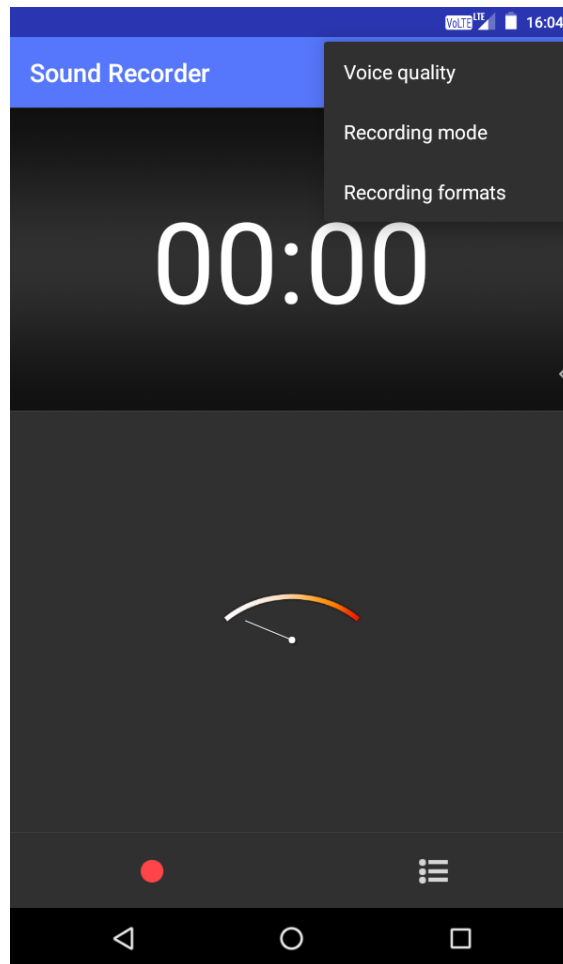

The slide can be used as a sound recorder. You can record audio files to be listened later.

12 Connectivity Features

12.1 SIM Toolkit

SIM Application Toolkit (commonly referred to as STK) is a standard of the GSM system which enables the SIM to initiate actions which can be used for various value added services. The SIM Application Toolkit consists of a set of commands programmed into the SIM which define how the SIM should interact directly with the outside world and initiates commands independently of the device and the network. This enables the SIM to build up an interactive exchange between a network application and the end user and access, or control access to, the network.

12.2 iBall Care

iBall Care is Over-the-air programming (OTA) which refers to various methods of distributing new software updates, configuration settings, and even updating encryption keys to devices like cellphones and slide. One important feature of OTA is that one central location can send an Update to all the Users; who are unable to refuse, delete, or alter that Update, and it applies immediately to everyone on the Channel. As mobile phones/ Slide accumulate new applications and become more advanced, OTA configuration has become increasingly important as new updates and services come on stream. The OTA mechanism requires the existing software and hardware of the target device to support the feature, namely the receipt and installation of new software received via the wireless network from the provider.

13 Others

13.1 Calendar

Calendar views

You can view multiple calendar events on your device, so each calendar event is coded with a color.

You can view your calendar in a variety of ways. Touch the date on the left-top of the screen to select from Day, Week, Month or Agenda.

1. Day view

Days are divided into hour time slots. Events are shown tiled and span the time they last. All-day events are displayed at the top of the day list.

View event details - Highlight an event to open a small pop-up window in the lower part of the screen that provides more event information. This window will stay open for three seconds. (Note that highlighted events are outlined in orange.) To view the full event details, touch the pop-up window while the pop-up window is open, or select the event itself. You can also touch & hold the event to open the context menu, then select View event.

- Edit an event - Assuming you have write privileges on an event, touch and hold the event to open the context menu, then select Edit event.
- Navigate within the current day - Swipe your fingertip up/down.
- Navigate to a past or future day - Swipe your fingertip left/right.

Create new event - Touch an empty time slot to open the new Event details screen.

2. Week view

Days are shown vertically within the Week view. Time slots are defined horizontally in rows. Events are shown as blocks.

View event details - Highlight an event to open a small popup window in the lower part of the screen that provides more event information. This window will stay open for three seconds. (Note that highlighted events are outlined in orange.) To view the full event details, touch the pop-up window while it's open, or select the event itself. You can also touch & hold the event to open the context menu, then select 'View event'.

Edit an event - Assuming you have write privileges on an event, touch and hold the event to open the context menu, then select 'Edit event'.

Navigate within the current week -Swipe your fingertip up/down.

Navigate to a past or future week - Swipe your fingertip left/right.

3. Month view

Days are shown in a month grid. Busy time slots are shown as vertical bars in the corresponding part of the day. An all-day event is shown as a small vertical bar at the top of the slot (it does not fill the entire slot).

View event details - Select a day to view all the events in that day. This will take you to either the Agenda or Day view, depending on which you last visited. Select the event to view its details.

Edit an event - First select a day to go to either the Day or Agenda view. From there, select the event to view its details. Assuming you have write privileges on an event, touch and hold the event and select 'Edit event' to open the event for editing. Navigate months

- Swipe your fingertip up/down, through the days and past the beginning/end of the month to move to the previous/next month.

Create new event- Touch & hold a day to open the context menu. Select 'New event'. You can also press MENU and select 'New event'.

Events

Events in the current month are shown vertically in a list, one event after the other. Days with no events are not displayed.

Repeating events - Marked with icon following the time or date.

View event details - Select the event to view its details.

Edit an event - First, select the event to view its details. Assuming you have write privileges on an event, touch and hold the event and select 'Edit event' to open the event for editing.

Navigate within the current month - Swipe your fingertip up/down.

Create an event

From any of the views, press MENU and select 'New event' to open the new Event details screen.

- Type the information in the fields.
- Select date & time.
- Name that appears in Day view.
- Select a calendar if you display more than one.

When finished, select 'Done'. Pressing BACK also saves the event.

Tip: Create an event quickly in the Day or Week view by selecting an empty time slot. A new Event details screen appears. The 'From' field contains the selected time slot.

Edit an event

To edit an event, you must have the View event screen open and you must have created, or have write privileges, for the event.

1. Navigate to the View event screen.
2. Touch and hold the event and select 'Edit event'. If Edit event is not an option, then you cannot make any changes to that particular event.

Note: If your event repeats, you will be asked to choose which events you want changed (only the current one you're editing, all events in the series, or the current event plus future events).

3. Once you have finished your edits, select 'Done'.
4. To delete the event, from the View event screen, press MENU and select 'Clear event'.

Calendar settings

From any of the calendar views, press MENU and select Settings.

1. Calendar view setting

 
Show declined events: Select this check box if you want all the events you decline to be Shown from all calendar views.

2. Reminders

Set Color: Select to set the type of event reminder you want:

13.2 Alarm Clock

To open Alarm Clock, on the Home screen touch and select Clock icon. The Alarm clock offers as many alarms as you want.

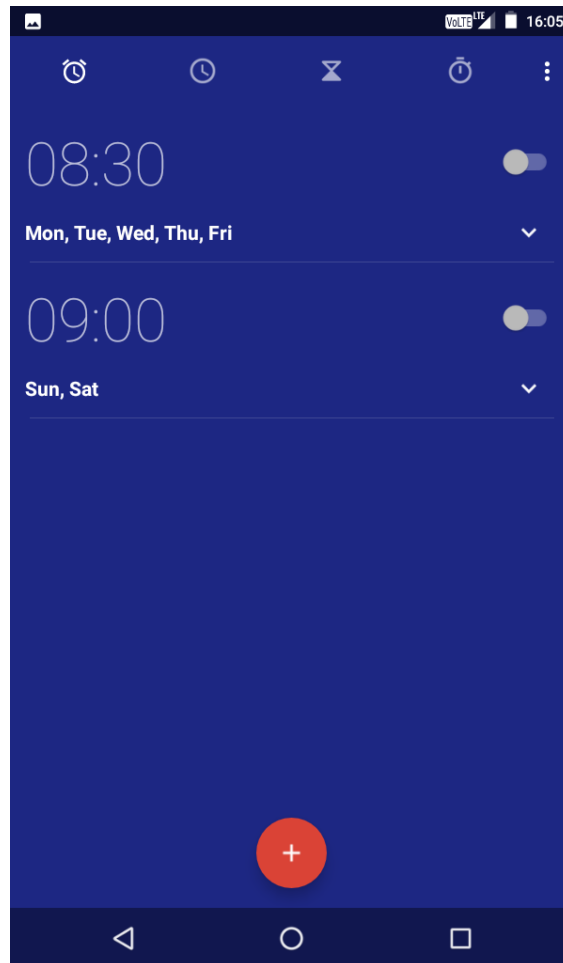

Set an alarm

Two alarms are set up for you, ready to customize. All three alarms are turned off by default. Select the check box to turn on the alarm. To begin, select one of the default alarms to open Alarm settings.

Set the following options:

Alarm: Select the check box to turn alarm ON (checked) or OFF (cleared). This is the same check box that appears on the main Alarm Clock screen.

Time: The time the alarm will go off is shown. To change this time, select Time to open the time selector. Swipe the finger to set the time you want, and then select Set.

Repeat: The current repeat selection is shown. To change the setting, select Repeat and make a selection from the menu. To have your alarm will only go off once at the set time, don't select any of the options. A one-time alarm is shown on the Alarm Clock screen without any days under the set time.

Ring tone: The current ring tone selection is shown. Select Ring tone to pick another ring tone that will play when the alarm rings.

 
(When you select a ring tone, it plays briefly.) Note that when your alarm goes off, the ring tone will play a maximum of five minutes.

Once your alarm goes off, you will receive an alert with the options to Snooze (for 10 minutes) or Dismiss.

Add more alarms

To add more than two alarms, from the main Alarm Clock screen, press + symbol.

13.3 Calculator

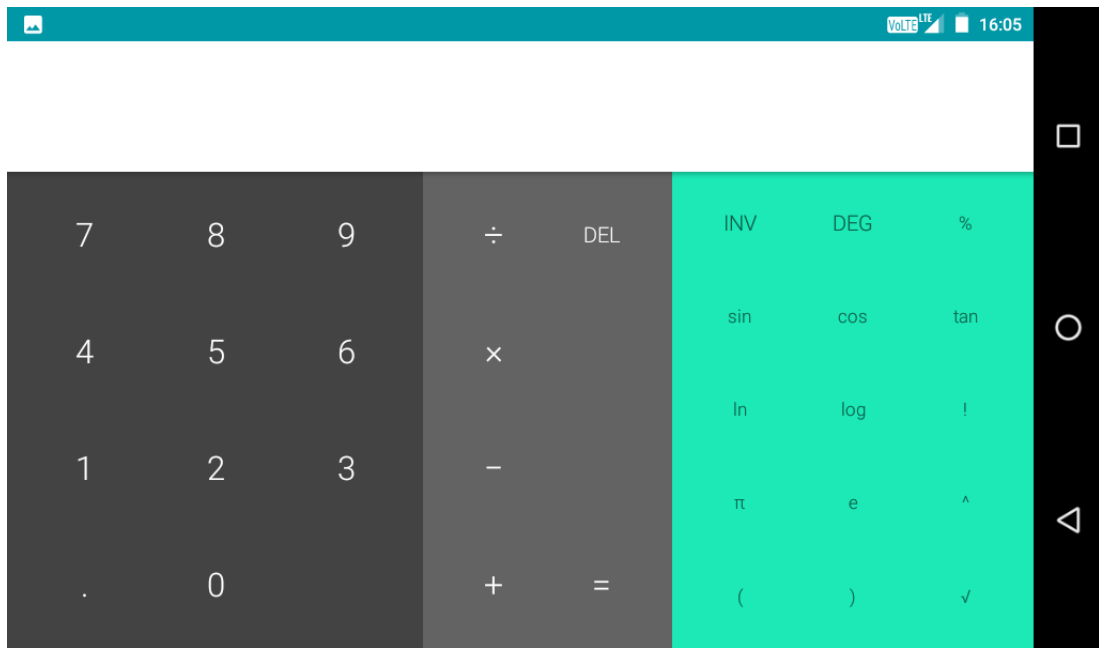

To open Calculator on the Home screen click and select the Calculator icon.

 
Use the calculator to perform basic calculations by entering numbers and perform basic addition, subtraction, multiplication, and division. Also, the advanced operators or delimiters, such as sine, cosine, tangent, square root, parentheses, etc. can also be used.

To delete numbers, one at a time, click DEL on the screen.

13.4 File Manager

File Manager is an application which provides you easy access to all your media files, images, documents present in your slide and in your SD card.

It shows you the total storage capacity and the available memory of the device. You can create, view, share, and delete, copy, paste files on your slide using this application.

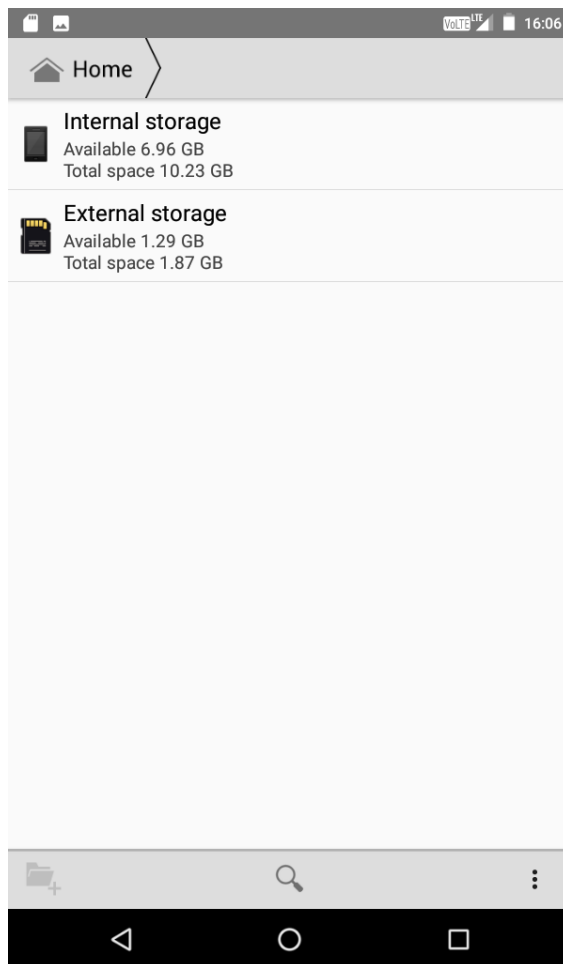

14. Y-Cable Connectivity Usage Guide

India's First ever to bundle Tablet with a smart cable which has two USB ports that enables you connect USB based charger and USB-enabled device simultaneously.

The Y-Cable can be used for Charging through Micro USB port and connect to USB-enabled devices through USB port. However, the Y-Cable cannot be used to connect two USB devices simultaneously.

Ways of using Y-Cable:

Scenario 1 : Charging iBall Slide through Y-Cable

Step 1: Connect the Charger cable to Micro USB port of Y-Cable

Step 2: Associate Y-cable to iBall Slide.

With these two above steps of connection, charging indication on iBall Slide would be reflected.



Scenario 2: Connecting USB-enabled device to iBall Slide through Y-Cable.

Step 1: Connect Y-Cable to iBall Slide.

Step 2: Link the USB-enabled devices such as Pen drives, Mouse, & many more to the USB port of Y-cable.

With these two above steps of connection, USB device should be detected by iBall Slide.

Alternatively, you can use Host USB Cable bundled in the box.



Scenario3: Charging the iBall Slide and using USB-enabled device simultaneously.

Step 1: Please refer to steps in order from Scenario 1.

Step 2: Followed by steps from Scenario 2.

If not followed in order, Y-Cable may not function or it could malfunction.

15. Google Applications

14.1 Gmail



Gmail is a free advertising supported email service provided by Google. Users may access Gmail as secure web mail as well as via POP3 or IMAP4 protocols. Gmail has a search oriented interface. Gmail runs on Google GFE/2.0 on Linux.

14.2 Play store



Use this application to purchase and download applications and games that are able to run your handset.

Tap on Play Store application

Installing Applications:

Browse the play store & search the require contents with keywords. Select an application tap the price & follow on screen instructions to complete the purchase process.

When a new version is available for any installed application, an update icon appears at the top of the screen to alert you to the update. Open the notification panel and tap the icon update the application.

14.3 Play Movies & TV



According to Google, there are thousands of Movies & Television shows available on Google Play Movies & TV, some in HD, including comedy, drama, animation, action and documentary. Movies can be rented or purchased and watched on the Google Play website or via an application on an Android device. Some titles are only available for rental, some only for purchase, and others for both rental and purchase. TV shows can be purchased by episode or season but cannot be rented. Alternatively, users can download movies and TV shows for offline viewing and view them later using the Google Play Movie app.

14.4 Play Music



Google introduced Play Music with a music store. The three major label partnerships announced were with Universal Music Group, EMI and Sony Music Entertainment along with other small labels. According to Google, there are hundreds of free songs in Google Play and millions available for purchase. Users can also upload up to 20,000 of their songs to the service for free. The service allows

the user to automatically create a playlist of "songs that go well together" using a feature known as Instant Mix. Music and playlists imported to Google Play music can not alter playlists in other music program libraries, while changes in other applications are reflected in the Google Play music library.

14.5 Maps



Google Maps is a built-in app which helps you find a location, the distance to that location from your current location, and the directions to that location.

Enter a keyword for the location and select to search for a location.

16. Troubleshooting

1. When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:

- Password: When the device lock feature is enabled, you must enter the password you set for the device.
- PIN: When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the Lock SIM card menu.
- PUK: Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
- PIN2: When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

2. Your device displays network or service error messages

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details. The touch screen responds slowly or improperly

3.If your device has a touch screen and the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognizing your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local iBall Service Center.

4. Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality

You can also perform a factory data reset. On the Applications screen, tap Settings → Backup and reset → Factory data reset → Reset Slide.

5. Calls are being dropped

When you are in areas with weak signals or poor reception, you may lose your connection to the network. Move to another area and try again.

6. Outgoing calls are not connected

- Ensure that you have pressed the Dial key.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number you are dialing.

7. Incoming calls are not connected

- Ensure that your device is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the incoming phone number.

8. Others cannot hear you speaking on a call

- Ensure that you are not covering the microphone of your headphone.
- Ensure that the microphone is close to your mouth.
- If using a Tablet, ensure that it is properly connected.
- If the Mic is not working, take it to your local iBall Service Center.

9. Audio quality is poor while on a call

- Ensure that you are not blocking the device's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

10. When dialing from contacts, the call is not connected

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.
- Ensure that you have not set call barring for the contact's phone number.

11. Your device is hot to the touch

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.

12. Error messages appear when launching the camera

Your device must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery or replace it with a battery that is fully charged.
- Free some memory by transferring files to a computer or deleting files from your device.

- Restart the device. If you are still having trouble with the camera application after trying these tips, contact your nearest iBall Service Center.

13. Error messages appear when opening music files

Some music files may not play on your device for a variety of reasons. If you receive error messages when opening music files on your device, try the following:

- Free some memory by transferring files to a computer or deleting files from your device.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM-protected, ensure that you have the appropriate license or key to play the file.
- Ensure that your device supports the file type.

14. Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your device.
- Ensure that the Bluetooth wireless feature is activated on the device you wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).

If the tips above do not solve the problem, contact your nearest iBall Service Center.

15. A connection is not established when you connect the device to computer

- Ensure that the USB cable you are using is compatible with your device.

If you want to connect your device for the purpose of mass storage you do not require any drivers.

- You need drivers for debugging and it will work with Windows Vista and Windows 7 Professional version.

16. My internet connection on SIM is not working properly.

There can be various reasons for why the internet connection over your SIM is not working properly. The speed depends a lot on the network conditions. If the network is not proper then the internet browsing speed will vary accordingly. Check your internet settings and make sure they are correctly configured.



ba11

Your eyeball view.
Our technology new.

www.iBall.co.in | Ver.: 1.0.0