

PEPWAVE

Broadband Possibilities

Pepwave Surf On-The-Go User Manual

CONTENTS

Getting Ready to Surf

- 5 What's in the Box
- 5 Get to Know Your Surf On-The-Go
- 7 Choose Your Connection Mode

Basic Setup

- 9 Cellular Mode Setup
- 12 Wi-Fi Mode Setup
- 15 Wired Mode Setup

Advanced Settings

- 19 Fail Over Settings
- 20 LAN and DHCP Settings
- 21 Radio Settings
- 22 AP Settings (Advanced)
- 23 Web Admin Settings
- 24 Roaming Settings (Wireless WAN Only)
- 25 Port Forwarding Settings
- 26 QoS Settings
- 27 Checking Your Surf's Status

Troubleshooting

- 29 Turning On Remote Assistance
- 30 Restoring Factory Settings
- 31 Upgrading Your Surf's Firmware

Appendix

33 Federal Communication Commission Interference Statement

**33 IMPORTANT NOTE:
FCC Radiation Exposure Statement**

34 Taiwan NCC Statement

34 Copyright

34 Disclaimer



GETTING READY TO SURF

What's in the Box

- » Pepwave Surf On-The-Go
- » 5dBi antenna
- » Power adapter
- » CAT5 Ethernet cable
- » Quick Start Guide
- » Window mounting accessories

Get to Know Your Surf On-The-Go



USB

Connect a 3G/4G USB modem to this port when using Cellular Mode.

Power Adapter


Connect the included power adapter to this DC port, then plug the other end of the adapter into a nearby power outlet.

Ethernet

When using Wi-Fi or Cellular Mode, connect one end of a standard Ethernet cable to this port and then connect the other end of the cable to your computer's Ethernet port. When using Wired Mode, connect one end of an Ethernet cable to this port and then connect the other end of the cable to your cable/DSL modem or other Internet source.

Antenna


Attach the included antenna to the gold screw connector on the back of your Surf by turning the antenna's connector in a clockwise direction.

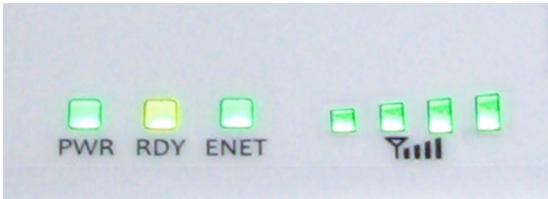

LED	Color	Status	Description
PWR	Green	On	Surf is powered on
		Off	Surf is powered off
RDY	Amber	On	Surf is ready to operate
	Red	On	Surf has not yet booted
		Off	Surf is powered off
ENET	Green	On	Ethernet is connected
		Off	Ethernet is not connected
	Green	On	In Cellular and Wi-Fi Mode, signal reception strength is indicated by the number of lit LEDs
		Sequential	Surf is in Wired Mode

Choose Your Connection Mode

Your Surf On-The-Go supports three connection modes to give you maximum connectivity on the road, at the office, or at home:

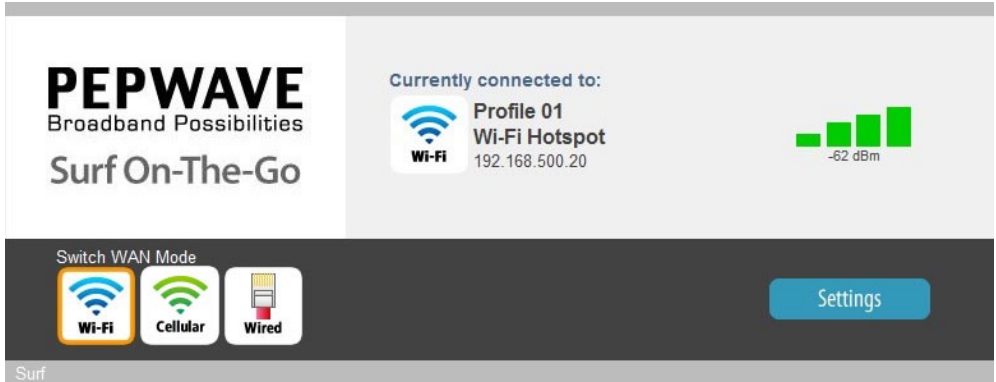

Cellular Mode

This mode allows you to connect your Surf to a 3G or 4G(WiMAX/LTE) USB modem and share the connection with all your devices wirelessly and/or using the Surf's Ethernet port. Cellular Mode is an ideal choice for travellers or those living/working in remote areas without broadband service. For information on configuring this mode, see [Cellular Mode Setup](#).

Wi-Fi Mode

Wi-Fi Mode makes it easy to share Wi-Fi service provided by hotels, restaurants, marinas, RV parks, and more. Once connected to Wi-Fi, your Surf can serve as a local access point for an unlimited number of devices. You can also connect printers, game consoles, and other wired devices to the Surf using its Ethernet port. For information on configuring this mode, see [Wi-Fi Mode Setup](#).


Wired Mode

A great choice for use at home, the office, or wherever you have access to a wired Internet connection, Wired Mode lets you connect the Surf to a DSL/cable modem or router. You can also connect the Surf to a multi-port switch for use with multiple wired and wireless devices. For information on configuring this mode, see [Wired Mode Setup](#).



BASIC SETUP

Cellular Mode Setup

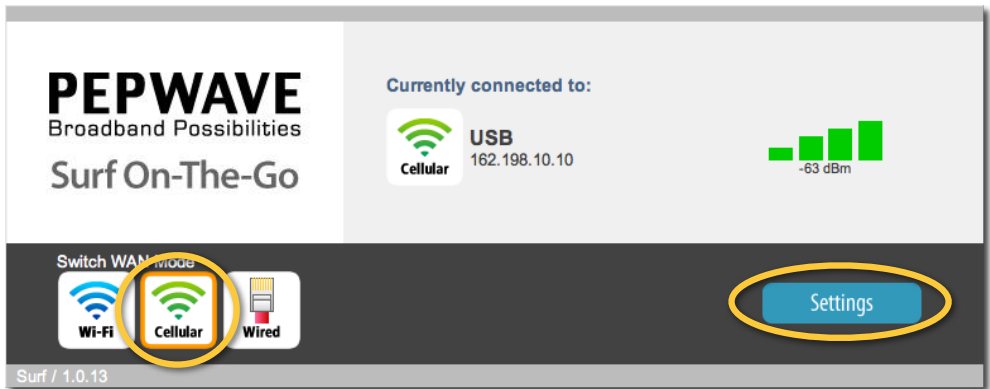

1. Connect one end of a USB cable to a 3G/4G modem and then connect the other end to your Surf's USB port.
2. Using your wireless-capable computer or other device, locate the Surf's default SSID and connect. By default, your Surf's SSID will be **PEPWAVE_####**, where **####** is the suffix of the device's MAC address. For more information on locating and connecting wirelessly to Internet access points with your device, see your device's operating manual.
3. Open a Web browser, such as Internet Explorer, Firefox, Safari, or Chrome. If the Surf's Dashboard is not displayed automatically, enter **http://192.168.20.1** in your browser's address bar to display it.
4. Click the **Cellular** button, and then select **Settings**.

Dashboard | Settings | Port Forward | QoS | Firmware | Status | Misc

PEPWAVE
Broadband Possibilities

Basic Settings
Cellular Settings
Profile Settings

Cellular Settings

Standby State	☐ Remain connected ☒ Disconnected
☒ Custom Operator Settings	
APN	
Login	
Password	
Dial Number	
☐ Auto Operator Settings	
SIM PIN (optional)	

Save

Surf / 1.0.13

5. In the **Cellular Settings** section, choose **Custom Operator Settings** or **Auto Operator Settings**.

» **Custom Operator Settings** – Choose this option if your cellular service provider requires that you use an assigned login/password, APN, and/or dial number.

» **Auto Operator Settings** – The best choice for most users, this option will apply settings that work with most cellular services. If needed, enter a SIM PIN in this section.

6. Scroll down to the **AP Settings** section and select **Configure Manually**.

7. In the **AP SSID** field, enter the network name used to identify the Surf's Wi-Fi network.

8. Select **WPA/WPA2-Personal** from the **Authentication** menu.

AP Settings[?]	☒ Configure Manually	
	AP SSID	PEPWAVE_1F05 (PEPWAVE_1F05)
	Authentication	Open (Open)
	Encryption Key	None
	☐ Configure Automatically	Repeater AP SSID: PLHQ_Marketing
	☐ Disable	
	Keep AP	☒ Enable ☐ Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	☒ Enable ☐ Disable
	Client Isolation	☐ Enable ☒ Disable
	Multicast Enhancement	☒ Enable ☐ Disable
	Multicast Rate	MCS0

9. In the **Encryption Key** field, enter a password of at least eight characters. This is the password that you and other authorized users will use to wirelessly connect to the Surf.

10. Click the **Save** button located at the bottom right of the screen to store your changes.

11. Your computer or other wireless device will disconnect from the Surf. Choose the Surf's SSID and enter your authentication password to reconnect.

12. If you've successfully connected to the Surf, the Surf's LEDs will be lit as follows:

PWR – Solid green

RDY – Amber


ENET – Solid green

Wi-Fi – Displays a varying number of lit signal bars, depending on the strength of the received 3G/4G signal

PEPWAVE

Broadband Possibilities

Wi-Fi Mode Setup

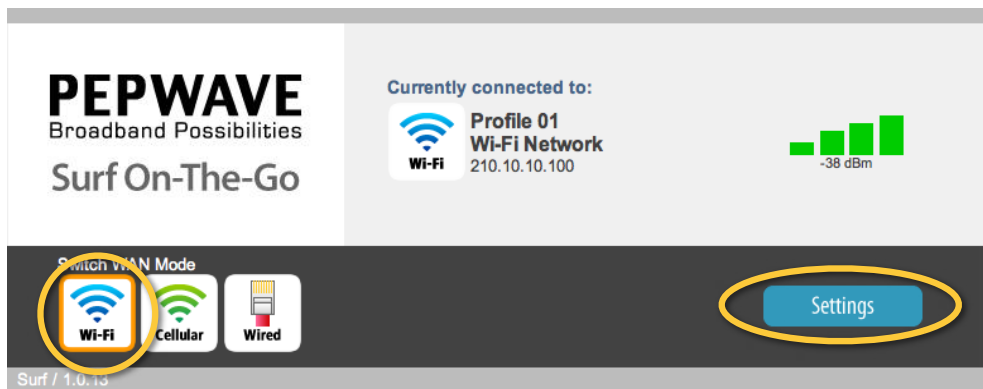

1. Using your wireless-capable computer or other device, locate the Surf's default SSID and connect. By default, your Surf's SSID will be **PEPWAVE_####**, where **####** is the suffix of the device's MAC address. For more information on locating and connecting wirelessly to Internet access points with your device, see your device's operating manual.
2. Open a Web browser, such as Internet Explorer, Firefox, Safari, or Chrome. If the Surf's Dashboard is not displayed automatically, enter **http://192.168.20.1** in your browser's address bar to display it.
3. Click the **Wi-Fi** button, and then select **Settings**.

WiFi WAN Settings[?]	Connect to Any Open Mode AP	☐ Enable ☒ Disable
	Profile Select	Profile 01 +
	Wireless Network Name (SSID)	Wi-Fi Network (MySSID) Refresh
	Authentication	WPA/WPA2-Personal (Open)
	Encryption Key	***** (emptykey) (at least 8 characters)
	Custom MAC	☐ Enable ☒ Disable
	Custom MAC Address	: : : : : 0
	Loop Protection	☐ Enable ☒ Disable

4. In the **Wireless Settings** section, change **Wireless Network Name (SSID)** from the default value, **MySSID**, to the SSID specified by your wireless Internet service provider. You can also leave this field blank and choose an SSID from the resulting list, which also includes corresponding encryption types and signal strengths.
5. Choose the authentication type required by your wireless Internet service provider from the **Authentication** dropdown menu. If applicable, enter the password provided by your ISP in the **Encryption Key** field.
6. Scroll to the **AP Settings** section and select **Configure Manually**.
7. In the **AP SSID** field, enter the network name used to identify the Surf's Wi-Fi network.
8. Select **WPA/WPA2-Personal** from the **Authentication** dropdown menu.

PEPWAVE

Broadband Possibilities

AP Settings[?]	☒ Configure Manually	
	AP SSID	PEPWAVE_1F05 (PEPWAVE_1F05)
	Authentication	Open (Open)
	Encryption Key	None
	☐ Configure Automatically	Repeater AP SSID: PLHQ_Marketing
	☐ Disable	
	Keep AP	☒ Enable ☐ Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	☒ Enable ☐ Disable
	Client Isolation	☐ Enable ☒ Disable
	Multicast Enhancement	☒ Enable ☐ Disable
	Multicast Rate	MCS0

9. In the **Encryption Key** field, enter a password of at least eight characters. This is the password that you and other authorized users will use to wirelessly connect to the Surf.

10. Click the **Save** button to store your changes.

11. Your computer or other wireless device will disconnect from the Surf. Choose the Surf's SSID and enter your authentication password to reconnect.

12. If you've successfully connected to the Surf, the Surf's LEDs will be lit as follows:

PWR – Solid green


RDY – Amber

ENET – Solid green

Wi-Fi – Displays a varying number of lit signal bars, depending on the strength of the received Wi-Fi signal

Wired Mode Setup

1. Connect one end of the included Ethernet cable to the back of the Surf

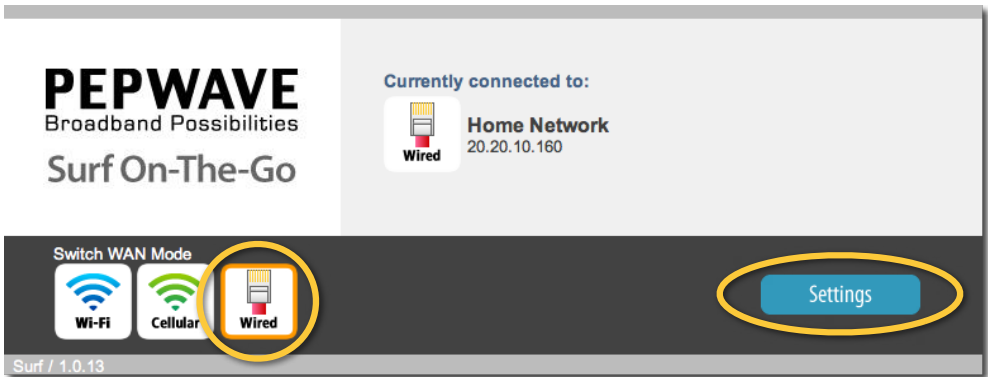

and then connect the other end to a DSL or cable modem.

2. Using your wireless-capable computer or other device, locate the Surf's default SSID and connect. By default, your Surf's SSID will be **PEPWAVE_####**, where **####** is the suffix of the device's MAC address. For more information on locating and connecting wirelessly to Internet access points with your device, see your device's operating manual.
3. Open a Web browser, such as Internet Explorer, Firefox, Safari, or Chrome. If the Surf's Dashboard is not displayed automatically, enter **http://192.168.20.1** in your browser's address bar to display it.
4. Click the **Wired** button, and then select Settings.

PEP WAVE

Broadband Possibilities

WAN IP Settings[?]

- ☐ Configure Manually
- ☒ Obtain an IP Address using DHCP
- ☐ Obtain an IP Address using PPPOE

5. In the **WAN IP Settings** section, select the method the Surf will use to obtain an IP address.

- » **Configure Manually** – Choose this option if you will use a static IP address.
- » **Obtain an IP Address using DHCP** – Choose this option to obtain an IP address automatically. This option is best for most users.
- » **Obtain an IP Address using PPPOE** – Choose this option to connect to an Internet service using PPPOE.

6. Scroll down to the **AP Settings** section and select **Configure Manually**.

7. In the **AP SSID** field, enter the network name you'd like the Surf to display when broadcasting its SSID.

AP Settings[?]	☒ Configure Manually	
	AP SSID	PEPWAVE_1F05 (PEPWAVE_1F05)
	Authentication	Open (Open)
	Encryption Key	None
	☐ Configure Automatically	Repeater AP SSID: PLHQ_Marketing
	☐ Disable	
	Keep AP	☒ Enable ☐ Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	☒ Enable ☐ Disable
	Client Isolation	☐ Enable ☒ Disable
	Multicast Enhancement	☒ Enable ☐ Disable
	Multicast Rate	MCS0

8. Select **WPA/WPA2-Personal** from the **Authentication** dropdown menu.
9. In the **Encryption Key** field, enter a password of at least eight characters. This is the password that you and other authorized users will use to wirelessly connect to the Surf.
10. Click the **Save** button to store your changes.
11. Your computer or other wireless device will disconnect from the Surf. Choose the Surf's SSID and enter your authentication password to reconnect.
12. If you've successfully connected to the Surf, the Surf's LEDs will be lit as follows:
 - PWR** – Solid green
 - RDY** – Amber
 - ENET** – Solid green
 - Wi-Fi** – The four signal bars will light sequentially

3

ADVANCED SETTINGS

Fail Over Settings

Fail Over Settings[?]	Backup Link (Cellular)	
	Fail Over	☐ Enable ☒ Disable
	Timeout	1 second(s)
	Health Check Interval	5 second(s)
	Health Check Retries	5
	Recovery Retries	1

Fail Over Enable to allow the Surf to use a cellular link as a backup in case the primary link fails.

Timeout Specify the period of time before a health check attempt is considered a failure. Following this interval, the Surf will attempt to switch to the fail over connection.

Health Check Interval Specify how often to check for a healthy primary connection.

Health Check Retries Specify the number of consecutive health check failures before considering the primary link to be down.

Recovery Retries Specify the number of consecutive health check successes before bringing the primary link back up from a failed state.

LAN and DHCP Settings

LAN Interface[?]	IP Address	192.168.20.1
	Subnet Mask	255.255.255.0
DHCP Server[?]	☒ Enable	
	Start IP Address	192.168.20.10
	Stop IP Address	192.168.20.250
	Subnet Mask	255.255.255.0
	DHCP Reservations	Config
	☐ Disable	

LAN Interface

IP address The Surf's assigned IP address. Default is **192.168.20.1**.

Subnet mask Used to specify the number of computers that can connect to your Surf. Default is **255.255.255.0**.

DHCP Server

Enable Choose this button to enable the Surf's internal DHCP server. The best setting for most users.

Start IP address Specifies the first IP address that can be assigned to connected devices. Default is **192.168.20.10**.

Stop IP address Specifies the last IP address that can be assigned to connected devices. Default is **192.168.20.250**.

Subnet mask Specifies the number of computers that can connect to your Surf and should match the **Subnet Mask** value in the **LAN Interface** section. Default is **255.255.255.0**.

DHCP reservations Click the **Config** link to display a window where you can persistently assign an IP address to a specific MAC address using DHCP.

Disable Choose this button to disable the Surf's internal DHCP server. Note that disabling DHCP does not put the Surf into transparent (bridge) mode.

Radio Settings

Radio Settings[?]	Radio Mode	802.11ng
	Channel Width	Auto (20/40 MHz)
	Country	United States
	AP Channel	1
	Bit Rate	Auto (Auto)

Radio Mode Choose from 802.11na, ng, b/g, or a only, depending on the Wi-Fi specification supported by your computer or other device. Default is **802.11 na**.

ng – 2.4GHz 11n (most common)

an – 5GHz 11n (less common)

b/g – 2.4GHz (not recommended – *ng* is backwards-compatible)

a – 5GHz (not recommended – *an* is backwards-compatible)

Channel Width Choose from **Auto (20/40 MHz)** or **20 MHz**. Default is **Auto (20/40 MHz)**, which allows both widths to be used simultaneously.

Country Choose your country from the drop-down menu to match frequencies and output power to allowable standards.

AP Channel Choose from channels 1 through 11 if you experience interference with the currently selected access point radio channel.

Bit Rate Choose a specific bit rate for data transfer over the Surf's Wi-Fi network. Default is **Auto**, which automatically chooses the highest available rate.

AP Settings (Advanced)

AP Settings[?]	☒ Configure Manually	
	AP SSID	PEPWAVE_1F05 (PEPWAVE_1F05)
	Authentication	Open (Open)
	Encryption Key	None
	☐ Configure Automatically	Repeater AP SSID: PLHQ_Marketing
	☐ Disable	
	Keep AP	☒ Enable ☐ Disable
	AP Transmit Power Adjustment	Max (Max)
	Broadcast SSID	☒ Enable ☐ Disable
	Client Isolation	☐ Enable ☒ Disable
	Multicast Enhancement	☒ Enable ☐ Disable
	Multicast Rate	MCS0

Keep AP

Broadcast a Wi-Fi SSID even if there is not an active Internet connection. Disabling this will require you to configure the device with an Ethernet cord. Enabling this feature is highly recommended.

AP Transmit Power Adjustment

Reduce or increase the power of the Wi-Fi AP. This will not affect the power of the connection to a Wi-Fi WAN.

Broadcast SSID

When disabled, computers will not automatically see the AP's SSID and must be manually configured to connect to the network. Default is **Enable** (recommended).

Client Isolation

When enabled, computers using the AP's SSID cannot communicate directly with each other. This is a good security feature to enable when allowing untrusted users to use your connection. Default is **Disable**.

Multicast Enhancement

Convert multicast packages to unicast packages, improving multicast traffic performance in most situations. Default is **Enable**.

Multicast Rate

With **Multicast Enhancement** disabled, this will set multicast traffic to a fixed rate. Changing this setting is recommended only for advanced users.

Web Admin Settings

Web Admin Redirection[?]	☒ Enable ☐ Disable (Note: you need to reboot CPE for this change to take effect)	
Web Admin Protection[?]	Mode Password	WAN Only ▼ ***** (admin) Hide / Show Password

Web Admin Redirection Enable/Disable

Redirect users to the dashboard if there is not an active Internet connection. When disabled, users must manually log into the unit using the **LAN Interface** IP address. Default is **Enable**.

Web Admin Protection Mode

Choose from **None**, **WAN Only**, or **WAN and LAN**.

None – Don't require a password from either WAN or LAN. This setting is highly insecure and should be used only if you control both networks.

WAN Only – Require a password only when someone outside of the Surf is trying to manage the device. This provides basic protection against users outside of your LAN.
<https://<WAN IP>:8000/>

WAN and LAN – Require a password to manage your device from either the WAN or LAN side.

Password

Enter a password to control access to the Surf's Web admin interface.

Roaming Settings (Wireless WAN Only)

Roaming Settings[?]	☐ Enable ☒ Disable	
	Background Scanning Interval	24 Hours (24)
	Roaming Threshold (Signal Level Gain)	10 dBm (10)

Roaming	Enable/Disable When enabled, the Surf will periodically scan for a stronger connection without interrupting the current connection. This is beneficial in situations where you know there are multiple APs your connection can choose from, and many hotspots and large networks are set up this way. Most home networks are not set up this way and would not benefit from this setting. Default is Disable.
Background Scanning Interval	Specify how often to scan for a stronger connection.
Roaming Threshold	Specify how much stronger the new connection must be in order to trigger device roaming.

Port Forwarding Settings

[Dashboard](#) | [Settings](#) | [Port Forward](#) | [QoS](#) | [Firmware](#) | [Status](#) | [Misc](#)

Service Port Range	Protocol	IP Address	
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del
0 ~ 0	☐ TCP ☐ UDP		Del

DMZ Host

☐ Enable ☒ Disable

IP Address

0.0.0.0

Well-known ports (commonly used ports)

7 (Echo)
21 (FTP)
23 (TELNET)
25 (SMTP)
53 (DNS)
79 (finger)
80 (HTTP)
110 (POP3)
119 (NNTP)
161 (SNMP)
162 (SNMP Trap)

Service Port Range

Enter a port or range of ports to forward.

Protocol

Choose **TCP** or **UDP** to forward the selected port or port range using the specified protocol.

IP Address

Enter an IP address to which you would like to forward the specified ports.

Del

Click **Del** to delete the corresponding row of port forwarding rules.

Below the port forwarding table, you'll find the DMZ Host option. Enabling **DMZ Host** causes your Surf to become a DMZ device, which allows external users direct access to any of the Surf's ports without setting up port forwarding. If you enable **DMZ Host**, enter an IP address that external users will use to connect to your Surf's ports.

QoS Settings

Dashboard

Settings

Port Forward

QoS

Firmware

Status

Misc

PEP WAVE

Broadband Possibilities

Target	Service Port Range	Protocol	IP Address (enter 0.0.0.0 for any ip)	Priority	
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del
Source ▾	0 ~ 0	☐ TCP ☐ UDP	0.0.0.0	Default ▾	Del

Save

Target Choose from **Source** (incoming) or **Destination** (outgoing) traffic to be controlled by the service.

Service Port Range Enter a port or range of ports to be controlled by the service.

Protocol Choose **TCP** or **UDP** as a protocol for the service.

IP Address Enter an IP address to be controlled by the service.

Priority Choose **Background**, **Video**, or **Voice** priorities, or choose **Default** to allow the Surf to adjust priorities automatically.

Del Click **Del** to delete the corresponding row of QoS rules.

Checking Your Surf's Status



Broadband Possibilities

WAN Connection

Ethernet

Client

[Dashboard](#) | [Settings](#) | [Port Forward](#) | [QoS](#) | [Firmware](#) | [Status](#) | [Misc](#)

Firmware Version:	1.0.14
Hardware Version:	2.0
Model:	Surf (Router)
Serial Number:	
LAN MAC Address:	
Wi-Fi MAC Address:	
Modem Package Version:	1002
Supported Modes:	802.11a/b/g/n
Connection Uptime:	2 days 8 hours 16 mins 53 secs
System Time:	Wed, 14 Dec 2011 21:53:49 GMT

WAN Connection Info:


IP Address:	
Subnet Mask:	
Gateway:	
DNS Servers:	
DHCP Server IP Addr:	
DHCP Server HW Addr:	
DHCP Lease Time:	40153
DHCP Renewal Time:	20076
Rx Packets:	3298756
Tx Packets:	337878

To see a range of information about your Surf and its operation, click the **Status** link at the top of the Web admin interface, and then select from the **WAN Connection**, **Ethernet**, and **Client** tabs on the left.




TROUBLESHOOTING

Turning On Remote Assistance

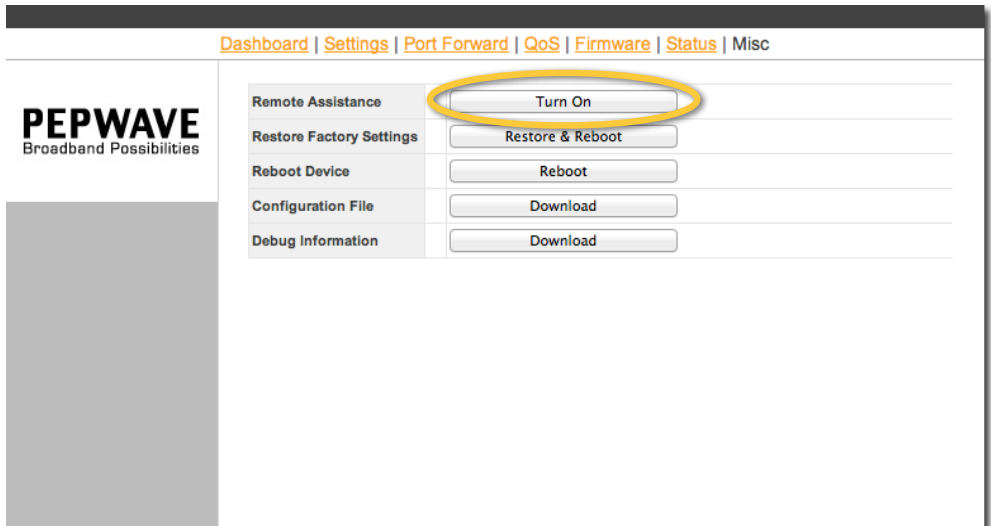

To allow remote technicians to more easily and effectively assist you in troubleshooting your Surf, click the **Misc** link at the top of the Web admin interface, and then click the **Turn On** button next to **Remote Assistance**.

Restoring Factory Settings

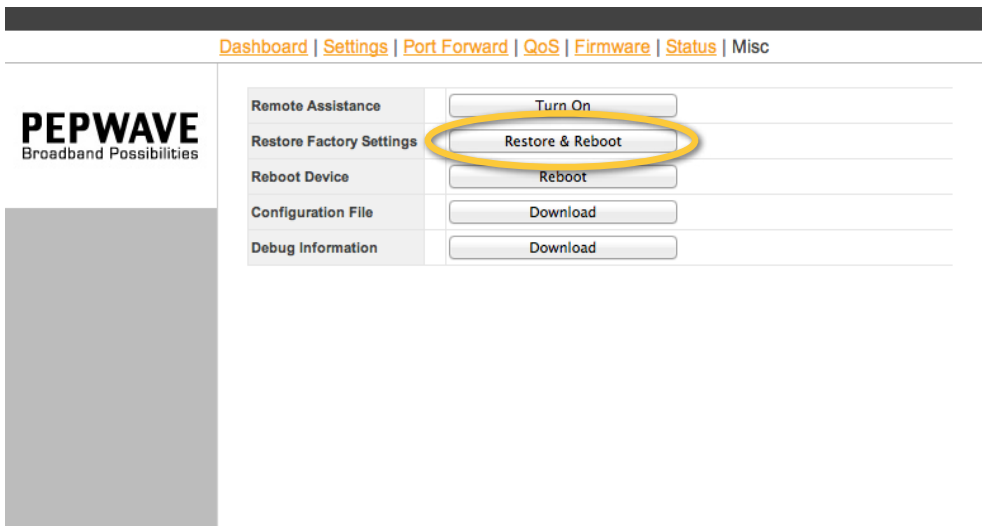

Your Surf's factory settings can be restored in one of two ways:

1. If you can access the Web admin interface, click the **Misc** link and the **Restore and Reboot** button. Your Surf will restore factory settings and reboot.

2. If you can't access the Web admin interface, power on your Surf and wait for 60 seconds. Next, with a paperclip, press the reset button found on the top of your Surf and hold it for 5 seconds. Your Surf will restore factory settings and reboot.



Upgrading Your Surf's Firmware

The screenshot shows the PEPWAVE web interface. On the left is the PEPWAVE logo with the tagline 'Broadband Possibilities'. The top navigation bar includes links for Dashboard, Settings, Port Forward, QoS, Firmware, Status, and Misc. The main content area is titled 'Firmware' and displays the current version (1.0.14) and date (2011-11-25). Below this is an 'Online firmware check' button. The 'Status' section contains a button to check for new firmware. The 'Firmware Upload' section features a 'Choose File' button (circled in yellow) and an 'Upload' button (also circled in yellow). The text 'no file selected' is visible next to the 'Choose File' button.

Your Surf can check to see if its installed firmware is the latest version. In most cases, however, it's best not to update your firmware unless specifically instructed by your ISP. When a firmware upgrade is necessary, your ISP will provide further instructions or remotely upgrade your Surf's firmware.

If you choose to upgrade your Surf's firmware, click the **Choose File** button in the **Firmware Upload** section and navigate to the new firmware file. To finish, click the **Upload** button.



APPENDIX

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE: FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

PEPWAVE

Broadband Possibilities

Taiwan NCC Statement

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Copyright

Copyright © Pepwave

The content of this documentation may not be reproduced in any part or as a whole without the prior written permission of Pepwave.

Disclaimer

Pepwave does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent right nor the patent rights of others. Pepwave further reserves the right to make changes in any products described herein without notice. This documentation is subject to change without notice.

PEPWAVE

Broadband Possibilities

www.pepwave.com