



Agile 600 Flood Production Light (2pc)

(P-AGL-FLD)

INSTRUCTION MANUAL



For demonstration purpose only

All rights reserved

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the publisher.

INTRODUCTION

Proaim Agile 600 is an impressive brightness enhancer combined with efficient cooling vent, dissipates heat and gets you sharp, richly detailed and pleasant shots. It provides the light control with the LED advantages of no heat, delivers 100% flicker free illumination and can be dimmed from 100% to 5% with zero colour shift. Consuming 95% less energy, it enjoys 50,000 hours of LED life for big time savings. Moreover the DMX compatibility adds boom to this light. The lightweight aluminum housing design is efficient for venting and dispersing heat with detachable 4-way barn doors that shape and control the light and prevent it from spilling into unwanted areas. The adjustable mounting yoke allows to be mounted to any industry standard light stand and its locking up-and-down tilt control lets you precisely position and hold the light's beam where you need it. Included filters soften both highlights and shadows, reduce contrast and increase the beam angle.

IN THE BOX

Please inspect the contents of your shipped package to ensure you have received all that is pictured and listed below.



2x 600 LED Flood Lights with
Gel Filters and Storage Case

2x AC Adapters

2x Universal Adapters

ASSEMBLING YOUR PROAIM AGILE 600 FLOOD PRODUCTION LIGHT (2PC)

- Remove the led panel from its container and mount it on to the 3/8" standard spigot located on the top of the riser unit. Tighten the lock knob to secure the head to the tripod stand (**NOT INCLUDED**).



NOTE: You will note that on the yoke that holds the fixture head to the riser spigot has a control knob that is used to adjust the desired angle of the light. Loosen the knob to make the adjustment and then re-tighten to lock the angle in place.




NOTE: Unless using a ladder, this procedure may have to be adjusted a number of times as the head is raised or lowered on the stand. At a maximum riser extension of 8'8" a ladder is an easy way to make this adjustment and especially so for gel placement/adjustment.

- Attach the provided barn doors to light panel as shown in the image. Open the 4 barn doors on the light prior to powering up the fixture. The barn doors are easily adjustable for effective light control.



- 2 types of gel filters are provided for each light and are easily inserted with the provided gel holders as shown. The use of gels provides the operator an artistic lighting environment for creative control.

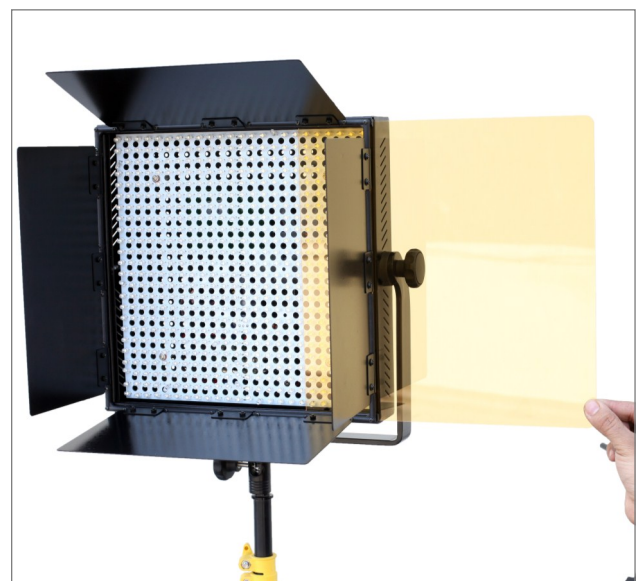

- Attach the battery with the battery plate as shown below.



- Insert 4 pin XLR cable into 4 pin XLR connector.



**YOUR PROAIM AGILE 600 FLOOD PRODUCTION LIGHT (2PC)
ALL DRESSED UP AND GOOD TO GO**



(SHOWN WITH OTPIIONAL ACCESSORIES)

WARRANTY

We offer a one year warranty for our products from the date of purchase.

We will repair or replace your product, free of charge, in the event of a defect in materials or craftsmanship obtained during normal use or handling based on the user manual. Please note that we will not cover any shipping costs for returning the product to us. If any VAT or import duties are applied to the return, we will also charge these costs to the customer.

The warranty does not include, by the way of example, damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product , or service by anyone other than our company.

We are not liable for incidental or consequential damages resulting from the use of the unit or occurring due to any breach of this warranty.

Replacement parts of the product will be provided at nominal cost (covering the cost price of the replacement parts only) to the customers after the Warranty Period has expired. We will cover the complete cost of sending replacement parts within the warranty period. After that, Nominal cost of the product & Actual shipping cost will be charged.

Do not send the unit to us without first getting a response and getting the approval to send back the item.

In case of any kind of dissatisfaction, we urge you to **Contact us** immediately and we shall do our Best to help you out. For any other assistance you can reach us via email.

For any other assistance you can reach us via email.