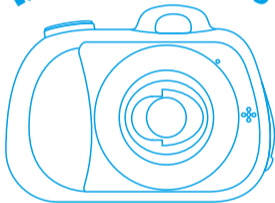 


KIDS CAMERA K5



PACKING LIST



Camera K5



32G microSD Card



Card Reader



Carrying Bag



 
Cartoon Sticker



Lanyard



Pin





USB Cable





User Manual



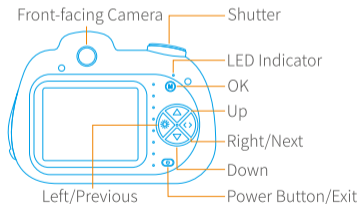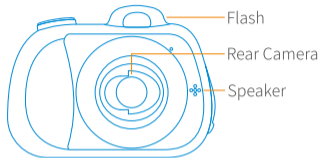FUNCTION OVERVIEW



FUNCTION OVERVIEW

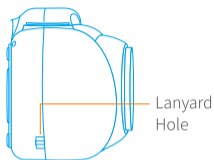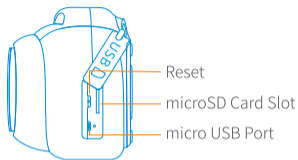

i IMPORTANT:

- * Insert the microSD card before using.
- * The built-in battery is not changeable.
- * Reset the camera with a pin provided when the screen is unresponsive.
- * The camera will screen off after 3 minutes of inactivity and turn off after 5 minutes of inactivity to save battery.

FUNCTIONS OF ALL BUTTONS



- * Press to take one photo.
- * Press to start/end recording in video mode.
- * Press to show delete option in media gallery.



- * Press to confirm your selection.
- * Press to take one photo in photo mode.
- * Press to start/end recording in video mode.
- * Press to play/pause the video saved in media gallery.
- * Long press to switch between front-facing and rear camera.



- * Press to turn on/off the flash.
- * Press to turn up the volume when viewing the video saved.



- * Press to switch between day mode and night mode.
- * Press to turn down the volume when viewing the video saved.





* Press to select among photo mode, photo frame, filter effect and distorting mirror in photo mode.

* Press to select filter effect in video mode.



* Long press for 3 seconds to turn on/off the camera.

* Press to return to homepage or previous menu in settings.

OPERATION GUIDE



Power On/Off

Long press  around 3 seconds to power on/off the camera.

Please charge the camera for 30 minutes if it doesn't power on.

-  Charging
-  Fully Charged
-  Working

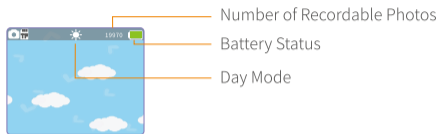










Charging in power-off status is recommended.



Photo Mode

Press  on the camera or select  on the homepage to enter Photo Mode.

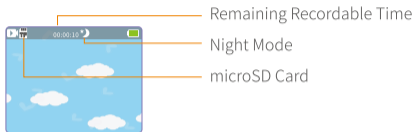







- * Press  /  to take one photo.
- * Press  /  to select among photo mode, photo frame, filter effect and distorting mirror.
- *  Take 3 photos continuously in 1 second.
- *  Take 1 photo after 5 seconds.
- *  Take 3 photos at 5-second intervals.
- * Press  to exit Photo Mode.






Video Mode

Select  on the homepage to enter **Video Mode**.



- * Press  /  to start recording; press again to end and save.
- * Press  /  to select filter effect.
- * Press   to turn up/down the volume.


Works in both modes:

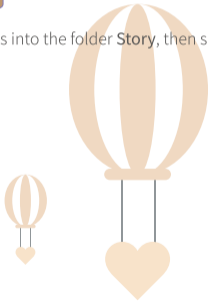
- * Press  to turn **Flash** on/off.
- * Press  to switch between day mode and night mode.
- * Long press  to switch between front-facing and rear camera.

Audio Mode

Select  on the homepage to enter **Audio Mode**.





- * Copy the music files into the folder **MP3** and story files into the folder **Story**, then select the correct folder to play the file.
- * Press  to play/pause.



Media Gallery



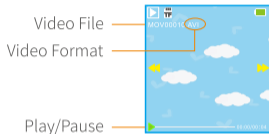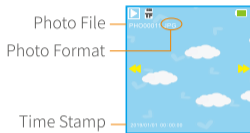


Select  on the homepage to enter Media Gallery.

1. Check photos/videos saved



2. Delete Photos/Videos

Option 1:

- ① Press  /   to select photo or video that needs to be deleted.
- ② Press  to show delete option.
- ③ Press  to confirm the deletion.

Option 2:

Directly connect the camera with a computer via the USB cable or insert the microSD card into the card reader to delete photos/videos.



Games

Select  on the homepage to enter **Game Mode**.

Step 1:

Press  /  to select the game you want to play.

Step 2:

Press  to enter the game, then select  to start.








Complete a group of three or more by dragging fruits from nearby cells.



Press  /  to control the plane while it is shooting the other spaceships.



Try to remember the picture in 10 seconds. Press  to select one piece and     to move it to any position until a complete picture is produced.

Step 3: Press  and  to exit the game.










SETTINGS

Select  on the homepage to start setting up your camera.



Format

- * Press  to enter and  to show the format option.
- * Press  /   to select Yes or No.
- * Press  to confirm and  to exit.










Version

- * Press  to check the version of your camera K5 on the screen. It may be required if technical support is needed.



Default Setting

- * Press  to enter and  to start resetting the camera.
- * Press  /   to select Yes or No.
- * Press  to confirm and  to exit.



Language

- * Press  to enter and  /   to select the language.
- * Press  to confirm and  to exit.





Frequency

* Press  to enter, then press  /  to select between 50Hz and 60Hz.

* Press  to confirm and  to exit.



Camera resolution

* Press  to enter, then press  /  to select from 1M, 3M, 5M and 8M.

* Press  to confirm and  to exit.



Video resolution

* Press  to enter, then press  /  to select between 720P and 1080P.

* Press  to confirm and  to exit.



Volume

* Press  to enter, then press  to turn down and  to turn up the volume.

* Press  to confirm and  to exit.





Date/Time

- * Press **(M)** to enter, then press **▲▼** to adjust the value of year/month/day/hour/minute/second accordingly. Press **<>** to move to the next option.
- * Press **(M)** to confirm and **(⏻)** to exit.

SPECIFICATION

Weight	75g(2.6oz)	Storage	Up to 64GB
Photo Size	1M/3M/5M/8M	Charging Time	2.5 hours
Screen	2Inch IPS	File Format	JPG/AVI
Battery Capacity	500mAh	Battery Runtime	≥1.5 hours
Video Resolution	1080P@30fps, 720P@30fps	Dimension	94 x 68 x 47 mm (3.7 x 2.7 x 1.9 inch)



