

## 6 OUTLETS DIGITAL TIMER YARD STAKE

### Features

- 6 outlets digital countdown timer YARD STAKE
- 7 modes setting

### Setup

#### 1. Set the desired "OPERATING MODE" .

Lightly tap the "touch" button repeatedly until the red indicator light to the left of the operating modes is aligned with the desired mode. The red light will blink 3 times rapidly to confirm your selection, then the light next to your selection will turn off. There will still be a red light illuminated next to the word "ON" to show that the program has been set.

NOTE: The timer will turn ON at dusk and the red light next to the desired setting will be ON. After the timed cycle has been completed the red light next to the

desired setting will turn off, but the red light next to the word "ON" will remain lit to show that the program is still active and will repeat at dusk each day until the operating mode is changed.

#### 2. Attach up to SIX devices to the timer.

Plug the lights or devices to be controlled into the outlets on the sides of the timer.

### OPERATING MODES

- OFF - Power is OFF to attached devices
- ON - Power is ON to attached devices
- Dusk-Dawn - Power will turn on at dusk and remain on until dawn
- 2 Hrs - Power will turn on at dusk and remain on for 2 hours
- 4 Hrs - Power will turn on at dusk and remain on for 4 hours
- 6 Hrs - Power will turn on at dusk

and remain on for 6 hours

- 8 Hrs - Power will turn on at dusk and remain on for 8 hours

### HELPFUL TIPS

- This timer is weather-resistant and rated for outdoor use. The timer will function outdoors when installed and operated as outlined in this manual.
- This timer operates using a light-sensitive photocell that senses when the environment is getting dark (dusk) or light (dawn). The photocell is located to the right of the "Power" indicator on the face of the timer.
- Once programming activates at dusk in the 2hrs, 4hrs, 6hrs or 8hrs mode, the program cycle will complete before the timer resets.
- Headlights, porch lights, street lamps and other external lighting

sources will not interfere with the active timer program.

- In the dusk-to-dawn mode, temporary light sources like headlights, porch lights and other external light sources will not interfere with the photocell function unless the external light source is on for more than 15 minutes. In that case, the timer will shut off until darkness is restored.
- When set to "ON", the timer will provide continual power to attached devices until the timer is switched to "OFF", or to any of the other operating modes.
- Do not place the timer hidden in bushes where it won't sense daylight.
- It may take until complete darkness for the photocell to turn on power to the timer.
- The "Operating Mode" indicator light will turn on when the timer programming is activated and

power is being provided to attach devices.

- Do not use extension cords to connect the timer to the power source.

### IN CASE OF POWER FAILURE

The timer will stop operating if the power goes out. Once power is restored, reset the desired operating mode as explained in step 1 of the operating instructions.

### SAFETY INFORMATION & SPECIFICATIONS

This is a "GROUNDED" device. The male plug contains a ground pin and is only intended for use with a three-pronged grounded outlet.

This device is for use with a 125 V AC power source. **125 V AC / 60 Hz**

### DO NOT ATTACH A DEVICE THAT EXCEEDS THE UNIT RATINGS:

- 15A / 1875W Resistive (General

Purpose)

- 8A / 1000W Tungsten (Incandescent)
- 1/2 HP (Horsepower Motor)

### WARNING: RISK OF ELECTRIC SHOCK

- Keep children away
- Unplug timer before cleaning
- Fully insert plug
- Do not use near standing water.

### RISK OF FIRE

- Do not use to control appliances that contain heating elements (cooking appliances, heaters, irons, etc.)
- Do not exceed electrical ratings.

Customer Service Assistance: 1-909-592-1881  
Email: Support@centurytimer.com  
Business Hours of Operation: 9AM to 5PM Pacific time, Monday to Friday  
Manufactured and Distributed by: Century Products Inc.  
www.centurytimer.com  
3545 Granada Ave El Monte Ca 91731  
Designed in California Made in China