 


Panda Clothes Dryer User Manual

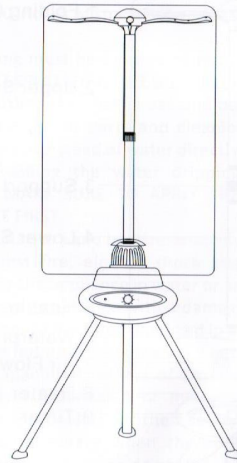

Model Number: PAN82PD

 
Panda Products

www.ezbyonline.com

1-888-329-8832

Important safety instructions: read carefully and keep for future reference

Structure

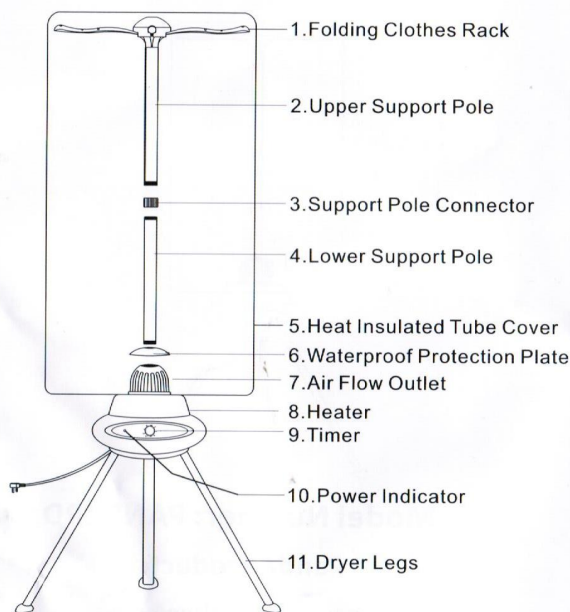

1

A. IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTION CAREFULLY BEFORE USE. THE APPLIANCE IS FOR HOUSEHOLD INDOOR USE ONLY.

1. Allow at least 60 inches of space between the sides of the appliance and water or fire source.

2. Proper grounding must be ensured to reduce the risk of electric shock and fire. **DO NOT CUT OR REMOVE THE GROUNDING PLUG.**

3. Unplug from outlet when not in use and before cleaning. Allow unit to cool down before taking off parts and cleaning the appliance. Clean the appliance with wet cloth instead of water directly.

4. In order to avoiding the water dripping issue, before using this appliance, **PLEASE MAKE SURE TO APPLY THE ARTICLE WITH WASHING MACHINE SPIN CYCLE FIRST.**

5. Use only on the flat, dry and heat-resistant surface.

6. To protect against fire, electric shock and injury to person, do not immerse cord, plug or the appliance in water or any other liquid.

7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

8. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety. Keep away from Children. Close supervision is necessary when the appliance is used by or near children. Please ensure the children do not touch or play with the appliance.

9. Do not touch, cover or obstruct the metal parts on the heater/blower at the bottom as it is extremely hot and may cause burn.

10. Clothes and other articles to be dried should be able to endure at least 167 °F or above. The maximum weight of clothes is 22lbs.

11. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended by the user-repair instructions, which you fully understand and have the ability to carry out. If for any reason this product requires servicing, we strongly recommend that a certified technician performs the service.

12. Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.

2

B.Features

1. Use only with a 120V AC power outlet. It plugs into a regular outlet, and uses less energy.
2. It does not rotate. The dryer works with air flow.
3. Lightweight, easy to assemble and disassemble. This appliance is the ultimate space saver.
4. Do not damage clothing like traditional tumble dryers, suitable for every type garment.
5. Powerful but quiet motor, will dry your clothes quickly and without noise.
6. No vent or special outlet needed.
7. High efficiency. It takes up 1-3 hours to dry.
8. PTC heating-element, different from tradition heating method, to ensure maximum safety.

C.Specifications

Gift Box Size: 21 * 11 ¼ * 9 ½ inch
Net Weight: 8.5lbs
Rated Voltage: 110-120V
Rated Frequency: 60Hz
Rated Power: 900W
Rated Maximum clothes to be dried: 22lbs
Maximum Drying Time: 180 Minutes


D.Parts and Components Table

Parts	Qty
Folding Clothes Rack	1
Upper Support Pole	1
Support Pole Connector	1
Lower Support Pole	1
Waterproof Protection Plate	1
Heater	1
Heat Insulated Tube Cover	1
Dryer Legs	3


3

E.Installation

 
Insert three dryer legs into the body hole.

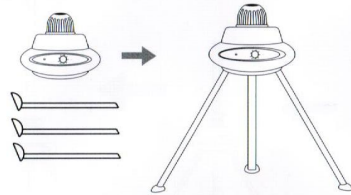

 Screw the lower support pole on the air flow hole, use clockwise position.

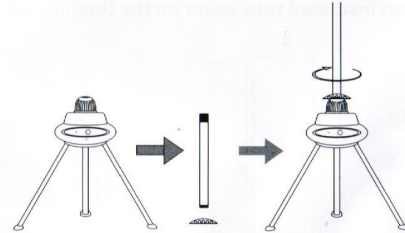


 Screw the upper support pole to the lower support pole, use clockwise position.

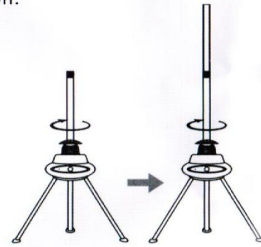

4

 Screw the folding clothes rack on the upper support pole.

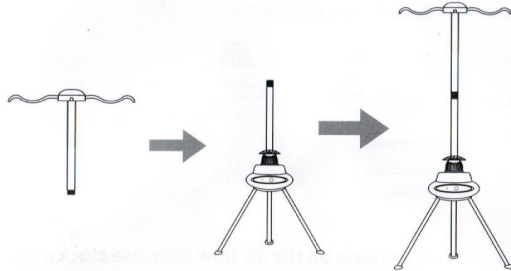

Hang the heat insulated tube cover on the floding rack.



 
F. Disassembling

Please follow the reverse steps of installation to disassemble the product.

5

G. Operation instruction

1. Plug the power cord.
2. Set the timer (30-180 Minutes).
3. When switch to "ON", the machine is always working (not recommended), better set the timer.

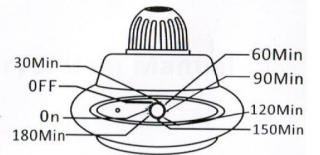

H. Trouble shooting

Number	Problem	Possible cause
1	Drying time too long (>180min)	1. Clothes too much. 2. Clothes not spin-dried by washing machine or twisted by hand to squeeze excess water. 3. Heat insulated tube cover not zipped up appropriately.
2	Machine suddenly stop when working	1. Air entry or vent blocked by clothes or any other stuff, machine start up protection process. 2. Having exceeded set time.

I. Clean

Ensure that unplug from outlet when not in use and before cleaning. Allow unit to cool down before taking off parts and cleaning the appliance. Clean the appliance with a damp cloth instead of water directly. Please do not immerse the appliance in water and ensure the appliance is dry before use.

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliance.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

6