 
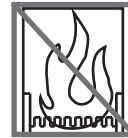 


# Cordless Vacuum Cleaner


## Instruction Manual

READ AND SAVE THESE INSTRUCTIONS

THIS MACHINE IS INTENDED FOR HOUSEHOLD USE ONLY

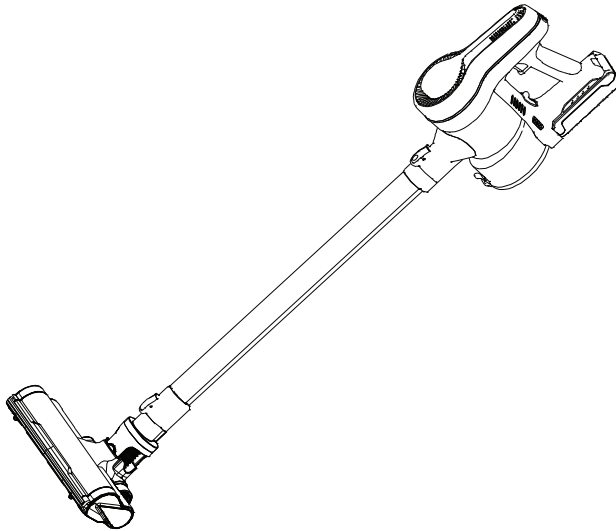

Do not use near  
open flames

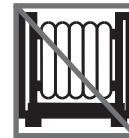

Do not store near  
heat sources




Do not pick up water  
or liquids



Do not pick up  
burning objects



Do not put hands  
near the brush bar  
when the machine  
is in use.

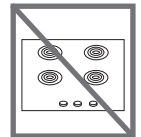

Do not place on  
or near the cooker

SHENZHEN ZAPADOS TECHNOLOGY CO.,LTD

Service support: Email: [support@opodee.com](mailto:support@opodee.com)

[www.opodee.com](http://www.opodee.com)

# Important Safety Instructions

BEFORE USING THIS MACHINE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE MACHINE

When using an electrical appliance, basic precautions should always be followed, including the following:



## WARNING SYMBOLS USED

These warnings apply to the machine, and also where applicable, to all tools, accessories, chargers or mains adaptors.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. This machine is not intended for use by persons (including children) with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the machine.
3. Use only as described in this OPODEE Operating Manual. Do not carry out any maintenance other than that shown in this manual, or advised by the OPODEE support.
4. Suitable for dry locations ON LY. Do not use outdoors or on wet surfaces.
5. Do not handle any part of the plug or machine with wet hands.
6. Do not use with a damaged cord or plug. If the supply cord is damaged it must be replaced by OPODEE, its service agent or similarly qualified persons in order to avoid a hazard.
7. If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the OPODEE support
8. Contact the OPODEE support when service or repair is required. Do not disassemble the machine as incorrect reassembly may result in an electric shock or fire.
9. Do not stretch the cord or place the cord under strain. Keep the cord away from heated surfaces. Do not close a door on the cord, or pull the cord around sharp edges or corners. Arrange the cord away from traffic areas and where it will not be stepped on or tripped over. Do not run over the cord.
10. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord. The use of an extension cord is not recommended.
11. Do not use to pick up water.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they or their vapors may be present.
13. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

14. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.
15. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce airflow.
16. Use only OPODEE recommended accessories and replacement parts.
17. Do not use without the clear bin and filter(s) in place.
18. Unplug from the outlet when not in use for extended periods and before maintenance or servicing.
19. Use extra care when cleaning on stairs.
20. Do not install, charge or use this machine outdoors, in a bathroom or within 10 feet (3 meters) of a pool. Do not use on wet surfaces and do not expose to moisture, rain or snow.
21. Use only OPODEE chargers for charging this machine. Use only OPODEE batteries: other types of batteries may burst, causing
22. FIRE WARNING – Do not place this product on or near a cooker or any other hot surface and do not incinerate this machine even if it is severely damaged. The battery might catch fire or explode.
23. Always turn 'OFF' the machine before connecting or disconnecting the motorized brush bar.
24. FIRE WARNING – Do not apply any fragrance or scented product to the filter(s) of this machine. The chemicals in such products are known to be flammable and can cause the machine to catch fire.
25. Wash hands after handling.

## Notice




This symbol on the device or its packaging indicates: Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.


## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.


## Package Contents

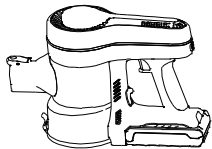


Vacuum Cleaner

 

Tube

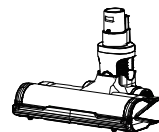

Direct Drive Cleanerhead  
(Include Floor Brush)

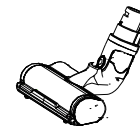

Power Brush



Sofa Brush



Flat Tube



Stand



Knife



Carpet Brush




High Efficiency Strainer



Primary Filter Strainer




Battery Pack

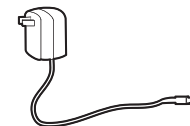


Power Adapter

## Part Name

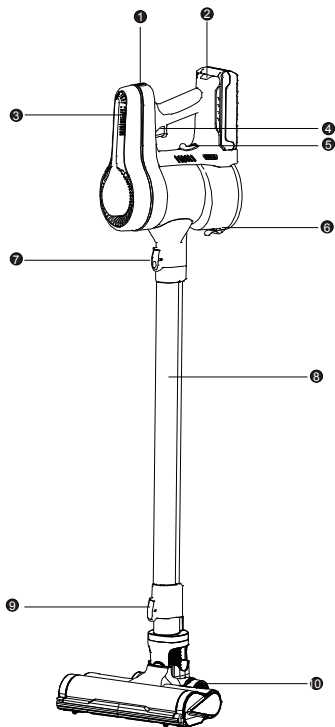


- 1 Speed Control Button
- 2 Unpack Battery Button
- 3 Vent
- 4 Power On / Off
- 5 Unpack Dust Cup Button
- 6 Dust Cup Buckle
- 7 Metal Tube Locker
- 8 Metal Tube
- 9 Power Brush Locker
- 10 Power Brush

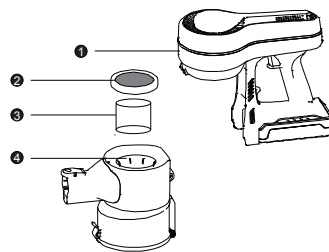

- 1 Motor
- 2 Primary Filter Strainer
- 3 High efficiency Strainer
- 4 Metal Filter Strainer

## Battery Pack

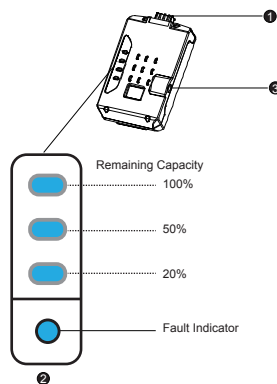

- 1 Electrode Pin
- 2 LED
- 3 DC Socket



### Low Speed Mode:

---The four blue LEDs are light

### High Speed Mode:


---The three blue LEDs are light

---The last LED turns to pink

### Failure Indication

---The LED is flashing


## Assembly

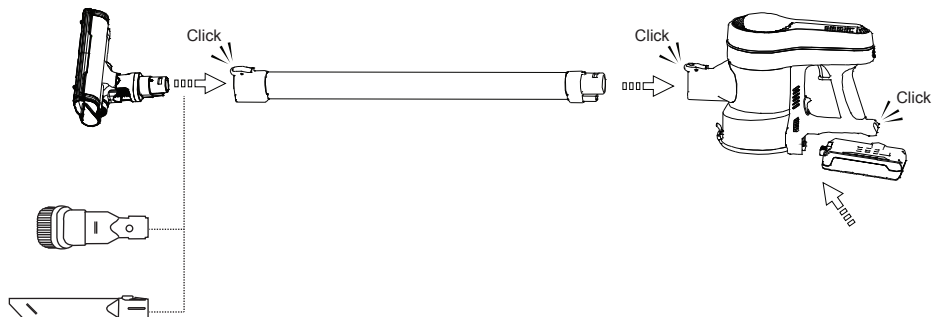



## Docking station installation

Ensure no pipe work (gas, water, air) or electrical cables, wires or ductwork are located directly behind the mounting area.

The position of stand is just the height of machine.

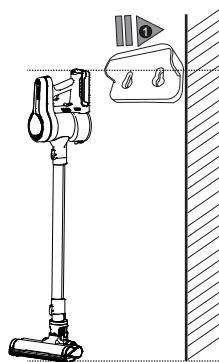

1. Use stick or screw to fix the stand

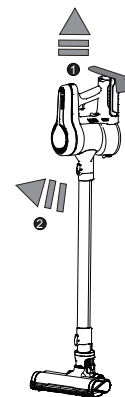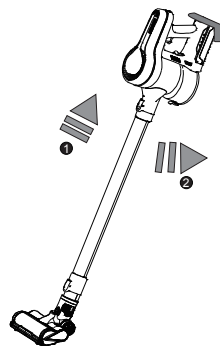


## Charge the Machine

Plug the adapter into the a wall outlet and plug the DC jack into the DC socket of the Battery

Charging time : 4-5 Hours

The LED is flashing one by one,when charging.

The four lights will light on, when fully charged.

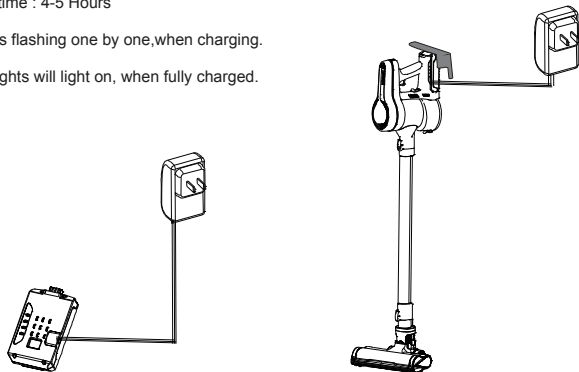


You can remove the battery to charge from the machine.

## Looking after your machine


- Do not carry out any maintenance or repair work other than that shown and described in this Operating Manual.
- Only use parts recommended by OPODEE.
- Store the machine indoors. Do not use or store it below 37.4°F (3°C).
- Ensure the machine is at room temperature before operating.
- Clean the machine only with a dry cloth.
- Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the machine.

## Emptying the clear bin


- Empty as soon as the dirt reaches the level of the MAX mark – do not overfill.
- Ensure the machine is disconnected from the charger before emptying the clear bin.
- To make emptying the clear bin easier, it is advisable to remove the tube and floor tool.
- To minimize dust/allergen contact when emptying, encase the clear bin tightly in a plastic bag and empty.

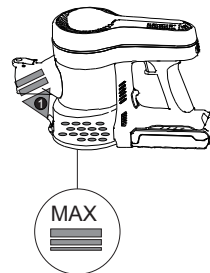


1. Release the Dust Cup Buckle

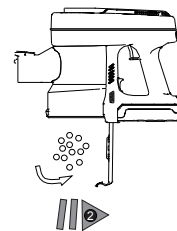

2. The cover of Dust Cup will open automatically

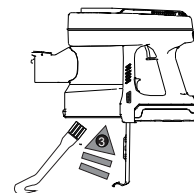


3. Clean the inside of Dust Cup with the provided cleaning tool or scrub clean with dishcloth.

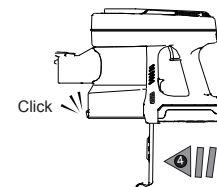

4. Buckle the Cover

## Looking for blockages

- The motor will pulse when there is a blockage. Please follow the instructions below to locate the blockage:
- Ensure the machine is disconnected from the charger before looking for blockages.
- Do not operate while checking for blockages as doing so could result in personal injury.
- Beware of sharp objects when checking for blockages.
- This machine has carbon fiber brushes. Take care if coming into contact with them, as they may cause minor skin irritation. Wash your hands after handling the brushes.

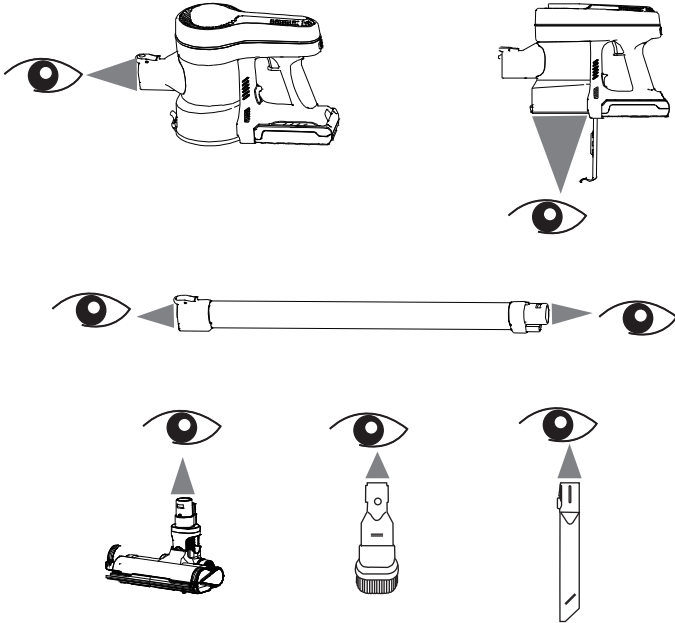


## Maintain the Machine

- Ensure the machine is disconnected from the charger before removing the clear bin.
- Remove the tube, floor tool and battery pack.
- Clean the clear bin with a damp cloth only.
- Do not use detergents, polishes or air fresheners to clean the clear bin.
- Do not put the clear bin in a dishwasher.
- Ensure the clear bin is completely dry before replacing.

### 1. Remove the Battery pack




1. Press the battery pack button

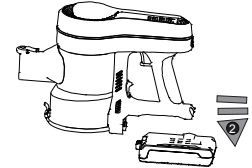


2. Hold the battery pack and pull down


### 2. Disassemble the Dust Cup

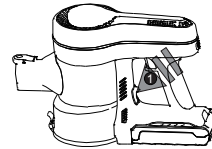

1. Press the Unpack Dust Cup Button

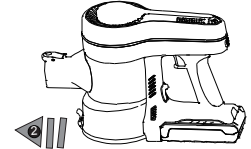


2. Hold the Dust Cup and pull out a little

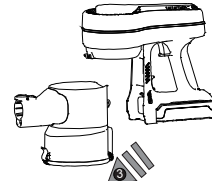


3. Then pull down.

### 3. Take out the filter

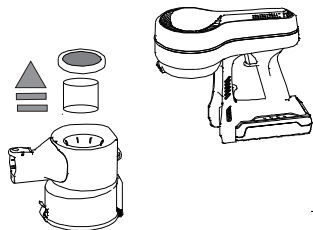


Wash filter with cold water at least once a month. Ensure the filter is completely dry before refitting.


### 4. Wash the filter

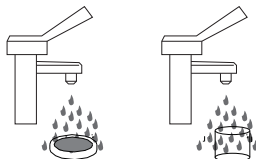


### 5. Wipe the machine and Xust Vmp

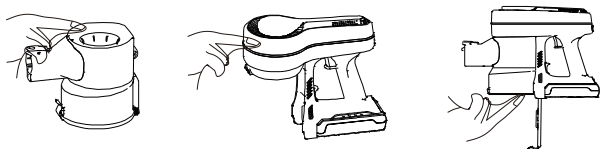

### 6. Install the Dust Cup

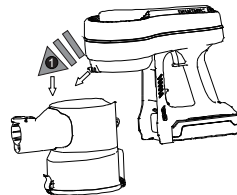


1. The protrude angle of motor must inset the sunken of Dust Cup.

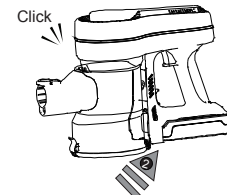


2. Hold the Dust Cup and Upward


## Direct Drive Cleanerhead: Cleaning obstructions or replace brush

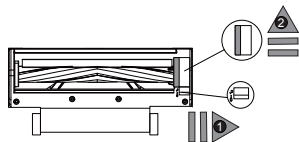


1. Unlock the Buckle
2. Pull out the block.

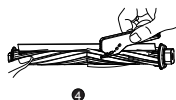


4. Clean the rolling brush

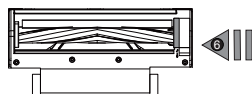

6. Reinstall the block and lock the Buckle

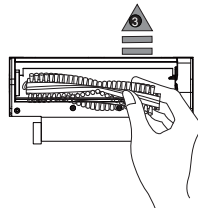

3. Pull out the rolling brush

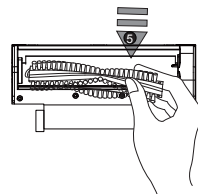

5. Reinstall the rolling brush by inserting the fixed protruding end first and then clicking into place.

## Troubleshooting

Suction gets weak	<ol style="list-style-type: none"> <li>1. Empty the dirt cup.</li> <li>2. Clean the HEPA filter.</li> <li>3. Check if the dust cup is installed correctly.</li> </ol>
Roller brush stops spinning or has strange noise	<ol style="list-style-type: none"> <li>1. Check if the brush (especially the bearing part) is stuck by hair.</li> <li>2. Check if the filter cup is installed correctly in the right place.</li> <li>3. Detach the tube, use the handheld part only. If not work, contact the seller for help.</li> </ol>
Battery doesn't charge	<ol style="list-style-type: none"> <li>1. Check if the charger &amp; charging base is connected correctly.</li> <li>2. If there is no light on when charging, contact the seller for help.</li> </ol>

## Technical Specification

Motor Power	250W
Power Suction	20Kpa
Working time	35min (low speed), 20min (high speed)
Battery	22.2V / 2200 mAh Li-ion
Battery Power	48.84W
Charging Voltage	26.5V / 0.5A
Charging time	4-5 hours