



NHL.com

NHL® POWER PLAY HOVER HOCKEY TABLE WITH TABLE TENNIS TOP

80 inch (2.03 m) Hover Hockey Table

Assembly Instructions Model 1-1-34777 (481)



**120V AC 60Hz 0.48A MOTOR
TWO OR MORE ADULTS
REQUIRED FOR ASSEMBLY**

⚠ WARNING:
CHOKING HAZARD – Small balls.
Not for children under 3 years.

**Watch a Video on
How To Set Me Up!**



www.eastpointsports.com/34777


CONTACT INFO

Hours

Monday to Friday
(9am to 5pm EST)

Technical Support

Email us at: consumerservice@eastpointsports.com
Visit us at: www.eastpointsports.com
Call: 973-585-4747

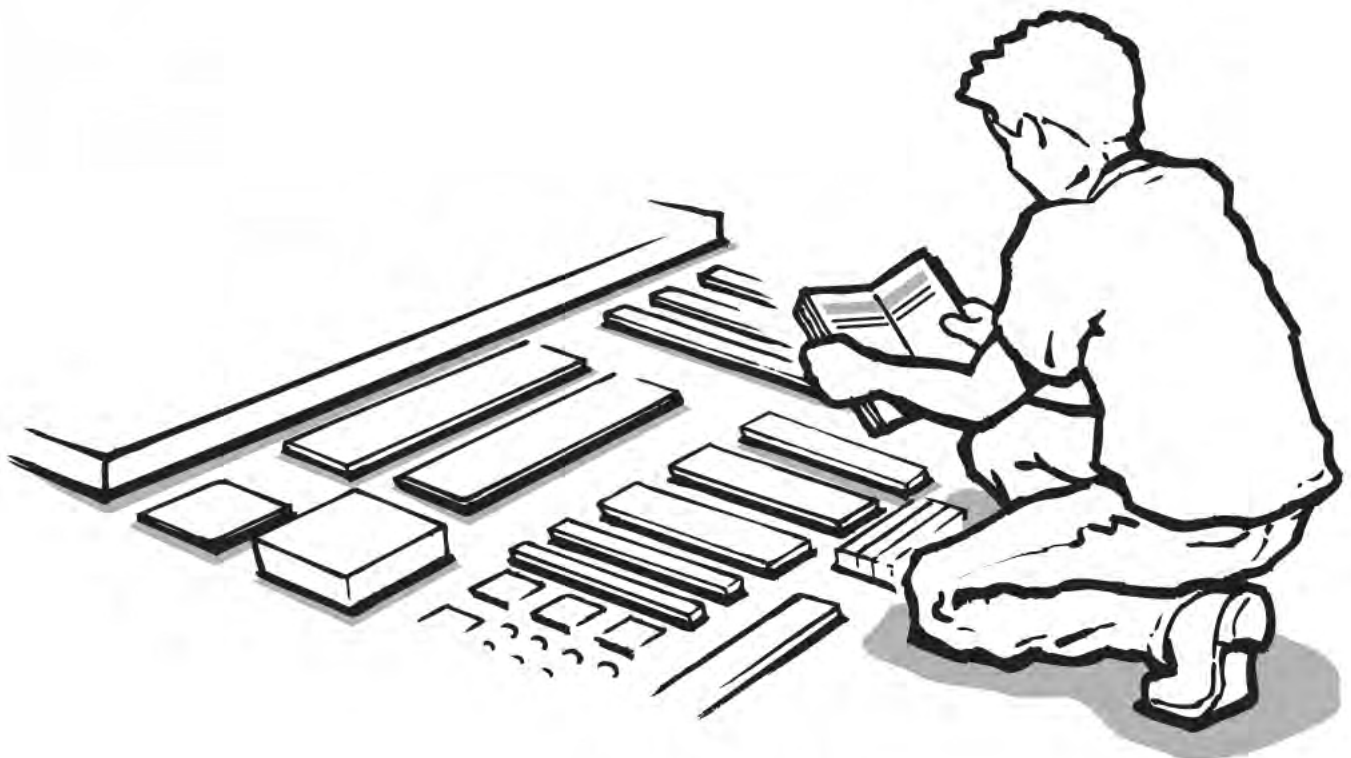

IMPORTANT - Lay out all parts before you begin

- Please review the parts identifier and make sure that you have all parts before beginning assembly.
- If any questions or issues, please contact us at 1-973-585-4747 **BEFORE** returning the product to the original place of purchase.
- Please keep your original sales receipt. Staple it on the adjacent page in the space provided for future reference/use. It will be required to receive service help or parts under warranty.


CONTACT INFO

Hours

Monday to Friday
(9am to 5pm EST)

Technical Support

Email us at: consumerservice@eastpointsports.com
Visit us at: www.eastpointsports.com
Call: 973-585-4747

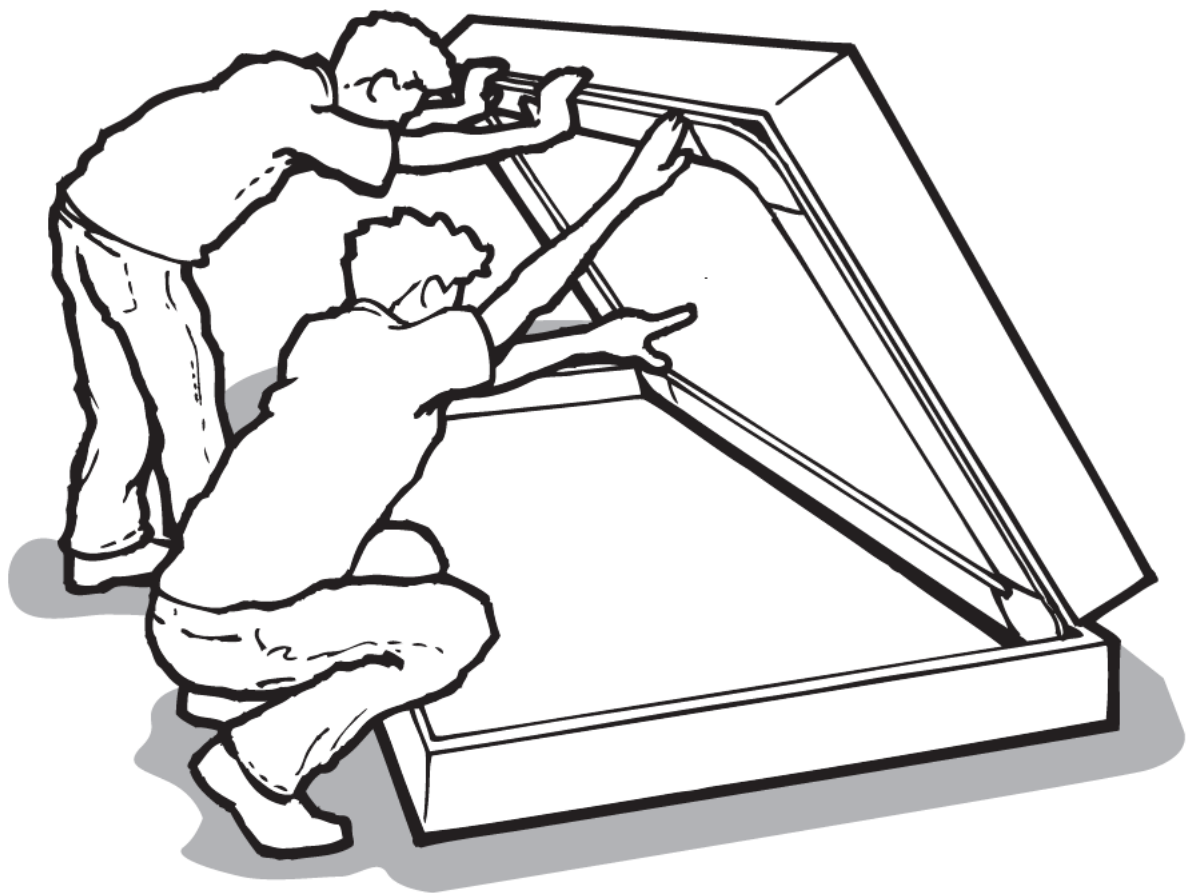

BEFORE BUILDING - Please inspect your playfield

Your Table Game Playfield is **NOT** replaceable. Any damage that exists to your playfield is not repairable under warranty. If your playfield is damaged, the entire game must be returned to the original place of purchase for an exchange.

**Please attach
RECEIPT HERE**

It will be required to receive service help or parts under warranty.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read all instructions** – All the safety and operating instructions should be read carefully before this Hover Hockey table can be operated or played.
- 2. Caution** – This is not a toy and is intended for use by or under the supervision of adults. Adults should review safety guidelines with children to avoid possible risk of electric shock or other injuries.
- 3. Power Sources** – This Hover Hockey game should be operated only from 100-125V A.C., 50/60 cycle current as indicated on the identification label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
- 4. Power Cord Protection** – Power cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to cords at plugs, convenience receptacles, and the point of exit from the game.
- 5. Overloading** – Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 6. Object and Liquid Entry** – Never push objects of any kind into this game through openings as they may touch dangerous voltage points or short-out parts which could result in a fire or electric shock. Never spill liquid of any kind on the game. If cleaning the surface, follow the recommended manufacturer instructions or call technical support for guidance.
- 7. Ventilation** – Openings in the game are provided for the exhaust air to create a cushion/floating effect. The openings on the air blower are for the intake air. Keep clear of the air blower during operation. Do not allow hand, hair, or any other objects near the intake openings. To ensure reliable operation of the game and protect it from overheating, these openings must not be blocked or covered.
- 8. Damage Requiring Service** – Unplug the game from the wall outlet/receptacle. Do not attempt to service the blower yourself as while opening and/or removing covers may expose you/others to dangerous voltage or other hazards. Refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord is damaged.
 - b. If liquid has spilled, or objects have fallen into the blower.
 - c. When the air blower exhibits a distinct change in performance – i.e. abnormal noise, too much/too little air flow, this indicates a need for service
- 9. Grounding or Polarization** – This game is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. DO NOT defeat the safety purpose of the polarized plug.
- 10. CAUTION – ELECTRICALLY OPERATED PRODUCT** – Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.
- 11. We recommend** – that the game be periodically examined for conditions that may result in the risk of fire, electrical shock, or injury to persons. In the event such conditions exist, the game should not be used until properly repaired.
- 12. Storage Conditions** – This product is made from wood based components and is sensitive to extreme temperatures and moisture / humidity. Subject to these conditions will effect game play, cosmetics and longevity.

Save These INSTRUCTIONS

Warning: To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

TOOLS Required

- Phillips Head Screwdriver
(Standard Size) – Not Included
- Flat Head Screwdriver
(Standard Size) – Not Included
- Allen Wrench - Included


Recommended (Not Required):

- Electric Screwdriver or Power Driver
CAUTION: DO NOT OVERTIGHTEN. If using an Electric Screwdriver or Power Driver, please make sure that the tool is set to a very low torque to prevent damage to the product.
- Level



How to use the PARTS IDENTIFIER

Before you begin assembly, please make sure that you have all the parts listed and in the correct quantities. This will ensure the quickest and most organized assembly.

Be sure to work on the assembly on a soft non-marring surface such as carpet or the inside of the corrugate box top to prevent causing damage to the table surface during assembly. If using the box top, remove all staples from box first.

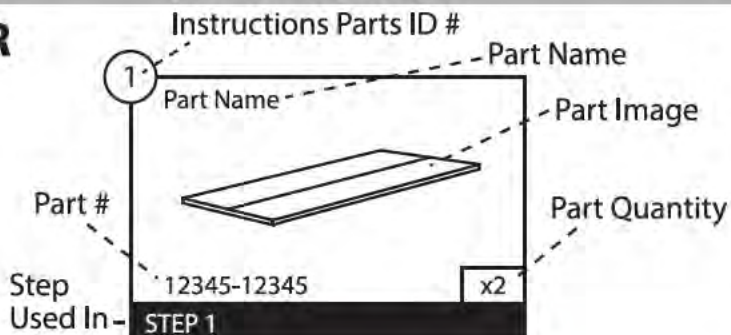

PARTS IDENTIFIER

  1 Main Cabinet  NOT REPLACEABLE x1 STEP 1	2 Goal Box  34777-02481 x2 STEP 1	3 Leg - Right  34777-03481 x2 STEP 2	4 Leg - Left  34777-04481 x2 STEP 2
5 Leg Panel - End  34777-05481 x2 STEP 3	6 Leg Panel - Side  34777-06481 x2 STEP 4	7 Leg Leveler  34777-07481 x4 STEP 4	8 Table Tennis Top - Large  34777-08481 x2 STEP 6
9 Table Tennis Top - Small  34777-09481 x1 STEP 6	10 Table Tennis Post  34777-10481 x2 STEP 6	11 Table Tennis Net  34777-11481 x1 STEP 6	12 Table Tennis Support  34777-12481 x1 STEP 6

PRE-INSTALLED PARTS

30 Puck Return Cover  34777-30481 x2 PRE-INSTALLED	31 Scorer  34777-31481 x1 PRE-INSTALLED	32 Corner Cap  34777-32481 x4 PRE-INSTALLED	33 Control Box  34777-33481 x1 PRE-INSTALLED
--	---	--	--

PRE-INSTALLED PARTS

34 Goal Box with Long Wire



34777-34481

x1

PRE-INSTALLED

35 Goal Box with Short Wire



34777-35481

x1

PRE-INSTALLED

36 Battery Box



34777-36481

x1

PRE-INSTALLED

37 Blower with Wire



 
34777-37481

x1

PRE-INSTALLED

HARDWARE

60 Screw



34777-60481

x4

STEP 1

61 Bolt



34777-61481

x12

STEP 2

62 Washer

 


34777-62481

x12

STEP 2

63 Screw - Washer Head



34777-63481

x16

STEP 3,4

64 Allen Key



34777-64481

x1

65 T-Nut




34777-65481

x12

PRE-INSTALLED

ACCESSORIES

80 Pusher

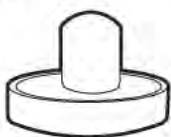

34777-80481

x2

81 Puck



34777-81481

x2


82 Table Tennis Ball



34777-82481

x2

83 Table Tennis Paddle

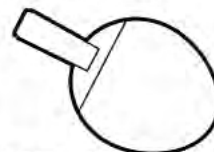

34777-83481

x2

84 Felt Pad



34777-84481

x2

PRE-INSTALLED

85 Table Tennis Post Cap



34777-85481

x2


PRE-INSTALLED

ASSEMBLY INSTRUCTIONS

Hover Hockey Table Construction

START

BEFORE BUILDING - Please inspect and layout all your PARTS

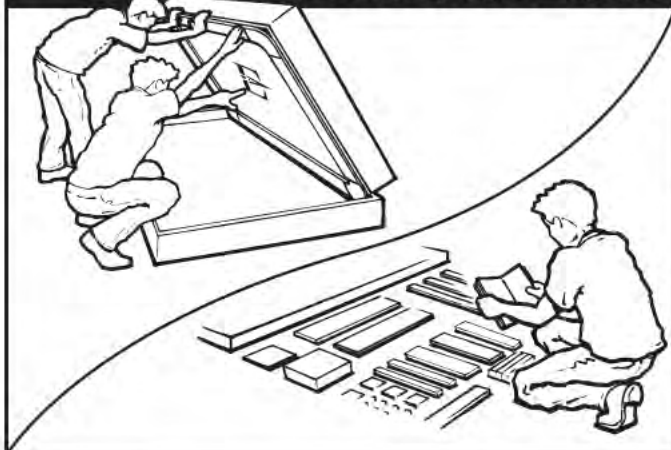


All parts are listed in the Parts Identifier and Accessories.

Your Cabinet (Table Game Playfield) is **NOT REPLACEABLE**. Any damage that exists to your playfield is not reparable under warranty. If your playfield is damaged, the entire game must be returned to the original place of purchase for an exchange.

Please review the Parts Identifier and make sure that you have all parts before beginning assembly.

STEP 1

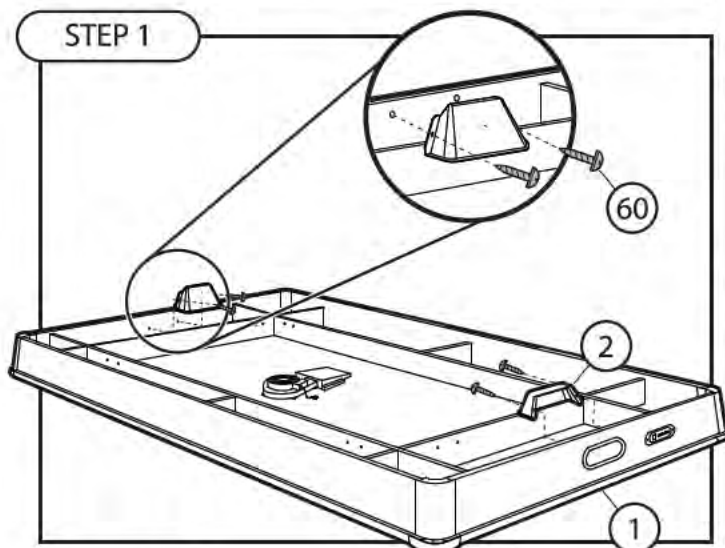

COMPONENTS

QTY.

① Main Cabinet

x1

② Goal Box

x2

HARDWARE


QTY.

⑥① Screw

x4

NOTE:

STEP 2

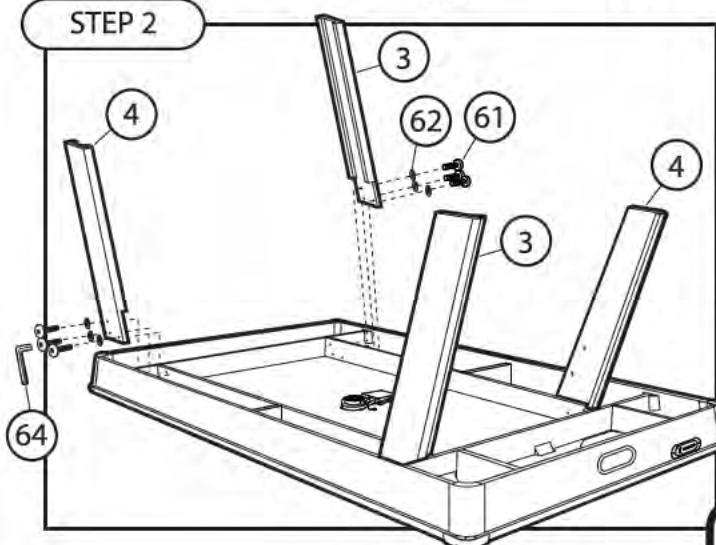

COMPONENTS

QTY.

③ Leg - Right

x2

④ Leg - Left

x2

HARDWARE

QTY.

⑥① Bolt

x12

⑥② Washer

x12


⑥④ Allen Key

x1

NOTE:

Repeat for all 4 Legs.



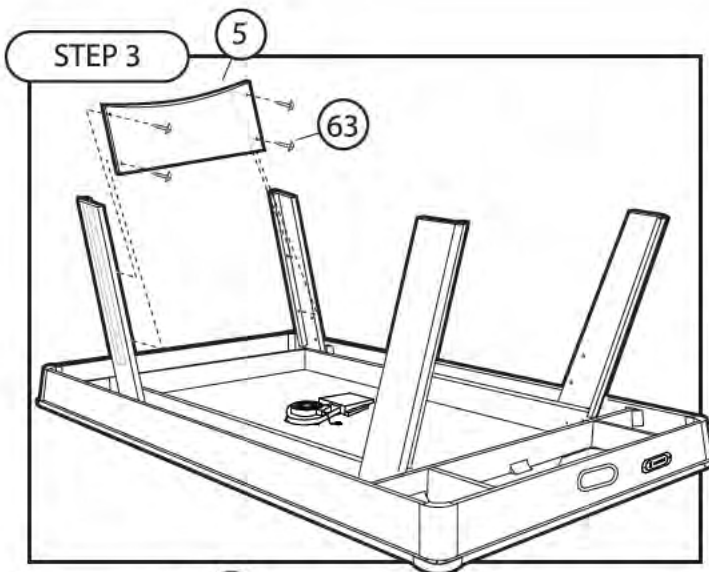

COMPONENTS


⑤ Leg Panel - End x2

HARDWARE

⑥③ Screw - Washer Head x8

NOTE:

Repeat for both Leg Panel - Ends.

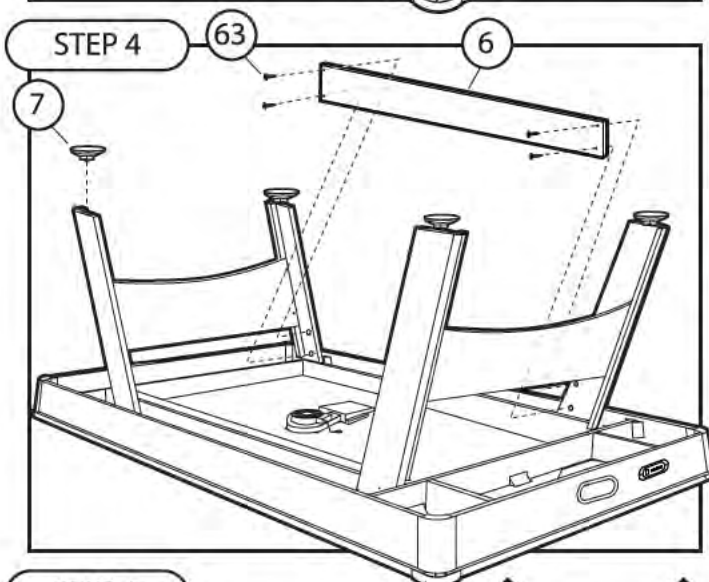

COMPONENTS

⑥ Leg Panel - Side x2

⑦ Leg Leveler x4


HARDWARE

⑥③ Screw - Washer Head x8

NOTE:

Repeat for both sides.

Repeat for all 4 Leg Levelers.

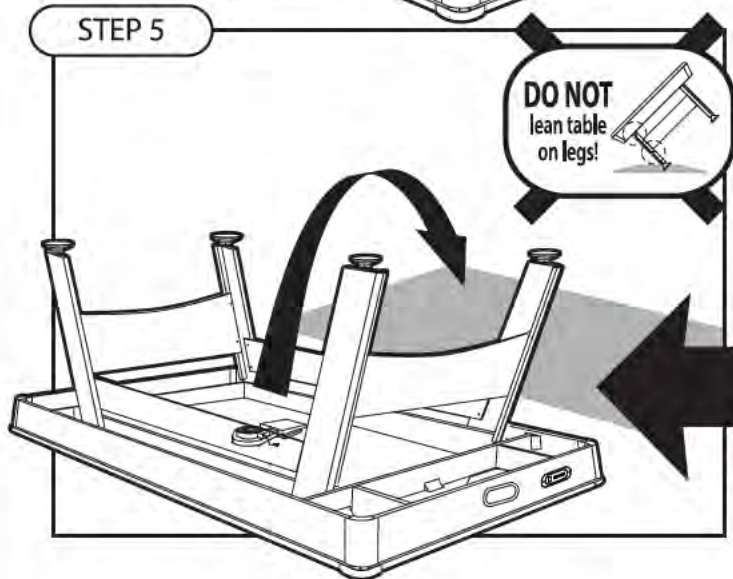

COMPONENTS

NOTE:


Lift table & turn it in the air.

Using at least 2 STRONG ADULTS, pick up & flip table over.

Place on all 4 Leg Levelers on the floor at once.

IMPORTANT: Lift table and turn it in the air.

To avoid damage, DO NOT lean table on its Legs.

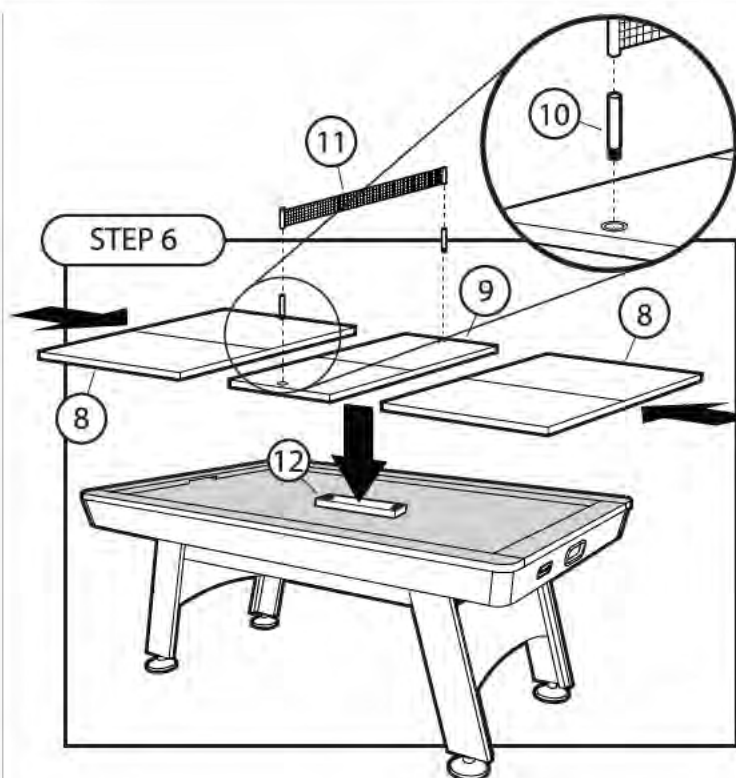

COMPONENTS

- ⑧ Table Tennis Top - Large
- ⑨ Table Tennis Top - Small
- ⑩ Table Tennis Post
- ⑪ Table Tennis Net
- ⑫ Table Tennis Support


QTY.

- x2
- x1
- x2
- x1
- x1

NOTE:




SCHEMATIC DIAGRAM

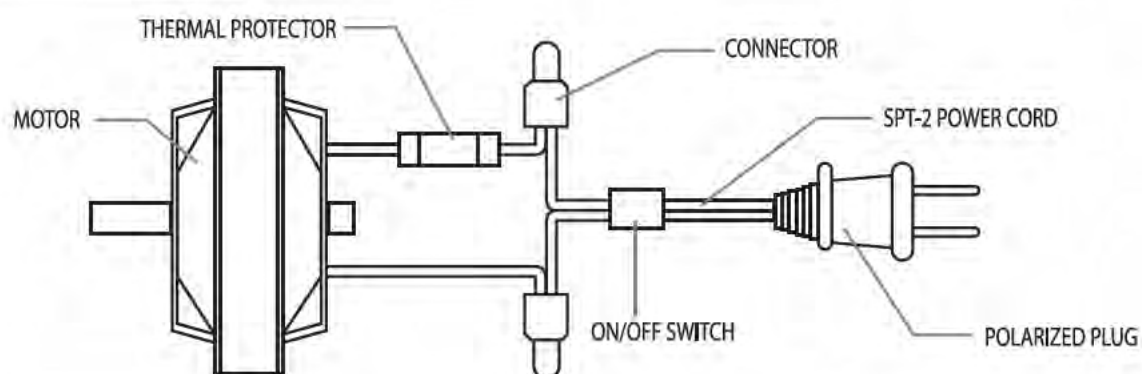


ELECTRIC RATING: 120V AC 60Hz 0.48A MOTOR

ELECTRICAL CONNECTIONS


CONNECTION DIAGRAM

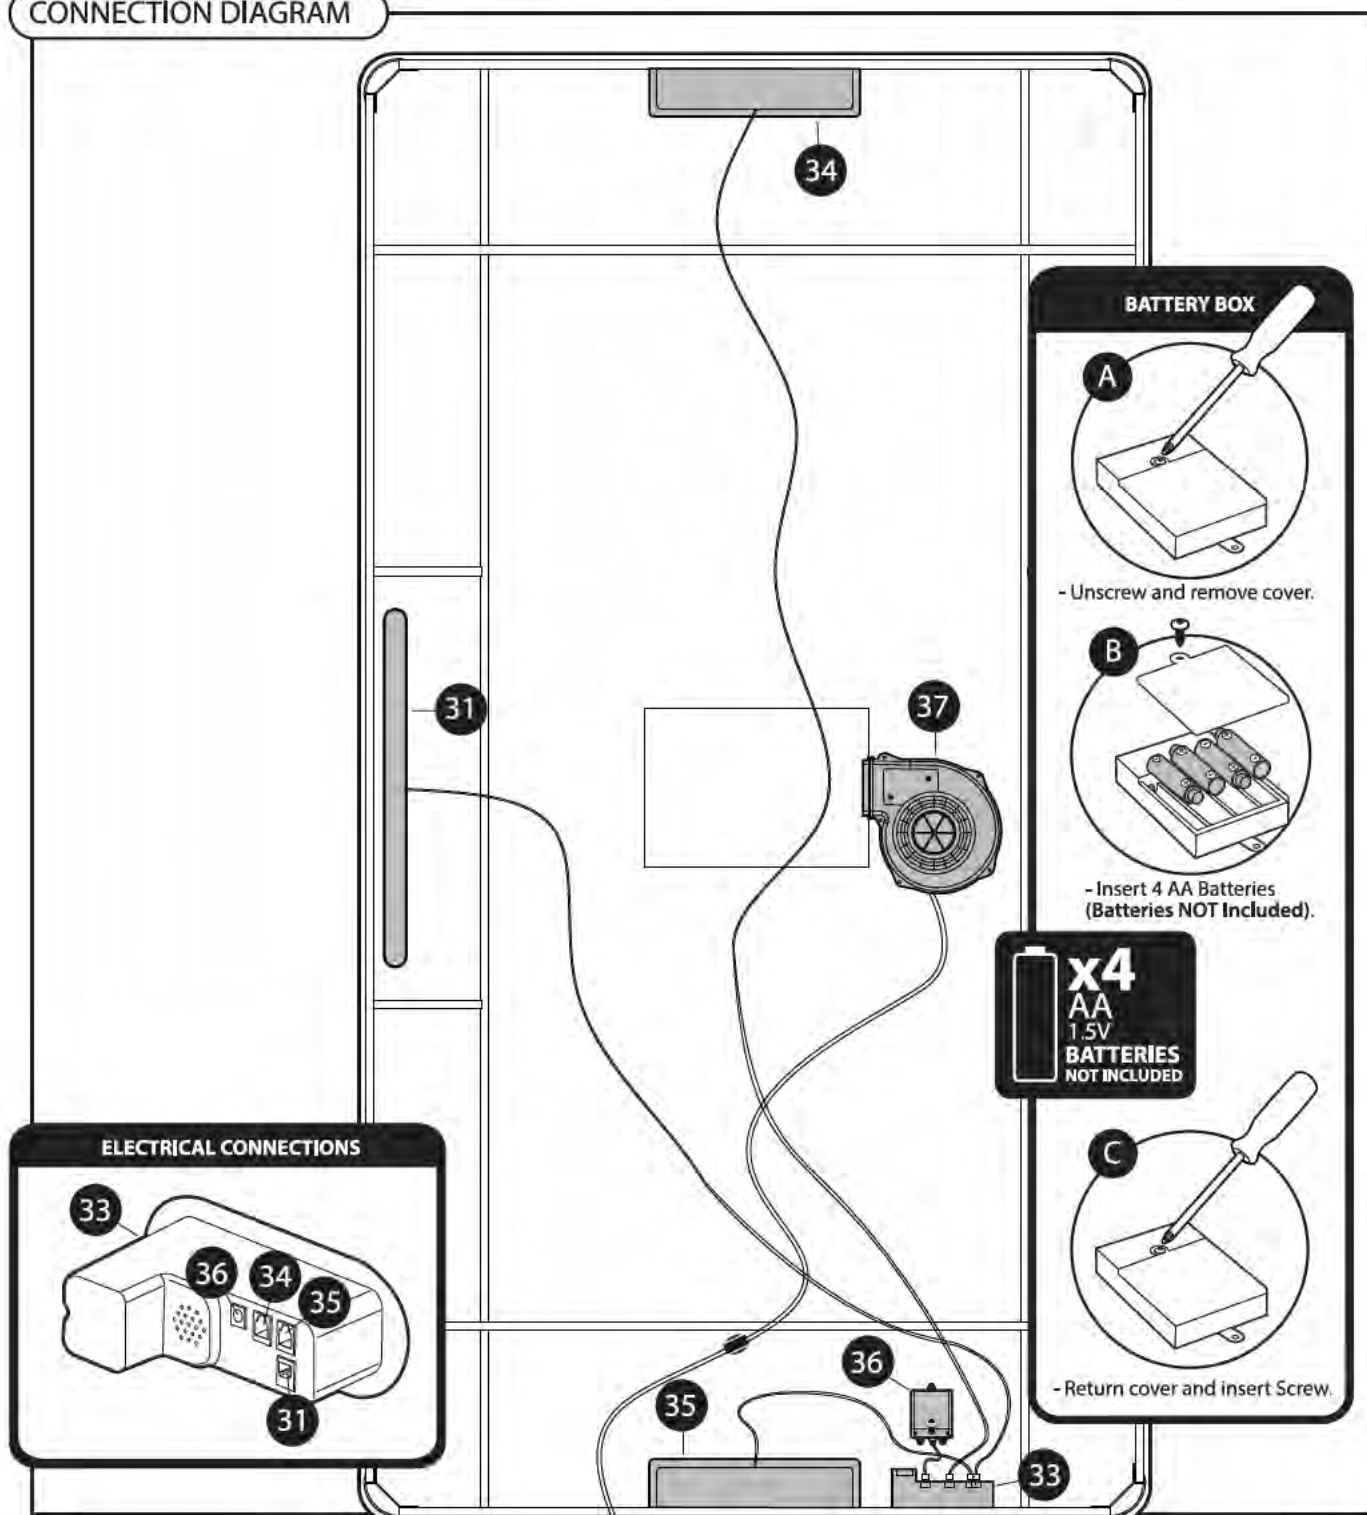


ELECTRICAL CONNECTIONS

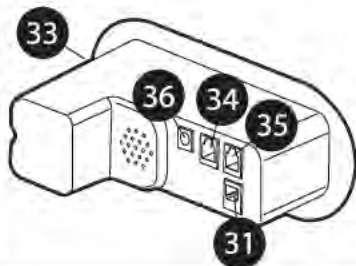

BATTERY BOX

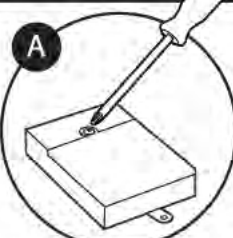


- Unscrew and remove cover.

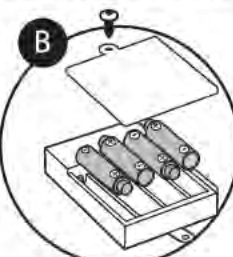

- Insert 4 AA Batteries
(Batteries NOT Included).

x4
AA
1.5V
BATTERIES
NOT INCLUDED

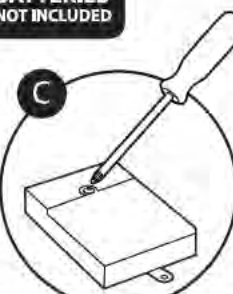

- Return cover and insert Screw.

COMPONENTS


QTY.

31 Scorer	x1
33 Control Box	x1
34 Goal Box with Long Wire	x1
35 Goal Box with Short Wire	x1
36 Battery Box	x1
37 Blower with Wire	x1

NOTE:

IMPORTANT: Plug into wall outlet.

ELECTRICAL CONNECTIONS

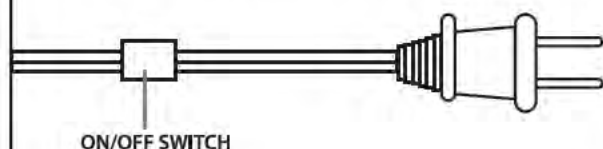

COMPONENTS


QTY.

NOTE:

Plug in your table.
Turn on the ON/OFF Switch.
ENJOY!

SCORER OPERATION

LED SCORING OPERATION

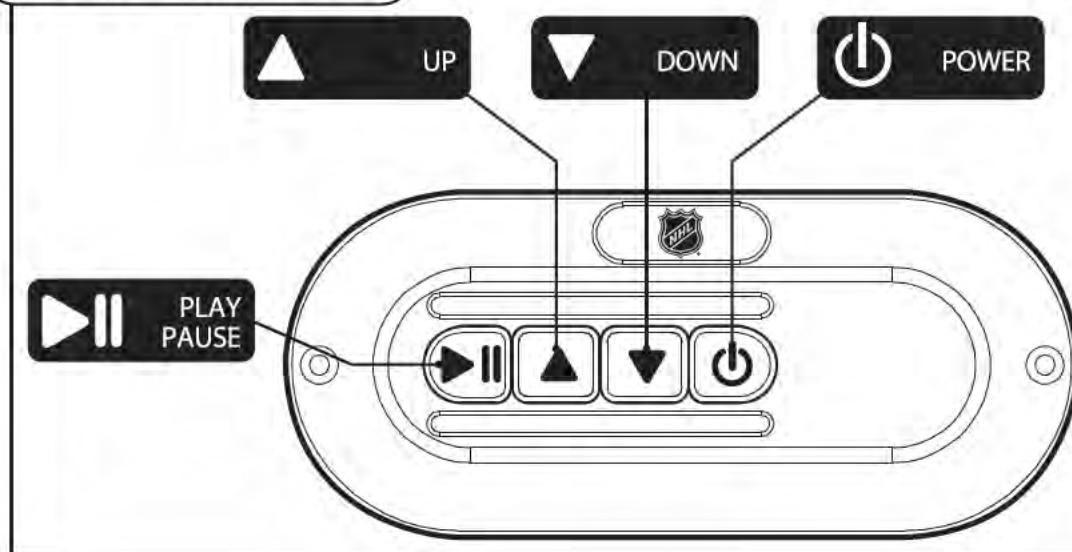

SCOREBOARD OPERATION

POWER

Press the POWER button  to turn the scoreboard ON.

SELECT PLAYING TIME

Press the UP  or DOWN  button to scroll through the playing time options.

- 3 Minutes
- 5 Minutes
- 7 Minutes
- 10 Minutes
- Tug of War (Each goal scored moves the LEDs towards the scoring player. First player to reach 11 wins!)
- Free Play (no time limit)

Press the PLAY button  to select the current time and begin playing the game.

SOUND

During game play, press the UP  or DOWN  buttons to adjust the volume level.

TIMEOUT

Press the PLAY button  during game play to pause the clock and take a timeout.

RESET

After the game is over, press any button (Except the POWER BUTTON) to RESET the scoreboard.
Press and hold any button (Except the POWER BUTTON) for 3 seconds to RESET the scorer at any time.

FCC IDENTIFIER :

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

BATTERY WARNING

DO NOT mix old and new batteries.

DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

DO NOT dispose of batteries in fire, batteries may explode or leak.

Limited Warranty

As described in and as limited by this Limited Warranty, EastPoint Sports Ltd., LLC (the "Company") warrants this Product to be free from defects in workmanship and materials for a period of 90 days from the date of original purchase. The term defects shall mean any imperfections that impair the use of the Table Game. The Company reserves the right to request confirmation of Proof of Purchase when requesting parts or service in order to confirm that this Product is within its warranty period and terms.

What is Covered: Except as provided herein, this Limited Warranty covers all defects in materials and workmanship. This Limited Warranty is void if the Product is:

- Damaged through improper usage or storage, negligence, misuse, abuse, transportation damage, acts of nature, or accident (including failure to follow the instructions supplied with the product).
- Used in commercial applications, rentals or a commercial environment.
- Modified or repaired by anyone not authorized by the Company.

What is Not Covered:

The Limited Warranty does not cover:

- Expendable items such as cosmetic parts, game playing accessories, and any other items that may show signs of wear due to normal usage.
- Any transportation/delivery/installation costs incurred by the Consumer (either home from the original place of purchase or back to the original place of purchase).
- Items not purchased from an authorized retailer (ie: this warranty does not apply to so-called "grey market" goods (those goods purchased from a third party)).

What the Company Will Pay For:

- If any part or component of the Product which is covered by this Limited Warranty is found by the Company to be defective, the Company will provide replacement parts without charge. The Company's obligation to repair or replace the Product or any portion of thereof, shall be limited to the original purchase price of the product.
- If during the Limited Warranty period, the product is found to be defective, the Company will, at the Company's option, repair, replace or make remuneration for the Product (either the same or equivalent value) without charge.

How to Obtain Warranty Service: In order to enforce your rights under this Limited Warranty, you must follow these procedures:

- You must return the ORIGINAL COPY OF YOUR SALES RECEIPT to the Company showing a purchase from an authorized retailer.
- You must call the Company's Consumer Service Department at 1-973-585-4747 on Monday through Friday between the hours of 9:00 A.M. and 5:00 P.M. (EST) to notify the Company of the nature of the problem. At the Company's option, replacement parts or a new Product (either the same or equivalent value) will be sent to you at no charge.
- If you are instructed to return the Product to the Company for servicing, you are responsible for shipping the Product, at your expense, to the address designated by the Company in packaging that will protect against further damage.
- You must also include your name, address, daytime telephone number, Product model number, and a description of the problem.
- The Company will pay for any shipping charges to return the repaired or replaced Product to you.

THIS LIMITED WARRANTY IS AVAILABLE ONLY TO THE ORIGINAL PURCHASER OF THE PRODUCT, PURCHASING FROM AN AUTHORIZED RETAILER, AND IS VALID ONLY IN THE UNITED STATES AND CANADA. THE COMPANY'S LIABILITY IS LIMITED TO THE REPAIR, REPLACEMENT, OR REMUNERATION, AT ITS OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL NOT INCLUDE ANY LIABILITY FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND. THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR DO NOT ALLOW FOR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. TO THAT EXTENT, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This Limited Warranty gives you specific legal rights, but you may also have other rights that vary from state to state.

If you have questions regarding this Limited Warranty or the operation of the Product, you may call or write us.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY AN ORIGINAL COPY OF THE SALES RECEIPT/PROOF OF PURCHASE. REPORT ANY DEFECTS TO:



20 Commerce Boulevard Succasunna, NJ 07876 • 1-973-585-4747
PRINTED IN CHINA