



PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

CDM-1




CONGRATULATIONS

You are now the proud new owner of an
Original Corn Dog Maker
Item No. CDM-1

Before using your Corn Dog Maker for the first time, carefully read the instruction manual. Please observe all safety precautions and follow the operating procedures. If you pass this appliance to a third party, please include the operating instruction manual.

Save these instructions in a safe place for future reference.

PARTS DESCRIPTION

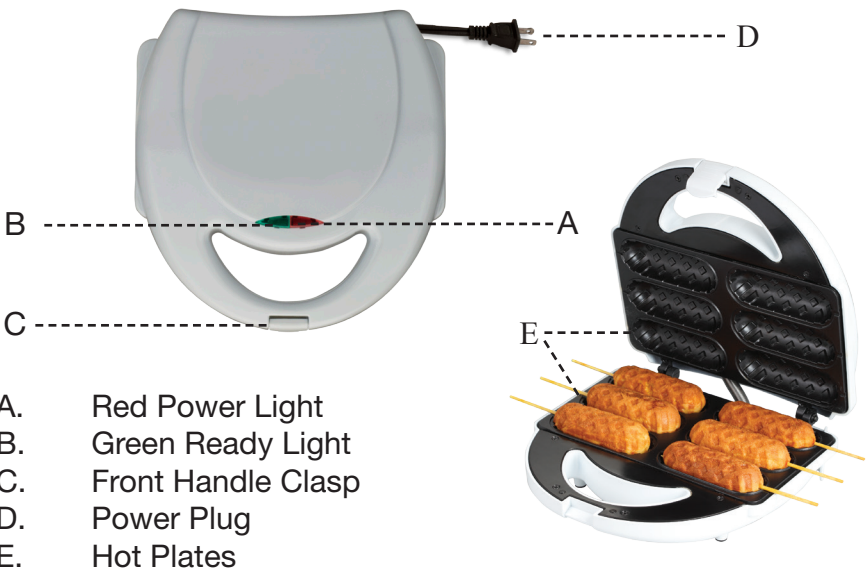

ELECTRICAL SPECIFICATIONS

VOLTAGE	FREQUENCY	WATTAGE
120 V	60 Hz	650 W

READ ALL INSTRUCTIONS BEFORE USING THE CORN DOG MAKER

FOR HOUSEHOLD USE ONLY

ELECTRICITY PRECAUTIONS

- To protect against electric shock, do not immerse cord, plugs, or other electric parts in water or other liquids.
- Do not operate any appliance with a damaged cord or plug.
- Do not use this appliance outdoors.
- After use, unplug cord from electrical outlet.
- Do not leave the appliance plugged in when not in use.
- Always unplug the appliance from the electrical outlet and allow to cool before cleaning.
- Once this unit is plugged into an electrical outlet it should not be left unattended.
- A short power cord is provided with this appliance to reduce the risk of entanglement or tripping. While we do not recommend it, extension cords may be used if care is exercised. If an extension cord is used, ensure that the marked electrical rating of the extension cord is equal to or greater than that of the appliance. If the plug is grounded, the extension cord must be a grounded-type-3-wire cord. To avoid pulling, tripping or entanglement, position the extension cord so it does not hang over the edge of the counter, table or any other area where it can be pulled on by children or tripped over.

CAUTION

To prevent burns or other personal injuries to children, read and follow all instructions and warnings.

IMPORTANT SAFEGUARDS

- Read all instructions before using the Corn Dog Maker.
- Do not touch hot surfaces. Always use the plastic handles. Never touch cover or grill when hot.
- To protect against fire, electric shock and injury, do not immerse cord, plug or Corn Dog Maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Before use, unwind the power cord completely and keep the cord away from the hot parts of the appliance.
- Do not let the power cord hang over edge of the table or counter nor touch hot surfaces.
- Do not place on or near hot gas or electric burner, or in a heated oven.
- Only operate the Corn Dog Maker on a dry, flat non-slip surface.
- Do not use the Corn Dog Maker outdoors.
- Do not operate the Corn Dog Maker with a damaged cord or plug. If this product malfunctions, or has been damaged in any manner, return it to the Smart Planet Service Center for examination, repair or adjustment.
- The use of accessory attachments not recommended by Smart Planet may result in fire, electric shock or injury.
- Always unplug the Corn Dog Maker from the electrical outlet when not in use and before cleaning to avoid accidental electrical shock. Allow it to cool before cleaning.

- As long as the appliance is hot, even if unplugged, there is the danger of getting burned. Do not touch it and do not put it into storage while hot.
- Do not use the Corn Dog Maker for other than intended use.
- For use only on 120V, 60HZ power. Always use a socket with a good ground connection. Do not use three to two-way adapter on the three prong power cord provided.
- For interior household use only.

PRECAUTIONS FOR USE AROUND CHILDREN

- Close supervision is necessary when this appliance is used near children
- NEVER allow cord to hang over any edge where a child can reach it. Arrange cord to avoid pulling, tripping or entanglement.

BEFORE INITIAL USE

1. When using for the first time, remove all packaging materials and unwind the power cord from the appliance.
2. Clean the appliance with warm soapy water using a damp cloth, then dry it. DO NOT immerse the whole unit in water at anytime.

Save these instructions in a safe place for future reference.

HELPFUL HINTS

- As soon as the appliance is ready, the Green Ready Light will turn on.
- Hot dogs come in various sizes.
- Cut hot dogs to correct size to fit into the Corn Dog maker.
- Corn dogs can be made with or without the included corn dog sticks. Always preheat before use.
- Plug cord into a 120-volt AC power outlet while preparing the filling. Once the control light illuminates the baking surface is ready for use.
- During first use, there may be a slight odor once the unit has warmed up. That is caused by the normal breaking in period and is nothing to be concerned about.
- Should the top of the corn dogs be light in color and not brown, try adding a little more batter to each cavity.
- If the bottom of the corn dogs are too light, try using a little less batter and/or preheating the corn dog maker longer.
- Use smooth-edged plastic utensils. DO NOT use sharp-edged cooking tools such as knives, forks, spoons etc. as the scratching will affect the non-stick performance.

CAUTION:
**THIS APPLIANCE IS NOT TO BE
OPERATED IN THE OPEN POSITION**

OPERATING INSTRUCTIONS

Place Corn Dog Maker on a flat, dry surface.

1. Brush vegetable oil or cooking spray on cooking surfaces.
2. Keep the unit closed while preheating. The Green Ready Light will illuminate when the unit is ready for use.
3. Insert wooden skewer in each hot dog (this is optional).
4. Spoon batter evenly, about 1/2 to 2/3 full, in corn dog cavity on the cooking plate.
5. Place the cut hot dogs into the batter and then add a little more batter. Remember that the batter will rise and enclose the hot dog so there is no need to overfill.
- 6 Close the corn dog maker by lowering the upper plate onto the lower plate.
7. Bake until corn dogs are lightly brown (shorter or longer depending on personal preference). Do not open the Corn Dog Maker during the first 2 minutes of cooking.
8. Once the corn dogs are cooked carefully remove them using a wooden spoon or plastic spatula. Do not use a sharp or metal object, as it could damage the non-stick surface. Use caution as the heating surfaces as well as the sides and top of the appliance may be hot.
9. If you wish to bake more corn dogs, re-brush cooking surface with oil and preheat appliance.
10. After use, disconnect the plug from the power outlet. Allow the corn dog maker to cool down before cleaning.

CLEANING YOUR CORN DOG MAKER

- Unplug cord from the wall outlet.
- Only clean this appliance when it is completely cooled down.
- Clean the housing surface and the cooking surfaces of this unit with a soft, damp cloth.
- Be certain to wipe off any baked-on oil residue. When the non-stick cooking surfaces are thoroughly cleaned, the releasing capabilities of the coating will be retained.
- It is easiest to remove crumbs or left over batter with a very soft brush.
- Never use abrasive cleaning agents or sharp objects (i.e. scrubbing brush or knife) when cleaning.
- Caution: Do not immerse this appliance in water or other liquids as it could lead to electric shock.
- **DO NOT WASH IN DISHWASHER**



CLASSIC CORN DOG BATTER RECIPE

1 Egg, Beaten
1/4 Cup Milk
1/4 Cup Cornmeal
1/4 Tsp. Salt
1/2 Cup Whole Wheat Flour
1/2 Tsp. Baking Powder
1 Tbsp. Sugar

In a mixing bowl, combine all the ingredients and mix well. Cut hot dogs to the correct size of the Corn Dog maker cavity. Insert a wooden skewer into each hot dog, to make a "handle". With a tablespoon fill the Corn Dog Maker about 2/3 full and lay hot dog while on the stick into the corn dog cavity.

Add more batter on top of the hot dog and close the top securely. Do not overfill the cavities with batter as the filling will rise during the baking process.

Bake until the corn dogs are lightly brown. For a crunchier coating bake longer.



CHEESY CORN DOG MUFFIN RECIPE

- 2 (8.5 Ounce) Packages Cornbread Mix
- 2 Tablespoons Brown Sugar
- 2 Eggs
- 1 1/2 Cups Milk
- 1 Cup Grated Cheddar Cheese

In a mixing bowl, combine all the ingredients and mix well. Cut hot dogs to the correct size of the Corn Dog maker cavity. Insert a wooden skewer into each hot dog, to make a "handle". With a tablespoon fill the Corn Dog Maker about 2/3 full and lay hot dog while on the stick into the corn dog cavity.

Add more batter on top of the hot dog and close the top securely. Do not overfill the cavities with batter as the filling will rise during the baking process.

Bake until the corn dogs are lightly brown. For a crunchier coating bake longer.



CHEESE ON A STICK

1 Egg, Beaten
1/4 Cup Milk
1/4 Cup Cornmeal
1/4 Tsp. Salt
1/2 Cup Whole Wheat Flour
1/2 Tsp. Baking Powder
1 Tbsp. Sugar
Your Cheese of Choice

In a mixing bowl, combine all the ingredients and mix well. Cut hot dogs to the correct size of the Corn Dog maker cavity. Insert a wooden skewer into each hot dog, to make a "handle". With a tablespoon fill the Corn Dog Maker about 2/3 full and lay hot dog while on the stick into the corn dog cavity.

Add more batter on top of the hot dog and close the top securely. Do not overfill the cavities with batter as the filling will rise during the baking process.

Bake until the corn dogs are lightly brown. For a crunchier coating bake longer.



PIZZA ON A STICK

1 Egg, Beaten
1/4 Cup Milk
1/4 Cup Cornmeal
1/4 Tsp. Salt
1/2 Cup Whole Wheat Flour
1/2 Tsp. Baking Powder
1 Tbsp. Sugar
Mozzarella Cheese
Pepperoni
Pizza Sauce

In a mixing bowl, combine all the ingredients and mix well. Cut your mozzarella cheese and pepperoni or other pizza toppings of your choice into the correct size to fit the Corn Dog maker cavity. Insert a wooden skewer into the cheese, to make a "handle".

With a tablespoon fill the Corn Dog Maker about 2/3 full and lay in the skewer of cheese while on the stick into the corn dog cavity.

Add more batter on top of the skewer and close the top securely. Do not overfill the cavities with batter as the filling will rise during the baking process.

Bake until the corn dogs are lightly brown, for a crunchier coating bake longer.

Use your favorite pizza or marinara sauce for dipping!



SNICKERS ON A STICK

1 Egg, Beaten
1/4 Cup Milk
1/4 Cup Cornmeal
1/4 Tsp. Salt
1/2 Cup Whole Wheat Flour
1/2 Tsp. Baking Powder
1 Tbsp. Sugar
Snickers Chocolate Bars

In a mixing bowl, combine all the ingredients and mix well.

Cut your SNICKERS BAR into the correct size to fit the Corn Dog maker cavity.

Insert a wooden skewer into the SNICKERS, to make a "handle". With a tablespoon fill the Corn Dog Maker about 2/3 full and lay the SNICKERS while on the stick into the corn dog cavity. Add more batter on top of the SNICKERS and close the top securely.

Do not overfill the cavities with batter as the filling will rise during the baking process.

Bake until the corn dog is lightly brown, for a crunchier coating bake longer.

90 DAY LIMITED WARRANTY

Smart Planet warrants this appliance from failures in its materials and workmanship for 90 days from the date of original purchase provided the appliance is operated and maintained in conformity with the instruction manual. Any defective part of the appliance will be repaired or replaced at Smart Planet's discretion. Customers must provide proof of purchase when submitting a warranty claim.

This warranty does not cover discoloration or any damage to the non-stick surfaces of the appliance. This warranty is null and void, as determined solely by Smart Planet, if the appliance is damaged through accident, misuse, abuse, negligence, scratching, shipping or if the appliance is altered in anyway.

If you think the appliance has failed or requires service within its warranty period, please e-mail the Service Department at service@smartplanet.net for further instructions. Please include a description of the defect along with the date you purchased the product and the original receipt with the original purchase date. A receipt proving the original purchase date will be required for all warranty claims, hand written receipts are not accepted. You may be instructed to return the appliance for inspection and evaluation. Return shipping costs are not refundable. Smart Planet is not responsible for returns lost in transit.

Valid only in USA and Canada



www.smartplanethome.com
Copyright 2014 Smart Planet Canoga Park, CA 91304
Service Center: service@smartplanet.net
v.ii 11/2014

Check out these other great products by Smart Planet!



SmartPlanet
www.smartplanethome.com