



ks®

KITSOUND

VOICE ONE™

SMART SPEAKER

USER MANUAL

Please read this manual carefully before use.

Contents

3	Important safety instructions
4	Box contents
5	Speaker & remote functions
6	Main speaker button functions
6	LED light ring status
7	Instructions for use
7	Power cables
7	App downloads
7	Connecting to a Wi-Fi network
8	iOS set up
11	Android set up (up to version 7)
14	Android set up (Android 8)
17	Factory reset
17	Brief introduction to the KS Player app
18	Side menu
19	Amazon account set up
19	Amazon Alexa app
19	Changing speaker location
20	Alexa voice services
20	Alexa
21	Interacting with the Alexa app
22	Spotify app
22	What is Spotify?
22	How to use Connect
23	Remote control
24	Multi-room audio set up
24	In the KS Player app
24	Using the speaker
25	Connecting a Bluetooth® device
25	Line-in connection
26	Auto standby
26	Care for your KitSound Voice One
26	Specifications
27	Troubleshooting
27	Amazon Alexa privacy and advertising policy
27	FCC ID: LMZ- KS31330 / IC: 1036A – KS31330



IMPORTANT SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.

WARNING: Please refer to the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING: The batteries (battery pack) are not to be exposed to excessive heat sources, such as sunshine, fire etc.

WARNING: The mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

[continued...]



WARNING

Do not ingest battery, Chemical Burn Hazard

The remote control supplied with contains a coin/button battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediately medical attention.

Do not dispose of Lithium coin cell batteries with general waste. Please return it to battery recycling collection point. Your product and batteries must be recycled or disposed of properly.



Spotify is all the music you'll ever need. Millions of songs available instantly. Just search for the music you love, or let Spotify play you something great.

The Spotify software is subject to third party licenses found here:
<http://www.spotify.com/connect/third-party-licenses>

Box contents


- KitSound Voice One Smart Speaker
- Quick start guide
- 3.5mm aux cable
- Remote control (coin cell battery included)
- UK power cable
- EU power cable
- US power cable

Speaker functions

1. Remote sensor
2. Standby & Microphone mute/unmute
3. Volume dial
4. Tap to Talk
5. LED light ring
6. Mode button (Bluetooth, Line-in and Wi-Fi)
7. Play/Pause/Pair button
8. KS LED Indicator*
9. Microphones
10. WPS button
11. Line-in (aux)
12. USB output (USB charge out)
13. AC mains input
(AC 100-240 V – 50/60 Hz 0.5 A)

Remote functions

14. Standby & Microphone mute/unmute
15. Volume+
16. Previous track
17. Tap to Talk
18. Next track
19. Volume–
20. Mode
21. Play/Pause/Pair
22. Battery cover
23. Sensor

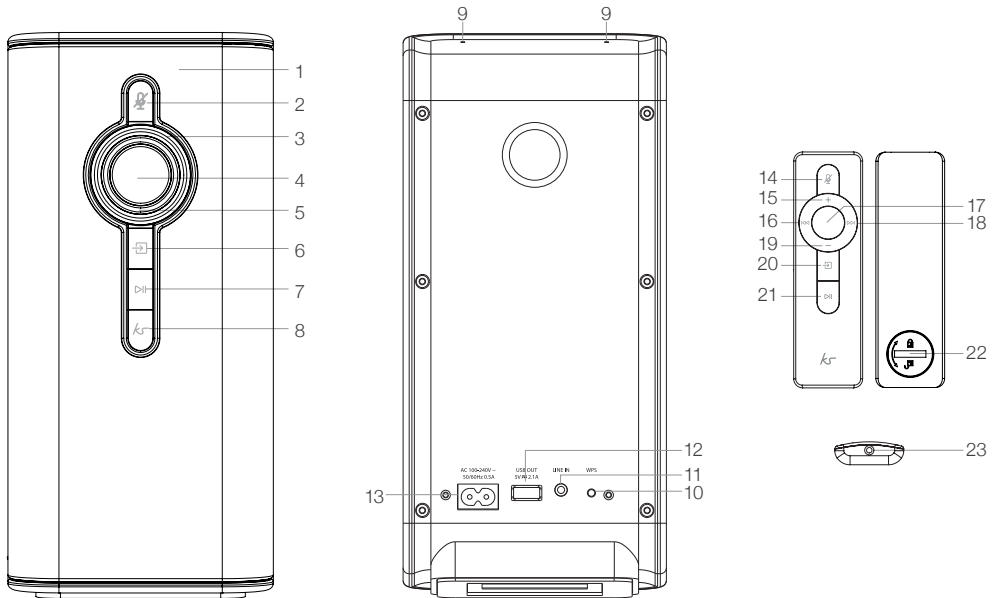

*The KS LED Indicator is not a button, do not press it.
 If the indicator is solid or flashing, the microphones will not be able to hear you.
 Reduce the volume or manually push Tap to Talk on the unit or remote.

Main speaker button functions

Control key	Short press	Long press (2 seconds)
Standby & Microphone mute/unmute	Disable/Enable mics	Turn unit On/Off
Tap to Talk	Manually wake Alexa	N/A
Mode	Change mode (Bluetooth/Line-in/Wi-Fi)	Make a group with chosen speaker becoming the master
Play/Pause/Pair	Play/Pause (Wi-Fi and Bluetooth mode)	Enter pairing mode (Bluetooth mode only)

LED light ring status

Speaker mode	LED colour	Flashing	Solid ON
Bluetooth	Blue	Disconnected	Connected
Wi-Fi	Turquoise	Alexa thinking	Alexa listening
	Blue & Turquoise	Alexa talking	–
	White	Wi-Fi disconnected	Wi-Fi connected
Line-in	Green	N/A	Line-in mode
All modes	Red	N/A	Mics off
All modes (when command is given)	Red	N/A	No network connection/not signed into Amazon account
Standby mode	No colour	Off	Off

Multi-room set up

Speaker mode	LED colour
Master speaker (Bluetooth mode)	Blue
Master speaker (Line-in)	Green
Master speaker (Wi-Fi)	White
Slave speaker	Red

Instructions for use

Welcome to your new KitSound Voice One Smart Speaker. Hopefully you have followed the Quick Start Guide with your KS Voice One to get your new speaker up and running as quickly as possible.



Note: We recommend to place the KS Voice One on a flat surface 30 cm away from other objects. This will make sure you receive the best sound and it won't be distorted.

Power cables

You have three power cables in the box, you must use the correct lead for your region and not use any third party leads as this will invalidate your warranty as we cannot guarantee their safety.

App downloads

The KS Player app is used for the setup and configuration of the KS Voice One, please use the links below to download before setup.

	https://www.kitsound.co.uk/ks-player-apple
	https://www.kitsound.co.uk/ks-player-google

To use the smart features on your KS Voice One, you must first connect it to the KS Player app installed on your device. See 'Connecting to a Wi-Fi network' to complete this step.

Amazon Alexa

The Amazon Alexa app is used for Skills and other smart features of the KS Voice One, please use the links below to download before setup.

	https://www.kitsound.co.uk/alexa-app-apple
	https://www.kitsound.co.uk/alexa-app-google


To use the Amazon Alexa Skills and features on your KS Voice One, you must login to your Amazon Alexa app after you've set up the KS Voice One on your KS Player app. See 'Amazon Alexa app' to discover more about Amazon Alexa.

Connecting to a Wi-Fi network


Once you have plugged in and turned on your KS Voice One, the LED light ring (5) will be solid white. KS Voice One will say "powering up for the first time" followed by "Wi-Fi mode" and then the LED light ring (5) will start flashing white. The KS Voice One will finally say "Entering setup mode, follow the instructions in the app to finish the setup".

Note: The default speaker location (Seattle) needs to be changed to reflect your location. Please read the Amazon Alexa app section after the set up.


iOS set up

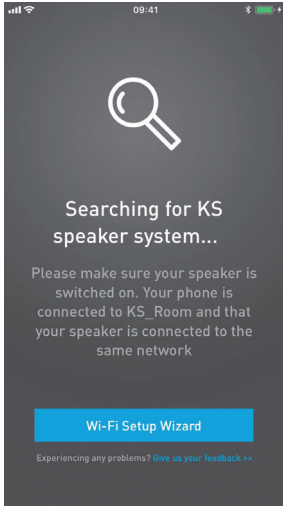


1. Open up the KS Player app and select 'Wi-Fi Setup Wizard'

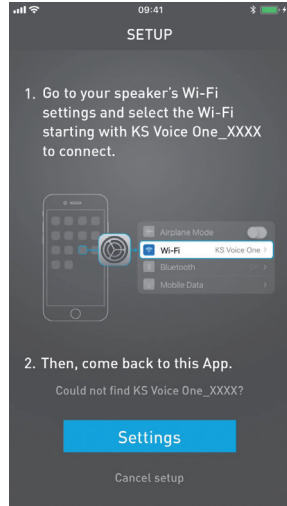



2. Select the option that says 'Settings' – this will take you to your phone's settings

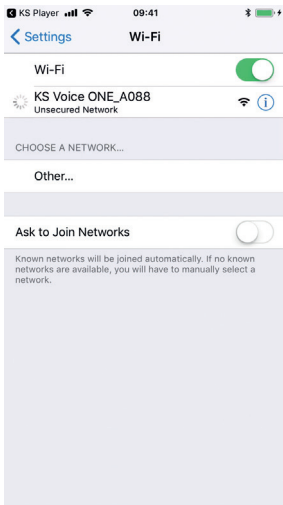


3. Connect to the speaker – select Wi-Fi and select the network name that starts with 'KS Voice One... ', return to the KS Player app once the connection is made

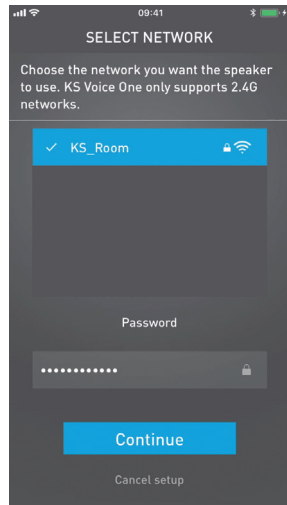


4. Connect to your network – choose your home Wi-Fi network and enter the password – click continue
- Note:** If you do not know your home network password it can often be found written on the Wi-Fi router

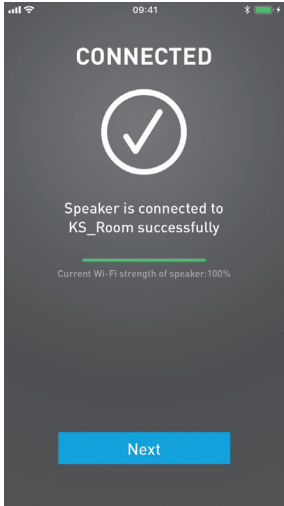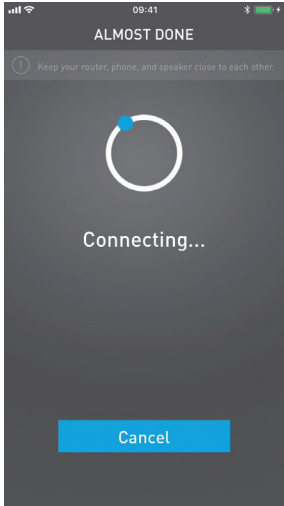


5. Almost done – please wait a few seconds for the speaker to connect to your chosen network. Once connected, the app screen will show your Wi-Fi connection strength

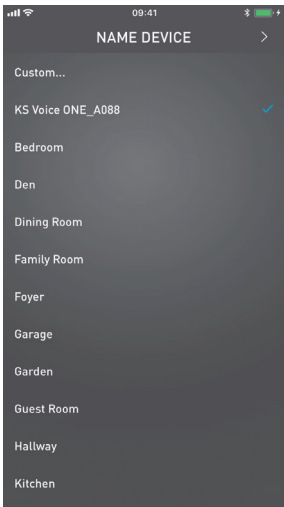


6. Now choose a name for your KS Voice One, you can keep the one it has, or set a custom one. If you are using multiple speakers in the home we recommend naming each speaker by location in the home

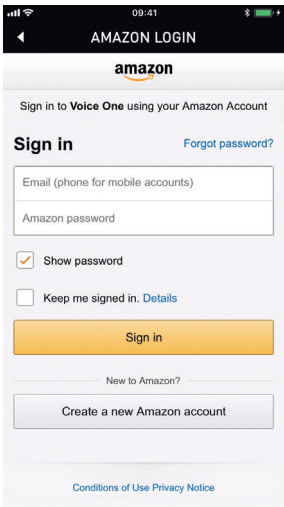


7. Sign in with your Amazon account details or create an account if you do not have one (see Amazon account set up instructions)

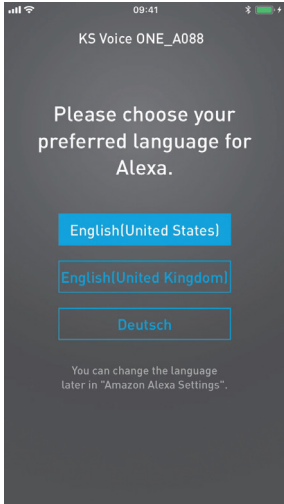


8. Finally, choose your preferred language for Alexa and confirm

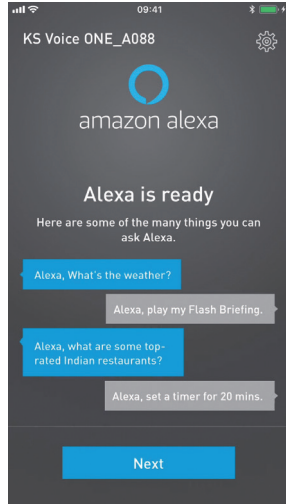

9. Now you are ready to start talking to Alexa, press 'Next'

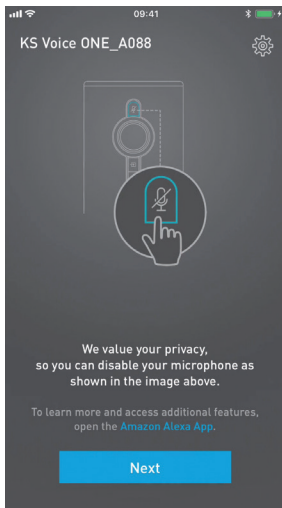


10. Privacy notice: You can mute the microphones on the KS Voice One by pressing the Microphone Mute button (2) on the speaker or (14) using the remote

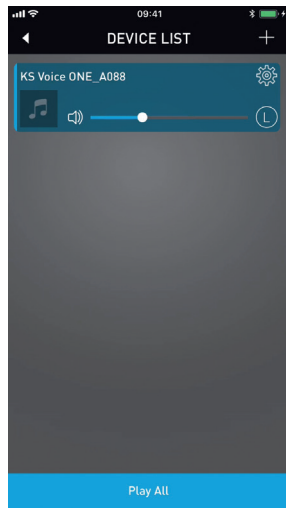



11. Once your speaker set up is complete it will become visible on your device list screen. From this screen you can adjust volume and configure the speaker into groups with other speakers on your network


Android set up (up to version 7)

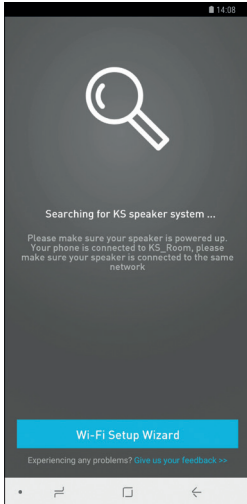

1. Open up the KS Player app and select 'Wi-Fi Setup Wizard'

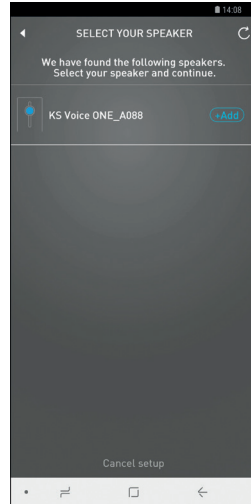



2. Select your speaker – choose the option that says '+Add' next to the KS Voice One – if no speakers appear on the list, please refresh the page by clicking the  – the screen will appear with 'checking Wi-Fi' and then 'scanning'

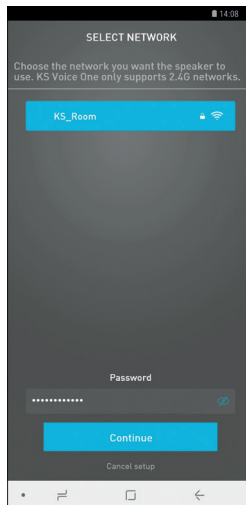


3. Connect to your network - choose your home Wi-Fi network and enter the password – click continue

Note: If you do not know your home network password it can often be found written on the Wi-Fi router


[continued...] Android set up (up to version 7)

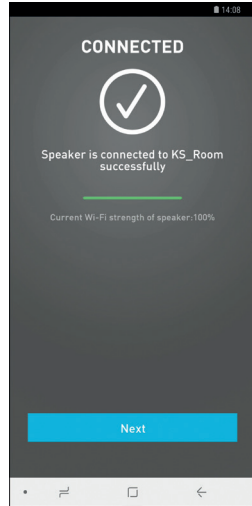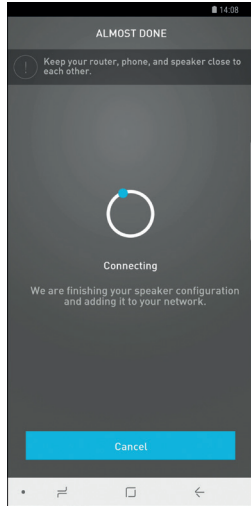

4. Almost done – please wait a few seconds for the speaker to connect to your chosen network. Once connected, the app screen will show your Wi-Fi connection strength

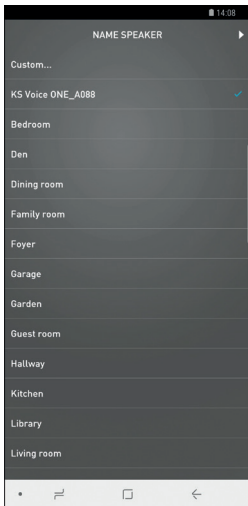


5. Now choose a name for your KS Voice One, you can keep the one it has, or set a custom one. If you are using multiple speakers in the home we recommend naming each speaker by location in the home

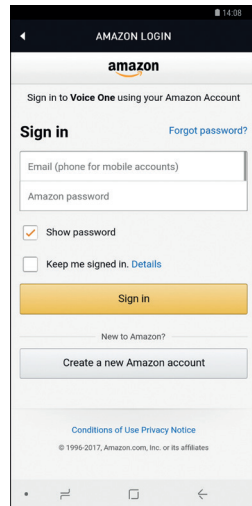


6. Sign in with your Amazon account details or create an account if you do not have one (see Amazon account set up instructions)

[continued...] Android set up (up to version 7)

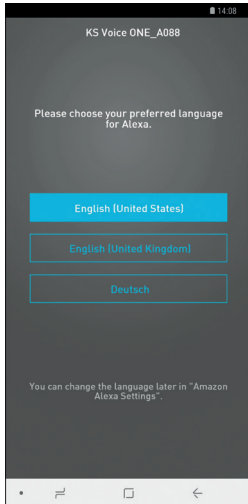

7. Finally, choose your preferred language for Alexa and confirm

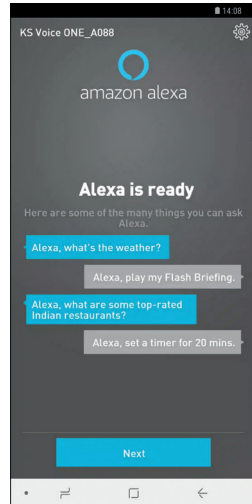

8. Now you are ready to start talking to Alexa, press 'Next'




9. Privacy notice – you can mute the microphones on the KS Voice One by pressing the Microphone Mute button (2) on the speaker or (14) using the remote




10. Once your speaker set up is complete it will become visible on your device list screen. From this screen you can adjust volume and configure the speaker into groups with other speakers on your network


Android set up (Android 8)

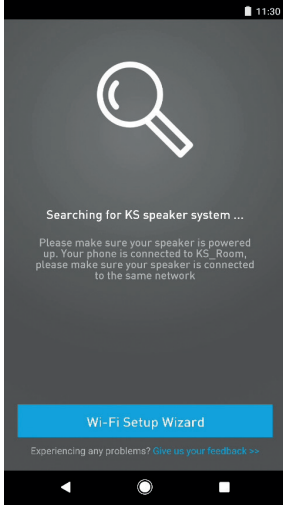


1. Open up the KS Player app and select 'Wi-Fi Setup Wizard'

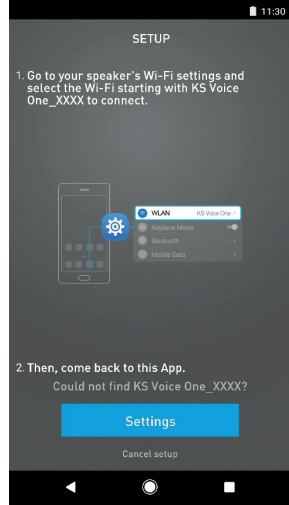

2. Select the option that says 'Settings' – this will take you to your phone's settings


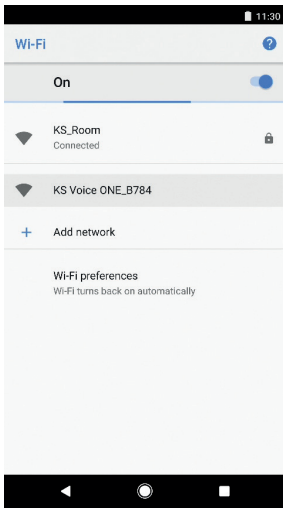


3. Select Wi-Fi and select the network name that starts with 'KS Voice One...' - then return to the KS Player app. An Android notification may show an alert explaining this connection does not have internet access. Select 'yes' to remain connected and continue set up

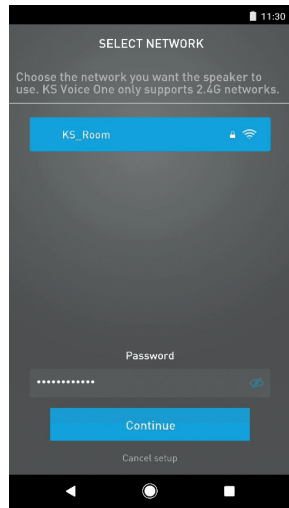

4. Select Network - choose your network and enter the password – click continue


Note: If you do not know your home network password it can often be found written on the Wi-Fi router

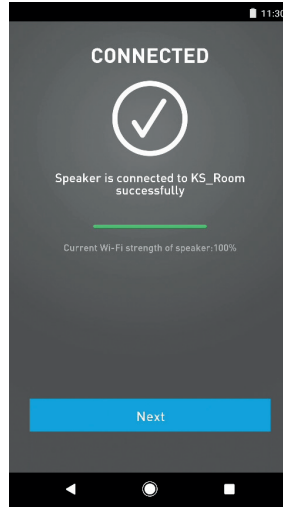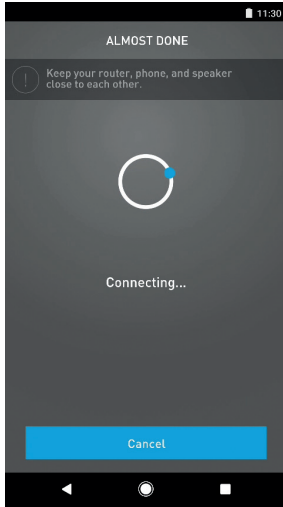


5. Almost done – please wait a few seconds for the speaker to connect to your chosen network. Once connected, the app screen will show your Wi-Fi connection strength




6. Now choose a name for your KS Voice One, you can keep the one it has, or set a custom one. If you are using multiple speakers in the home we recommend naming each speaker by location in the home

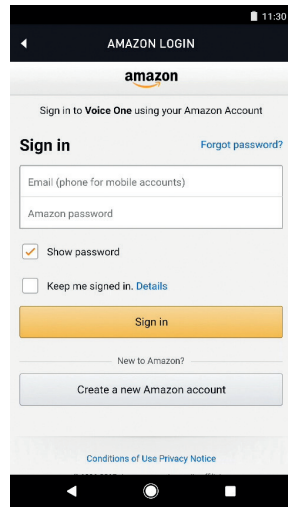


7. Sign in with your Amazon account details or create an account if you do not have one (see Amazon account set up instructions)

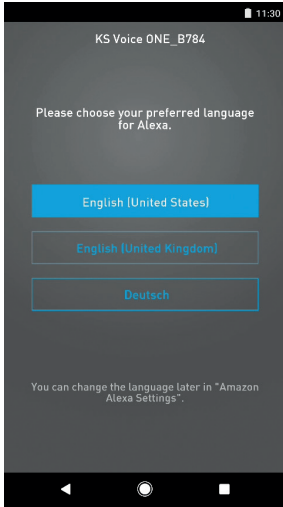


8. Finally, choose your preferred language for Alexa and confirm

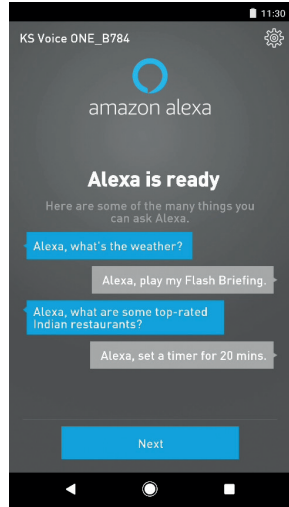

9. Now you are ready to start talking to Alexa, press 'Next'

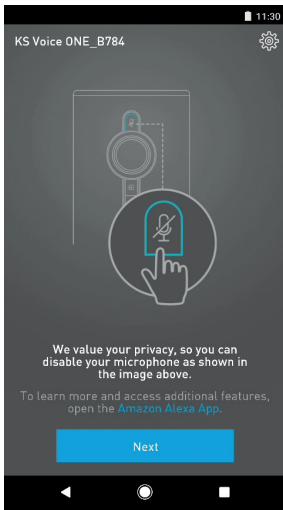

10. Privacy notice – you can mute the microphones on the KS Voice One by pressing the Microphone Mute button (2) on the speaker or (14) using the remote

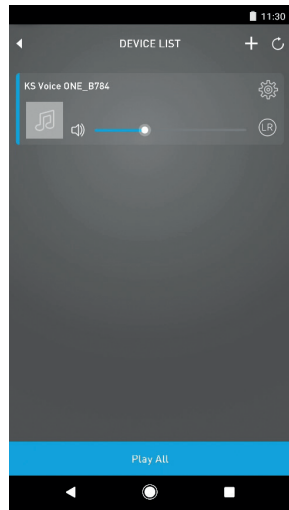

11. Once your speaker set up is complete it will become visible on your device list screen. From this screen you can adjust volume and configure the speaker into groups with other speakers on your network



Factory reset

If your KS Voice One fails to operate correctly, you can perform a factory reset.

1. Hold the WPS button (10) for 10 seconds and release
2. KS Voice One will say “**Restored to factory settings**”, wait 10 seconds and remove the power cable from AC mains input (12)
3. Plug the power cable back in and the KS Voice One will say, “powering up for the first time” followed by “Wi-Fi mode” and then “Entering setup mode, follow the instructions in the app to finish the setup”. The LED light ring (5) will start flashing white
4. Follow the ‘Connecting to a Wi-Fi network’ for set up

Brief introduction to the KS Player app

Once you’ve set up your KS Voice One with the KS Player app your screen will show the ‘Device List’, this is where you can control your speaker from within the app. Here you can:

- Change the channel of your speakers from ‘stereo’ to ‘left’ or ‘right’ specific
- You can add more KS Voice One speakers to your network by pressing ‘+’
- Group multiple KS Voice One speakers (up to 8) by holding and dragging (see multi-room section of this manual for details)
- Select the  to change your speaker’s name
- Tap top left on the  to show the Side Menu
- Perform system updates on you KS Voice One speaker

Note: Software updates – we are constantly looking to improve the performance of your KS Voice One. Over time software updates will be released via the KS Player app. When a software update option appears in the KS Player app we recommend updating as this will improve the performance of your speaker, unlock new services and fix any bugs.

Side menu

Favourites	Add songs to your 'Favourites list'
My Music	Play music from your device and create playlist – please note that on iOS, songs on iCloud cannot be played here. Song files must be stored on the handset/tablets' built-in memory
Tunein	Listen to radio stations from around the world
iHeartradio	Listen to radio stations from around the world
Spotify	Is a music, podcast and video streaming service, log in to use Spotify Connect or voice control your music
Tidal	Is a music and video streaming service
Naspter	Is a music streaming service
Amazon Alexa	Question suggestions and allows you to change the language
Edit music services	Add or remove services from your main menu
Line-in	Listen to music and redistribute across your network direct from the 3.5 mm aux connection
Bluetooth	Listen to music and redistribute across your network from a Bluetooth connection

Note: To exit Line-in or Bluetooth mode and change back to Wi-Fi mode, select one of the online streaming services above

Note: Alexa can still be asked questions when in Line-in or Bluetooth mode

Settings	Information on the KS Voice One's firmware is available as well as somewhere to leave feedback
-----------------	--

Note: If you experience problems when using the KS Voice One or KS Player app we recommend you send feedback via the app. This allows our developers to identify the issue to resolve it as quickly as possible.

Amazon account set up

During the KS Voice One set up you will be asked to sign in to your Amazon account, if you don't have one then please follow these instructions:

1. Scroll down to create a new Amazon account
2. Create an account by entering your name, email address and a password
3. Click 'confirm' and 'I agree' after reading all terms and conditions on the next two screens
4. You have now set up an Amazon account; if you wish to use any of Amazon's services or apps you will need to finish completing your Amazon account details. Go to your Amazon account settings at <http://www.amazon.com> on a secure webpage to complete your personal profile details

Note: If you live in a territory outside of the United Kingdom, America and Germany you will need to create an Amazon account in one of those countries by either going to Amazon.co.uk, Amazon.com and Amazon.de. Once you have created your new Amazon account please set up the KS Player app with your new Amazon account. You will also need to login to your Amazon Alexa App with your new details.

Note: If you wish to use Amazon Music, you must either subscribe to Amazon Prime or an Amazon Unlimited Music Service.

Amazon Alexa app

Open the Amazon Alexa app and sign in to your existing Amazon account, or follow the steps shown in the 'Amazon account set up' section of this manual to create an account.

Your KS Voice One will be listed as a device where you can change your device's name, device location, time zone and other settings.

Changing speaker location

Many of Alexa's most popular skills such as traffic and weather updates are location based. In order for Alexa to give accurate information you must configure your KS Voice One's location settings by following the steps below.

1. Open the Amazon Alexa app and select the side menu in the top left of the screen
2. Press 'Settings' and select your KS Voice One speaker
3. Scroll down to 'General' and press 'Edit' on Device Location
4. Fill in your address and press 'Save'. Select the suggested address and press 'OK'
5. Your device time zone will update following the address change, please check any alarms you have set

Note: For users with multiple KS Voice One speakers, each speaker's location will need to be updated by repeating the above process.

Find your FAQ's at: <http://kitsound.co.uk/alexa-faqs>

Alexa voice services

Alexa

To use Alexa, you must first connect your KS Voice One to the KS Player app installed on your device. See 'Connecting to a Wi-Fi network' to complete this step.

Once connected, you will have access to any of the services available via Alexa, including shopping, Amazon Prime music and any other Alexa Skill that has been added to your account.

Alexa Skills

Customise your KS Voice One with the thousands of Alexa Skills available to you. They will ensure your KS Voice One gets even smarter, enabling you to get the most out of it.

1. Open your Amazon Alexa app and tap the menu button in the top left corner of the screen, select 'Skills'
2. Search for the Skill you want or explore the categories to discover something new
3. Scroll through the thousands of Skills and once you have found one you like, simply press 'Enable Skill' to add the function to your KS Voice One
4. When you're ready to use that Skill, just start by saying, "Alexa"

Note: If that particular Skill is linked to a third-party account, such as pizza delivery or a taxi company – you'll be asked to sign in.

For more information on Amazon Alexa Skills please visit: <http://kitsound.co.uk/alexa-skills>

Interacting with the Alexa app

The Amazon Alexa app acts as a dashboard for users to enable Skills and features on their Alexa devices.

Music & Books	From here you can access all supported music services available on your KS Voice One
Lists	Shopping lists and to-do lists created using the KS Voice One will be visible here
Alerts & Alarms	Any reminders, timers or alarms created using KS Voice One will be visible here
Skills	Browse the thousands of Skills you can download and enable on your KS Voice One. Navigate to the 'Your Skills' page to edit which Skills you currently have enabled on your device
Smart Home	Configure smart home devices into groups, enable smart home skills and create smart home scenes. Scenes are used to control multiple smart home devices using a single voice command
Things to try	A list of voice commands for you to use on your KS Voice One. This is a great way to get familiar with your Alexa device
Settings	Update personal information to tailor your Alexa experience.
Player	View information about the media being played on the speaker, navigate through tracks and control volume from your KS Voice One
Queue	View upcoming media in playlists without interrupting playback.
History	See a list of previous voice interactions with your KS Voice One

Please follow the link to find out more on 'Things to try': <http://kitsound.co.uk/alex-a-things>


Spotify app

What is Spotify?

A better way to listen at home. Play Spotify through your speakers, laptop and TV, using the Spotify app as a remote. Enjoy the music together.

How to use Connect

You'll need Spotify Premium to use Connect, see the leaflet in your KS Voice One's box.

1. Add your new device to the same Wi-Fi network as your phone, tablet or PC (see product user instructions for details)
2. Open the Spotify app on your phone, tablet or PC, and play any song
3. If you're using the app on a phone – tap the song image in the bottom left of the screen. For tablet and PC move to step 4
4. Tap the Connect icon 
5. Pick your device from the list. If you can't see it, just check it's connected to the same Wi-Fi network as your phone, tablet or PC

All done! Happy listening.

Licenses: The Spotify Software is subject to third party licenses found here: <http://www.spotify.com/connect/third-party-licenses>

Remote control

We have included a Remote control as an alternative to voice activation. As well as volume and track adjustment, it also features the ability to mute the microphones and wake Alexa ready for a command.

Modes	Change the speaker's mode function by pressing the Mode button (20) to either Bluetooth, Line-in or Wi-Fi modes.
Pairing a new device	Whilst in Bluetooth mode, to activate device pairing, long press Play/Pause/Pair (21).
Multi-room	You can use your Remote to make a multi-room speaker group. To create a multi-room group aim the Remote at whatever speaker you would like to be the master unit and hold the Mode button (20), all remaining speakers will become the slaves. Any slave speaker you point the Remote at whilst holding the Mode button (20) will then disconnect from the group.
When you have your music loud	Press the Tap to Talk (17) button on the Remote if you're playing music over volume 7 and you want to ask a question but Alexa can't hear you. This will temporarily lower the volume allowing your voice command to be heard.

Note: In Multi-room set up, only the master speaker's Tap to Talk button can be used.

Note: When your Remote stops responding, the coin cell battery will need replacing, you'll need to replace it with a: CR2025e Lithium 3 V.

Note: When speakers are grouped together in multi-room, all commands must be made from the remote to the master speaker.

Multi-room audio set up

You can link up to 8 KS Voice One Smart Speakers, for ultimate surround sound. Have one either side of your TV for Left/Right stereo or have one per room, so you can hear your favourite songs all over the house.

In the KS Player app

1. To add more KS Voice Ones, press the '+' button in the top right corner, and repeat the steps in 'Connecting to a Wi-Fi network'
2. To link speakers into one group, hold down the selected device and drag it on top of the device you wish to be the master. You can change the channel of the device by clicking the 'LR' button to cycle through 'L' (left channel), 'R' (right channel) and 'LR' (stereo playback). If there is only one speaker in the room you should leave the speaker in 'LR' mode
3. The master speaker's LED light ring (5) will shine either blue, green or white depending on the media source
4. The LED light ring (5) of the slave speakers will shine red, indicating that their microphones have been disabled and it is part of a group
5. If you wish to remove a speaker from a group you can hold down the selected slave device and drag it into the bottom half of the screen. It will now return to being a separate speaker, free to play separate media

Using the speaker

1. Press and hold the Mode button (6) on the speaker or (19) on the remote, the chosen speaker will create a group and become the master, all other speakers on the network will become slave speakers
2. The LED light rings (5) of the slave speakers will shine red to indicate that the microphones have been disabled and the speaker has joined the new group
3. To remove a speaker from an existing group, simply press and hold the Mode button (6) on the speaker or (19) on the remote. The LED light ring (5) will now shine blue, green or white depending on input mode and will be free to play media from another source

Note: If you take a speaker out of the group you will have to either use the app to put the speaker back in the group, or re-create the group entirely using either of the methods above.

Connecting a Bluetooth® device

You can connect Bluetooth enabled devices to your KS Voice One. Please follow steps below to pair. Once a device is connected via Bluetooth, audio can be streamed over the Wi-Fi network using the KS Player app.

1. Cycle through modes by pressing the Mode button (6) or (20) on the remote to get to Bluetooth mode. The speaker will say “Bluetooth mode”
2. Long press the Play/Pause/Pair button (7) or (21) on the Remote and the LED light ring (5) will flash blue to indicate it's in pairing mode
3. Ensure your device's Bluetooth is turned on and search for 'KitSound Voice One' in available devices. Select this device
4. The devices will pair and the flashing LED light ring (5) will turn a solid blue
5. You will now be able to play music through your speaker via Bluetooth
6. To break the Bluetooth connection press and hold the Play/Pause/Pair button (7) or (21) on the Remote and the KS Voice One will re-enter Bluetooth pairing mode
7. To re-pair any devices follow the steps 1-4 in this section

Line-in connection

You can also connect music sources to your KS Voice One via a wired connection. Once a device is connected using the 3.5 mm aux cable, audio can be streamed over the Wi-Fi network using the KS Player app.

1. Connect an audio device to the KS Voice One by inserting one end of the 3.5 mm aux cable into your media device and the other end into the Line-in (11) of the speaker
2. Press the Mode button (6) to cycle through modes until the LED light ring (5) turns solid green indicating Line-in mode
3. You can now play your music from the audio device through the speaker(s)

PLEASE NOTE:

Your device will have an internal amplifier and if it is playing digital files like MP3s it will also have an integrated DAC (Digital Audio Converter). If you turn the volume up to 100%, your device will be sending a distorted signal. To avoid this, and to get the best quality from the speaker, we recommend that you do not run your device any higher than 95% volume when playing music via Bluetooth or Line-in. Some devices output higher than others, so you may need to reduce the volume if you experience distortion. Distortion will not occur when streaming directly from a Wi-Fi music source.

Auto standby

To save power, the KS Voice One will automatically enter standby if no music is played or no interaction has been made with the speaker for 15 minutes.

Simply saying “Alexa” or pressing the Tap to Talk button (4) or (17) on the Remote will wake the speaker.

Note: If the microphones are muted and the speaker goes into standby mode, saying “Alexa” will not wake the speaker as the microphones will still be muted. Press the Tap to talk button (4) or (17) on the Remote to wake the speaker.

Care for your KitSound Voice One

Please DON'T:

- Get the KS Voice One speaker wet
- Drop the KS Voice One speaker as this will invalidate your warranty
- Open up the KS Voice One speaker. There are no user serviceable parts inside
- Expose the KS Voice One speaker to extreme temperatures or rapid changes of hot to cold or vice versa

Please DO:

- Clean the KS Voice One speaker with a soft dry cloth and no detergents

Specifications

Bluetooth® V2.1 + EDR	
Wi-Fi frequency band	2.4 GHz
Bluetooth connectivity distance	up to 10 m
Remote IF distance	up to 6 m
S/N	60 dB
Frequency response	60 Hz – 20 kHz
Drivers	2 x 63.5 mm
Power	2 x 10 W
USB charge out	5 V, 2.1 A
AC input voltage	100 – 240V ~ 50/60 Hz
Dimensions (mm)	H278 x W130 x D130

Troubleshooting

We hope you've now got all the information you need to get started, but if you are having problems with your KitSound product, please feel free to contact us at: support@kitsound.co.uk

Amazon Alexa privacy and advertising policy

Kondor Ltd is no way affiliated with, or endorsed by any of the skills on the Amazon Alexa system. We do not record any personal information and do not promote any over air advertisements. For more information on Privacy and advertising policy please see <http://www.amazon.com>

'Hereby, Kondor Ltd declares that the radio equipment type, KSVG0Y Voice One Smart Speaker, is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://kondor.co.uk/product-documents.>'

FCC ID: LMZ- KS31330 / IC: 1036A – KS31330

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference; and
2. This device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage ;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The use and operation of this speaker is beyond our control. Warranty of the KS Voice One is limited to defects caused by faulty manufacture or defects in materials only. No warranty whatsoever is given or implied for damage caused by the user under any circumstances.

This does not affect your statutory rights.

Please do not attempt to open this product. There are no user serviceable parts inside. This may cause personal injury and will damage the product.

Making any attempt to open the product or carry out repair voids any and all warranties.



kitsound.co.uk

Please recycle this packaging responsibly.

Do not dispose of Lithium coin cell batteries with general waste. Please return it to battery recycling collection point.

Your product and batteries must be recycled or disposed of properly.

Products showing the 'Crossed Through' wheellie bin symbol must be recycled separately from household waste at the end of their useful life. Please DO NOT dispose of this appliance in normal household waste. Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Kondor Ltd. is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are acknowledged as the property of their respective owners. Unless otherwise stated their use does not imply that the trademark owner is affiliated with KitSound or endorses the products herein.

JB. 5745-a / Made in China. © KitSound is a trademark of Kondor Limited, 2017. Christchurch, Dorset, BH23 4FL, UK