

**GARMIN**<sup>®</sup>  
**Approach**<sup>®</sup> **G8**



**Owner's Manual**

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to [www.garmin.com](http://www.garmin.com) for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, and Approach® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Connect™ and Garmin Express™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Apple®, iPhone®, and Mac® are trademarks of Apple Inc., registered in the U.S. and other countries. iOS® is a registered trademark of Cisco Systems, Inc. used under license by Apple Inc. The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. microSD™ and the microSDHC logo are trademarks of SD-3C, LLC. Wi-Fi® is a registered trademark of Wi-Fi Alliance Corporation. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are those of their respective owners.

# Table of Contents

<b>Getting Started</b> .....	<b>1</b>
Charging the Device .....	1
Turning On the Device .....	1
Setting Up Club Advice .....	1
Support and Updates .....	1
Updating Software and Courses Using a Wi-Fi® Network .....	1
Locking the Touchscreen .....	1
<b>Playing Golf</b> .....	<b>1</b>
Hole View .....	1
Moving the Pin .....	2
Clubs .....	2
Club Advice .....	2
Measuring a Shot .....	2
Keeping Score .....	2
Handicap Scoring .....	3
Viewing PlaysLike Distance .....	4
Saving a Location .....	4
<b>Finding Courses</b> .....	<b>4</b>
About Course Preview .....	4
<b>TruSwing™</b> .....	<b>4</b>
TruSwing Metrics .....	4
Recording and Viewing TruSwing Metrics on Your Approach Device .....	5
Changing Your Club .....	5
Changing Handedness .....	5
Disconnecting Your TruSwing Device .....	5
<b>Customizing Your Device</b> .....	<b>5</b>
Settings .....	5
<b>Garmin Connect</b> .....	<b>5</b>
Using Garmin Connect .....	5
Bluetooth Connected Features .....	5
Wi-Fi Connected Features .....	6
<b>Appendix</b> .....	<b>6</b>
Calibrating the Compass .....	6
Installing a Memory Card .....	6
Device Care .....	6
Specifications .....	6
Clearing User Data .....	6
Using the Clip .....	6
Saving Energy While Charging the Device .....	7
<b>Index</b> .....	<b>8</b>



## Getting Started

### ⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

When using the device the first time, complete these tasks.

- 1 Register your device ([Support and Updates, page 1](#)).
- 2 Charge the device ([Charging the Device, page 1](#)).
- 3 Turn on the device ([Turning On the Device, page 1](#)).
- 4 Go play a game of golf ([Playing Golf, page 1](#)).

## Charging the Device

### ⚠ WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, store the device out of direct sunlight.

### NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

The device is powered by a built-in lithium-ion battery that you can charge using a standard wall outlet or a USB port on your computer.

- 1 Pull up the weather cap ① from the USB port ②.



- 2 Plug the small end of the USB cable into the USB port on the device.
- 3 Plug the large end of the USB cable into the AC charger.
- 4 Plug the AC charger into a standard wall outlet.
- 5 Charge the device completely.  
A fully charged battery can run for up to 15 hours.

## Turning On the Device

The first time you use the device, you are prompted to choose a language and unit of measure. You can also set up club advice during initial set up.

Hold

## Setting Up Club Advice

When you turn on the device for the first time, you can set up club advice. If you do not set up club advice during initial setup, you can enable it at any time ([Enabling Club Advice, page 2](#)).

- 1 Select or to select a club.
- 2 Select or to enter a distance.
- 3 Select to enter a distance for the next club.
- 4 Repeat steps 2 and 3 to enter a distance for each additional club.  
**NOTE:** You must enter a distance for at least three clubs.
- 5 After you have entered a distance for at least three clubs, select

## Support and Updates

Garmin Express™ provides easy access to these services for Garmin® devices. Some services may not be available for your device.

- Product registration
- Product manuals
- Software updates
- Map, chart, or course updates
- Vehicles, voices, and other extras

### Setting Up Garmin Express

- 1 Connect the device to your computer using a USB cable.
- 2 Go to [www.garmin.com/express](http://www.garmin.com/express).
- 3 Follow the on-screen instructions.

## Updating Software and Courses Using a Wi-Fi® Network

Before you can use Wi-Fi technology to update your device, you must connect to a Wi-Fi network ([Connecting to a Wireless Network, page 6](#)).

Select **Setup > Wi-Fi > Updates**.

Your device automatically installs available updates. Some updates may require you to restart your device.

## Locking the Touchscreen

You can lock the screen to prevent inadvertent screen touches.

 
- 1 Select .
- 2 Select .

## Playing Golf

- 1 Select **Play**.
- 2 Select a course.

### Hole View


The device shows the current hole you are playing.

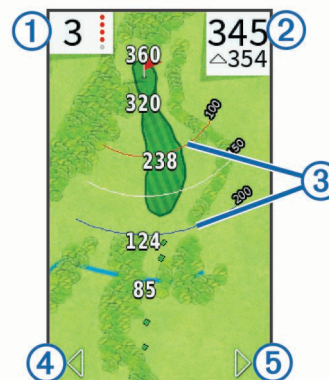

①	Displays the hole number. The number of colored dots indicates par for the hole.
②	Displays the distance to the middle of the green or selected pin position. Enables big numbers mode when selected.
③	Displays layup arcs that indicate the distance to the pin. Four arcs appear for par 5 or higher, three arcs appear for par 4, and zero arcs appear for par 3.
④	displays the previous hole when selected.  ends the round when selected (first and last holes only).
⑤	Moves you to the next hole when selected.

## Moving the Pin

While playing a game, you can take a closer look at the green and move the pin location.

- 1 Begin playing a game ([Playing Golf, page 1](#)) or previewing a course ([About Course Preview, page 4](#)).
- 2 Select **green view** to zoom in on the green.
- 3 Drag  to move the pin location.

The PinPointer feature adjusts to the new pin location.

## Viewing the Direction to the Pin

Before you can view the direction to the pin, you must calibrate your compass ([Calibrating the Compass, page 6](#)).

The PinPointer feature is a compass that provides directional assistance when you are unable to see the pin location.


Hold **pin pointer**.

## Clubs


You can save distance information for each club type.

If club advice is enabled, the device uses your club information to recommend a club for your next shot.

### Adding a Club

 
- 1 Select **Setup > Clubs > Add Club**.
- 2 Enter a club name.
- 3 Select .
- 4 Select a club type.

### Editing Club Information

- 1 Select **Setup > Clubs**.
- 2 Select a club.
- 3 Select an option:
  - To change the distance of a club, select **Edit Distance**.  
**NOTE:** This option is available only when you enable club advice.
  - To view club statistics, select **Shots**.  
**TIP:** Select  > **Save To Club Advice** to save the club to club advice.
  - To select the club material, select **Club Type**.
  - To relocate the club in the list, select **Move Up** or **Move Down**.
  - To remove the club from the list, select **Delete**.

## Club Advice

When enabled, the club advice feature recommends a club for your next shot.

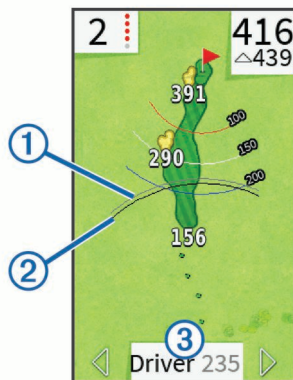

①	Displays the approximate club range for the recommended club when club advice is enabled.
②	Displays the approximate club range and accounts for elevation change when "plays like" distance is enabled.
③	Displays the recommended club and club distance when club advice is enabled.


## Enabling Club Advice

You can use club advice to view club recommendations when playing a round of golf.

- 1 Select **Setup > Club Advice**.
- 2 Select **On**.

## Measuring a Shot

- 1 After taking a shot, hold **measure**.
- 2 Select **Begin Measurement**.
- 3 Walk to your ball.





You do not have to walk directly to your ball to get an accurate measurement. The device measures distance in a straight line from your starting point. You can select  to return to the map while measuring.

- 4 When you arrive at your ball, select an option:
  - To discard the shot, select **Reset**.
  - To add the shot distance to a club average, select **Save Shot**, and select the club you used for the shot. The device saves the shot in the scorecard and adds the shot distance to your average shot distance for the club ([Editing Club Information, page 2](#)).

## Keeping Score

 
Before you begin keeping score, you must select the scoring method ([Setting the Scoring Method, page 3](#)).

You can keep score for up to four players.

- 1 Begin playing a game ([Playing Golf, page 1](#)).
- 2 Select **score**.
- 3 Select an option:
  - Select a player's name to edit it.
  - Select  to enter the number of strokes for the selected hole.
  - Select  > **Set Up Players** to edit player handicaps. This selection is displayed only if you have enabled handicap scoring ([Enabling Handicap Scoring, page 3](#)).
  - Select  >  > **Setup > Scoring > Method** to change the scoring method. If the scores you have already entered for the round are incompatible with the new scoring method, the device prompts you to clear all scores for the round, or keep the current scoring method.
- 4 Select **score** to return to the course map.

## About the Scorecard

You can view and change each player's name, score, and handicap during a round using the scorecard.

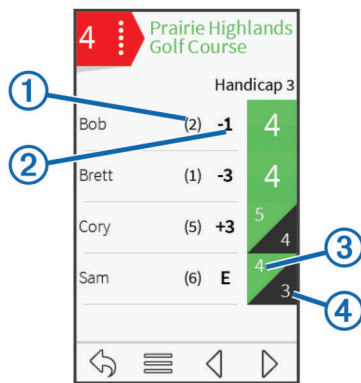

①	Local handicap
②	Total score
③	Actual strokes for the hole
④	Recorded strokes for the hole

## Setting the Scoring Method

You can change the method the device uses to keep score.

### 1 Select an option:

- If you are currently playing a round, select > > **Setup > Scoring > Method**.
- If you are not currently playing a round, select **Setup > Scoring > Method**.

### 2 Select a scoring method.

#### About Stableford Scoring

When you select the Stableford scoring method ([Setting the Scoring Method, page 3](#)), points are awarded based on the number of strokes taken relative to par. At the end of a round, the highest score wins. The device awards points as specified by the United States Golf Association.

The scorecard for a Stableford scored game shows points instead of strokes.

Points	Strokes Taken Relative to Par
0	2 or more over
1	1 over
2	Par
3	1 under
4	2 under
5	3 under

#### About Match Scoring

When you select the Match scoring method ([Setting the Scoring Method, page 3](#)), one point is awarded at each hole to the player who has the fewest strokes. At the end of a round, the player who won the most holes wins.

**NOTE:** Match scoring is available only for two players.

When you set the Approach to count strokes, the device determines the winner of each round. Otherwise, at the end of each hole, select the player who had the fewest strokes, or if the number of strokes was equal, select Halved.

#### About Skins Scoring

When you select the skins scoring method ([Setting the Scoring Method, page 3](#)), players compete for a prize on each hole.

When you set the Approach to count strokes, the device determines the winner of each hole. Otherwise, at the end of each hole, select the player who had the fewest strokes. You can select multiple players if there is a tie for the win.

## Viewing Round Statistics

You can view statistics for the round you are currently playing.

 
### 1 While playing a game, select **score** > .

### 2 Select an option:

- To view information for all players, select **Round Details**.
- To view more details about an individual player, select **Round Details** > > **Player Details**, select a player name, and select a statistic to view.

## About Individual Scorecards

The individual scorecard features a hole-by-hole overview of a player's round. Four symbols represent the number of strokes relative to par. A par score has no symbol.

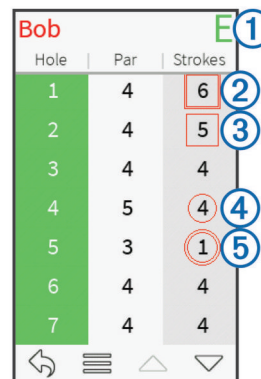

①	Overall score
②	Two or more over par
③	One over par
④	One under par
⑤	Two or more under par

## Viewing History

You can view saved shots, rounds, and player statistics.

### 1 Select **History**, and select a round to view.

The device shows information for all players.

### 2 Select an option.

- Select > **Player Details**, and select a player name to view an individual scorecard for that round ([About Individual Scorecards, page 3](#)).
- Select > **Course Details** to view a list of each hole and its par.
- Select > **Edit Scorecard** to adjust individual details for that round, including each player's name, score, and handicap.
- Select > **Delete Scorecard** to clear the scorecard from the device history.

## Viewing Scorecards on a Computer

You can view all scorecards on your computer.

### 1 Connect the device to your computer using the USB cable.

The device appears as a removable drive in My Computer in Windows® computers, and as a mounted volume on Mac® computers.

### 2 Open the device drive.

### 3 Open **Scorecard > ScorecardViewer.html** to view scorecards.

## Handicap Scoring

You can set a handicap for the hole ([Setting the Hole Handicap, page 4](#)) and for each player ([Setting a Player Handicap, page 4](#)).

## Enabling Handicap Scoring

### 1 Select **Setup > Scoring > Scoring Handicap**.

### 2 Select **On**.

## Setting a Player Handicap

Before you can score using handicaps, you must enable handicap scoring ([Enabling Handicap Scoring, page 3](#)).

- 1 While playing a game, select **score** > > **Set Up Players**.
- 2 Select for the player whose handicap you want to enter or change.
- 3 Select an option:
  - Select **Local Handicap** to enter the number of strokes that will be subtracted from the player's total score.
  - Select **Index\Slope Method** to enter the player's handicap index and the course slope rating to calculate a course handicap for the player.

## Setting the Hole Handicap

Before you can score using handicaps, you must enable handicap scoring ([Enabling Handicap Scoring, page 3](#)).

 
The device displays the default handicap for the hole if it is available. You can set the hole handicap manually.

- 1 While playing a game, select **score** > > **Change Handicap**.
- 2 Enter the hole handicap.

## Viewing PlaysLike Distance

The "plays like" distance feature accounts for elevation changes on the course by showing the adjusted distance to the green.

- 1 Select **Setup** > **PlaysLike Distance**.
- 2 Select **Show**.

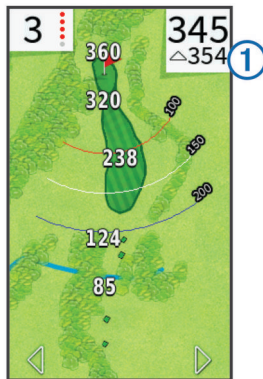

The overall "plays like" distance for the hole appears in the top-right corner of the screen ① below the distance to the middle of the green.

	Distance plays longer than expected due to a change in elevation.
	Distance plays as expected.
	Distance plays shorter than expected due to a change in elevation.

## Saving a Location

You can mark a location on a hole using your current location or Touch Targeting.

**NOTE:** You can clear all saved locations from a hole by selecting > > **Clear Locations**.

- 1 While playing a game, select > **Save Location**.
- 2 Select an option:
  - Select **Use Current Location** to place a marker at your current location on the hole.
  - Select **Use Touch Targeting** to select a location on the map.

## Finding Courses

You can use the device to locate a golf course that is nearby or in a specific city. You can also locate a golf course by name.

- 1 Select **Preview**.
- 2 Select an option:
  - Select **Search Near You** to find courses closest to your current location.
  - Select **Spell City** to find courses in a specific city.
  - Select **Spell Course** to find a course by name.

## About Course Preview

When you find a course, the device provides a hole-by-hole overview of the selected course. You can view a close up of the green ([Moving the Pin, page 2](#)) or measure distances ([Measuring Distance with Touch Targeting, page 4](#)).

If you do not touch the screen for a few moments after selecting a hole, a course simulation begins ([Preview Mode, page 4](#)).

## Measuring Distance with Touch Targeting

While previewing a course or playing a game, you can use touch targeting to measure the distance to any point on the map.

- 1 Begin playing a game ([Playing Golf, page 1](#)) or previewing a course ([About Course Preview, page 4](#)).
- 2 Drag your finger to position the target circle ①.



②	Displays the distance to the middle of the green from the target circle.
③	Displays the distance from your current position to the target circle. If you are previewing the course, ③ is the distance from the tee to the target circle.
④	Displays the total of the two distances.

- 3 If necessary, select to zoom in on the target circle.
- 4 When zoomed in on the target circle, select to return to the map of the hole.

## Preview Mode

When you preview a course, you can view a simulation of the course. The map gradually zooms in on the green to simulate the way it performs when you play through a hole.

The simulation begins automatically if you do not touch the screen for a few moments after selecting the hole.

## TruSwing™

The TruSwing feature allows you to view swing metrics recorded from your TruSwing device. Go to [www.garmin.com/golf](http://www.garmin.com/golf) to purchase a TruSwing device.

## TruSwing Metrics

You can view swing metrics on your Approach device, on Garmin Connect™, or on the Garmin Connect Mobile app. See

the owner's manual for your TruSwing device for more information.

Feature	Description	Requirements
Swing metrics on your Approach device only	The available metrics include your swing tempo, speed, club-path measurements, critical club angles, and more.	The TruSwing device must be paired with the Approach device.
Swing metrics on your Approach device and on the Garmin Connect Mobile app	The available metrics include your swing tempo, speed, club-path measurements, critical club angles, and more.	Both the TruSwing and Approach devices must be paired with the Garmin Connect Mobile app on your smartphone.

## Recording and Viewing TruSwing Metrics on Your Approach Device

Before you can view TruSwing settings on your Approach device, you may need to update the software ([Support and Updates, page 1](#)).

- 1 Verify your TruSwing device is securely mounted to your club.  
See the owner's manual for your TruSwing device for more information.
- 2 Turn on your TruSwing device.
- 3 On your Approach device, select **Setup > TruSwing**.  
Your Approach device pairs with the TruSwing device.
- 4 Select a club.
- 5 Hit a shot.

Your Approach device displays swing measurements after each swing.

You can select ◀ or ▶ to scroll through the recorded swing metrics.

## Changing Your Club

- 1 From the TruSwing screen, select ≡ > **Change Club**.
- 2 Select a club.

## Changing Handedness

- 1 From the TruSwing screen, select ≡ > **Handedness**.
- 2 Select an option.

## Disconnecting Your TruSwing Device

From the TruSwing screen, select ↶.

# Customizing Your Device

## Settings

Select Setup to customize device settings and features.

**Wi-Fi:** Enables Wi-Fi wireless technology.

**Scoring:** Sets the scoring method, enables handicap scoring ([Enabling Handicap Scoring, page 3](#)), and enables statistics tracking.

**Bluetooth:** Enables Bluetooth® wireless technology.

**Clubs:** Adds and removes clubs ([Editing Club Information, page 2](#)).

**Display:** Sets the backlight timeout.

**Hole Transitioning:** Sets automatic or manual hole transitioning.

**Units of Distance:** Sets the unit of measurement for distance.

**PlaysLike Distance:** Shows "plays like" distances ([Viewing PlaysLike Distance, page 4](#)).

**Club Advice:** Enables club recommendations ([Enabling Club Advice, page 2](#)).

**Calibrate PinPointer:** Allows you to manually calibrate the compass sensor ([Calibrating the Compass, page 6](#)).

**Language:** Sets the text language on the device.

**NOTE:** Changing the text language does not change the language of user-entered data or map data.

**About:** Displays important software information and your unit ID.

## Garmin Connect

You can connect with your friends on Garmin Connect. Garmin Connect gives you the tools to track, analyze, and share your data. You can record the events of your active lifestyle including golf games, hikes, runs, adventures, and more. To sign up for a free account, go to [www.garminconnect.com/](http://www.garminconnect.com/).

## Using Garmin Connect

You can upload your scorecards and club data to Garmin Connect for comprehensive analysis, and you can share your scorecards with friends. You can view your overall statistics, statistics from one round, or statistics on one course. You can also edit club information for clubs that are used for club advice.

- 1 Connect the device to your computer using a USB cable.
- 2 Go to [www.garminconnect.com/golf](http://www.garminconnect.com/golf).
- 3 Follow the on-screen instructions.

## Bluetooth Connected Features

This device has several Bluetooth connected features for your compatible mobile device using the Garmin Connect Mobile app.

**Data uploads to Garmin Connect:** Sends data to Garmin Connect using the Garmin Connect Mobile app. For more information, go to [www.garmin.com/intosports/apps](http://www.garmin.com/intosports/apps).

**Notifications:** Alerts you when you receive phone messages.

## Pairing Your Phone

- 1 Go to [www.garmin.com/intosports/apps](http://www.garmin.com/intosports/apps), and download the Garmin Connect Mobile application to your phone.
- 2 Bring your phone within 33 ft. (10 m) of your device.
- 3 From your device, select **Setup > Bluetooth > Pair Mobile Device** and follow the on-screen instructions.
- 4 From your phone, open the Garmin Connect Mobile application, and follow the on-screen instructions to connect a device.

The instructions are provided during the initial setup or by selecting ≡ > **Devices**.

## Connecting to a Paired Phone

Before you can connect to your phone, you must pair your phone to your device.

When you connect to your phone using Bluetooth wireless technology, you can share scores and other data to Garmin Connect. You can also view phone notifications on your device.

- 1 On your phone, enable Bluetooth wireless technology.
- 2 On your device, select **Setup > Bluetooth > Connection > On** to enable Bluetooth wireless technology.
- 3 Select **Notifications** to show or hide phone notifications.

## Phone Notifications

Phone notifications require a compatible smartphone to be paired with the Approach device. When your phone receives messages, it sends notifications to your device.

## Viewing Notifications

Before you can view notifications, you must connect to your paired phone ([Connecting to a Paired Phone, page 5](#)).

- 1 Select > **Notifications**.
- 2 Select a notification.
- 3 Select or to scroll through the contents of the notification.

## Wi-Fi Connected Features

This device has Wi-Fi connected features. The Garmin Connect Mobile app is not required for you to use Wi-Fi connectivity.

**Software and course updates:** Your device downloads the latest software and course updates when a Wi-Fi connection is available. The next time you turn on the device, you can follow the on-screen instructions to install the software and course updates.

### Connecting to a Wireless Network

- 1 Select **Setup > Wi-Fi**.
- 2 If necessary, select the toggle switch to enable Wi-Fi technology.
- 3 Select **Add Network**.
- 4 Select an option:
  - To select a broadcast wireless network, select a wireless network from the list and enter the password, if necessary.
  - To select a non-broadcast wireless network, select , and enter the network SSID and password.

The device stores the network information and connects automatically when you return to this location.

## Appendix

### Calibrating the Compass

**NOTE:** You must calibrate the electronic compass outdoors. Do not stand near objects that influence magnetic fields, such as cars, buildings, or overhead power lines.

Your device was already calibrated at the factory, and the device uses automatic calibration by default. If you experience irregular compass behavior, for example, after moving long distances or after extreme temperature changes, you can manually calibrate the compass.

- 1 Select **Setup > Calibrate PinPointer**.
- 2 Follow the on-screen instructions.

### Installing a Memory Card

You can install a microSD™ memory card for additional storage or pre-loaded maps.

- 1 Pull up the weather cap from the microSD card slot .



- 2 Press in the card until it clicks.

### Device Care

#### NOTICE

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

Secure the weather cap tightly to prevent damage to the USB port.

### Cleaning the Screen

Before you can clean the screen, you should have a soft, clean, lint-free cloth and water, isopropyl alcohol, or eyeglass lens cleaner.

Apply the liquid to the cloth, and gently wipe the screen with the cloth.

### Cleaning the Device

#### NOTICE

Even small amounts of sweat or moisture can cause corrosion of the electrical contacts when connected to a charger. Corrosion can prevent charging and data transfer.

- 1 Wipe the device using a cloth dampened with a mild detergent solution.
- 2 Wipe it dry.

After cleaning, allow the device to dry completely.

### Using the Backlight

- At any time, tap the touchscreen to turn on the backlight.
  - NOTE:** Alerts and messages also activate the backlight.
- Select to turn on the backlight and adjust the brightness.
- Change the backlight timeout ([Settings, page 5](#)).

### Specifications

Battery type	Rechargeable, built-in lithium-ion battery
Battery life	15 hr. typical usage
Operating temperature range	From -20° to 60°C (from -4° to 140°F)
Charging temperature range	From 0° to 40°C (from 32° to 104°F)
Water rating	IEC 60529 IPX7*

\*The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to [www.garmin.com/waterrating](http://www.garmin.com/waterrating).

### Clearing User Data

**NOTE:** This deletes all user-entered data.

- 1 Hold to turn off the device.
- 2 While holding **green view**, turn on the device.
- 3 Select **Yes**.

### Using the Clip

**NOTE:** Your clip may look slightly different from the image.

You can use the clip to attach the device to your belt, pocket, or bag.

- 1 Slide the bottom of the device into the bottom of the clip.
  - NOTE:** If you place the device into the clip upside-down, it does not lock into place and could fall out of the clip easily.
- 2 Press the top of the device into the top of the clip until it clicks.



- 3 To remove the device, pull up the top of the clip while pressing on the back of the device, and slide the bottom of the device out of the bottom of the clip.

### **Saving Energy While Charging the Device**

You can turn off the device display and all other features while charging.

- 1 Connect your device to an external power source.  
The remaining battery capacity appears.
- 2 Hold the power key for 4 to 5 seconds.  
The display turns off, and the device goes into a low power, battery charging mode.
- 3 Charge the device completely.

# Index

## A

applications 6

## B

battery, charging 1, 7

belt clip 6

Bluetooth technology 5

brightness 6

## C

charging 7

cleaning the device 6

clear, history 3

clip 6

clubs 1, 2

compass 2

    calibrating 6

courses

    playing 1

    preview 4

    saving locations 4

## D

data

    storing 5

    transferring 5

device, care 6

display settings 5

distance, measuring 4

## G

Garmin Connect 5, 6

Garmin Express 1

    registering the device 1

    updating software 1

green view, pin location 2

## H

handedness 5

handicap 2–4

handicap scoring, player 4

history 3

    sending to computer 5

## L

locking, screen 1

## M

maps

    symbols 1

    updates 1

    updating 1

measurements 2, 4, 5

memory card 6

microSD card. *See* memory card

## N

notifications 5

## P

pairing 5

pin location, green view 2

power key 1

product registration 1

## R

registering the device 1

resetting the device 6

## S

saving locations 4

scorecard 2, 3

    viewing 3

scoring 2, 3

    handicap 3

    match 3

    skins 3

screen

    brightness 6

    cleaning 6

    locking 1

    settings 5

    simulation, hole 4

    software, updating 1

    statistics 3

    swing analysis 4, 5

## U

updates

    course maps 1

    software 1

user data, deleting 6

## W

Wi-Fi, connecting 6

Wi-Fi 1

    connecting 6



# [www.garmin.com/support](http://www.garmin.com/support)



1800 235 822



+43 (0) 820 220230



+ 32 2 672 52 54



0800 770 4960



1-866-429-9296



+385 1 5508 272  
+385 1 5508 271



+420 221 985466  
+420 221 985465



+ 45 4810 5050



+ 358 9 6937 9758



+ 331 55 69 33 99



+ 39 02 36 699699



(+52) 001-855-792-7671



0800 427 652



0800 0233937



+47 815 69 555



00800 4412 454  
+44 2380 662 915



+35 1214 447 460



+386 4 27 92 500



0861 GARMIN (427 646)  
+27 (0)11 251 9800



+34 93 275 44 97



+ 46 7744 52020



+886 2 2642-9199 ext 2



0808 238 0000  
+44 870 850 1242



+49 (0) 89 858364880  
zum Ortstarif - Mobilfunk  
kann abweichen



913-397-8200  
1-800-800-1020

