


Quick Installation Guide

AX200


802.11ax Wi-Fi 6

Wireless PCI Express Adapter

1 Connect to a Computer

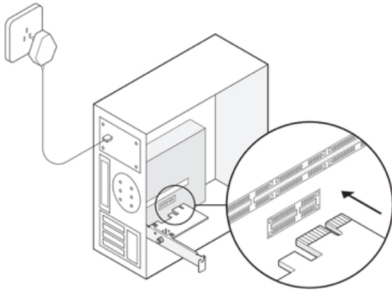

- Turn off your computer, unplug the power cable and remove the case panel.
- Locate an available PCIe x1 slot and carefully insert the adapter.
- Connect the antenna to the adapter.
- Replace the case panel, plug in the power cable and turn on your computer.

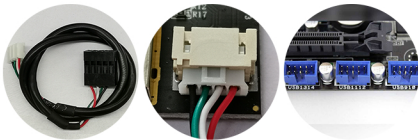

Bluetooth connection

Connect Bluetooth cable after the **b** step above, the **White** connector to the Adapter socket, the **Black** one to the USB (**F-USB**) socket on the Motherboard.


2 Install Driver


- Insert the CD and run the driver file to finish the driver installation.
- You can also download the driver from the QR code or <https://downloadcenter.intel.com/product/189347/Intel-Wi-Fi-6-AX200>.
- Follow the InstallShield Wizard to complete the installation.

Note: There are WiFi driver and Bluetooth driver, both of them should be installed.



3 Join a Wireless Network

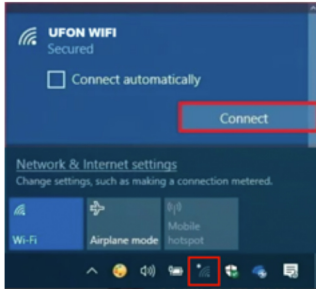

- a. Click the network icon () on the taskbar.
- b. Select your Wi-Fi network, click **Connect** and enter the password when prompted.

Support

For technical support, please contact ufon.sales@gmail.com.

Safety Information

Keep the device away from fire, water, humidity or hot environment

Do not attempt to disassemble, repair or modify the device

Do not use this device where wireless devices are not allowed



MADE IN CHINA

TechnicalSupport: ufon.sales@gmail.com
Address: D1113, Longguang Business Center, Shenzhen, China