

Eocean 54inch Selfie Stick Tripod User Manual



Please read the user manual carefully before using.



How to use the Remote Controller?

1. Turn on the remote by switching "On" on the right side of the remote. Remote shutter will enter pairing mode and indicator LED starts flash quickly at the same time.
2. Active the Bluetooth function on your phone and sourcing the devices around.
3. Select the device "EOCEAN" from the Bluetooth listing and pairing will be finished automatically in few seconds.
4. Pairing finished. Turn on the built-in camera app on your phone. Then you can use the remote to control taking photos with your phone.

When and how to charge the Remote Controller?

When you turn on the button "On" on the right side of the remote, the blue light will not on, that means it is out of battery, you need to charge. When it's charging, the blue light will be always on, not flashing. And when the blue light is off, that means it is fully charged. With the USB cable comes with the Remote Controller, you can charge it with power adapter, power bank or USB port of PC.

Why the Remote Controller can not pair with your devices?

Please remove some Bluetooth signals if there are many Bluetooth device signals appear on your phone. And restart the phone and remote.

Note: The + and - is for zoom in/out, they are not suitable for some cellphones, some cellphones can only use zoom button as a shutter or volume control. If there are still problems, please feel free to contact us!

If you want to extend it, please confirm the line state is unlocked, if the line is not aligned, please rotate it to make it aligned, then you can extend it.



If you want to make it stable, please confirm the line state is not aligned, which means it needs to be locked state. Or it will fall down.



Eocean selfie stick tripod has 5 sections, it can be extended between 13.77 - 52.36 inches. If you want to store it after use, please lock the tripod as the below picture shows, then it will not come out / slide out.

