

TECHNICAL SPECIFICATIONS

Name : L Shape Massage Chair

Rated Voltage: 220-240v

Rated Frequency: 50/60hz


Rated Power :260w

Safety Design : Class I

Manufacturer Reserves The Right To Make Changes To Informations Published In This Document,
Including Without Limitation Specifications And Product Descriptions, At Any Time And Without Notice.

L SHAPE MASSAGE CHAIR

User Manual

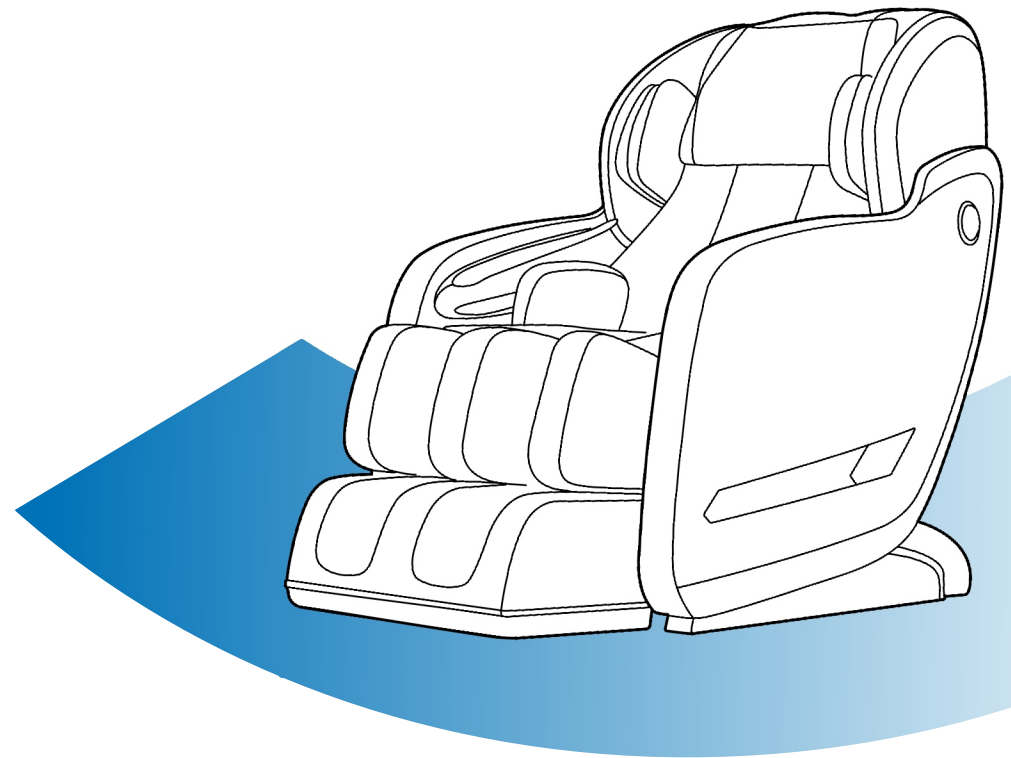

CONTENTS

- Thank you for your purchase of this product. Before using, please read this USER MANUAL carefully, and pay special attention to the safety precaution to ensure proper operation and use.
- Please keep this USER MANUAL properly for further reference.

SAFETY PRECAUTIONS

MEDICAL WARNINGS	01
WARNING	01
FORBIDDEN	02
REMOVE PLUG	02

NAME AND FUNCTION OF EACH COMPONENT

EXTERNAL STRUCTURE	03
INTERNAL STRUCTURE	04
CONTROLLER	05
REMOTE CONTROLLER INSTRUCTION	06 - 08

PREPARATION BEFORE USING

INSTALLATION METHOD	09 - 17
MUSIC SYSTEM	18
INSTALLATION POSITION	19
SURROUNDING ENVIRONMENT	19
GROUNDING INSTRUCTIONS	20

PRODUCE STORAGE AND MAINTENANCE

AFTER USING THE CHAIR	20
METHODS OF STORAGE	20
MAINTENANCE	20

TROUBLESHOOTING GUIDE

KIND REMINDING	21
TROUBLESHOOTING GUIDE	21

SAFETY PRECAUTIONS

- Before using, please read this "SAFETY PRECAUTIONS" carefully to ensure proper operation.
- The following "SAFETY PRECAUTIONS" is of great help to your correctly use of this massage chair
- To clearly indicate the degrees of danger and damage, the classes of accidents caused by incorrect use are classified into "WARNING" and "FORBIDDEN" . Instructions marked as followings should be strictly followed.

MEDICAL WARNINGS

Not recommended for the following people.



CAUTION

- Patients with serious hyperostosis
- Swollen lump and patient thrombosis
- Patients with serious heart conditions
- Pregnant Women
- People that consume large amounts of alcohol
- People with diabetes
- People suffering from high fever
- Patients with malignant tumors or malignant abscesses
- People with distorted joints
- People with serious skin conditions
- People with spinal injuries
- All people should consult a physician and exercise care when operating this system
- Minors under 16 years or people unable to control his/her behavior, i.e. mental patients, people with paralysis, etc.
- Should not be allowed to operate the massage chair.

WARNING



CAUTION

- Use this appliance only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug.
- Keep the cord away from heated surfaces.
- please empty pockets and remove all your arm Jewellery and watch before using this chair
- Do not operate where aerosol (spray) products are being used.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Do not remove the back cushion and do not play with roller mechanism.
- Do not remove the bottom seat and do not play with actuators.
- Keep the cord out of heavy traffic area.
- Always unplug the power cord from the electrical outlet immediately after use.
- Only people less than 120kgs are acceptable.
- Do not operate any equipment with damaged parts.

SAFETY PRECAUTIONS



- Any other use not recommended by the manufacturer may cause electrical shock or injury.
- Do not touch or re-wire the wires connected to the master-box.
- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
- Do not put your hands or head under the chair
- When using the massage chair, ascertain that the footrest is in the lowest position

FORBIDDEN





- Do not allow children to play near the chair especially during operation
- Do not leave mobility impaired or speech impaired people alone in chair
- Do not place or stock this machine near damp places such as swimming pools or bathrooms
- Do not press by force on the massage rollers
- Do not stand on the chair or store heavy items on the chair
- Do not use in the environment which is dusty, greasy or lacking oxygen
- Do not place near steam oven, open fire, or heat
- Wear suitable clothing, do not massage with bare skin
- Do not place directly in the sun
- Do not use electric blanket while using the massage chair
- Do not use outdoors
- Do not use while smoking
- Do not use immediately after meals
- Do not sit on the back cushions, armrest, or legs
- Don't use the massage chair when your body is wet or moist as it can result in electrical shock
- Do not operate with more than one person
- Don't use when using head ornamentation as it can result in injury
- Do not stumble over electrical wires or connections



- Before maintenance, please pull out power plug. In addition, please do not insert or unplug the power plug with damp hands, to avoid electric shock.
- When the massage chair is not in use, please switch off power and remove the plug from socket. When power is off, please cut off power supply immediately and pull out the power plug from socket.


NAME AND FUNCTION OF EACH COMPONENT

EXTERNAL STRUCTURE

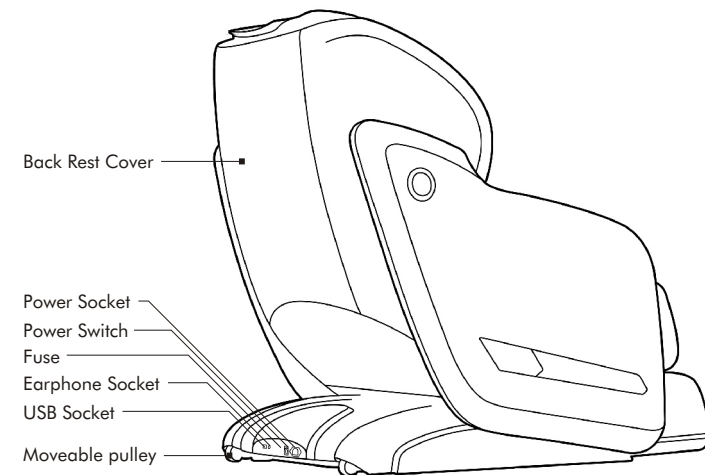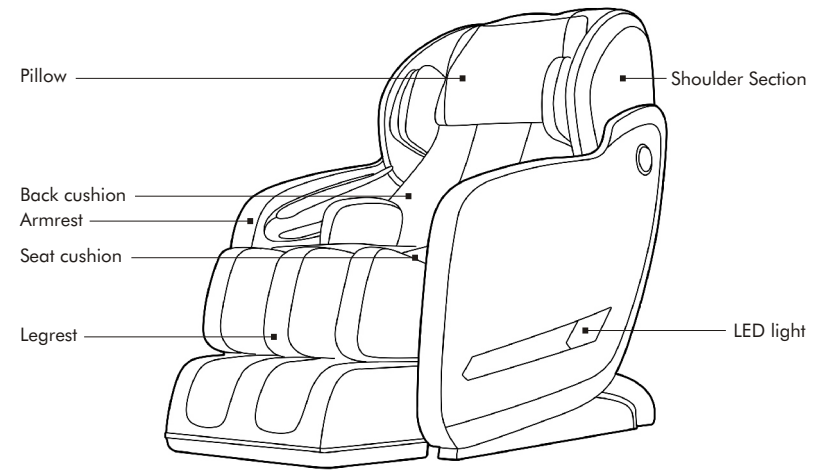


NAME AND FUNCTION OF EACH COMPONENT

INTERNAL STRUCTURE

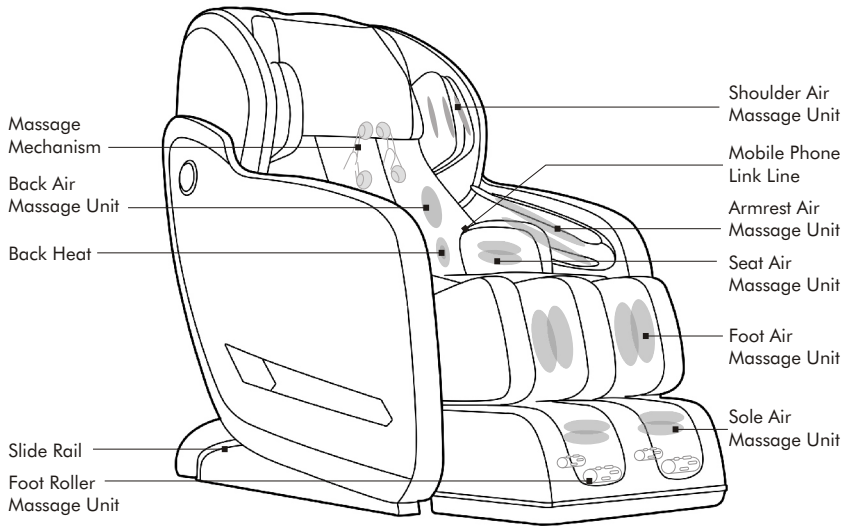




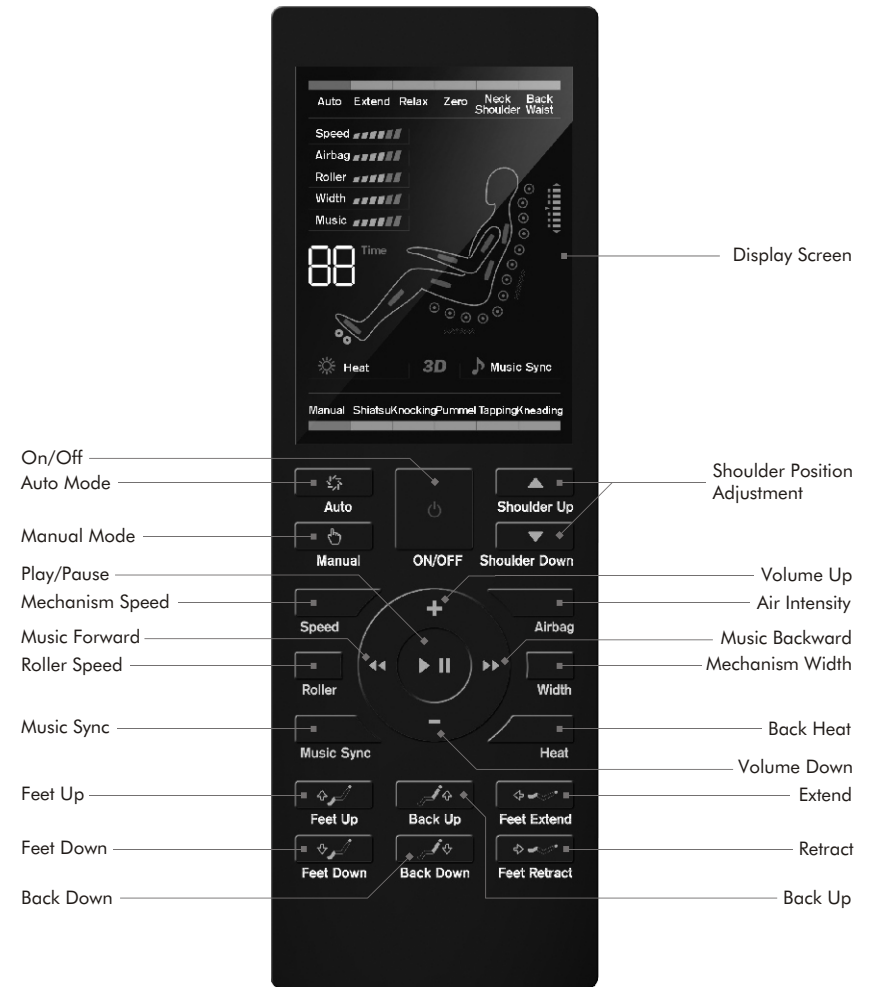

NAME AND FUNCTION OF EACH COMPONENT

 CONTROLLER




 



NAME AND FUNCTION OF EACH COMPONENT

REMOTE CONTROLLER INSTRUCTION

	<p>On/Off: This button starts/stops the massage system.</p>
 <p>Auto</p>	<p>Auto Massage Modes When the power is on, press this button, display screen lights-up, then press this button to choose the auto mode menu : Relax, Extend, Zero(gravity), Neck Shoulder, Back Waist. Choose one to have a specific massage.</p> <p>Relax : For early morning or noon leisure massage, to generate muscle energy. Extend: For office people and drivers who sit for long time, to stretch full body and recover. Zero: Zero Gravity is a neutral body posture that reclines the body and elevates the feet above the heart, It was developed by NASA, and has been scientifically proven to put a person into a heightened state of relaxation and well-being. It can imitate weightless status of aerospace, thus fully releasing the weight the body, the body will stay in a most comfortable status without any stress, to enjoy The best massage feeling. Neck Shoulder: Specific massage on Neck, Shoulder and Back to improve soreness of these parts. Back Waist: Specific massage on Back, Waist and Buttock, to improve soreness of these parts.</p>
 <p>Manual</p>	<p>When the power is on, press this button, display screen lights-up, then press this button to choose the manual mode menu: shiatus, knocking, pummel, tapping, Kneading. Choose any of these to have a specific massage.</p>
 <p>Shoulder Up</p>  <p>Shoulder Down</p>	<p>Under auto mode, if you feel the mechanism height does not fit well. Press this 2 buttons (with 7 different choice), engages mechanism to desired shoulder height. The highest mechanism is on your head. press “shoulder down” it goes from head to your Neck and Shoulder. if the mechanism highest setting goes on your back, press “Shoulder up” , it will go up to your Neck, Shoulder and Head. Under manual mode, press “shoulder up” or “shoulder down” ,release it till to the desired part for fixed partial massage.</p>







NAME AND FUNCTION OF EACH COMPONENT

REMOTE CONTROLLER INSTRUCTION

 <p>Speed</p>	<p>Mechanism Speed: press this button, to circularly choose 0-6 levels of massage speed and intensity.</p>
 <p>Roller</p>	<p>Roller Speed: press this button, to circularly choose 0-6 foot roller speed.</p>
 <p>Music Sync</p>	<p>Music Sync: Under music, press this button to choose music synchronous massage. The mechanism intensity and speed would be changed together according to the music rhythm.</p>
 <p>Airbag</p>	<p>Air Intensity: press this button, to circularly choose 0-6 airbags intensity.</p>
 <p>Width</p>	<p>Mechanism Width : under manual mode, press this button, to circularly choose 1-6 massage width.</p>
 <p>Heat</p>	<p>Heat : This button starts/stops the back cushion heat.</p>
	<p>MP3 player Control : with USB , Earphone, Mobile Phone link press ▶ : Play/Pause Control press + or - : Volume up /down Control press ◀ or ▶ : songs Forward/Backward Control</p>

NAME AND FUNCTION OF EACH COMPONENT

REMOTE CONTROLLER INSTRUCTION

 Feet Up	<p>Feet up Press this button, the legrest will be moved up to the top position, release this button, it will stop</p>
 Feet Down	<p>Feet down Press this button, the legrest will move down to the lowest position, release this button, it will stop.</p>
 Back Up	<p>Back up Press this button, the backrest will be moved up to the original position, release this button, it will stop.</p>
 Back Down	<p>Back down Press this button, the backrest will be moved down to the lowest position, release this button, it will stop.</p>
 Feet Extend	<p>Legrest extend Press this button, the legrest will be extended to the longest position, release this button, it will stop.</p>
 Feet Retract	<p>Legrest retract Press this button, the legrest will be retracted to the original position, release this button, it will stop.</p>

PREPARATION BEFORE USING

INSTALLATION METHOD

Step 1: Unpack the three packages


Take out the main body, armrest, footrest from the carton carefully.



Main Chair Body
Shoulder Section
Side Cover



Footrest

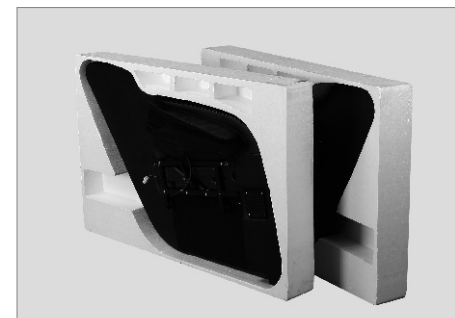

Armrest

PREPARATION BEFORE USING

Step 2 : Power Supply



Connect The Power Cable,
Then Plug The Machine To The Socket



Turn On The Power Switch On The Back




Set The Machine To Default Position



PREPARATION BEFORE USING


Step 3 : Install The Side Cover

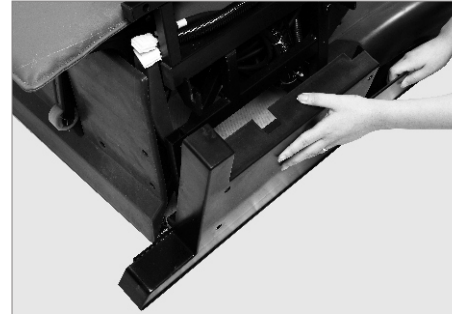

Put The Side Cover in Position



Use Screw Driver Tighten As Shown

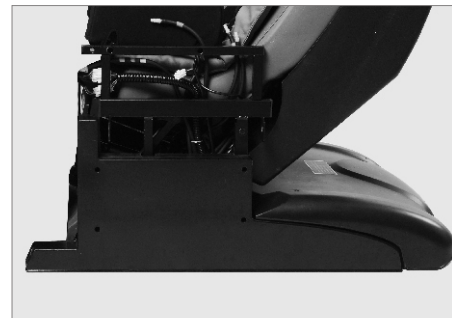


Side Cover Fitted

PREPARATION BEFORE USING

Step 4 : Install The Legrest Unit



Connect The Legrest Shaft To The Chair Main Body

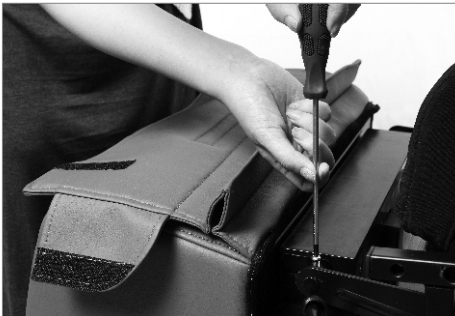

Use Screw Driver Tighten As Shown



Connect Air Hose And Leg Rest Wire Connection To The Main Body Carefully And Complete


PREPARATION BEFORE USING

Step 4 : Install The Legrest Unit



Match The Foot Massager To The Seat

Step 5 : Assemble the Armrests

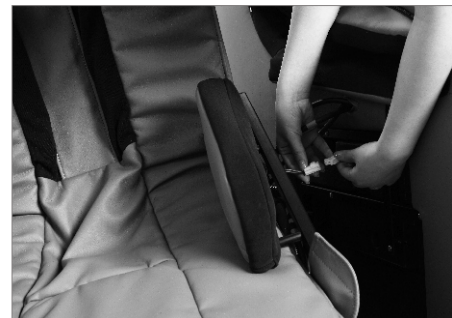


Align Armrest To Perfect Position With Chair Frame, And Then Match The Connection

PREPARATION BEFORE USING



Step 5 : Assemble the Armrests



Connect The Three Armrest Hoses To The Corresponding Chair Hoses And Make Sure They Are Tight

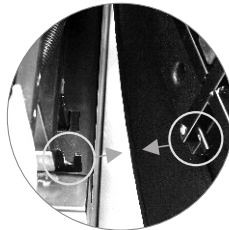

Install The Armrest Connect Port To The Chair Connect.

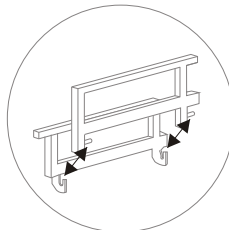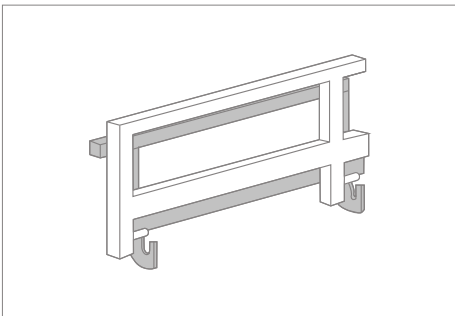

Groove As Shown

PREPARATION BEFORE USING


Step 5 : Assemble the Armrests



Tighten By Hand The Knob Screw Handle As Shown.



Cover The Screw

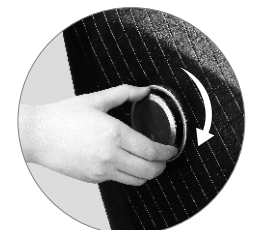

Fix The Armrest And Back With Screw

PREPARATION BEFORE USING

MUSIC SYSTEM

Music Link Mode



Usb Link



Earphone Link



Mobile Phone



Mp3 Link

PREPARATION BEFORE USING

INSTALLATION POSITION

Safety distance

Please make sure there is enough space for installation

Back: minimum 15cm against the wall or any other blocks

Front: minimum 45cm from any blocks

In order to prevent from signal interference, please keep at least 1m away from the TV, radio and other video and audio devices.



CAUTION

Before using, please tidy up well the cables to avoid twining or damage
When the whole chair makes slide movement forward or backward to original position, please check first whether there are kids, pets or any other objects to avoid accidents.
Please put carpet or other pad under the massage chair, in order to avoid any unpredictable impression on the floor

SURROUNDING ENVIRONMENT



Keep the massage chair away from damp places (for example: bathroom) to avoid electric leakage



Keep the massage chair away from high temperatures sources (for example: stove) to avoid fire or damage to leather material

PREPARATION BEFORE USING

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

PRODUCE STORAGE AND MAINTENANCE

AFTER USING THE CHAIR

- Please power off the chair and unplug power cable from power the supply socket after using, disconnect the controller and store carefully
- Please power off the chair and unplug the chair from the power supply socket when the chair is not in use, to avoid children to start the chair accidentally
- Please store well the chair if it is not in use for a long time.

METHODS OF STORAGE

- Do not dismount the back of the chair
- Keep the massage chair free of dust
- Cover the chair with dust-free cloth to prevent dust from collecting
- Do no store in a hot, humid, damp place or in direct sunlight or heat
- Do not store in an overly cold place

MAINTENANCE

- Before cleaning unplug from electrical source to avoid shock
- Clean the cloth surface with neutral detergent or special mild detergent for cloth
- Dust can be cleaned off with a damp cloth of mild detergent and air dry
- Do not spray pesticide on device
- Specified cleaner can be used on the leather, plastic, and dried with a cloth
- DO NOT use a damp cloth on the electronic components which can cause shock and damage
- The leather covers (headrest, seat cushion, foot cushion) can be removed for cleaning

TROUBLESHOOTING GUIDE

KIND REMINDING

During daily use, please check whether the following phenomenon exist:

- Scorched smell
- When touch the wire, the power is on, but sometimes off
- The power supply cord is hot
- Other abnormal phenomenon



If problems happen above, please turn off power supply and contact the distributor or manufacturer for assistance.

TROUBLESHOOTING GUIDE

Problems/Issues	Possible Cause	Trouble Shooting Method
Sounds like tapping or hum sounds	Sounds from air pump, motor or other mechanical parts	Normal phenomenon
Suddenly stops working	1. Bad power connection 2. Auto program timers is up	1, Unplug and reinsert power cord to he chair 2. Normal
Does not work after power up	1. Power switch is not turned on 2. Bad connection between plug and socket 3. Massage remote is not turned on 4. Have broken power wire plug 5. Bad fuse 6. Control unit for functioning properly	1. Turn power switch on 2. Connection power cord again 3. Press power button on remote 4. Contact professional technician 5. Replace fuse 6. Contact professional technician
Roller height changes	Rollers work alternately	Normal phenomenon
Abnormal sounds suddenly while working	Maybe from over working the massage chair	1. Cut down usage 2. Contact professional technician
Can not recline the chair	Obstruction-be sure that the chair is allowed enough room to fully recline	Stop chair opearion, and move obstruction
can not restore position after reclined	Problem on electric motion pole or plug under bad connection	Contact professional technician



If problems are not from above reasons, please turn off power supply and contact the distributor or manufacturer for assistance.

Note : Do not dismantle the produce by yourself, and our company shall shoulder no responsibility to the damage of the product or the inquiry of people caused by improper use. Thanks for your cooperation !