

**SAMSUNG**

# **T A B L E T**

---

## **User Manual**

Please read this manual before operating your device and keep it for future reference.

**Galaxy Tab S2**

# Legal

## Legal Information

**READ THIS INFORMATION BEFORE USING YOUR MOBILE DEVICE.**

**Arbitration Agreement - This Product is subject to a binding arbitration agreement between you and SAMSUNG ELECTRONICS AMERICA, INC. (“Samsung”). You can opt out of the agreement within 30 calendar days of the first consumer purchase by emailing [optout@sea.samsung.com](mailto:optout@sea.samsung.com) or calling 1-800-SAMSUNG (726-7864) and providing the applicable information. For complete terms and conditions that bind you and Samsung, refer to the “Arbitration Agreement” section of the Terms & Conditions, included with the Product.**

### Find Legal Information Online

The full Arbitration Agreement, Standard Limited Warranty, End User License Agreement (EULA), and Health & Safety Information for your device are available online:

Arbitration Agreement, Standard Limited Warranty, and Health & Safety Information:

Phone:

- English: [samsung.com/us/Legal/Phone-HSGuide](https://samsung.com/us/Legal/Phone-HSGuide)
- Spanish: [samsung.com/us/Legal/Phone-HSGuide-SP](https://samsung.com/us/Legal/Phone-HSGuide-SP)

Tablet:

- English: [samsung.com/us/Legal/Tablet-HSGuide](https://samsung.com/us/Legal/Tablet-HSGuide)
- Spanish: [samsung.com/us/Legal/Tablet-HSGuide-SP](https://samsung.com/us/Legal/Tablet-HSGuide-SP)

End User License Agreement:

- English: [samsung.com/us/Legal/SamsungLegal-EULA4](https://samsung.com/us/Legal/SamsungLegal-EULA4)
- Spanish: [samsung.com/us/Legal/SamsungLegal-EULA4/#SPANISH](https://samsung.com/us/Legal/SamsungLegal-EULA4/#SPANISH)

### Find Legal Information on the Mobile Device

The full Arbitration Agreement, Standard Limited Warranty, End User License Agreement (EULA) and Health & Safety Information are also available on the device, in the Samsung legal section of Settings. The location depends on the device, and is usually in the “About device” or “About phone” section, for example:

- **Settings > About phone** or **About device** or **About tablet > Legal information > Samsung legal**
- Or, use the Search feature to search for “Legal”.

## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG mobile device, including but not limited to, accessories, parts, or software relating thereto (the “mobile device”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship.

You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

## Open Source Software

Some software components of this product, including but not limited to 'PowerTOP' and 'e2fsprogs', incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: [opensource.samsung.com](https://opensource.samsung.com)

## Disclaimer of Warranties; Exclusion of Liability

The information below explains that a user accepts this Product as sold, including the hardware and software components as created and packaged for sale. If the user changes these parameters through a unique modification, Samsung will not be held responsible for damages or issues that result from these end-user changes.

Except as set forth in the Standard Limited Warranty that accompanies the Product, the purchaser takes the product "as is", and Samsung makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to the:

- merchantability of the product or its fitness for any particular purpose or use;
- design, condition or quality of the product;
- performance of the product;
- workmanship of the product or the components contained therein; or
- compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto.

**Nothing contained in the User Manual shall be construed to create an express or implied warranty of any kind whatsoever with respect to the Product. In addition, Samsung shall not be liable for any damages of any kind resulting from the purchase or use of the product or arising from the breach of the express warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits.**

## **Modification of Software**

**Samsung is not liable for performance issues or incompatibilities caused by your editing of registry settings, or your modification of Operating System (OS) software.**

**Using custom OS software may cause your device and applications to work improperly. Your carrier may not permit users to download certain software, such as custom OS.**

## **Samsung Knox**

Samsung Knox is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to: [samsung.com/us/knox](https://samsung.com/us/knox)

## **Restricting Children's Access to Your Mobile Device**

Your device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the device, or make calls that increase your device bill. Keep the device and all its parts and accessories out of the reach of small children.

# Samsung Electronics America, Inc.

Address:

85 Challenger Road  
Ridgefield Park,  
New Jersey 07660

Phone: 1-800-SAMSUNG (726-7864)

Internet: [samsung.com](http://samsung.com)

©2017 Samsung Electronics America, Inc.

Samsung, Samsung Galaxy, and Multi Window are all trademarks of Samsung Electronics Co., Ltd.

Other marks are the property of their respective owners.

Some multimedia (audio/video) files contain Digital Rights Management (DRM) technology to verify you have the right to use the files. Preloaded apps on your device may not be compatible with DRM-protected files.

Screen images are simulated. Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

# Table of Contents

<b>Getting Started</b> .....	1	Notification Panel .....	20
Front View .....	2	Multi Window .....	22
Back View .....	3	Enter Text .....	24
Assemble Your Device .....	4	<b>Applications</b> .....	27
Set Up Your Device .....	7	Apps List .....	28
Set Up Accounts on Your Device .....	9	Google Apps .....	32
<b>Know Your Device</b> .....	10	Additional Apps .....	35
Home Screen .....	11	Calculator .....	37
Customize the Home Screen .....	12	Calendar .....	38
Status Bar .....	16	Camera and Video .....	41
Navigation .....	18	Clock .....	46

Contacts .....	49	Wallpaper .....	99
Email .....	55	Advanced Features.....	100
Galaxy Apps .....	59	Device Maintenance.....	103
Gallery.....	60	Applications Settings.....	108
Internet .....	64	Lock Screen and Security .....	110
Memo.....	68	Cloud and Accounts .....	118
Music Player.....	70	Google Settings.....	123
My Files .....	72	Accessibility .....	124
Video Player.....	74	General Management .....	128
<b>Settings</b> .....	77	Software Update.....	135
How to Use Settings.....	78	About Device .....	136
Connections .....	79		
Sound.....	90		
Notifications.....	94		
Display.....	95		

# Getting Started

Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

# Front View



1. **Front camera:** Take self-portraits and record videos of yourself.
2. **Power key:** Press and hold to turn the device on or off, or to restart it. Press to lock or wake up the screen.
3. **Volume key:** Adjust the volume of your device's sounds and audio playback.
4. **Back:** Return to the previous screen or close a dialog box, menu, or keyboard.
5. **Home key/Finger scanner:** Return to the Home screen. Activate the Fingerprint security feature.
6. **Recent apps:** Tap to display recent apps, or touch and hold for Multi window™.
7. **Proximity sensor:** Detect the presence of objects near the device.

# Back View



1. **Microphone:** Record audio and detect voice commands.
2. **Simple clicker:** Securely attach optional covers (not included) to these retractable attachment points.
3. **Speaker:** Play music and other sounds.
4. **Headset jack:** Connect an optional headset (not included).
5. **USB charger/Accessory port:** Connect the USB charger (included) and other optional accessories (not included).
6. **Memory card tray:** Install an optional memory card (not included) for storage of files. For more information, see ["Install an Optional Memory Card" on page 4.](#)
7. **Rear camera:** Take pictures and record videos.

# Assemble Your Device

 
This section helps you to assemble your device.

## Install an Optional Memory Card

You can install an optional microSD™ memory card (not included) to add more memory space to your device.

1. Insert the removal tool into the hole on the memory card tray, and then push until the tray pops out.

**Caution:** Be careful when using the removal tool to eject an internal card tray.

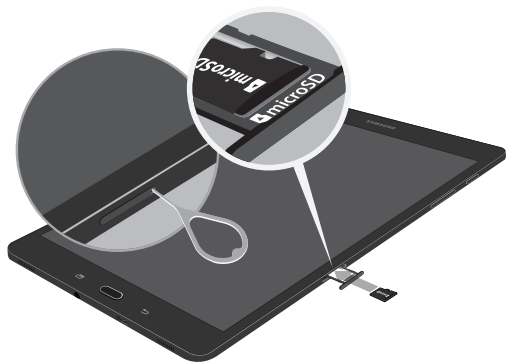

2. Place the memory card on the tray, positioned as shown.
3. Slide the tray back into the slot.

## Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A USB charger (charging head and USB cable) is included with the device for charging the battery from any standard outlet.

The battery comes partially charged. You can use the device while charging.

1. Insert the USB cable into the USB charger/Accessory port.



**Caution:** Use only charging devices approved by Samsung. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.
3. Unplug the charging head from the outlet and remove the USB cable from the device when charging is complete.


## When to Charge the Battery

When the battery is low and only a few minutes of operation remain, the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

For a quick check of your battery level:

- ▶ View the battery charge indicator located in the top right corner of your device's display. A solid color () indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery. For more information, see ["Battery" on page 104](#).

# Set Up Your Device

## Turn Your Device On or Off

The instructions below explain how to turn your device on or off.

### Turn the Device On

To turn the device on:

- ▶ Press and hold the **Power** key until the device turns on.

### Turn the Device Off

To turn the device off:

1. Press and hold the **Power** key.
2. Tap **Power off**, and confirm if prompted.

## Restart the Device

If your device stops responding to taps or finger gestures and you are unable to turn it off, you can restart your device.

- ▶ Press and hold the **Power** key and the **Volume down** key at the same time for more than seven seconds.

## Initial Set Up

The first time you turn your device on, a Welcome screen is displayed. It guides you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi® network, set up accounts, choose location services, learn about your device's features, and more.

## Secure Your Device

Use your device's screen lock features to secure your device.

### Lock the Device

By default, the device locks automatically when the screen times out.

To lock the device:

- ▶ Press the **Power** key.

## Unlock the Device

The default Screen lock on your device is Swipe.

**Note:** To choose a more secure screen lock, see ["Set a Screen Lock" on page 110.](#)

To unlock the device:

- ▶ Press the **Power** key or **Home** key, and then drag your finger across the screen.




# Set Up Accounts on Your Device

## Samsung Account

Create a Samsung account for access to Samsung content and apps on your device. When you turn on your device for the first time, set up your existing Samsung account or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Accounts**.
3. Tap  **Add account** > **Samsung account**.




## Google Account

Your new device uses your Google™ Account to fully utilize its Android™ features, including Gmail™, Google Hangouts™, and the Google Play™ store.

When you turn on your device for the first time, set up your existing Google Account or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Accounts**.
3. Tap  **Add account** > **Google**.

# Know Your Device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

# Home Screen



1. **Status bar:** Displays device status icons (right) and notification icons (left). For more information, see [“Status Bar” on page 16.](#)
2. **App folder:** Groups multiple apps into a folder.
3. **Apps list:** Allows quick access to all of your applications.
4. **Primary app shortcuts:** Displays these shortcuts on all Home screens.
5. **Home screen indicator:** Indicates which Home screen is currently visible.
6. **App shortcuts:** Launches your favorite applications.
7. **Widget:** Runs as a simple application extension (not a shortcut) on a Home screen.

# Customize the Home Screen

Customize your Home screens by adding application shortcuts, widgets, and folders, and using wallpapers.

To access Home screen manager:

► From a Home screen, pinch the screen.




– or –

Touch and hold an empty space on the screen.

## Manage Home Screens

Your device comes with multiple Home screens to hold app shortcuts and widgets. You can add, remove, change the order of screens, as well as choose a different main Home screen.

1. From a Home screen, pinch the screen.
2. Use these options to manage screens:

- **Add a screen:** Swipe to the end of the screens, and then tap  **Add**.
- **Remove a screen:** Touch and hold a screen, and then drag it to  **Remove**.
- **Set a screen as the main Home screen:** Tap  **Main Home screen** at the top of a screen. This screen is displayed when you press the **Home** key.
- **Change the order of screens:** Touch and hold a screen, and then drag it to a new position.
- **Flipboard Briefing:** Swipe to the left of the screens to find the Flipboard Briefing screen. To enable or disable this feature, tap **On/Off** at the top of the screen.



## Wallpapers

Set visual themes for all system screens and icons on your device. Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
2. Tap **Wallpapers** to customize.

For more information, see [“Wallpaper” on page 99](#).

To access Wallpaper and themes settings:

- ▶ From a Home screen, tap  **Apps** >  **Settings** > **Wallpaper**.

## Widgets

Widgets are simple application extensions that run on a Home screen. There are many kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.


### Add a Widget to a Home Screen

You can add a widget to a Home screen.

1. From a Home screen, pinch the screen.
2. Tap **Widgets**.
3. Touch and hold a widget, drag it to a Home screen, and then release it.

## Remove a Widget

You can remove a widget that you added to a Home screen. Removing a widget does not delete the widget, it just removes the widget from the Home screen.


1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to  **Remove** and release it.

## App Shortcuts

You can use app shortcuts to launch an app from any Home screen.


### Add a Shortcut to a Home Screen

You can add a shortcut to a Home screen.

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen, and then release it.


## Remove a Shortcut

You can remove a shortcut that you added to a Home screen. Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.

1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to  **Remove shortcut** and release it.

## Move a Shortcut

You can move a shortcut from one Home screen to another.



1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to  **Move apps** and release it.
3. Swipe to a new Home screen.
4. Tap the shortcut to place it in the next available location, or drag it to a specific location and release it.

## Folders

Place folders on a Home screen to organize items.


### Create a Folder

You can create an app folder on a Home screen.

1. From a Home screen, touch and hold an app shortcut and drag it on top of another app shortcut until a highlighted box appears.
2. Release the app shortcut to create the folder.
  - **Enter folder name:** Enter a name for the folder.
  -  **Palette:** Change the color.
  -  **Add:** Place more apps in the folder. Tap apps to select them, and then tap **Add**.
3. Tap anywhere outside of the folder to close it.
  - To add more apps, touch and hold an app shortcut and drag it to the folder.

### Remove a Folder from a Home Screen

You can remove a folder that you added to a Home screen.

1. Touch and hold the folder until it detaches.
2. Drag the folder to  **Delete** and release it.

# Status Bar

The Status bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.

## Status Icons



**Battery full:** Battery is fully charged.



**Battery low:** Battery is low.



**Battery charging:** Battery is charging.

---



**Mute mode:** Mute mode is enabled.



**Wi-Fi active:** Wi-Fi is active.



**Wi-Fi available:** A Wi-Fi network is available.

---

## Notification Icons

---



**New email:** New email has arrived.

---



**New Gmail:** New Gmail has arrived.

---



**File download in progress:** Download of a file or app is in progress.

---



**File upload in progress:** File is being uploaded or sent.

---



**GPS active:** Location service (GPS) is active and acquiring a signal.

---



**App updates available:** App updates are available from the Google Play store.

---



**App updates complete:** App installation or updates are complete.

---

# Navigation

Learn the basics for how to navigate through your device.

## Touchscreen Navigation

Please note that a touch screen responds best to a light touch from the pad of your finger or a capacitive stylus. Using excessive force or a metallic object on the touch screen may damage the tempered glass surface and void the warranty.

### Tap

Lightly tap items to select or launch them.

- Tap the keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app shortcut to launch the application.

### Touch and Hold

Touch and hold items on the screen to activate them.

- Touch and hold a widget on a Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

### Swipe

Lightly drag your finger vertically or horizontally across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.

## Drag

Touch and hold an item, and then move it to a new location.

- Drag an app shortcut to add it to a Home screen.
- Drag a widget to place it in a new location on a Home screen.









## Pinch and Spread

Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

 
- Pinch the screen to zoom out while viewing a picture or a web page.
- Spread your fingers on the screen to zoom in while viewing a picture or a web page.

## Common Options

The device uses basic command options to perform common actions.

-  **More options:** Tap to view more menu options for a screen. This often allows you to select items to delete or share.
-  **Delete:** Tap to select items to delete.
-  **Share:** Tap to select items to share, and then choose a sharing method.
-  **Edit:** Tap to customize the screen.
- **On/Off:** Tap to turn the option on () or off ()
-  **Checkbox:** Tap to enable or select. When enabled, a checkmark is displayed. You can often tap a checkbox at the top of the screen to select all.
-  **Menu:** Tap to view available options for the field.


# Notification Panel

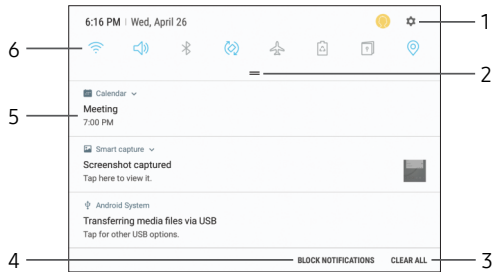

1. **Settings:** Display the Settings screen.
2. **View all:** See all available Quick settings, adjust screen brightness, and more.
3. **Clear all:** Clear all notifications.
4. **Notification settings:** Enable or disable notifications from each app. For more information, see [“Notifications” on page 94.](#)
5. **Notification card:** View details about a notification.
6. **Quick settings:** Quickly enable or disable a feature.

## View the Notification Panel




You can access the Notification panel from any Home screen.

1. Drag the Status bar down to display the Notification panel.
2. Swipe down the list to see notification details.
  - To open an item, tap it.
  - To clear a single notification, drag the notification left or right.
  - To clear all notifications, tap **Clear all**.
3. Drag upward from the bottom of the screen or tap  **Back** to close the Notification panel.

## Quick Settings

 
In addition to notifications, the Notification panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

To view additional Quick settings:

1. Drag the Status bar down to display the Notification panel.
2. Drag  **View all** downward.
  - Tap a setting to turn it on or off.
  - Tap  **More options** to edit Quick settings or to change the button layout.
3. Drag  **View all** upward to close the Quick settings.

# Multi Window

Multitask by using multiple applications at the same time.

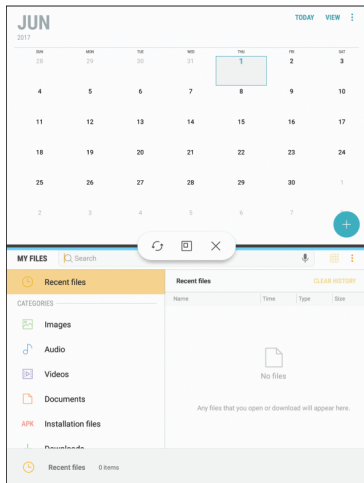

## Window Controls

Tap — **Window controls** in the middle of the window border for options.



**Switch windows:** Switch locations between Multi window apps.






**Open in pop-up view:** Open the selected app in a pop-up window.



**Close app:** Close the selected app.

# Use Multi Window

Apps that support Multi window display together on a split screen. You can switch between the apps and adjust the size of their display on the screen.

 
1. Tap  **Recent apps**.
  - Recently used apps that support Multi window have a  **Multi window** icon in their title bar.
2. Tap  **Multi window** in the title bar to launch an application in split screen view.
  - Other recently used apps that support Multi window display below the launched app.
3. Tap an app to add it to the split screen view.

# Enter Text

Text can be entered using a keyboard or by speaking.

## Use the Samsung Keyboard

Enter text using a QWERTY keyboard. Available options depend on the app in use. Not all options are available for all apps.

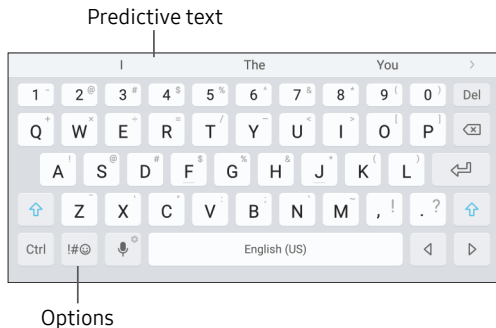

## Special Keys

---


**!#☺ Symbol:** Tap to insert symbols.

---


**Ctrl** **Control:** Touch and hold for quick access to cut (x), copy (c), paste (v), undo (z), redo (y), and select all (a).

---


Touch and hold **Options** for the following:

 **Voice input:** Enter text using Google Voice™ typing.

---

 **Handwriting:** Use your handwriting to enter text.

---

 **Clipboard:** Access the clipboard.

---

## Special Keys

---



**Emoticon:** Insert an emoticon at the cursor position.

---



**Keyboard types:** Change the layout of the keyboard.

---



**Keyboard settings:** Access keyboard settings.



---

## Predictive Text

Predictive text suggests words that match your text entries, and can automatically complete common words. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites — improving the accuracy of predicting text entries.

## Configure the Samsung Keyboard

 
To customize the Samsung keyboard:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Language and input** > **Virtual keyboard** > **Samsung keyboard** for options.


For more information, see [“Samsung keyboard” on page 129](#).

# Use Google Voice Typing

Instead of typing, enter text by speaking.

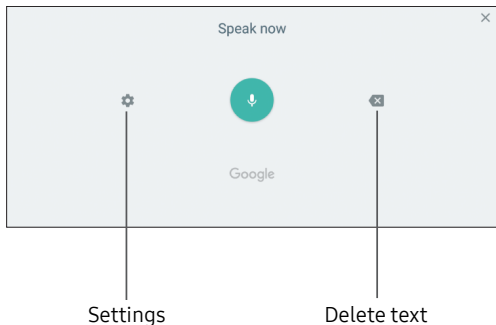

To enable Google voice typing:



1. Tap  **Voice input** on the Samsung keyboard.
  - You may need to touch and hold **Options** (left of the Space bar) to find it.
2. Speak your text.

To download additional languages for use with Google voice typing:

▶ Tap  **Settings** > **Languages**.

## Configure Google Voice Typing

To customize Google voice typing:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Language and input** > **Virtual keyboard** > **Google voice typing** for options.

For more information, see [“Google Voice Typing” on page 129.](#)

# Applications

Learn how to change the way apps are displayed, organize apps into folders, and uninstall or disable apps.


# Apps List

The Apps list displays all preloaded and downloaded apps. You can uninstall, disable, or hide apps from view.

Shortcuts to apps can be placed on any of the Home screens. For more information, see [“Add a Shortcut to a Home Screen” on page 14](#).



## Access Apps

You can access and launch all applications from the Apps list.

1. From a Home screen, tap  **Apps**.
2. Tap an app's shortcut to launch it.
  - To return to the main Home screen, press the **Home** key.

## Download and Install New Apps

Find new apps to download and install on your device.





-  **Play Store:** Download new apps from the Google Play store. Visit [play.google.com/store/apps](https://play.google.com/store/apps) to learn more.
-  **Galaxy Apps:** View and download Samsung apps that are optimized for use with Galaxy devices. Visit [samsung.com/levant/apps/mobile/galaxyapps](https://samsung.com/levant/apps/mobile/galaxyapps) to learn more.

# Uninstall or Disable Apps




You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
- Apps that are disabled are turned off and hidden from view.

To uninstall or disable an app:


1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Edit**. Apps that can be uninstalled or disabled display  **Uninstall/disable** on their shortcut.
3. Tap  **Uninstall/disable** and follow the prompts to either uninstall or disable the app.
4. Tap **Done** when finished.

To enable apps after disabling them:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Apps**.
3. Tap  **Menu** > **Disabled**, and then tap the app you want to enable.
4. Tap **Enable**. The app is displayed again in the Apps list.

## Search for Apps



To locate an app in your Apps list:

1. From a Home screen, tap  **Apps**.
2. Tap **Search for apps**.
  - Enter a word or words in the **Search for apps** field. As you type, apps that match are displayed on the screen.
  - Tap an entry to launch that app.



## Organize Your Apps

App shortcuts can be listed alphabetically or in your own custom order.

To change the order apps are listed:





1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Edit**.
3. Touch and hold an app shortcut or folder, and then drag it to a new location.
4. Tap **Done** when finished.

To alphabetize your apps:

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Sort** > **Alphabetical order**.

## Use Folders to Organize Apps



You can organize App shortcuts in a folder on an Apps list screen.

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Edit**.
3. Touch and hold an app shortcut, and then drag it on top of another app shortcut until it is highlighted.
4. Release the app shortcut to create the folder.
  - **Enter folder name:** Name the folder.
  -  **Palette:** Change the folder color.
  -  **Add:** Place more apps in the folder. Tap apps to select them, and then tap **Add**.
5. Tap anywhere outside of the folder to close it.
  - To add more apps, touch and hold an app shortcut and drag it to the folder.
6. Tap **Done** when finished.


To launch apps in a folder:

- ▶ Tap a folder, and then tap an app shortcut to launch it.

To delete a folder:

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Edit**.
3. Tap the folder to delete, and then tap **Remove folder**. Confirm when prompted.
4. Tap **Done** when finished.

To add a folder to a Home screen:

1. From a Home screen, tap  **Apps**.
2. Touch and hold a folder, drag it to a Home screen, and then release it.

# Google Apps

Enjoy these apps from Google.

Certain apps require a Google Account.

Visit [google.com](http://google.com) to learn more.



Browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your mobile device.

Visit [support.google.com/chrome](http://support.google.com/chrome) to learn more about Chrome™.



Open, view, rename, and share your Google Docs™ and files.

Visit [support.google.com/drive](http://support.google.com/drive) to learn more about Google Drive™.



Send and receive email with Gmail, Google's web-based email service.

Visit [support.google.com/mail](http://support.google.com/mail) to learn more.



Search not only the Internet, but also the apps and contents of your device.



Meet friends and family online, share photos, host video calls, and send SMS and Hangouts messages.

Visit [support.google.com/hangouts](http://support.google.com/hangouts) to learn more.



## Maps

Find your current location and get directions and other location-based information.

Visit [support.google.com/maps](https://support.google.com/maps) to learn more.

You must enable location services to use Google Maps. For more information, see [“Location” on page 86](#).



## Photos

Automatically backs up your photos and videos to your Google Account.

Visit [support.google.com/photos](https://support.google.com/photos) to learn more about Google Photos™.



## Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly or download them for viewing when you are not connected to the Internet. You can also view videos saved on your device.

Visit [play.google.com/store/movies](https://play.google.com/store/movies) to learn more.



## Play Music

Play music and audio files on your device.

Visit [support.google.com/music](https://support.google.com/music) to learn more.



## Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in Google Play store.

Visit [support.google.com/play](https://support.google.com/play) to learn more.



## Voice Search

Use voice commands to search the web with Google.



## YouTube

View and upload YouTube™ videos right from your device.

Visit [support.google.com/youtube](https://support.google.com/youtube) to learn more.

# Additional Apps

There are additional apps, including several Samsung apps, preloaded on your device.

## CNN for Samsung

Stay informed on the latest news from around the world, follow up-to-the-minute breaking news, catch up on your favorite CNN shows, and watch live video in one place.

## Excel

View, create, and edit spreadsheets on your device. You can unlock the full Excel® experience with an Office 365™ subscription.

## OneDrive

Store and share photos, videos, documents, and more in your free online OneDrive® account, which you can then access from your personal computer, tablet, or phone.

## OneNote

Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote® notebooks using OneDrive.

## PowerPoint

View, create, and edit presentations on your device. You can unlock the full PowerPoint® experience with an Office 365 subscription.

## Samsung+

Get live help, discover new features, and unlock promotions for your Samsung device.

## SideSync

Share screens, windows, and data between a PC and Samsung Android device.

## Skype

Hold video and voice calls, and send instant messages to anyone around the world.

## Texture

Texture® brings the world's greatest magazines to life on your digital device.

## Word





View, create, and edit documents on your device. You can unlock the full Word experience with an Office 365 subscription.

# Calculator

The Calculator provides basic and advanced arithmetic functions.

## Basic Operation

You can use your calculator to perform basic operations.

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. Tap  **Equals** to view the result.
6. Tap  **Clear** to clear the results.

## Additional Functions

You can perform additional functions on your calculator.

To clear the calculator history:

- ▶ Tap **Clear history**.

## Scientific Calculator



The Calculator app provides advanced arithmetic functions.

# Calendar

Manage your events and tasks.

## Calendar View

To choose a calendar view:




1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **View**, and then tap one of the following:
  - **Year**: Display all twelve months of this year. Swipe across the screen to display another year.
  - **Month**: Display the current month. Swipe across the screen to display another month. Events and tasks are also displayed.
  - **Week**: Display the current week. Swipe across the screen to display another week.

- **Day**: Display today's schedule by hour. Swipe across the screen to display another day.
- **Tasks**: Display all tasks.

3. Tap **Today** to return to the current date.



## Create an Event

You can use your Calendar to create events.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Create event** to add an event.
3. Enter details for the event, and then tap **Save**.



## Share an Event

You can share events you create from your Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap an event to open it.
3. Tap **Share**, choose a sharing method, and follow the prompts.




## Delete an Event

You can delete events you create from your Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap an event to open it.
3. Tap **Delete**. Confirm when prompted.



## Create a Task

You can use your Calendar to create tasks. Tasks are items you add to the calendar to be accomplished on a certain day. A task appears as a checklist item and is removed once you mark the task as complete.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **View** > **Tasks**.
3. Tap  **Create task** to add a task.
4. Enter details for the task, and then tap **Save**.




## Delete a Task

You can delete tasks you create from your Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap a day on the calendar to view the tasks for the day, or tap **View** > **Tasks**.
3. Tap the  **Checkbox** by the task to mark it as complete and remove it from the calendar.
  - To delete a task, tap the task to open it, and then tap **Delete**. Confirm when prompted.

## Calendar Settings

These settings allow you to modify settings associated with using the Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the prompts.

# Camera and Video







1. **Beauty:** Take a picture with lightened faces for gentler images.
2. **Gallery:** Open the Gallery to view photos and videos.
3. **Take a picture:** Take a picture.
4. **Record video:** Record a video.
5. **Camera, Modes, or Effects:** Swipe right to change the shooting mode. Swipe left to add an effects filter.
6. **Switch cameras:** Switch between the rear and front cameras.
7. **Settings:** Configure other camera settings.

# Take Pictures

Take pictures with your device's front or rear camera.



If you have an SD card installed, pictures and videos can be stored to the SD card. If no card is installed, pictures and videos are saved to your phone's memory.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your picture, use the available options or these gestures:
  - To zoom in or out, touch the screen with two fingers and pinch or spread them on the screen.
  - To focus the shot, tap the screen. When you tap the screen, a brightness scale is displayed. Slide the light bulb up or down to adjust the brightness.

- To add an effects filter, swipe to the left and tap a preview filter to apply it to the screen.
  - To add a shooting mode, swipe to the right and select a mode.
  - To quickly switch between the front and rear cameras, swipe the screen up or down.
  - To add a camera setting, tap a Quick settings icon or  **Settings**.
3. Tap  **Take a picture** to take the picture.
    - You can also press the **Volume** key up or down to take a picture. This is the default action of the **Volume** key while the camera is active.

# Shooting Mode

Several visual effects are available. Some modes are not available when taking self-portraits.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Swipe to the right for the Mode options. Each section indicates which camera (front or rear) the modes are available for.

## Rear camera

- **Auto:** Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
- **Pro:** Manually adjust the ISO sensitivity, exposure value, white balance, and color tone while taking pictures.
- **Panorama:** Create a linear image by taking pictures in either a horizontal or vertical direction.

- **HDR (Rich tone):** Enables the light sensitivity and color depth features of the device to produce a brighter and richer picture.
- **Shot & more:** Use various functions with your burst shots after you take them, such as best photo, best face, drama, eraser, and panning shot.
- **Dual camera:** Take pictures and record videos in a variety of styles using the front and rear cameras at the same time.

## Front camera only




- **Selfie:** Take selfie shots and apply various effects, such as an airbrushed effect.

## Both cameras

- **Download:** Download additional shooting modes from the Galaxy Apps store.
- **More options:** See more options for the camera modes.
- **Virtual shot:** Create multi-directional views of objects.

# Camera Settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **Settings** to configure settings from the Camera. Available options vary depending on the camera or recording mode used.

## Rear camera

- **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.

## Front camera

- **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Save pictures as previewed:** Save the self-portrait or self-recording as viewed on the camera screen, not as flipped images.

- **Ways to take pictures:**
  - **Tap to take pictures:** Tap the screen to take selfies.
  - **Gesture control:** Detect your palm and automatically take a picture two seconds later.



### Common

- **Timer:** Take time-delayed pictures or videos.
- **Full screen view (16:9):** Preview pictures and videos using the full screen.
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags:** Attach a GPS location tag to the picture.
- **Review pictures:** Set to show pictures after taking them.

- **Storage location:** Choose to store your photos to your device or SD card (not included). This option appears if an optional SD card is installed.
- **Floating Camera button:** Add an extra Camera button that you can move anywhere on the screen in Auto and Selfie modes.
- **Volume key function:** Use the Volume key as the camera key, the record key, or as a zoom key.
- **Reset settings:** Reset the camera settings.

# Clock

The Clock app offers features for keeping track of time and setting alarms.




1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
  - **Alarm:** Set an alarm to ring at a specific time.
  - **World clock:** View the time of day or night in other parts of the world. World clock displays time in hundreds of different cities, within all 24 time zones around the world.
  - **Stopwatch:** Measure intervals of time.
  - **Timer:** Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

## Alarm

Set an alarm to ring at a specific time.

### Create an Alarm



Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap  **Add alarm**.
3. Tap the following items to configure an alarm:
  - **Date:** Choose the day for this alarm.
  - **Time:** Set a time for the alarm.
  - **Repeat:** Choose when to repeat the alarm.

- **Alarm name:** Enter a name for the alarm.
  - **Snooze:** Allow snoozing. Set interval and repeat values for the alarm while snoozing.
  - **Alarm tone and volume:** Choose a sound to play for the alarm, and drag the slider to set the volume of the alarm.
  - **Read time aloud:** Read the time aloud when the alarm rings.
4. Tap **Save** to save the alarm.

## Delete an Alarm




You can delete an alarm that you have created.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Find the alarm in the alarm list (under **Alarm**), and then touch and hold it to select it.
3. Tap **Delete**.



## World Clock

The World clock lets you keep track of the current time in multiple cities around the globe.

To list a city on the main World clock screen:



1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **World clock**.
3. Tap  **Add city**.
4. Tap **Search** and enter the name of the city.
5. Tap **Add** to add the city to the list.

To remove a city from the World clock screen:

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **World clock**.
3. Find the city to remove, and then touch and hold it to select it.
4. Tap **Delete**.



## Stopwatch

The Stopwatch lets you time events down to a hundredth of a second.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **Stopwatch** and use the following options:
  - **Start**: Begin timing.
  - **Stop**: Stop timing.
  - **Lap**: Keep track of lap times.
  - **Resume**: Continue timing after stopping the clock.
  - **Reset**: Reset the Stopwatch to zero.

## Timer

The Timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **Timer**.
3. Use the keypad and tap **Hours**, **Minutes**, and **Seconds** to set the length of the Timer. The following options are available:
  - **Start**: Begin the Timer.
  - **Pause**: Pause the Timer.
  - **Resume**: Resume the Timer.
  - **Cancel**: Stop the Timer.

# Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts.

For more information on connecting with and managing your accounts through your device, see [“Accounts” on page 119](#).



## Manage Contacts

Access your list of contacts by using the Contacts app. To access your Contacts list:

► From a Home screen, tap  **Apps** >  **Contacts**.

## Find a Contact

You can search for a contact or swipe the list to find one by name.








1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.

– or –

Tap a letter on the side of the list to jump directly to that letter in the alphabetical list. You can also slide your finger across the alphabetical list to select a letter with better precision.

## Add a Contact

Use the following procedure to add a new contact.



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Create contact**, and then tap contact fields to enter information.
  - Choose a storage account for the contact.  
You can store the contact on the device, your SIM card, or sync it with an account.
  - Tap  **Contact photo** to assign a picture to the new contact.
  - Enter a name, phone number, email address, and assign the contact to a group.
    - Tap  **Add** to enter additional entries.
    - Tap  **Remove** to remove an entry.
    - Tap  **View more** for additional fields.

- Tap the label to the right of an entry to choose a label for the field (for example, Home or Work).

3. Tap **Save**.



## Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add more fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.




## Share a Contact

When you share a contact, the contact's information is sent as a vCard file (VCF) or as a text file. You can share a vCard using Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap **Share**.
3. Choose whether to send the contact as a **vCard file (VCF)** or as a **Text**.
4. Choose a sharing method and follow the prompts.





## Link Contacts

When you have contacts from various sources, you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it.
3. Tap  **More options** > **Link contacts**.
4. Tap contacts to choose them.
5. Tap **Link**.



## Unlink Contacts

You can unlink a contact that you previously linked.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it.
3. Tap  **More options** > **Manage linked contacts**.
4. Tap  **Disconnect** beside contacts to unlink them from the main contact.

## Delete Contacts

You can delete a single contact or choose multiple contacts to delete.





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Touch and hold a contact to select it. You can also tap other contacts or tap the **All** checkbox at the top of the screen to select all contacts.
3. Tap **Delete**, and then confirm when prompted.

## Favorites

When you mark contacts as favorites, they are easily accessible from other apps.





### Mark Contacts as Favorites

You can mark contacts as Favorites.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to select it.
3. Tap  **Add to Favorites** (the star brightens ).

## Remove Contacts from Favorites

You can remove contacts from Favorites.




1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to select it.
3. Tap  **Remove from Favorites** (the star dims .

## Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.




## Create a Group

You can create your own contact groups.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Groups**.
3. Tap **Create**, and then tap fields to enter information about the group.
  - **Group name**: Enter a name for the new group.
  - **Add member**: Select contacts to add to the new group, and then tap **Done**.
4. Tap **Save**.




## Rename a Group

You can rename a contact group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Groups**, and then tap a group.
3. Tap **Edit** and enter a new name.
4. Tap **Save**.





## Add Contacts to a Group

You can add contacts to a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Groups**, and then tap a group.
3. Tap **Edit** > **Add member**, and then tap the contacts you want to add. When finished, tap **Done**.
4. Tap **Save**.





## Send an Email to a Group

You can send an email to members of a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Groups**, and then tap a group.
3. Tap  **More options** > **Groups** > **Send email**.
4. Tap contacts to select them, or tap the **All** checkbox at the top of the screen to select all, and then tap **Done**.
  - Only group members that have an email address in their records are displayed.
5. Choose an email account and follow the prompts.
6. Type your message and tap **Send**.




## Delete a Group

Preset groups cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Groups**, and then tap the group to delete.
3. Tap  **More options** > **Groups** > **Delete**.
4. Tap **Group only** to only delete the group or tap **Group and members** to delete the group and the contacts in the groups.

## Contacts Settings



These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the prompts.

# Email



Use the Email app to view and manage all your email accounts in one app.

To access Email:






- ▶ From a Home screen, tap  **Apps** >  **Email**.

## Configure Email Accounts

You can configure Email for most accounts in just a few steps.




1. From a Home screen, tap  **Apps** >  **Email**.
2. Follow the prompts to set up your email account.

To add an Email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Mailbox** >  **Settings** >  **Add account**.
3. Enter your email address and password.
  - The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email is displayed in the Inbox for the account.



## View Multiple Email Accounts

You can view email you receive for multiple accounts, or you can view email accounts individually.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Mailbox** at the top left of the screen to choose a different view:
  - **[Account name]**: View email for only one email account.
  - **All accounts**: View all email in a combined inbox.






## Manage Your Inbox


There are several tools available from the Inbox screen.

- ▶ From a Home screen, tap  **Apps** >  **Email**.
  - Tap a message to read and reply or forward it.
  - Tap **Search** to search for key words in your email inbox.
  - Tap **Edit** and select one or more messages to delete, mark as read, and more
  - Tap **Sort by** to customize how messages display.

## Create and Send an Email





This section describes how to create and send an email using the Email app.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Compose new email**.
3. Tap the **To** field to manually add an email address or tap  **Add recipient** to select a recipient from Contacts Groups, or Recents.
  - If manually entering recipients, enter additional recipients by separating each entry with a semicolon (;). More recipients can be added at any time before the message is sent.
  - If adding a recipient from your Contacts, tap the contact to place a checkmark, and then tap **Done**. The contact is displayed in the recipients field.
  - Tap  **Show additional fields** to add Cc and Bcc fields.

4. Tap the **Subject** and **Message** fields to enter text.
  - Tap **Attach** to add files, images, audio, and more to your email.
  - Tap  **More options** for additional email options.
5. Review your message and tap **Send**.





## Remove Email Accounts

To remove an email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Mailbox** >  **Settings**.
3. Tap the account you want to remove.
4. Tap **Remove**. Confirm when prompted.

# Email Settings

These settings allow you to modify settings associated with using the Email app.



1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Mailbox** >  **Settings**.
3. Under **General**, tap an option, and then follow the prompts.
4. Tap an account to configure specific settings for only that account.

# Galaxy Apps

Samsung Galaxy Apps provides a quick and easy way to find and download free premium apps that are compatible with your Galaxy device.

A Samsung account is required to purchase and download apps.

To access the Samsung Galaxy Apps website:



- ▶ From a Home screen, tap  **Apps** >  
 **Galaxy Apps.**

## Galaxy Essentials

Galaxy Essentials is a collection of specially chosen apps available through Samsung Apps.

From Galaxy Essentials, you can access and download a collection of premium content, free of charge.

To access Galaxy Essentials:

1. From a Home screen, tap  **Apps** >  
 **Galaxy Apps.**
2. Swipe across to **Exclusives** and find Galaxy Essentials.
3. Follow the prompts to download Galaxy Essentials apps.




# Gallery

View, edit, and manage pictures and videos.

Some functions described in this section are only available if there are pictures or videos in the Gallery.

## View Pictures and Videos

Launching Gallery displays available folders. When another app, such as Email, saves a picture, a Download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates a Screenshots folder.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap **Pictures**, **Albums**, or **Stories** to choose the way items are displayed.
  - In Albums view, you can create albums to organize your pictures. Tap **Albums**, and then tap  **More options** > **Create album**.

3. Depending on the view mode selected, either tap a picture or video to view it, or first tap an album or folder and then tap a picture or video.
  - When viewing a picture or video, you can swipe left or right to view the next or previous picture or video.




## Zoom In or Out

Use one of the following methods to zoom in or out on a picture:

- Double-tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.



## Play Videos

You can play videos stored on your device.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder or category to open it.
3. Tap a video to view it.
4. Tap  **Play** to play the video.

## Trim Segments of a Video






You can trim segments of a video.


1. Select a video, and then tap the screen once to see the video options.
2. Tap  **Edit**, and then tap  **Trim**.
3. Use the sliders at the bottom of the screen to trim the video. Move the left bracket to the desired starting point, and then move the right bracket to the desired ending point.

4. Tap **Save** to save the video.
5. Modify the File name or Resolution, and then tap **Save** to confirm the changes.

## Edit Pictures




You edit pictures stored on your device.

- ▶ While viewing a picture, tap the screen once to see the following options:
  -  **Auto adjust**: Apply adjustments determined by built-in correction software.
  -  **Share**: Send the picture to your contacts by email, social media, cloud accounts, or other methods.
  -  **Edit**: View and use the editing tools.
  -  **Delete**: Delete the picture from your device.
  -  **Favorite**: Mark the picture as a favorite, and then access it from the Favorites view.


-  **More options:**
  - **Details:** View and edit information about the picture, including the date created, location, and properties.
  - **Rotate left:** Rotate the picture counter-clockwise.
  - **Rotate right:** Rotate the picture clockwise.
  - **Slideshow:** Start a slideshow with the pictures and videos in the current folder.
  - **Set as contact picture:** Set the picture as the photo for a contact.
  - **Set as wallpaper:** Set the picture as a wallpaper for the Home and Lock screens.
  - **Print:** Send the picture to your connected printer.

## Share Pictures and Videos

You can share pictures and videos from your Gallery.




1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap  **More options** > **Share**, select pictures and videos, and then tap **Share** to send them to others or share them with social network services.

– or –

While viewing a single picture or video, tap  **Share** to send it to others or share it with social network services.

## Delete Pictures and Videos

You can delete pictures and videos stored on your device.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. Tap  **More options** > **Edit**.
4. Tap pictures and videos to select them, or tap the **All** checkbox at the top of the screen to select all pictures and videos.
5. Tap **Delete**, and confirm when prompted.

– or –



When viewing a single picture or video, tap

 **Delete**.

# Internet








Access the Internet with a fully-featured web browser.




## Access the Internet

► From a Home screen, tap  **Apps** >  **Internet**.

## Command Keys

The following commands are available:

-  **Back** or  **Back**: Return to the previous page.
-  **Forward**: Go forward to a recent page.
-  **Add to Bookmarks**: Add the current web page to bookmarks.
-  **Refresh**: Refresh or reload the current web page.
-  **Home**: Display your Internet Home screen.
-  **Bookmarks**: Manage bookmarked pages, saved pages, and history.

-  **More options**: Share, save, or bookmark a web page, open a new secret tab, display Internet app settings, and more.
-  **New tab**: Open a new browser tab.
-  **Close tab**: Close a browser tab.

## View a Web Site

To view a web site:

- Tap the address field, enter the web address, and then tap **Go** on the keyboard.

To zoom in or out:

- Tap the screen twice or pinch the screen to zoom out. Stretch the screen to zoom in.

## Browser Tabs

Use tabs to view multiple web pages at the same time.

To open a new tab:

▶ Tap  **New tab.**

- If all tabs are closed, tap **New tab.**
- Tap a different tab to view it.

To close a tab:

▶ Tap  **Close tab.**


## Bookmarks

The Bookmarks page stores Bookmarks, Saved pages, and History.


## Save and Open Bookmarks

Bookmarking a web page saves the web address so that you can access it quickly.

To bookmark the current web page:

1. Tap  **Add to Bookmarks.**

– or –

Tap  **More options > Add to Bookmarks.**

2. Type a title for the bookmark and tap **Save.**

To open a bookmarked web page:

1. Tap  **Bookmarks > Bookmarks.**

2. Tap a bookmark entry.


## Saved Pages

Saving a web page stores the web page content on your device so that you can access it offline.

To save the current web page:


- ▶ Tap  **More options** > **Save webpage**.

To view saved web pages:

1. Tap  **Bookmarks** > **Saved pages**.
2. Tap a saved page to open it in the browser.


## View History

To view a list of recently visited web pages:

- ▶ Tap  **Bookmarks** > **History**.

## Share Pages

To share a web page address with others:




- ▶ Tap  **More options** > **Share**, and follow the prompts.

## Secret Mode

Pages viewed in Secret mode are not listed in your browser history or search history, and leave no traces (such as cookies) on your device. Secret tabs are a darker shade than the normal tab windows.

Any downloaded files remain on your device after you close the secret tab.




To turn on Secret mode:

1. From a Home screen, tap  **Apps** >  **Internet**.
2. Tap  **More options** > **Turn on Secret mode**.
3. Tap **Set password** to protect your Secret mode data with a password.

– or –




Tap **Do not use password**.

To turn off Secret mode:

1. From a Home screen, tap  **Apps** >  **Internet**.
2. Tap  **More options** > **Turn off Secret mode**.

## Internet Settings

These settings allow you to modify settings associated with using the Internet app.









1. From a Home screen, tap  **Apps** >  **Internet**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the prompts.

# Memo

Use Memo to write and save notes on your device.



## Compose a Memo

You can create memos using the Memo app.

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap  **Create memo** and type a memo. Available options include:
  -  **Category**: Add or change the category.
  -  **Tasks**: Add tasks.
  -  **Image**: Insert an image into the memo.
  -  **Drawing**: Create a drawing and add it to the memo.
  -  **Voice**: Use your voice to insert text into the memo.
3. Tap **Save** when finished.



## Edit Memos

You can make edits to memos you create.

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap a memo to view it.
3. Tap the content and make edits.
4. When you are finished, tap **Save**.




## Browse Memos

You can browse memos you create.

 
- ▶ From a Home screen, tap  **Apps** >  **Memo**.
  - Browse memo entries by swiping up or down.
  - To search for a memo, tap **Search**.

## Memo Options

You can edit, share, or manage memos.

1. From a Home screen, tap  **Apps** >  **Memo**.
2. While browsing memos, tap  **More options** for the following options:
  - **Edit**: Select notes to delete or move.
  - **Manage categories**: Create and manage categories to organize your memos.
3. Tap a memo, and then tap one of the following options:
  - **Share**: Send the memo to others using a variety of sharing methods or social media.
  - **Delete**: Delete the memo.
  - **More > Pin to Home screen**: Place a shortcut to the memo on a Home screen.



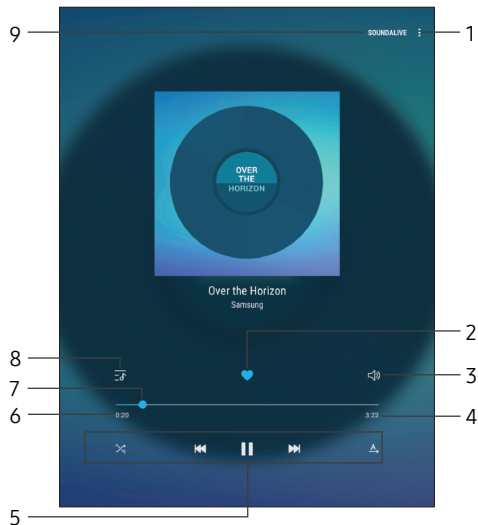


 



# Music Player







1. **More options:** View more options.
2. **Favorite:** Tag this song as a favorite.
3. **Volume:** Tap to adjust the volume.
4. **Song length:** View length of the song.
5. **Playback controls:** Change shuffle or repeat modes, fast-forward or rewind, or play or pause the current song.
6. **Time elapsed:** View the time elapsed for the current song.
7. **Playback position:** Skip to another part of the current song.
8. **Song queue:** View the current song list being played.
9. **Sound quality and effects:** Customize options to adjust sound effects. For more information, see ["Advanced Sounds" on page 93.](#)

## Listen to Music

Listen to your favorite songs with the Music player. Navigate through your music library, play songs, and create customized playlists.

1. From a Home screen, tap  **Apps** >  **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Swipe through the list of songs and tap an entry to begin playback.
4. While playing music, use these controls:
  - Tap  **Pause** to pause playback. To start playback again, tap  **Play**.
  - Tap  **Rewind** to move to the previous song. Tap  **Fast-forward** to move to the next song.
  - Tap the repeat button to control playback. Choose  **Repeat** off to play all songs once. Choose  **Repeat all** to repeat all songs. Choose  **Repeat 1** to repeat the current song.



- Tap the shuffle button to control the order songs are played. Choose  **Shuffle off** to play songs in the order they appear in the list. Choose  **Shuffle on** to play songs in random order.
- Tap  **Favorite** to mark a song as a favorite. Whenever a song is a favorite, the star is gold. Favorite songs are included in the Favorites playlist.
- Tap  **Volume** to set the volume. You can also set volume by pressing the **Volume** key on the side of the tablet.

**Note:** When you close the Music screen, playback continues in the background, allowing you to listen to music while using other features of your tablet. When music is playing in the background, you can access playback controls from the Notification panel.

# My Files

Access files stored on your device, including images, videos, music, and sound clips.

To view files in My Files:

1. From a Home screen, tap  **Apps** >  **My Files**.
2. Tap a category to view the relevant files or folders.
3. Tap a file or folder to open it.

## File Groups

Files stored in the device are organized into the following groups:

- **Recent files:** View recently saved files.
  - This option appears if one or more files have been accessed recently.
- **Categories**
  - **Images:** View image files.
  - **Audio:** View audio files.
  - **Videos:** View video files.
  - **Documents:** View document files.
  - **Installation files:** View all APK files.
  - **Downloads:** View all apps and files that have been downloaded to the device.

- **Tablet**

- **Internal storage:** View folders and files located on the device.
- **SD card:** View folders and files located on the optional SD card (not included).
  - This option appears if an optional SD card is installed.



- **Cloud**

- **Google Drive:** Use a Google account for cloud storage.




**Note:** Cloud drives vary depending on the services you sign in to.

## My Files Options

 
Use My File options to search, edit, clear file history, and more. Options vary by category, folder, or file.

- ▶ From a Home screen, tap  **Apps** >  **My Files**.

The following options are available:



-  **Search:** Search for a file or folder.
-  **Grid/List:** Choose a grid or list style for viewing the category.
-  **More options:** Tap for the following options:
  - **Edit:** Edit files shown in Recent files.
  - **Share:** Share files.
  - **Manage storage usage:** Tap to view memory information for your device.
  - **Create folder:** Create a new folder.
  - **Sort by:** Change the sort order of the files.
  - **Settings:** View settings for the My Files app.
- **Clear history:** Clear the Recent files category.
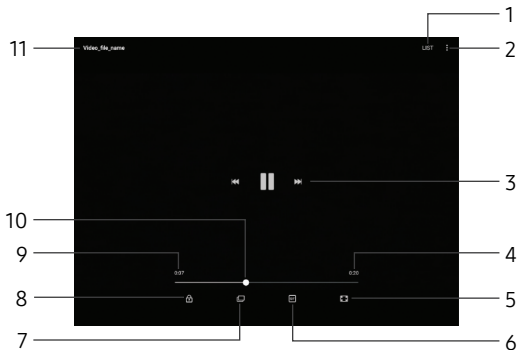
# Video Player





1. **List:** Display a list of all videos
2. **More options:** View more options.
3. **Playback controls:** Restart the video, skip to a previous video, or rewind the video; pause or play the current video; or skip to the next video or fast-forward through the current video.
4. **Video length:** View the total length of the video.
5. **Screen ratio:** Change the screen ratio.
6. **Create GIFs:** Create an animated GIF.
7. **Pop-up:** Open the video in a pop-up window.
8. **Lock video:** Black out and lock the video screen.
9. **Time elapsed:** View the time elapsed for the video.
10. **Playback position:** Skip to another part of the video.
11. **File name:** View the name of the video file.

## Access the Video Player

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your tablet. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.




## Manage Videos

Once you have recorded and saved at least one video, the following options are available:

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap **Edit**, and then select one or more videos to edit or delete.
3. Tap **More** to share videos, search for videos, or sort for videos.






## Use Pop-Up Play

Multitask with Pop-up player by transforming your video player into a pop-up window. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  **Pop-up** to continue playing the video in a floating window.
  - Drag the window to any location on the screen.
  - Use two fingers to pinch or spread to resize the floating window.

## Change the Video Screen Size

You can change the size of the video in several ways during video playback.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap the screen ratio icon to cycle through the screen size options:
  -  **Fit to screen:** The video is fit to fill the screen while keeping its original proportions.
  -  **Stretch:** The entire screen is used, which may cause some minor distortion.
  -  **Crop to fit:** The video is enlarged to fit the screen without becoming distorted.



# Settings

Configure your device's connections and settings, add accounts, and customize Home screens, apps, and features.


# How to Use Settings

## Access Settings

There are a couple of ways to access your device settings.



► From a Home screen, tap  **Apps** >  **Settings**.

– or –

Drag down from the Status bar to display the Notification panel, and then tap  **Settings**.

## Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Search feature.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap  **Search**.

- Enter a word or words in the **Search** field. As you type, settings that match display on the screen.
- Tap an entry to go to that setting.

# Connections



Manage connections between your device and a variety of networks and other devices.

## Wi-Fi

Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a wireless Access Point (AP).



### Turn Wi-Fi On or Off

Turning Wi-Fi on makes your device able to discover and connect to compatible in-range wireless APs.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn Wi-Fi on or off.



## Wi-Fi Status Indicators

Status bar icons indicate your current Wi-Fi connection status:

- When Wi-Fi is connected, active, and communicating with a wireless Access Point,  **Wi-Fi active** is displayed in the Status bar.
- If a Wi-Fi access point is available, but your device is not connected to it,  **Wi-Fi available** is displayed. It may also be displayed if there is a communication issue with the target wireless Access Point.



## Wi-Fi Networks

To scan for a Wi-Fi network and connect to it:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
  - When Wi-Fi is turned on, your device automatically scans for available networks and displays them.
3. Tap the network you want to connect to.
  - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.



## Manually Connect to a Wi-Fi Network

You can connect your device to a Wi-Fi network manually.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
3. Swipe to the bottom of the screen and tap  **Add network**.
4. Enter information about the Wi-Fi network:
  - **Network name:** Enter the name of the Wi-Fi network.
  - **Security:** Select a security option and enter your password.
  - **Auto reconnect:** Connect to this network automatically whenever available.
  - **Show advanced options:** Add advanced options such as IP settings and Proxy settings.
5. Tap **Connect** to store the new information and connect to your target wireless Access Point.

## Wi-Fi Options



The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
3. Tap **Advanced** for options:
  - **Network notification:** Receive notifications when open networks in range are detected.
  - **Manage networks:** Manage your saved Wi-Fi networks.
  - **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.

- **WPS PIN entry:** View the PIN used by your device to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
- **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi.
- **Install network certificates:** Install authentication certificates.
- **Wi-Fi control history:** View apps that have turned Wi-Fi on or off most recently.
- **MAC address:** View your device's MAC address, which is required when connecting to some secured networks (not configurable).
- **IP address:** View your device's IP address (not configurable).

## Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections using Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
  - Wi-Fi must be on to configure settings.
3. Tap **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices.
4. Select a device, and then follow the prompts to complete the connection.

## Wi-Fi Direct Status Indicator

Status bar icons indicate your current Wi-Fi Direct connection status:

- When your device is connected to another device using Wi-Fi Direct,  **Wi-Fi Direct** is displayed in the Status bar.



## Bluetooth

Bluetooth is a short-range communications technology that connects your device wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.

The Bluetooth communication range is approximately 30 feet.


## Turn Bluetooth On or Off

Use the settings menu to turn your device's Bluetooth on or off.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn Bluetooth on or off.



## Bluetooth Status Indicator

Status bar icons indicate your current Bluetooth connection status:

- When Bluetooth is turned on,  **Bluetooth** is displayed in the Status bar.

## Scan for Bluetooth Devices



When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
  - When Bluetooth is first turned on, it scans for nearby Bluetooth devices and displays them.
  - To manually perform a new scan, tap **Scan**.

## Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.




Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
  - Make sure that the target device is discoverable so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.

3. Tap the name of the target device when you see it displayed in the Bluetooth devices section.
  - Your device automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.




## Rename a Paired Device

Once you have paired your device to another device, you can rename the paired device to make it easier to recognize.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap  **Settings** next to the previously paired device, and then tap **Rename**.
4. Enter a new name, and tap **Rename**.



## Delete a Paired Device (Unpair)

When you unpair from a Bluetooth device, the two devices no longer recognize each other. To connect again, you have to pair the devices.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap  **Settings** next to the paired device, and then tap **Unpair** to delete the paired device.

## Tablet Visibility



You can make your device visible to allow other devices to find it and share content.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Tablet visibility**, and then tap **On/Off** to turn on visibility.

## Data Usage

Monitor how your data is being used, and set limits and restrictions to conserve it.

Your service provider may account for data usage differently.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Data usage** for options:
  - **Usage:** Your total data usage is shown.
  - **Wi-Fi data usage:** The amount of Wi-Fi data usage by application is shown.
  - **Restrict networks:** Select Wi-Fi networks to prevent apps that are running in the background from using them. Apps also warn you before using these networks for large downloads.



## Airplane Mode

Airplane mode disconnects your device from all networks and turns off connectivity features, such as Wi-Fi and Bluetooth.

While in Airplane mode, you can use other features such as playing music, watching videos, and other offline applications.

### Enable Airplane Mode

To enable or disable Airplane mode:



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Airplane mode**, and then tap **On/Off** to enable or disable the option.

## Location

Some apps, such as Google Maps, may require one or more location services be turned on for full functionality.

### Locating Method

Before using any features that require location assistance, you must enable your device's location services.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap **Locating method** to select how your location is determined:
  - **High accuracy**: Uses GPS, Wi-Fi, and mobile networks.
  - **Battery saving**: Uses Wi-Fi and mobile networks (no GPS).

- **Device only**: Uses GPS only.

5. Tap **Improve accuracy** to use other connections for determining your location:
  - **Wi-Fi scanning**: Allow apps and services to scan for Wi-Fi networks automatically, even when Wi-Fi is turned off.
  - **Bluetooth scanning**: Allow apps to scan for and connect to nearby devices automatically through Bluetooth, even when Bluetooth is turned off.



### Recent Location Requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap an entry under **Recent location requests** to view the app's settings.

## Location Services

Google Location History™ stores and uses your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap **Google Location History** and sign in to your Google Account for more options.



## More Connection Settings

The More connection settings allow you to configure a variety of connectivity settings for your device.

## Nearby Device Scanning



Scan for nearby devices to connect to and set them up easily. You receive a notification when there are available devices to connect to. This function uses Bluetooth Low Energy scanning even if Bluetooth is turned off on your device.

To enable nearby device scanning:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **More connection settings** > **Nearby device scanning**.
3. Tap **On/Off** to enable the feature.

## Printing

Print images and documents to Samsung printers and other compatible printers (not included).



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **More connection settings** > **Printing**.
3. Tap a print service and follow the prompts.

## Virtual Private Networks (VPN)

Set up and manage your Virtual Private Networks (VPNs). You must set a secured screen lock before setting up a VPN. For more information, see [“Set a Screen Lock” on page 110.](#)



## Add a VPN

Use the VPN settings menu to add a VPN connection to your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap **Add VPN** and follow the prompts to set up your VPN.



## Connect to a VPN

To connect to a VPN:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap the VPN, enter your log in information, and tap **Connect**.




## Disconnect from a VPN

To disconnect from a VPN:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap the VPN, and then tap **Disconnect**.

## Edit or Delete a VPN

Once you have set up a VPN connection, you can edit or delete the connection.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap  **Settings** next to the VPN that you want to edit or delete.



4. Edit the VPN and tap **Save**.

– or –

Tap **Delete** to delete the VPN.

## Ethernet

Manage your Ethernet connections.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Connections** > **More connection settings** > **Ethernet** and follow the prompts to connect to an Ethernet network.

# Sound

Configure the sound used to indicate notifications, screen touches, and other interactions.

## Change the Sound Mode



You can switch between sound modes, while preserving the individual sound settings you have made.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Sound mode**, and then choose a mode:
  - **Sound**: Use the sounds, vibrations, and volume levels you have chosen in Sound settings for notifications and alerts.
  - **Mute**: Mute all sounds and notifications.

## Adjust the Volume




Set the system volume level and default volume for notifications and other audio.

**Note:** You can also set the volume from a Home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Volume** and drag the sliders to set the default volume for:
  - Notifications
  - Media
  - System



## Media Volume Limiter

Limit the maximum output of the device's volume. You can also set a PIN to prevent unauthorized users from changing this setting.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Volume**.
3. Tap  **More options** > **Media volume limiter**.
  - Tap **On/Off** to enable this feature.
    - When enabled, drag the **Custom volume limit** slider to set the maximum output volume.
  - Tap **Set volume limit PIN** to prevent changes to the volume setting.

## Change the Notification Sound



Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Notification sounds** and configure the following options:
  - **Default notification sound:** Choose a default sound for all notifications.
  - **Calendar notifications:** Choose a sound for calendar notifications, and enable or disable vibration alert.
  - **Email notifications:** Configure email account notifications. An email account must be configured for this option to be available.

## Do Not Disturb

This setting allows you to block all notifications and alerts. The options below determine what notifications can make sounds, and during what time periods you want to enter this mode.



To activate Do not disturb mode:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Do not disturb**.
3. Tap **Turn on now** to enable this option.
4. Tap **Turn on as scheduled**, and then tap **Days**, **Start time**, and **End time** to set up a do not disturb schedule.
5. Tap **Allow exceptions** to customize which notifications are allowed while your device is in Do not disturb mode.

6. Tap **Hide visual notifications** to prevent notifications silenced by Do not disturb from appearing on the screen or turning on the LED indicator.



## System Sounds

Set various other system sound options.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound**, and tap to enable each option:
  - **Touch sounds**: Play tones when you touch or tap the screen to make selections.
  - **Screen lock sounds**: Play a sound when you unlock the screen.
  - **Charging sound**: Play a sound when a charger is connected.

## Key-Tap Feedback



Play a sound when the Samsung keyboard is tapped.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Keyboard sound**, and tap **On/Off** to enable.

## Advanced Sounds

You can enable sound effects when connected to a headset. Sound effects are only available when headphones or a compatible Bluetooth headset (not included) is connected.



Choose from advanced sound options to customize your audio experience.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Sound quality and effects**.
3. Tap **Equalizer** and choose a setting, or tap **Advanced** or **Basic** to customize your sound settings.

4. Tap **On/Off** to enable each option:
  - **Surround**: Recreate the effects of rich surround sound.
  - **Tube Amp Pro**: Simulate the soft timbre of a tube amplifier.
  - **Concert hall**: Simulate the reverb of a concert hall.
5. Tap **Adapt sound** and follow the prompts to customize your sound settings.

# Notifications

Select which apps you want to receive notifications from.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Notifications**.
3. Tap **On/Off** next to an app to enable or disable notifications.
  - Tap **Advanced** to configure more notification options for individual apps.

# Display

Configure your display's brightness, screen timeout delay, and other display settings.



## Brightness

Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display**.
3. Customize options under Brightness:
  - Drag the **Brightness** slider to set a custom brightness level.
  - Tap **Auto brightness** to allow the device to adjust brightness automatically.

## Screen Mode

Choose a screen mode to match your type of viewing.




1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Screen mode** and choose a screen mode:
  - Tap **Adaptive display** if you want your device to automatically optimize the display to match the type of image displayed and other criteria, such as battery level.

– or –

Choose a specific type of screen mode based on what you are viewing.

## Screen Zoom and Font



You can set the font size and style for all text that is displayed on the screen.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Screen zoom and font** to choose a font size and style.
  - Drag the **Screen zoom** slider to adjust the zoom level.
  - Drag the **Font size** slider to adjust the size of text.
  - Tap a font to select it, or tap  **Download fonts** to find new fonts from Galaxy Apps.
3. Tap **Apply** to apply the new settings.

## Home Screen

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.



To customize Home screen:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Home screen**.

For more information, see [“Customize the Home Screen” on page 12.](#)



## Icon Frames

You can show icons with shaded frames to make them stand out on the Home screen and Apps list screen.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Icon frames** and choose one of the following options:
  - **Icons only:** Show icons only.
  - **Icons with frames:** Show icons with shaded frames.
3. Tap **Done**.



## Status Bar

Set up Status bar functions.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Status bar**.
3. Tap **On/Off** to enable the following options:
  - **Show recent notifications only:** Show only the three most recent notification icons on the Status bar.
  - **Show battery percentage:** Display the battery charge percentage next to the battery icon on the Status bar.






## Screen Timeout


Turn the screen off after a set amount of time.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Screen timeout** and choose a time period.

# Screen Saver

Screen saver controls what is displayed on the screen when the device is docked (dock not included) or while charging. You can choose to display colors or photos.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Screen saver**.
3. Tap **On/Off** to enable Screen saver.
4. Configure options:
  - **Colors:** Tap the selector to display a changing screen of colors.
  - **Photo table:** Display pictures in a photo table. Tap  **Settings** for options.
  - **Photo frame:** Display pictures in a photo frame. Tap  **Settings** for options.
  - **Photos:** Display pictures from your Google Photos account. Tap  **Settings** for options.

5. Tap  **More options** for additional options:
  - **Preview:** See a demonstration of Screen saver.
  - **Select when to use:** Select when your device can go into Screen saver mode.

# Wallpaper

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

To change wallpaper:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wallpaper**.
  - Tap **From Gallery** for additional wallpapers.
3. Tap an image to choose it, and then choose where you want to use it:
  - Home screen
  - Lock screen
  - Home and lock screens
4. Review the preview, and then tap **Set as wallpaper** to set the image as the wallpaper.



# Advanced Features

Configure features on your device that make it easier to use.

## Accessories



Configure options when using a book cover (not included).

Flip the cover open to unlock the screen when secure lock is turned off.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Advanced features** > **Accessories**.
3. Tap **Automatic unlock** to enable or disable this feature.



## Smart Stay

Smart stay detects your face with the front camera so that the screen stays on while you are looking at it.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Advanced features** > **Smart stay**, and tap **On/Off** to turn the feature on.



## Games

Manage useful features while you play games.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Advanced features** > **Games**.
3. Tap **On/Off** to enable or disable the following:
  - **Game launcher:** Automatically arranges all your games in one place.
  - **Game tools:** When enabled, a button floating over top of your game provides convenient game features.

## Other Features

Configure other useful features. For example, you can control certain device actions by picking up the device and by touching the screen with the palm of your hand or turning over the device.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Advanced features**.
3. Tap **On/Off** to enable each of the following:
  - **Multi window:**
    - **Split screen view action:** Touch and hold the **Recent apps** key to change the current app from full screen view to split screen view. While in split screen view, touch and hold the **Recent apps** key to close the app on the bottom.
    - **Pop-up view gesture:** When an app is open on the screen, adjust the size of the app by swiping down diagonally from either corner of the screen.

- **Smart capture:** Capture an image of any scrollable areas of the screen that are currently hidden, as well as the area that is visible, and crop and share the screenshot immediately.
- **Palm swipe to capture:** Capture an image of the screen by swiping the edge of your hand across it, from side to side, keeping in contact with the screen.
- **Easy mute:** Mute sounds and video by covering the screen or turning over the device.
- **Direct share:** Share content with specific people directly using the sharing panel from within any app.

# Device Maintenance

View the status of your device's battery, storage, memory, and device security. You can also automatically optimize your device's system resources.

## Access Device Maintenance

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance**.



## Quick Optimization

The quick optimization feature improves device performance through the following actions:

- Identifying apps that use excessive battery power and clearing unneeded items from memory.




- Deleting unnecessary files and closing apps running in the background.
- Scanning for malware.

To use the quick optimization feature:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance**.
3. Tap **Optimize now**.

## Battery

View how battery power is used for device activities.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Battery** for options:
  - **Battery usage:** View details of battery usage by item.
  - **Power saving mode:** Extend battery life by selecting a power saving mode level. Choose **Off**, **Mid**, or **Max**. Estimated remaining battery life for each mode is provided.
  - **App power monitor:** Put apps to sleep so that they do not use battery power when not in use. Tap **Save power** to enable.
  - **Unmonitored apps:** Select apps to exclude from being put to sleep by the App power monitor.
  -  **More options:**
    - **Advanced settings:** Configure advanced battery settings.

## Storage



View the device memory and usage.

### Device Memory

View and manage the memory used by the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Storage**. Used memory is divided into:
  - Documents
  - Images
  - Audio
  - Videos
  - Apps

To increase available memory:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap **Clean now** and follow the prompts.




## Memory Card (SD Card)

Once an optional memory card (not included) has been installed in your device, the card memory is displayed in the Storage setting.

For more information, see [“Install an Optional Memory Card” on page 4](#).




## Mount a Memory Card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you need to mount it before it can be accessed.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap  **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, and then tap **Mount**.




## Remove a Memory Card

**Warning:** To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap  **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, and then tap **Unmount**.
5. Remove your memory card from the device.



## Format a Memory Card

**Warning:** When formatting an SD card, you should back up your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap  **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, tap **Format**, and then follow the prompts.



## Memory

Check the amount of available memory. You can close background apps and reduce the amount of memory you are using to speed up your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Memory**.
  - Used and available memory are shown.
3. To free up as much memory as possible, tap **Clean now** and follow the prompts.
  - The selected apps and services in the list will be closed.

## Device Security

Configure and monitor security settings for your device.




1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Device maintenance** > **Device security**.
  - Follow the on screen instructions to get award-winning security apps, and more.


# Applications Settings

Manage settings for applications on your device.

You can download and install new applications on your device. Use Application manager settings to manage your downloaded and preloaded applications.

**Warning:** Because this device can be configured with system software not provided by or supported by Google or any other company, you operate this software at your own risk.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Apps**.
3. Tap  **Menu** at the top left of the screen.
  - Tap **All apps**, **Enabled**, or **Disabled**.

4. Tap  **More options** for the following options:
  - **Sort by size/name:** Sort the apps by size or name.
  - **Default apps:** Choose or change apps that are used by default for certain features, like email or browsing the Internet.
  - **App permissions:** Control which apps have permissions to use certain features of your device.
  - **Show/Hide system apps:** Show or hide system (background) apps.



- **Special access:** Optimize battery usage for individual apps, enable device administrator apps, choose apps that can appear over other running apps, select which apps can change system settings, and more.
  - **Reset app preferences:** Reset options that have been changed. Existing app data is not deleted.
5. Tap an application to view and update information about the application. The following options may be displayed:
- **Uninstall/Disable:** Uninstall or disable the application. Preloaded apps can only be disabled.
  - **Force stop:** Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
  - **Data usage:** View data usage.
  - **Battery:** View battery usage since the last full charge.
  - **Storage:** Manage the app's storage usage.
  - **Memory:** View memory usage.
  - **Notifications:** Configure notifications from the app.
  - **Permissions:** View permissions granted to the app for access to your device's information.
  - **Set as default:** Set the app as a default for a certain category of apps.
  - **Apps that can appear on top:** Choose apps that can run on top of other running apps.
  - **Apps that can change system settings:** Choose which apps can change system settings.

# Lock Screen and Security

Secure your device and protect your data with Lock Screen and Security settings.

## Set a Screen Lock

It is recommended that you secure your device using a Screen lock.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Screen lock type** to select a screen lock and level of security:
  - **Swipe:** Swipe the screen to unlock it. This option provides no security.
  - **Pattern:** Create a pattern that you draw on the screen to unlock your device. This option provides medium security.

- **PIN:** Select a PIN to use for unlocking the screen. This option provides medium to high security.
- **Password:** Create a password for unlocking the screen. This option provides high security.
- **None:** Do not lock the screen.
- **Fingerprints:** Use fingerprint recognition to unlock the screen. This option provides medium to high security.

3. Select your notification preferences, if you choose a secured lock screen option:
  - Show content
  - Hide content
  - Do not show notifications
4. Tap **Set up** to set up and use your fingerprints to unlock the device in addition to a PIN, pattern, or password. Tap **Later** to skip fingerprints setup.
5. Choose a screen lock option:
  - **Info and app shortcuts:** Display a dual clock, owner information, or app shortcuts on the Lock screen.
  - **Notifications:** Show notifications on the Lock screen.
  - **Secure lock settings:** Set your secure lock functions such as Secured lock time and Smart lock. This option is not available with Swipe.

## Fingerprints




Use fingerprint recognition as an alternative to entering passwords in certain apps.

You can also use your fingerprint to verify your identity when logging in to your Samsung account.

**Note:** Fingerprint recognition uses the unique characteristics of each fingerprint to enhance the security of your device. The likelihood of the fingerprint sensor confusing even small areas of two different fingerprints is very low. **But, in rare cases, the sensor may recognize a fingerprint that is similar to a registered fingerprint.**



## Register a Fingerprint

To use your fingerprint to unlock your device, you must set a pattern, PIN, or password. You can register up to four fingerprints.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Fingerprints**.
  - If no fingerprints are registered, you are prompted to choose a secure screen lock and scan your fingerprint. Follow the prompts to complete setup.
  - To add a fingerprint, tap  **Add fingerprint** and follow the prompts to register a fingerprint.
  - To rename a fingerprint, tap the fingerprint, enter a new name, and then tap **Rename**.
  - To delete a fingerprint, touch and hold the fingerprint, and then tap **Remove**. Confirm when prompted.

## Fingerprint Verification

Fingerprint verification can be used for other accounts accessed from your device.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Fingerprints** for the following options:
  - **Web sign-in:** Use your fingerprint to access your online accounts.
  - **Samsung account:** Verify your identity using your fingerprint when logging in to your Samsung account.
  - **Fingerprint unlock:** Tap **On/Off** to enable or disable fingerprint recognition to unlock the screen.

## Find My Mobile

Protect your device from loss or theft allowing your device to be locked, tracked, and for your data to be deleted remotely.

- ▶ To access your device remotely, visit [findmymobile.samsung.com](https://findmymobile.samsung.com).



**Note:** You must sign up for a Samsung account and enable Google location service to use Find My Mobile.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Find My Mobile**.
3. Enter your Samsung account password or, if you are not logged in to your Samsung account, tap **Add account** and follow the prompts. The following options are available:
  - **Remote controls:** Activate or deactivate Remote controls, which allows you to access your device remotely.

- **Google location service:** Activate or deactivate Google location service. This service must be on in order to find your device.
- **Send last location:** Allow your tablet to send its last location to the Find My Mobile server before it is turned off.

## Unknown Sources

Enable installation of non-Google Play applications.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Unknown sources** to enable this option.

**Warning:** Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.

## Private Mode



Hide personal content from being accessed by anyone else using your device. Private mode is only available for certain applications.

**Note:** A secure screen lock (Pattern, PIN, Password, or Fingerprints) is required to use Private mode.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Private mode**.
3. Tap **On/Off** to enable Private mode.
4. Follow the prompts to learn about and set up Private mode.



## Encrypt Device

Protect your device by encrypting its data.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Encrypt device**.
3. Tap **Encrypt device** and follow the prompts to encrypt all data on your device.

## Encrypt SD Card



Protect your SD card by encrypting its data.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Encrypt SD card**.
3. Tap **Encrypt SD card** and follow the prompts to encrypt all data on your memory card.

## Other Security Settings



### View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Make passwords visible** to turn the feature on.



### Security Update Service

Automatically receive security updates.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following Security update service options:
  - **Security policy updates:** Automatically or manually check for security policy updates.
  - **Send security reports:** Use Wi-Fi to send security reports to Samsung for threat analysis.



## Device Administration

Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Device administrators**.
  - Tap **Android Device Manager** to allow it to lock or erase a lost device.

## Credential Storage



Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following Credential storage options:
  - **Storage type:** Select a storage location for credential contents.
  - **View security certificates:** Display certificates in your device's ROM and other certificates you have installed.
  - **User certificates:** View user certificates.

- **Install from device storage:** Install a new certificate from storage.
- **Clear credentials:** Erase the credential contents from the device and reset the password.



## Knox Active Protection

Get extra protection against malicious attacks.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings**.
3. Tap **Knox active protection** to activate Knox.

## Advanced Security Settings

Use these options to configure advanced security settings.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Lock screen and security** > **Other security settings** for the following advanced options:

- **Trust agents:** Perform selected actions when trusted devices are connected.
  - To view Trust agents, set up a secured screen lock (Password, PIN, Pattern, or Fingerprints). For more information, see [“Set a Screen Lock” on page 110](#).
- **Pin windows:** Pin an app on your device screen, preventing access to other features of your device.
- **Usage data access:** View the applications that can access your device’s usage history.

- **Notification access:** View the applications that can access notifications you receive on your device.
- **Do not disturb permission:** View which apps have permission to change the Do not disturb settings.



# Cloud and Accounts

Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.

## Samsung Cloud

Keep your data safe by backing up and restoring your device. You can also sync your data from multiple devices.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Samsung Cloud**.
  - If a Samsung account has not been added, tap **Start** and follow the prompts.

3. Once a Samsung account is configured, the following options are available:
  - **Manage cloud storage:** View how much cloud storage your data is using.
  - **Backup settings:** Tap the following items to enable or disable syncing:
    - **Auto back up:** Enable or disable auto back to your Samsung account.
  - **Restore:** Restore backed up data.
  - **Data to sync:** Tap the following items to enable or disable syncing:
    - **Contacts (Samsung account):** Sync contact info.




- **Calendar (Samsung account):** Sync your events and tasks.
- **Memo:** Sync your voice memos, images, and tasks.
- **Internet:** Sync bookmarks, saved pages, and opened tabs from your browser.
- **Keyboard data:** Sync predictive text data.
- **Gallery:** Sync your images and videos.

## Accounts

Configure email, social networking, and other supported accounts.

### Add an Account




You can add and manage all your email, social networking, and picture and video sharing accounts.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Accounts** >  **Add account**.

3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.

### Synchronize Accounts



You can synchronize your calendar, contacts, and other types of accounts.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap an account to view the sync settings for that account.
4. Tap individual data items to sync.
5. Tap  **More options** > **Sync now** to synchronize the account.

## Account Settings




Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap an account to configure that account's sync settings.
4. Tap other available options for the account type.

## Remove an Account

You can remove accounts from your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap the account and then tap  **More options** > **Remove account**.




## Users

Share this tablet with multiple people by creating User accounts.

Users have their own space, which they can customize with their own apps, wallpaper, and so on. Users can also adjust tablet settings that affect everyone, such as Wi-Fi.






## Set Up User Profiles

Set up user profiles and then select one when unlocking the device to use personalized settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Users**.
3. Tap  **Add user or profile** and follow the instructions to set up a new user profile.

## Delete a User


To delete a user profile:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Users**.
3. Tap  Settings next to a user profile.
  - To delete a restricted user profile, tap  **Settings** >  **Delete**.

**Note:** Only the device owner can delete other User accounts.

## Use User Profiles

To access the device with a user profile:

1. Drag the Status bar down to display the Notification panel.
2. Tap  **Manage users**, and then tap a profile.

## Change User Account Nicknames and Photo IDs

The photo and name each user uses in their personal Contact entry (listed under My profile at the top of their Contacts list) is used as their User ID and name.



To change their ID photo and name, each user can edit their personal Contact entry. For more information, see [“Edit a Contact” on page 50.](#)

## Backup and Restore

Back up your data to your Samsung or Google accounts.



### Samsung Account

Enable backup of your information to your Samsung account.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Backup and restore** for options:
  - **Backup settings:** Enable back up of application data, Wi-Fi passwords, and more through your Samsung account.
  - **Restore:** Use your Samsung account to restore your backup data.

### Google Account

Enable backup of your information to your Google account.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Cloud and accounts** > **Backup and restore** for options:
  - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
  - **Backup account:** Select a Google Account to be used as your backup account.
  - **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

# Google Settings

Configure your device's Google settings.

## Customize Google

To customize your Google settings:

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Google**, and select an option to customize:



- **Location:** Configure your Google location settings.
- **Security:** Configure the Android Device Manager and apps security settings.
- **Ads:** Configure your Google advertising profile.
- **Nearby:** Use your device's sensors to connect with nearby devices.

- **Search & Now:** Configure your Google search settings and Google Now™ settings.
- **Set up nearby device:** Set up another device using Wi-Fi and Bluetooth.

# Accessibility

Accessibility services are special features that make using the device easier for those with certain physical disabilities.

For more information about Accessibility for Samsung products, please contact us at [accessibility@sea.samsung.com](mailto:accessibility@sea.samsung.com).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accessibility** for options:

## Vision

- **Voice Assistant:** Give spoken feedback to assist blind and low-vision users.
  - Voice Assistant can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.
- **Voice Assistant help:** View help on using Voice Assistant.
- **Dark screen:** Keep the screen turned off at all times for privacy.
- **Rapid key input:** Release your finger to enter selection instead of double tapping.
- **Speak passwords:** Read the characters aloud as you enter your passwords.
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps.
- **Screen zoom and font:** Set the zoom size, and the font size and style.

- **High contrast fonts:** Adjust the color and outline of fonts to increase the contrast with the background.
- **High contrast keyboard:** Adjust the size of the Samsung keyboard and change its colors to increase the contrast between the keys and the background.
- **Show button shapes:** Show buttons with shaded backgrounds to make them stand out.
- **Magnifier window:** Magnify content shown on the screen.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Large mouse/touchpad pointer:** Enable to display a large mouse or touchpad pointer.
- **Grayscale:** Change all colors to gray.

- **Negative colors:** Reverse the display of colors from white text on a black background to black text on a white background.
- **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color.

### Hearing

- **Mute all sounds:** Turn off all notifications and audio for privacy.
- **Samsung subtitles (CC):** Use Samsung subtitles with multimedia files when available.
- **Google subtitles (CC):** Use Google subtitles with multimedia files when available.
- **Left/right sound balance:** Use the slider to set the left and right balance when using a stereo device.
- **Mono audio:** Switch audio from stereo to mono for use with one earphone.

## Dexterity and interaction

- **Universal switch:** Control your device with your customized switches.
- **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
- **Press and hold delay:** Select a time interval for this action.
- **Click after pointer stops:** If you use a mouse (not included) with your device, tap **On/Off** to enable this option, which causes your device to automatically click when the mouse cursor stops moving. Drag the **Delay before click** slider to set the amount of time to delay the click once the mouse cursor stops moving.
- **Interaction control:** Block areas of the screen from touch interaction. Disable auto screen rotation and hard key functions. Only show application notifications in the Notification panel and the Status bar.

## More settings

- **Text-to-speech:** Set your preferred TTS engine and options. For more information, see [“Text-to-Speech Options” on page 131](#).
- **Direction lock:** Unlock the screen by swiping in a series of four to eight directions.
- **Direct access:** Open your accessibility settings by pressing the **Home** key quickly three times in succession.
- **Notification reminder:** Beep at set intervals to remind you of any unread notifications.
- **Single tap mode:** Dismiss or snooze alarms, calendar events, and timer alerts with a single tap.
- **Manage accessibility:** Import and export your accessibility settings, or share them with another device.

## Services

Other installed accessibility services may be listed and configured under **Services**.

# General Management



Configure your device's language and input settings, manage date and time, and reset your device.


## Language and Input

Configure your device's language and input settings.

### Change the Device Language



You can add languages to your list, and organize them according to preference. If an app does not support your default language then it will move to the next supported language in your list.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Language and input** > **Language**.

3. Tap  **Add language** and select a language from the list.
  - To change the default language, or remove a language from your list, tap **Edit**.

### Manage Virtual Keyboards

Enable or disable virtual keyboards.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Language and input** > **Virtual keyboard**.

3. Tap an option to customize:

### Samsung keyboard

Configure options for using the Samsung keyboard.

- **Languages and types:** Set the keyboard type and choose which languages are available on the keyboard. To switch between languages, slide the Space bar sideways.
- **Smart typing:** Use predictive text and correct common typing mistakes to improve input.
  - **Predictive text:** Predictive text suggests words that match your text entries, and can automatically complete common words. Predictive text can learn your personal writing style from your contacts, messages, Gmail, and social networking sites — improving its accuracy of predicting your text entries.
  - Additional keyboard settings provide assistance with capitalization, punctuation, and much more.

- **Customization:** Use alternative characters, text shortcuts, change the keyboard size, or use a high contrast keyboard.
- **Other settings:** Reset keyboard settings, clear personalized data, and view information about the Samsung keyboard.

### Google Voice Typing

Speak rather than type your text entries using Google Voice typing.

- **Languages:** Select languages for Google voice typing.
- **“Ok Google” detection:** Launch a Google search whenever you say “OK Google”.
- **Hands-free:** Allow requests with the device locked.
- **Speech output:** Select options for spoken feedback.



- **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.
- **Block offensive words:** Hide search results that contain offensive words.
- **Bluetooth headset:** Use audio input from a Bluetooth headset (not included) if one is connected.

### Manage keyboards

- Select the keyboards to use, if more than one keyboard is available. Additional keyboards can be downloaded from the Google Play store.
- Tap **On/Off** to enable or disable automatic Google voice typing.




## Physical Keyboards

Customize options when you have a physical keyboard connected to your device (sold separately).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Language and input**.
3. Tap **Physical keyboard**, and then choose an option:
  - **Show virtual keyboard:** Show the virtual keyboard while a physical keyboard is also being used.
  - **Keyboard shortcuts:** Show available keyboard shortcuts on the screen as buttons.

## Text-to-Speech Options



Configure your Text-to-Speech (TTS) options. TTS is used for various accessibility features, such as Voice Assistant.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Language and input** > **Text-to-speech** for options:
  - **Preferred TTS engine:** Choose either the Samsung or Google Text-to-speech engine. Tap  **Settings** next to each TTS engine for options.
  - **Speech rate:** Set the speed at which the text is spoken.
  - **Pitch:** Set the pitch at which the text is spoken.
  - **Reset speech rate:** Reset the speed at which the text is spoken to the default setting.
  - **Reset pitch:** Reset the pitch at which the text is spoken to the default setting.

- **Listen to an example:** Play a short demonstration of speech synthesis.
- **Default language status:** Display the default language in use.



## Pointer Speed

Configure pointer speed for an optional mouse or trackpad (not included).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Language and input**.
3. Under **Pointer speed**, drag the slider to the right to go faster or to the left to go slower.

## Date and Time




By default, your device receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the date and time settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Date and time**. The following options are available:
  - **Automatic date and time:** Receive date and time updates from the wireless network. When Automatic date and time is disabled, the following options are available:
    - **Set date:** Enter the current date.
    - **Set time:** Enter the current time.
    - **Select time zone:** Choose your local time zone.

- **Use 24-hour format:** Set the format for displaying time.

## Report Diagnostic Info

This feature sends diagnostic information about your device when you are having technical problems.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Report diagnostic information**.
3. Read the consent information, and then tap **Report diagnostic information** to enable this feature or tap  **Back**.

## Reset

Reset device and network settings. You can also reset your device to its factory defaults.



### Reset Settings

You can reset your device to its factory default settings, which resets everything except the security, language, and account settings. Personal data is not affected.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Reset** > **Reset settings**.
3. Tap **Reset settings**, and confirm when prompted.

### Reset Network Settings

You can reset Wi-Fi, Mobile data, and Bluetooth settings with Reset network settings.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Reset** > **Reset network settings**.
3. Tap **Reset settings**, and confirm when prompted.

## Factory Data Reset

You can reset your device to factory defaults, erasing all data from your device.

This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files.

To reset your device:



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Reset** > **Factory data reset**.
3. Tap **Reset** and follow the prompts to perform the reset.
4. When the device restarts, follow the prompts to set up your device.

## Auto Restart

Optimize your device by restarting it automatically at set times. The device only restarts if it is not in use and battery power is more than 30 percent.



**Note:** Any unsaved data is lost when the device restarts.

To enable Auto restart:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **General management** > **Reset** > **Auto restart**.
3. Tap **On/Off** to activate Auto restart, and then set the following parameters:
  - **Time:** Set the time of day to restart your device.
  - **Day:** Select the day of the week to automatically restart your device.



# Software Update

Check for and install available software updates for your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Software update** for the following options.
  - **Download updates manually:** Check for and install available software updates.
  - **Scheduled software updates:** Set a time to install software updates.

# About Device

View information about your device, including current status, legal information, hardware and software versions, and more.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **About device**, and then tap items for more details:
  - **Status:** View the status of the battery, network, and other information about your device.
  - **Legal information:** View legal notices and other legal information, including your embedded Samsung legal information.
  - **Device name:** View and change your device's name.
  - Additional device information includes the Model number, Android version, Build number, and more.