 


PELONIS

SWING CERAMIC TOWER HEATER WITH FAN

Model No. NTH15-17BRA

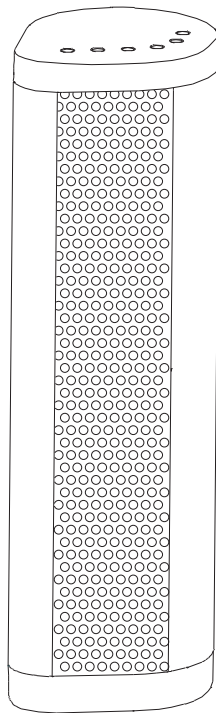

IMPORTANT : Please read this manual carefully before running this heater and save it for reference.

Instruction Manual

V1

2

Model No. NTH15-17BRA

Table of Contents

| | |
|------------------------|----|
| Specifications | 2 |
| Safety Guidelines | 3 |
| Know Your Heater | 6 |
| Important Information | 8 |
| Assembly | 10 |
| Operating Instructions | 12 |
| Maintenance | 13 |
| Troubleshooting | 14 |
| Warranty | 15 |

Specifications

| | |
|-----------------|----------------------------|
| Model no. | NTH15-17BRA |
| Voltage | 120 V AC |
| Frequency | 60 Hz |
| Wattage | 1500 W (high), 900 W (low) |
| Maximum current | 12.5 A |

PELONIS

Follow all basic precautions and instructions when using electrical appliances to reduce risk of fire, electric shock, and injury to persons or property.

1. Read all instructions before using this heater.
2. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3' (90 cm) from the front, top, side and rear portions of the heater.
3. Do not allow children to handle the heater. Extreme supervision is necessary when using the heater near children.
4. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
5. Ensure the heater is placed on a stable, secure surface to avoid risk of tipping it over. Never place the heater in such a way that it may fall into a bathtub or other water container.
6. This heater is not intended for use in a bathroom, laundry area or similar wet or moist indoor locations.
7. Do not run the power cord under carpeting. Do not cover the cord with throw rugs or runners. Make sure that the cord is away from highly travelled areas and from areas which are frequently used so that it will not be tripped over.
8. Do not leave the heater unattended.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening of the heater, as these may cause electric shock, fire or damage to the heater.
10. This heater must be used on the floor. Do not use the heater on a soft surface, such as a bed, where the ventilation openings can be blocked.

READ AND SAVE THESE INSTRUCTIONS!



WARNING:

Use this heater only for its intended purpose. Do not use the heater for a purpose which is not recommended by the manufacturer, as doing so may cause fire, electric shock, personal injury or damage to property.

11. Do not block air intake and exhaust of the heater in any manner to prevent fire.
12. Do not touch the heater when it is in use to avoid skin burns.
13. Use the carry handle when moving the heater. Never pull the heater using the power cord.
14. Do not use the heater outdoors. This heater is not intended for use in any area where there is still or stagnant water.
15. Do not use this heater in areas where gasoline, paint or flammable liquids are used or stored. This heater may have hot, arcing or sparking parts inside.
16. Do not operate any heater if there is damage to the power cord or if the heater has been dropped, damaged or malfunctions. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
17. This heater draws 12.5 A during operation. To prevent overload and blown fuses, always plug the heater in to a dedicated electrical circuit. Do not plug in any other electrical appliance on the same electrical circuit in which the heater is plugged in.
18. This product has a polarized plug (one blade wider than the other) to prevent the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still won't fit, contact a qualified electrician to have a polarized outlet installed. Do not attempt to defeat this safety feature. To do so could result in an electric shock hazard.
19. Do not plug the heater in to a worn AC outlet, as doing so may cause the power cord to become hot or distorted, resulting in overheating of the cord and causing fire. Always replace the worn outlets prior to further use of the heater.

NOTE:

The heater's plug and power cord will be warm to the touch after use. This is normal and does not affect the heater's performance in any way.

**WARNING:**

- In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

PELONIS

20. Make sure there is no loose connection between the AC outlet and the plug, as this may cause overheating and distortion of the plug. Contact a qualified electrician to replace the loose or worn outlet.
21. Always plug heater directly into a wall outlet. Never use with an extension cord or relocatable power tap/power strip.
22. Use of this heater is not recommended for persons with reduced sensitivity to heat or inability to react to burns. The output of this heater may vary and its temperature may become intense enough to burn exposed skin.
23. When not in use, always disconnect the heater by unplugging the power cord from the outlet.

BATTERY DISPOSAL:

Please dispose of or recycle the remote control battery according to municipal or provincial laws.



 
WARNING:

- To reduce the risk of shock, this plug is intended to fit only one way into the polarized outlet. If the plug does not insert fully into the outlet, try inserting the plug inverted. If the plug still does not fit, contact your electrician to replace the outlet.
- Do not attempt to repair the power cord or outlet. Doing so may cause electric shock.

6

Model No. NTH15-17BRA

Know Your Heater

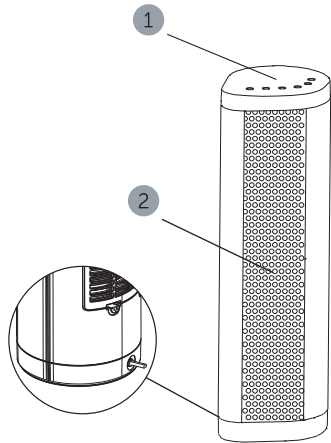


HEATER

1. Control panel
2. Safety grill

KNOW YOUR HEATER

Before using this product, familiarize yourself with all operating features and safety rules.

 
PELONIS

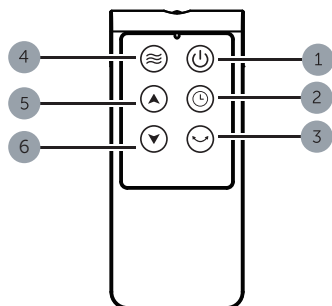

REMOTE CONTROL

1. ON/OFF Button
2. Timer Button
3. Swing Button
4. Mode Button
5. Up Button
6. Down Button

 Know Your Heater

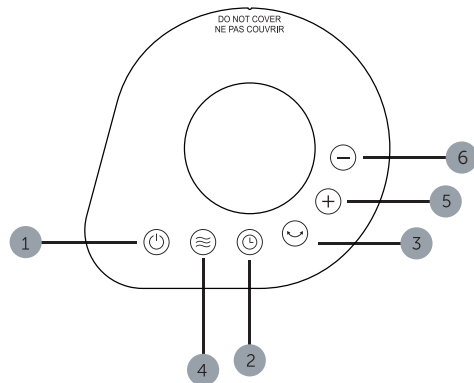

CONTROL PANEL

1. ON/OFF Button
2. Timer Button
3. Swing Button
4. Mode Button
5. Up Button
6. Down Button

FEATURES

- | | |
|-------------------|---|
| 1. Mode button | This button is used to set the heater in different power ratings. |
| 2. ON/OFF button | This button is used to turn on and turn off the heater. |
| 3. Up/Down Button | These buttons are used to increase or decrease the operating temperature or the timer hours of the heater. |
| 4. Timer button | The timer button can be set to turn on the heater during stand-by mode and to turn off the heater during operation. |
| 5. Swing button | Press this button to oscillate the heater left and right. To stop the heater from swing in the position desired, press this button again. |

PELONIS

SAFETY FEATURES

 
Thermal cut-off

This feature shuts down the heater if it gets overheated. If this happens, the heater will shut off permanently. Don't repair the heater by yourself; contact the number listed in the manual.

STAND-BY MODE

The heater is in the stand-by mode when the heater is plugged in and the ON/OFF button is in the off position. During this mode, the timer can be set to a desired range to turn the heater on automatically.

PACKAGE CONTENTS



Remote control
(Quantity: 1)

This heater works either vertically or horizontally, depending on the working condition and consumers' preferred way.

TURNING ON/OFF THE HEATER:

1. Place the heater on a firm, level surface free from obstructions, and at least 3' (90 cm) away from any wall and any other objects such as furniture, curtains, plants or combustible materials.
2. Make sure to plug the power cord of the heater into a grounded 120 V AC, 60 Hz power outlet.
3. Press the ON/OFF button to turn on the heater. When the ON/OFF button is first pressed, the unit will run at high power setting, and temperature setting at 95°F.

SETTING THE MODE

Press the MODE button repeatedly to select desired operating modes in a circular sequence
HIGH-LOW-FAN ONLY-ECO-HIGH.

SETTING THE TEMPERATURE

When the heater is working, press the UP button or DOWN button to set the desired temperature between 40 and 95°F. Once the room temperature reaches the set temperature, the LED display will flash for 10 seconds and the heating element will stop heating and turn to Stand By status. When the room temperature falls below the set temperature, the unit will resume heating.

SETTING THE TIMER TO TURN OFF THE HEATER

When the heater is in operation, press the timer button to automatically turn off the heater in a specific number of hours set in a sequence from 0 – 24 hours. Press the UP button to increase 1 hour each time, and DOWN button to decrease 1 hour each time.

PELONIS

SETTING THE TIMER TO TURN ON THE HEATER

When the heater is in stand-by mode, press the timer button to automatically turn on the heater in a specific number of hours set in a sequence from 0 – 24 hours. Press the UP button to increase 1 hour each time, and DOWN button to decrease 1 hour each time.

SETTING THE SWING

The heater will swing internally by pressing the swing button once. To stop the swing, press the button again. This button only works when the heater is in HIGH or LOW mode.

MEMORY FUNCTION

If the heater is turned off then on again, it will resume operation in the mode it was in before it turned off. If the heater is unplugged then plugged back in again, it will default to the original settings: HIGH mode and a temperature setting of 95°F.

SETTING THE AUTOMATIC DISPLAY-OFF FUNCTION

When the unit is working and no button is pushed for 1 minute, the display turns off automatically. Only the heating symbol is lit. To turn off the automatic display-off function, press the UP and DOWN buttons at the same time for 2 seconds. To allow the automatic display-off function to resume, again press the UP and DOWN buttons for 2 seconds.

TEMPERATURE SENSOR SHORT CIRCUIT PROTECTION

When the temperature sensor triggers the short circuit protection, the display screen will show E1 or E2 and flash. None of the buttons will work, and the buzzer rings 10 times. When this occurs, please contact a qualified electrician.

NOTE:

Before using the heater, make sure that the heater or power cord is not damaged in any way during transportation.

SAFETY PROTECTION

When the unit is in operation, and the room temperature reaches 122°F, the heater will shut down, and the digital display will show "FF" and flash once per second 75 times. None of the buttons will work and the heater must be unplugged to reset this safety device.

SETTING ECO FUNCTION

The heater is automatically select the working setting to maintain the desired temperature by comparing the room temperature and the setting temperature.

REMOTE CONTROL

The buttons on the remote control works the same as the buttons on the control panel.

**WARNING:**

The heater is equipped with a polarized, alternating-current line plug (a plug having one blade wider than the other). This is a safety feature. If the plug does not insert fully into the outlet, try inserting the plug inverted. If the plug still does not fit, contact your electrician to replace the outlet.

PELONIS

Maintenance

It is recommended to clean the heater regularly.

1. After use, always turn off the heater and allow the heater to cool.
2. Use a dry cloth to clean the external surfaces of the heater. Do not use water, wax, polish or any chemical solutions.
3. Never immerse the heater in water.
4. If the heater is not in use for a certain period, wind the power cord around the cord holder and store the heater in a dry place.

NOTE:

The heater is designed only as a supplementary heating source and cannot replace the main heat source during the winter.



WARNING:

Before cleaning the heater, always unplug the heater. Please do not attempt to open or repair the heater by yourself. Doing so may void the warranty and could cause damage or personal injury.

| Problem | Reason | Solution |
|--|---|---|
| The heater shuts off unexpectedly or fails to operate. | There is no power. | Be sure that the heater is plugged in and that the electrical outlet is functioning. |
| | The set temperature is lower than the current room temperature. | Set the desired temperature higher than the current temperature. |
| | One of the safety features has been activated to prevent overheating. | <p>Check for any obstructions. If an obstruction is found, turn off the heater and remove it.</p> <p>Unplug the heater and wait for at least 10 minutes until it has cooled.</p> <p>Carefully remove the obstruction. Plug the heater in and restart it.</p> <p>If the problem still exists, remove the plug from the outlet and have the heater checked by an authorized service person.</p> |