






## **GB WARNING! READ THE FOLLOWING BEFORE STARTING INSTALLATION**

---

Only use your product when fully assembled as described in the instruction Book. If the product is damaged in any way stop using immediately and consult the store where you purchased your product for guidance.


We continually strive to improve our products, specifications may change without prior notice.


- Incorrect assembly can result in severe personal injury and property damage.
- Do not tilt chair or lean over the sides – always ensure all casters are firmly placed on a level surface.
- Children should not play with the chair.
- Do not lean over the arms. This could cause the product to become unbalanced and result injury.
- Always use the chair on a flat, stable surface to prevent injury.
- Do not stand on chair.
- If the damaged product is irreparable please dispose of the product. Using a damaged product may lead to personal injury.
- This appliance is intended for indoor household use.
- Only trained personnel can replace or repair seat height adjustment components with energy accumulators.
- Keep this instruction manual for future reference.

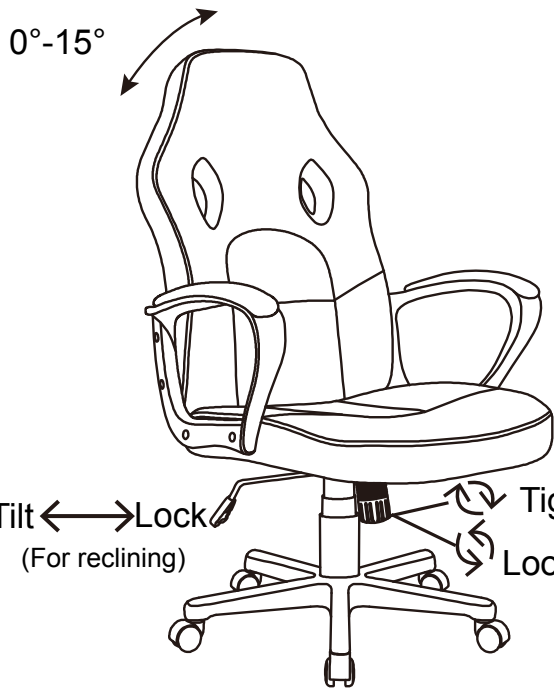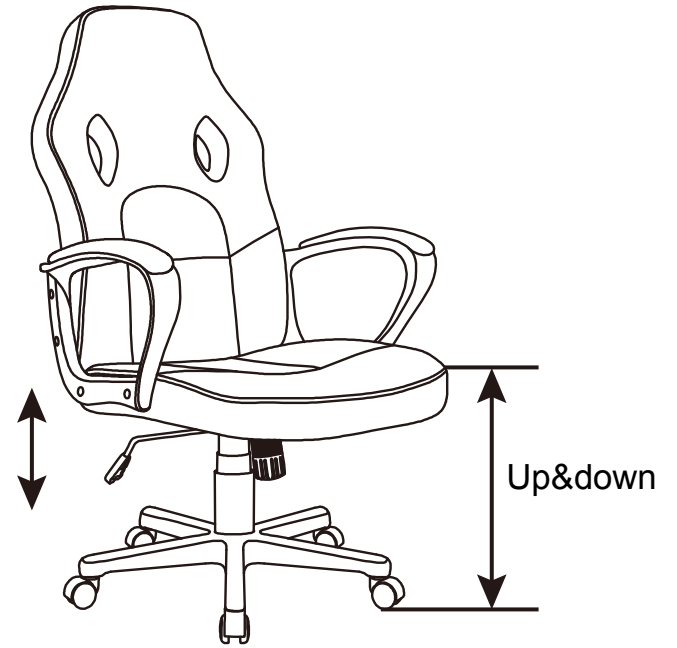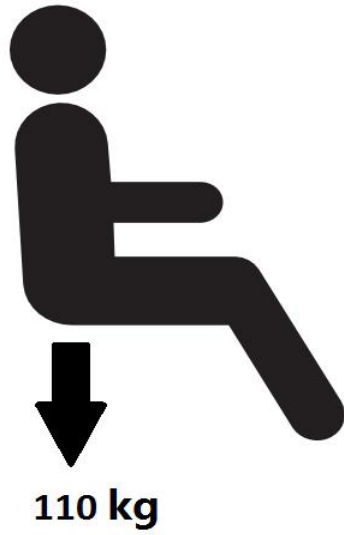

Tilt ← → Lock  
(For reclining)

 Tight  
Loose  
(For reclining)



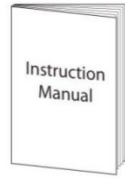


A\*5




B\*1



 
C\*1




D\*1

 

E\*1

 

F\*1

 

G\*1



H<sub>R</sub> \*1



H<sub>L</sub> \*1



I\*12



M6\*20MM


J\*8




K\*1




1

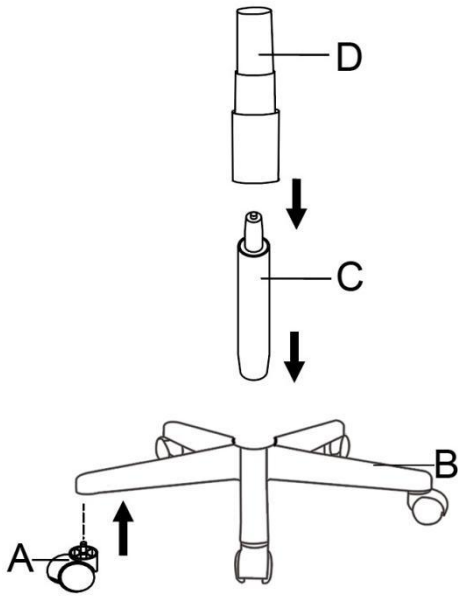


2

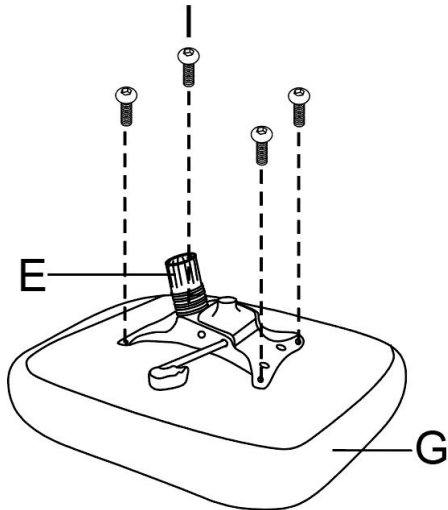

3

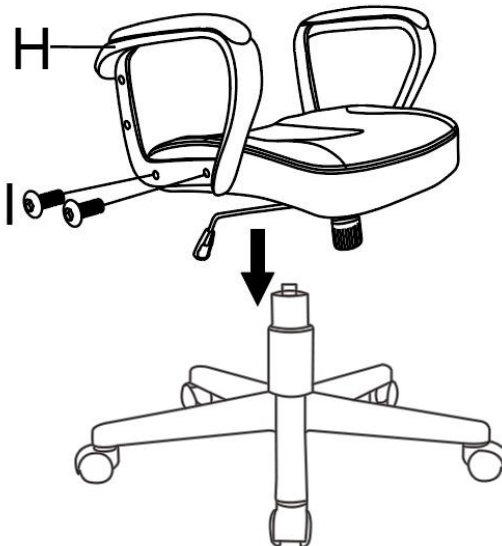

4

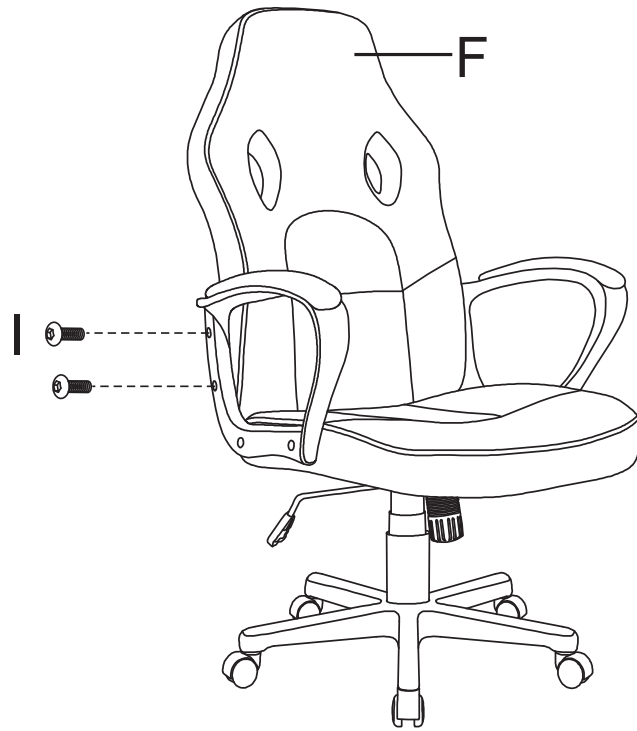

5

