



SINGLE SERVE COFFEE BREWER

QF-CM801



Instruction Manual

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY FOR 120V.

Thank you for purchasing this product. To ensure proper functioning of the product, please read this manual carefully and observe the instructions specified herein.

Please follow us on Facebook and Twitter. We will update and share product information on our homepage. Looking forward to joining us.



Chulux Css



@ChuluxCss



TABLE OF CONTENTS

IMPORTANT SAFEGUARDS..... 3

SPECIAL CORD INSTRUCTIONS..... 4

PRODUCT SPECIFICATIONS 5

FEATURES 5

DESCRIPTION OF COFFEE MAKER 5

OPERATING INSTRUCTIONS 6-7

CARE AND CLEANING 8

STORAGE 9

TROUBLESHOOTING 9

MAINTENANCE AND SERVICE..... 10

GUARANTEE..... 10

APPROVAL INFORMATION 11



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE .**
2. Do **NOT** touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do **NOT** immerse cord, plugs, or body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from electrical outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
6. Do **NOT** operate any appliance with a damaged cord or plug or if the appliance malfunctions or has been damaged in any way. return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments is not recommended by manufacturer and may result in fire, electric shock or injury to persons.
8. Do **NOT** use outdoors or for commercial purposes.
9. Do **NOT** let the power cord hang over edge of table or countertop or touch hot surfaces.
10. Do **NOT** place the appliance on or near a hot gas or electric burner or in a heated oven.
11. **WARNING** : Turn the power button to “OFF” position before disconnecting the power cord from the wall outlet.
12. Do **NOT** use appliance for anything other than its intended use.
13. Scalding may occur if the lid is removed during the brewing cycles.
14. Do **NOT** use the appliance if socket, cord, or unit is damaged.
15. Use on a hard, flat, level surface only.
16. Always be sure the Lid Assembly is closed and in locked position before turning the coffee maker on.

SAVE THESE INSTRUCTIONS

SPECIAL CORD INSTRUCTIONS

1. A SHORT POWER SUPPLY CORD IS PROVIDED TO REDUCE THE HAZARDS RESULTING FROM BECOMING ENTANGLED IN OR TRIPPING OVER A LONGER CORD.
2. An extension cord may be purchased and used if care is exercised in its use.
3. If an extension cord is used , the marked electrical rating of the extension cord must be the same as that of the appliance . The extension cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.
4. This appliance has a polarized plug (one blade is wider than the other) . To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way . If the plug does not fit fully into the outlet, reverse the plug . If it still does not fit , contact a qualified electrician . Do not attempt to modify the plug in any way.


CAUTION : There is a sharp Plastic Piercing Tip that punctures the K-Cup® on the underneath side of the Lid Assembly. There is also a Stainless Steel Piercing Tip on the bottom of the K-Cup® Holder. To avoid risk of injury, do NOT put your fingers on the underneath side of the Lid Assembly or on the inside bottom of the K-Cup® holder. Also , any breakage or damage to the Piercing Tips will void the warranty for this appliance.

SPECIFICATION

Product specification									
Model	Voltage	Hz	Watts	Capacity	Size			Net Weight	Safety Compliance
					Width	Height	Depth		
QF-CM801	120V	60	800	12oz (360cc) MAX	4.3" (110mm)	9.8" (251mm)	7.5" (191mm)	2.2lbs (1.0kg)	UL

FEATURES

FEATURES	
Item	Description
A	Locker knob
B	Lid Assembly
C	Coffee Outlet & Seal
D	Power(On/Off) Button
E	Drip Tray Cover
F	Drip Tray
G	Water Tank With Filter Basket (360ml/12oz capacity)
H	K-Cup® holder
I	Plastic Piercing Tip(FRAGILE-Handle with Care)
J	Stainless Steel Piercing Tip
K	Power cord

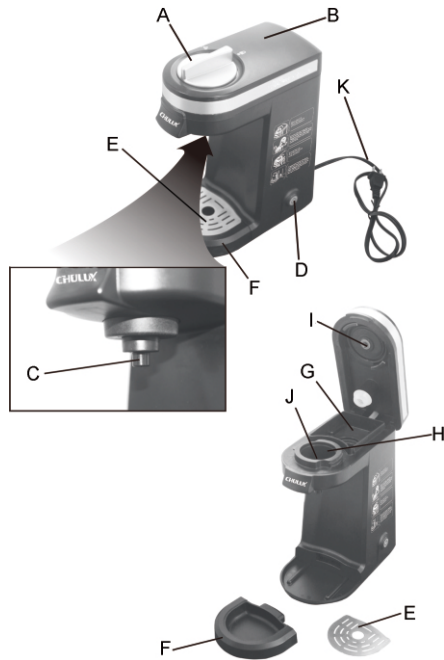

* Automatic shut-off after brewing

OPERATING INSTRUCTIONS

Please brew water to clean the water tank for the first use or after use a long period of time.

1. Turn the **Locker knob** to the unlocked position and lift up the **Lid Assembly** to open.

Step 1



2. Measure the amount of water you want to use to brew your coffee. **The water amount should not exceed the maximum of 360ml/12oz and should be no less than 150ml/5oz . Pour water into Water Tank.** (Take note that water can affect the taste of your beverage. For the best-tasting coffee, tea, or hot chocolate, we recommend using bottled or filtered water. We do **NOT** recommend using distilled or reverse osmosis water).

Steps 2-3.




***When pour water into the water tank, the Filter Basket must be fitted on the inlet of water tank to avoid the coffee powder or other dust falling into the water tank.**

3. Put a K-Cup® into the **K-Cup® Holder**.


This coffee maker was special designed for the K-Cup coffee. Please use the original K-cup coffee capsule when brewing coffee.

Otherwise, it may cause coffee ground to your mug.

Step 4-6

4. Close the **Lid Assembly** and turn the **Locker knob** to the locked  position.
5. Place a cup or mug on the **Drip Tray Cover**. Make sure that the middle of the cup or mug is under the **Coffee Outlet**. The **Drip Tray Cover** may be removed to adjust for the height of the cup or mug. We kindly suggest the max height of coffee mug should not overpass 5.5".



6. Plug the **Power Cord** into an electrical outlet and press the **Power Button** to turn on the coffee brewer. The indicator light on the **Power Button** flashes during the heating process and continues until brewing is finished.
7. The coffee brewer shuts off automatically after brewing is finished.
8. To stop brewing at any time, press **Power Button** . When resuming brewing, if the indicator light is flashing rapidly , press the **Power Button** off again and wait until the coffee brewer cools slightly (up to 2 minutes) before pressing the **Power Button** on again to resume brewing.
9. After brewing, turn the **locker knob** counter clockwise to the unlocked position ,  and lift up the **Lid Assembly** to open. Discard the used K-Cup®.

CARE AND CLEANING

ALWAYS unplug the coffee maker and let it cool down before cleaning.

1. Use a clean, damp cloth to clean all outside surfaces of the coffee maker. Do not use harsh abrasives to clean.
2. Use a clean, damp cloth to clean the **K-Cup® Holder**, being very careful not to come into contact with the sharp stainless steel Piercing Tip as this can cause bodily injury.
3. Clean the **Coffee Outlet** by pulling it off . Rinse it periodically. Pay attention to the sealing ring around the **Coffee Outlet**, and do not forget to clean it, also.
4. Lift the stainless steel **Drip Tray Cover** off the Drip Tray. Remove the plastic **Drip Tray** from the coffee maker by pulling it until it comes loose. Wash both the **Drip Tray** and the **Drip Tray Cover** with mild soap and water.
5. Mineral content in water varies from place to place . Depending on the mineral content of the water in your area, calcium deposits or scale may build up in your coffee brewer . Scale is non-toxic, but it can hinder the performance of your coffee maker. De-scaling your coffee maker helps maintain in good condition the parts of the coffee maker that come in contact with water . To clean/remove scaling from the inside of the coffee brewer:

- a. Fill the Water Tank with 360ml/12oz of a cleaning solution composed of water and household scale remover (4 parts water to 1 part scale remover) . Then close the Lid Assembly place a cup or mug with capacity of at least 360ml/12oz on the Drip Tray , and press the Power Button to descale the coffee brewer.

Pic.1



Pic. 2



- b. Once the brewing cycle is over, empty and rinse the cup or mug. After finishing Step A, pour about 360ml /12oz of water only into the Water Tank , and then press the Power Button to start the rinsing process
 - c. Repeat Step B to remove any remaining unpleasant taste if necessary.
6. Take care in cleaning the **Plastic and Stainless Steel Piercing Tips** so that they do not break. **Breakage of the Piercing Tips will make the warranty null and void.**
7. Take out the Filter Basket from the water tank to clean it, in parallel please pour pure water (no more than 360CC) into the water tank and shake the machine some more times to clean it, and then pour off the dirty water from the water tank. (please see the pic .3), please repeat it no less two times.

pic.3



STORAGE

1. Store the coffee brewer out of the reach of children.
2. The storage space should be clean and dry , away from direct sunlight and any heat source.

TROUBLESHOOTING

1. Indicator light on the **Power Button** flashing rapidly
 - a. The temperature of the coffee maker may be too high. If the coffee maker is hot or in use and this occurs, turn the **Power Button** off until the coffee maker cools off (up to 2 minutes).
 - b. High temperature condition mentioned above may also occur if less than 150ml/5oz of water is in the **Water Tank** . Low water level may cause the water to not be pumped out, and high temperature may result. Pour at least 150ml/5oz of water in the **Water Tank** and cool the coffee maker (up to 2 minutes) before pressing the **Power Button** again to resume brewing.
 - c. The indicator light will keep flashing fast until the coffee maker cools down if the **Power Button** is on . Turn the **Power Button** off until the coffee maker cools off (up to 2 minutes). Then turn it back on to resume brewing.

- d. If the indicator light keeps blink quickly after the machine just work in a few seconds, turn off the brewer and then once press the power button to restart.
- e. If the coffee maker is cold after pressing the **Power Button**, make sure that the **Power Cord** is plugged into an electrical outlet. If the coffee maker remains cold after plugging it in, **DO NOT USE** the coffee maker as this may indicate a problem which may require technical assistance.

MAINTENANCE AND SERVICE

1. If there's any question or problem when using the appliance, please contact CHULUX by emailing us at css@chulux.com, Do not self repair.
2. Maintenance is NOT provided in the following circumstances:
 - a. Improper use such as improper installation, or not using according to the instruction.
 - b. Appliance has been disassembled by unauthorized person.
 - c. Damage by natural caused. Wear and tear under normal use.
3. To get more products information go to www.chulux.com.

GUARANTEE

1. This product is guaranteed for a period of 1 year from the date of original purchase against defects in mechanical and electrical.
2. This guarantee is only valid if the appliance used solely for domestic purpose in accordance with the instructions and provided that it is not connected to unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse.
3. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase and return reason must be provided.
4. Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

5. In line with our policy of continuous development we reserve the right to change this product, packing and documentation specification without notice.

6. Consumables are not guaranteed i.e. plug and fuse.

7. Request for guarantee action: Please direct all requests for action on this warranty or any other product in queries to Email css@chulux.com.

APPROVAL INFORMATION



FOR HOUSEHOLD
USE ONLY

Please follow us on Facebook and Twitter. We will update and share product information on our homepage. Looking forward to joining us.



Chulux Css



@ChuluxCss