

1.0 Reference and Address					
Report Number	131011061GZU-001	Original Issued:	13-Nov-2013	Revised:	10-Feb-2015
Standard(s)	Electric Household Cooking and Food Serving Appliances - UL1026, Issued: Jan. 27, 2012, 6th edition, Rev. May 29, 2014 Portable Electrical Motor-Operated and Heating Appliances: Particular Requirements for Portable Electric Cooking Appliances - CSA C22.2 No. 1335.2.9-93, Issued: 1993, R2013 (See also CSA C22.2 No. 1335.1-93, Issued: 1993, R2013)				
Applicant	Spectrum Brands Inc	Manufacturer 1	<b>Elec-Tech International Co., Ltd</b>		
Address	3001 Deming Way, MIDDLETON WI 53562-1431, USA	Address	No. 1 Jinfeng Road, Tangjiawan Town, Xiangzhou District, Zhuhai City, Guangdong, China		
Country	USA	Country	China		
Contact	Ms. Lilian Ip	Contact	Mr. Lime Lee / Mingshe Huang		
Phone	+86-755-86217260	Phone	+86-756-3390570		
FAX	+86-755-86217301	FAX	+86-756-3390522		
Email	<a href="mailto:lilian.ip@spectrumbrands.com">lilian.ip@spectrumbrands.com</a>	Email	<a href="mailto:lime.li@electech.com.cn">lime.li@electech.com.cn</a> / <a href="mailto:huangmingshe@electech.com.cn">huangmingshe@electech.com.cn</a>		
Manufacturer 2	<b>Vesta Electrical Appliance Manufacturing Zhong shan Co., Ltd.</b>				
Address	Chang Ming Shui, Wu Gui Shan Town, ZhongShan City, Guangdong, China				
Country	China				
Contact	Ms. lily.zeng				
Phone	+86-760-23378691				
FAX	+86-760-23378985				
Email	<a href="mailto:zenglingli@electech.com.cn">zenglingli@electech.com.cn</a>				

<b>2.0 Product Description</b>	
Product	Toaster Oven
Brand name	BLACK & DECKER, or BLACK + DECKER
Description	The products covered by this report are toaster ovens, rated 120 V, 60 Hz, for household and indoor use only, provided with a non-detachable flexible power supply cord terminated in a 3-wire grounding plug.
Models	TO1303****, TO1313****, TO1322****, TO1332****, TO1342**** and TO1373****, where '*' = A to Z , 0 to 9 or Blank.
Model Similarity	<p>All models are identical except following:</p> <ol style="list-style-type: none"> <li>TO1322**** and TO1332**** with two knobs . The differences between TO1322**** and TO1332**** are the knobs and handle.</li> <li>TO1303****, TO1313****, TO1373**** with three knob. The differences between TO1303**** and TO1313**** are the housing material, knobs and handle. The differences between TO1303**** and TO1373**** are the glass door, housing material, knobs and handle.</li> <li>TO1342**** is identical with TO1332****, except the door handle and upper/lower door clamp.</li> </ol> <p>Models with and without suffixes ****, are identical respectively in both mechanical and electrical properties, except for the aesthetics (such as color, etc...) or for commercial purpose.</p>
Ratings	120 V, 60 Hz, 1150 W.
Other Ratings	NA

**3.0 Product Photographs**

**Photo 1 - External View of Model TO1322\*\*\*\***



**Photo 2 - External View of Model TO1332\*\*\*\***



**3.0 Product Photographs**

**Photo 3 - External View of Model TO1373\*\*\*\***



**Photo 4 - External View of Model TO1303\*\*\*\***




**3.0 Product Photographs**

**Photo 5 - External View of Model TO1313\*\*\*\***



**Photo 6 - External View of all models**

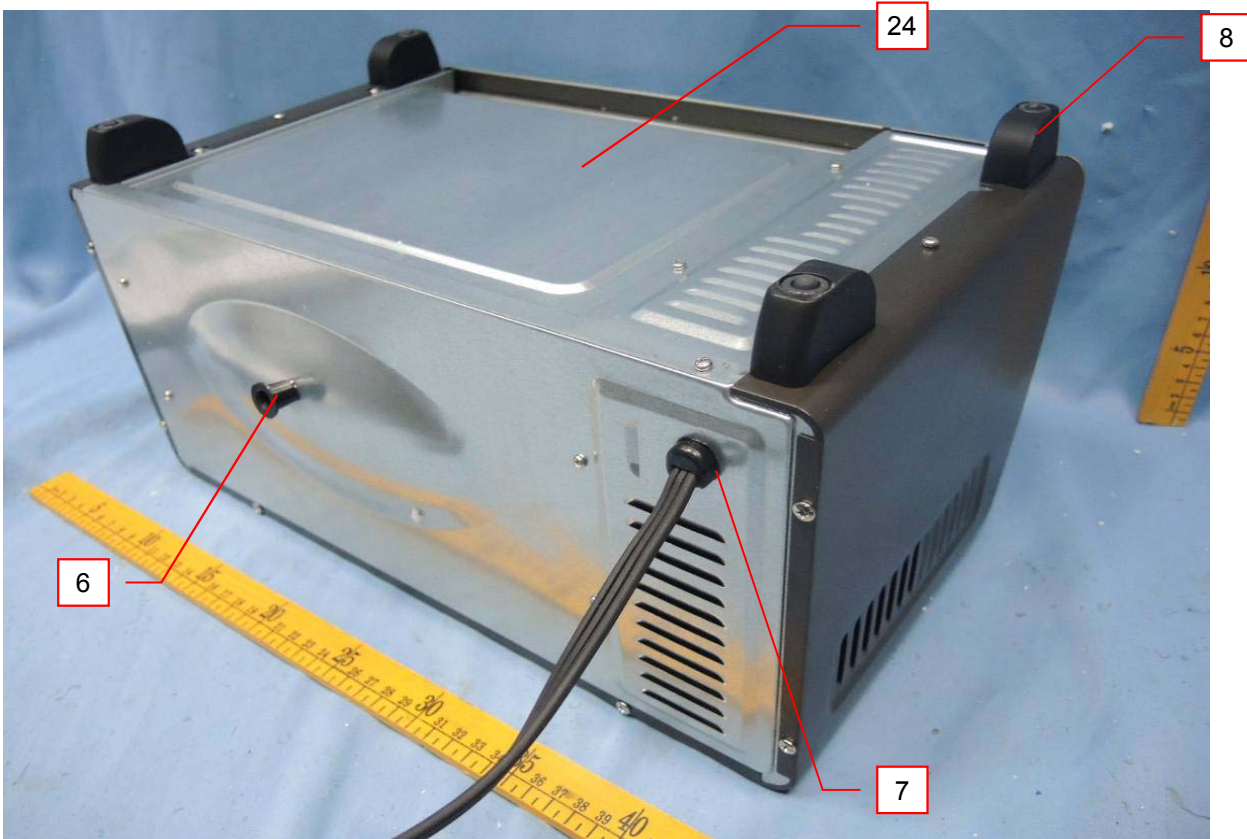


**3.0 Product Photographs**

**Photo 7 - External View of all models**




**Photo 8 - Internal View of Model TO1322\*\*\*\***

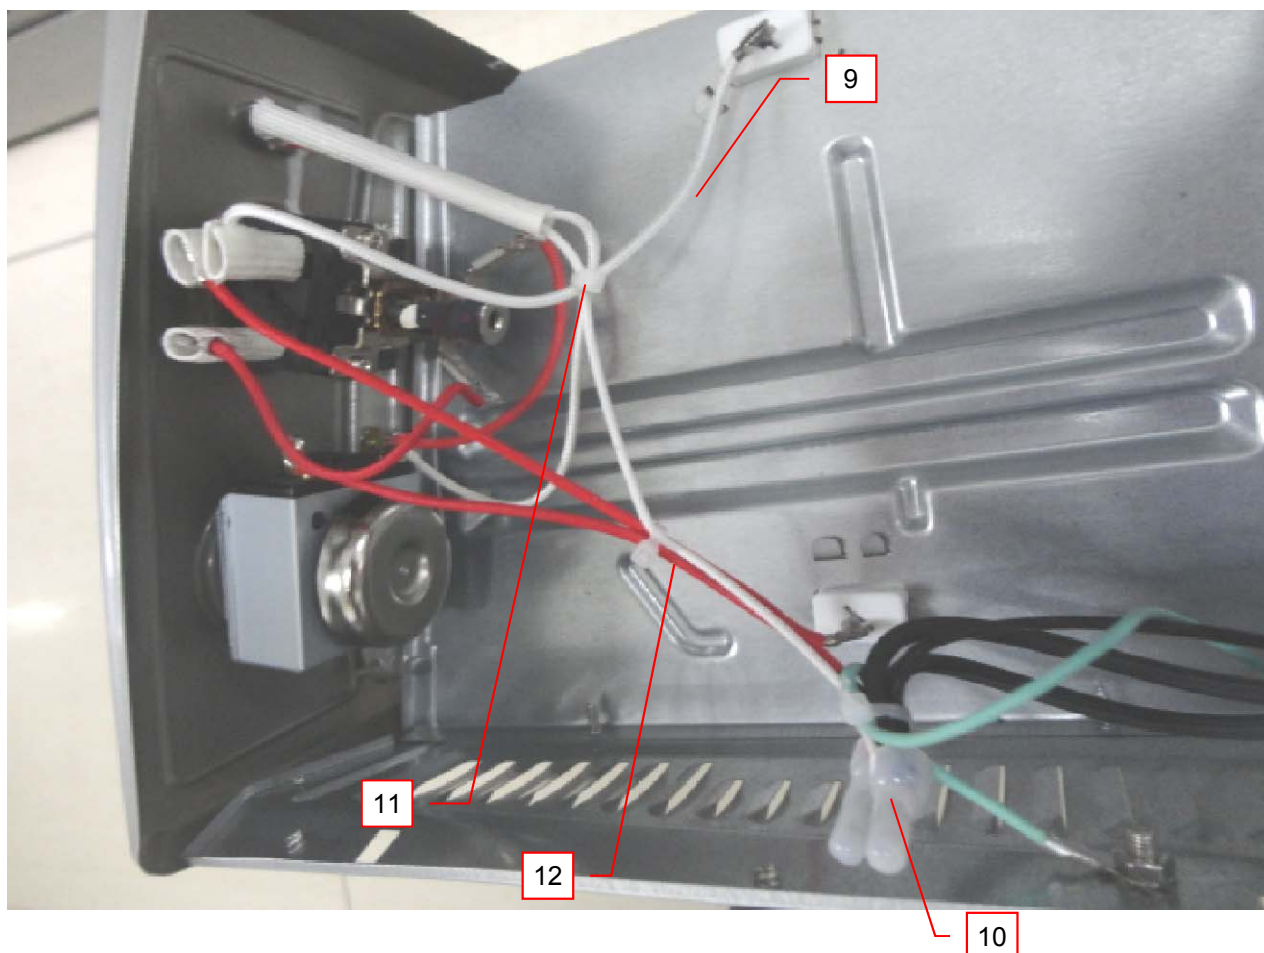

**3.0 Product Photographs**

**Photo 9 - Internal View of Model TO1322\*\*\*\***

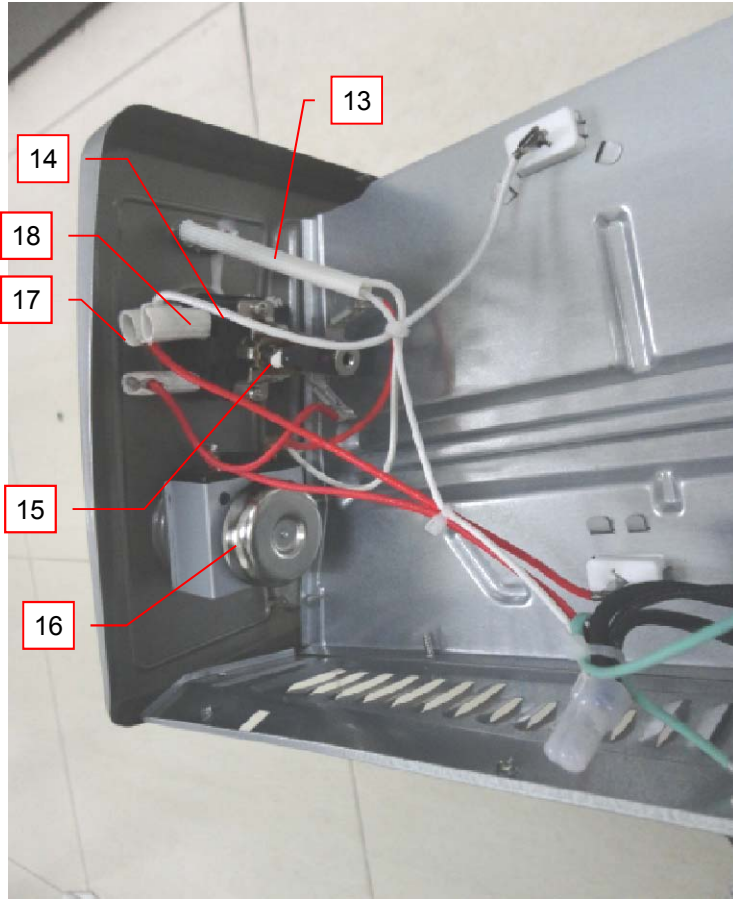


**Photo 10 - Internal View of Model TO1373\*\*\*\***




**3.0 Product Photographs**

**Photo 11 - Internal View of Model TO1373\*\*\*\***

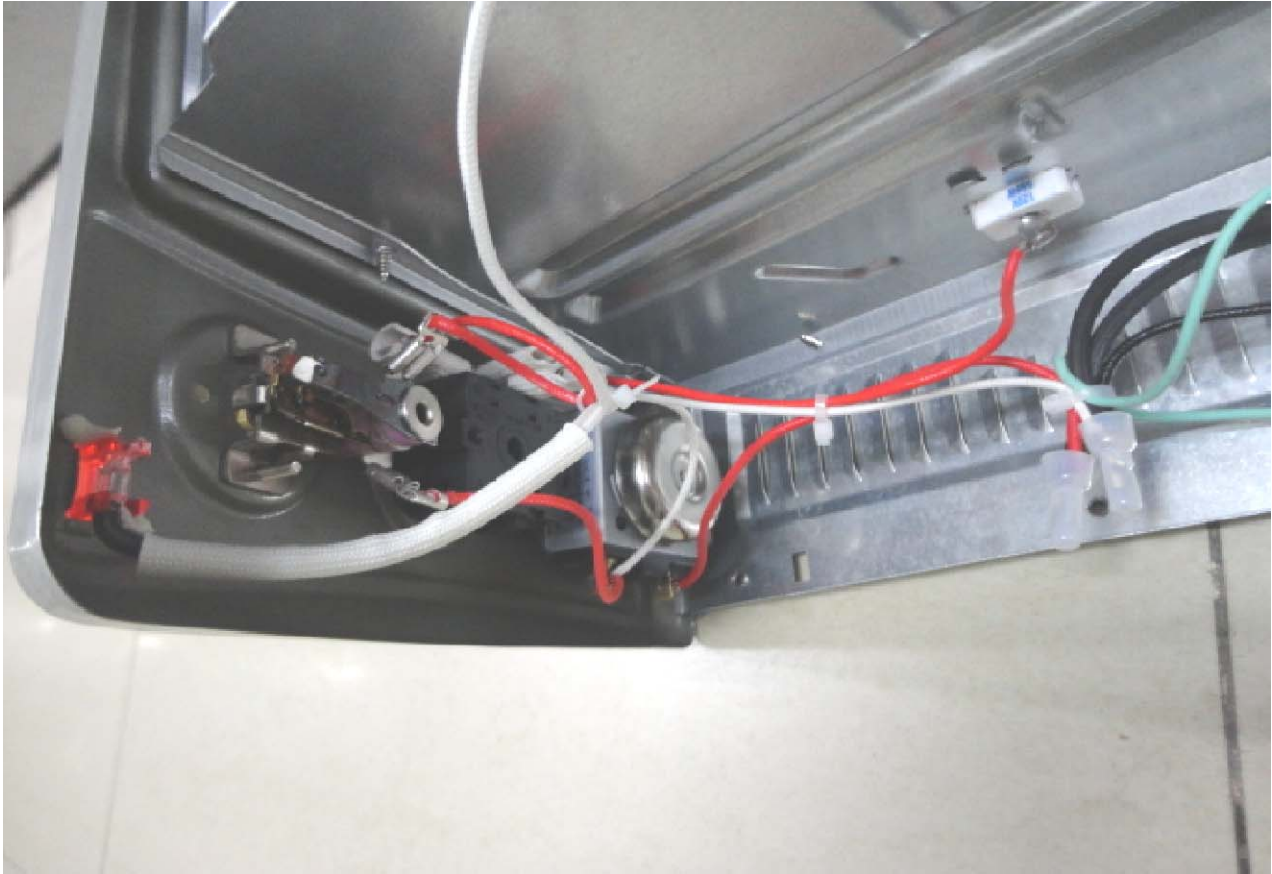


**Photo 12 - Internal View of Model TO1373\*\*\*\***

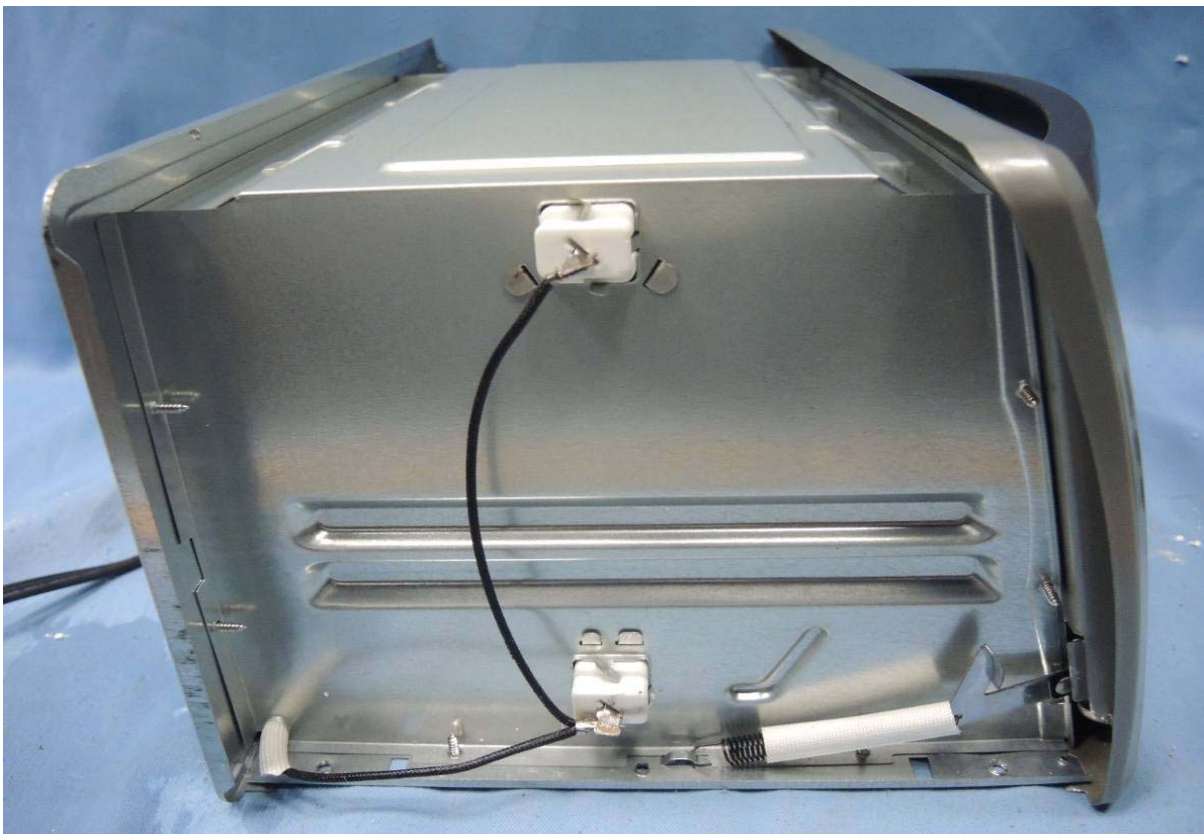


**3.0 Product Photographs**

**Photo 13 - Internal View of all models**

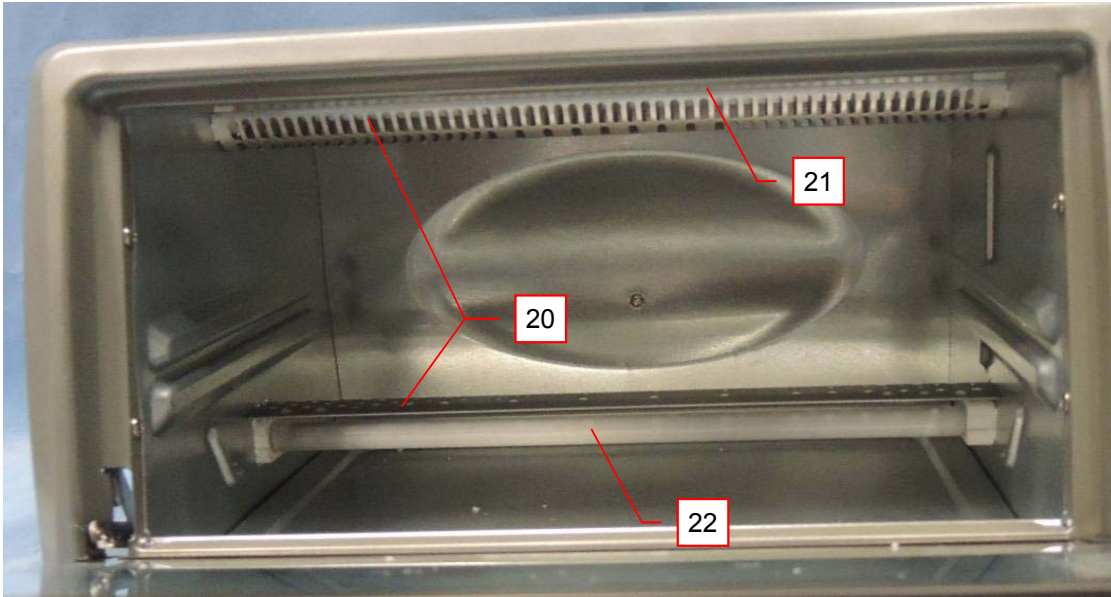

**Photo 14 - View of Accessory**

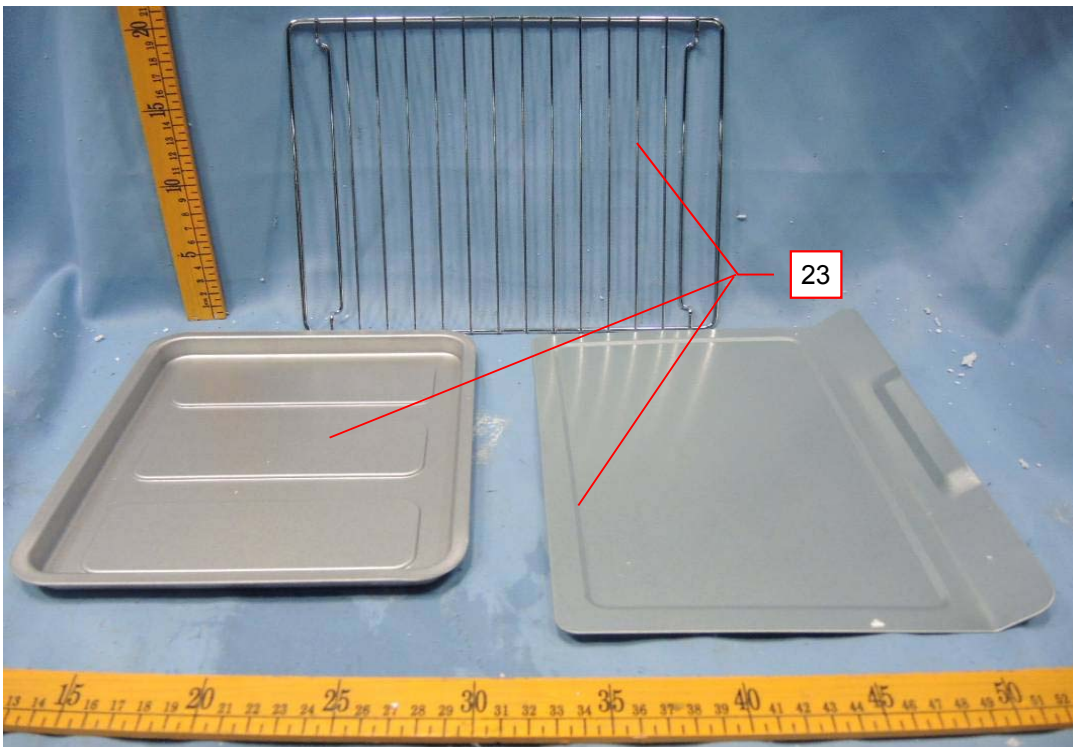

**3.0 Product Photographs**

**Photo 15 - View of model TO1342\*\*\*\***



**Photo 16 - View of model TO1342\*\*\*\* with alternative appearance**



4.0 Critical Components						
Photo #	Item no. <sup>1</sup>	Name	Manufacturer/ trademark <sup>2</sup>	Type / model <sup>2</sup>	Technical data and securement means	Mark(s) of conformity <sup>3</sup>
2	1	Power Supply Cord Set	Various	HPN	18AWG/3C, rated 300V, 105 °C, VW-1, the cord length from cord entry to plug face should be between 0.6m and 2.1m, flexible cord integrally molded on a 3-wire grounding plug type 5-15P.	cULus
2	2	Panel	Various	Various	SUS430 material. Measured 0.4 mm thick. Overall dimension 390 mm x 184 mm x 22 mm.	NR
2	3	Glass Door Assembly	Various	Various	It consists of the following items:	NR
2	3a	Door Handle	Various	Various	PA6T material. Rated at least HB, min. 1.0mm thick. Secured with Door Clamp by screws.	cURus
2	3b	Upper & Lower Door Clamp	Various	Various	SPCC material. Measured 0.5 mm thick.	NR
2	3c	Glass Door	Various	Various	Toughened glass. Measured the thickness 4 mm, overall dimension 284 mm x 162.7 mm for TO1373****, curve, and 284 mm x 149 mm for TO1322****, TO1332****, TO1303****, TO1313****, flat.	NR
2	4	Knobs	Various	Various	PBT or PA6 material. Rated at least HB, min. 2.0 mm thick. Tightly snapped at stem of Thermostat or Timer or Function-select Switch.	cURus
2	5	Top Enclosure	Various	Various	SUS430 material. Measured 0.4mm thick. Measured overall dimension 393 mm(L) x 234 mm(W) x 185.5 mm(H). Fixed on the back enclosure and bottom enclosure by screws. Only for model TO1373****.	NR
			Various	Various	SPCC material. Others same as above. For models TO1303****, TO1313****, TO1322****, TO1332****.	NR
6	6	Spacer	Various	Various	PF material. Rated V-0, 150 °C. Min. 1.5mm thick, measured 15.3mm O.D x 12mm long, fixed to black enclosure by riveting.	URus
6	7	Cord Bushing	KAI SUH SUH ENTERPRISE CO LTD	SR-F51	Rated 75 °C. Snapped into black enclosure tightly and serviced as strain relief.	cURus
7	8	Foot	HYOSUNG CORP	J800R	PP, all color, rated HB, 120 °C. Min. 115 °C. Min. 2 mm thick. Four provided, measured 45 mm (L) x 18 mm (W) x 25 mm (H). With four rubber mats snapped in it, secured on bottom enclosure by screws.	cURus

4.0 Critical Components						
Photo #	Item no. <sup>1</sup>	Name	Manufacturer/ trademark <sup>2</sup>	Type / model <sup>2</sup>	Technical data and securement means	Mark(s) of conformity <sup>3</sup>
8	9	Metal Chamber	Various	Various	SGCC material. 0.4 mm thick, it consists of back enclosure, bottom enclosure and U inner plate, fixed together with each other by screws. Measured overall dimensions of 274 mm(L) x 225 mm(W) x 175 mm(H).	NR
8	10	Close-end Connector	Various	Various	Rated min. 300V, 105 °C. For wiring connection between power supply cord and internal wire.	cURus
8	11	Cable Tie	Various	Various	PA material. Rated at least 105 °C.	cURus
8	12	Internal Wire	Various	3122	Rated 200 °C, 300V. Min. 18 AWG for the connecting to Timer, Power Supply Cord, and the connection between Thermostat and Function-select Switch. Min. 22 AWG for the connecting to Indicator Light. Min. 20 AWG for the others international connection.	cURus
9	13	Indicator Assembly	Various	Various	It consists of the following items:	NR
9	13a	Indicator Cover	BAYER MATERIALSCIENCE AG	2856	PC material. Rated V-2, HWI=3, HAI=0, 115 °C, minimum 1.5 mm thick. Secured on the control panel.	cURus
9	13b	Fiberglass Sleeving	Various	Various	Enclosed the indicator leads and a resistor covered by Heat Shrinkable Tube.	cURus
9	13c	Heat Shrinkable Tube	Various	Various	Rated min. 125 °C, 600V, VW-1. Employed to cover indicator leads and a resistor.	cURus
9	14	Function-select Switch	FOSHAN CITY CHANCHENG HUALILAI ELECTRICAL CO LTD.	FZ31-9	Rated 125V, 60Hz, 13A, 125 °C, endurance 6K cycles. Secured on the control panel by screws.	cURus
			ZHEJIANG ZHONGXUN ELECTRONICS CO LTD	AK-03	Rated 250V, 60Hz, 16A, 105 °C, endurance 6K cycles. Only use for models TO1303****, TO1313**** and TO1373****.	cURus
9	15	Thermostat	ELEC-TECH INTERNATIONAL CO LTD	KST-1215C	Rated 125V, 60Hz, 15A, 100,000 cycles, TF=143 +/- 8 °C. For models TO1322**** and TO1332****.	cURus
			ELEC-TECH INTERNATIONAL CO LTD	KST-1215C	Rated 125V, 60Hz, 15A, 100,000 cycles, TF=152 +/- 8 °C. For models TO1303****, TO1313****, TO1373****.	cURus

4.0 Critical Components						
Photo #	Item no. <sup>1</sup>	Name	Manufacturer/ trademark <sup>2</sup>	Type / model <sup>2</sup>	Technical data and securement means	Mark(s) of conformity <sup>3</sup>
9	16	Timer	JIANGSU SHALONG MECHANICAL & ELECTRICAL TECHNOLOGY CO LTD	SL-30B	Rated 120V, 15A, 120 °C, endurance 6K cycles, maximum time setting 30 minutes. Secured on the control panel by screws.	cURus
			HANGZHOU TIANMA TIME-CONTROL SI-TECH CO LTD	DKJ-Y	Rated 125V, 15A, 120 °C, others same as above.	cURus
9	17	Terminal Sheath	Various	Various	Silicone fibergalss tube. White color, rated V-0, 200 °C. Three provided for enclosing Quick Connector to Function-select Switch.	cURus
9	18	Quick Connector	SHUN SHENG TERMINAL MFG LTD	751A-BS	Five provided. For the connection to terminals of Thermostat and Function-select Switch.	cURus
			YUEQING ZHULIAN ELECTRONICS CO LTD	ZF25030T-5	Same as above.	cURus
12	19	Spring	Various	Various	65Mn. Measured Ø0.9mm for the wire. Measured overall 32mm long for the idle stage and 8mm outer diameter.	NR
13	20	Quartz Protecting Cover	Various	Various	Two provided. Aluminized steel material. 0.35 mm thick.	NR
13	21	Upper Quartz Element	Elec-Tech International Co,Ltd	Various	Rated 120Vac, 60Hz, 600W. It consists of resistance wire, 0.6 mm diameter, resistance 22.86~26.6 Ω, encased in a 1 mm thick quartz glass sheath, overall 12 mm OD. Supported by two Ceramic Insulating Terminal. Refer to Illustration no.4 for detail.	NR
13	22	Lower Quartz Element	Elec-Tech International Co,Ltd	Various	Rated 120Vac, 60Hz, 550W. It consists of resistance wire, 0.6 mm diameter, resistance 24.94~29.09Ω, encased in a 1 mm thick quartz glass sheath, overall 12 mm OD. Supported by two Ceramic Insulating Terminal. Refer to Illustration no.4 for detail.	NR
14	23	Attachments	Various	Various	It consisted of a Crumb Tray, a Food Tray, and a Wire Rack.	NR

<b>4.0 Critical Components</b>						
Photo #	Item no. <sup>1</sup>	Name	Manufacturer/ trademark <sup>2</sup>	Type / model <sup>2</sup>	Technical data and securement means	Mark(s) of conformity <sup>3</sup>
6	24	Marking Label	Various	Various	Painting, silk screen, engrave, laser or molding on the outer surface of Bottom Enclosure. Refer to Illustration 1 for details.	cURus

NOTES:

- 1) Not all item numbers are indicated (called out) in the photos, as their location is obvious.
- 2) "Various" means any type, from any manufacturer that complies with the "Technical data and securement means" and meets the "Mark(s) of conformity" can be used.
- 3) Indicates specific marks to be verified, which assures the agreed level of surveillance for the component. "NR" - indicates Unlisted and only visual examination is necessary. "See 5.0" indicates Unlisted components or assemblies to be evaluated periodically refer to section 5.0 for details.

**5.0 Critical Unlisted CEC Components**

None.

**6.0 Critical Features**

Recognized Component - A component part, which has been previously evaluated by an accredited certification body with restrictions and must be evaluated as part of the basic product considering the restrictions as specified by the Conditions of Acceptability.

Listed Component - A component part, which has been previously Listed or Certified by an accredited Certification Organization with no restrictions and is used in the intended application within its ratings.

Unlisted Component - A part that has not been previously evaluated to the appropriate designated component standard. It may also be a Listed or Recognized component that is being used outside of its evaluated Listing or component recognition.

Critical Features/Components - An essential part, material, subassembly, system, software, or accessory of a product that has a direct bearing on the product's conformance to applicable requirements of the product standard.

Construction Details - For specific construction details, reference should be made to the photographs and descriptions. All dimensions are approximate unless specified as exact or within a tolerance. In addition to the specific construction details described in this Report, the following general requirements also apply.

1. Spacing - In primary circuits, min. 1.6 mm spacing is maintained through air or over surfaces of insulating material between current-carrying parts of opposite polarity and between bare live parts and other npn-current-carrying conductive parts other than the enclosure, and minimum 1.6 mm spacing between current-carrying parts and conductive enclosure.
2. Mechanical Assembly - Components such as switches, fuseholders, connectors, wiring terminals and display lamps are mounted and prevented from shifting or rotating by the use of lockwashers, starwashers, or other mounting format that prevents turning of the component.
3. Corrosion Protection - All ferrous metal parts are protected against corrosion by painting, plating or the equivalent.
4. Accessibility of Live Parts - All uninsulated live parts in primary circuitry are housed within a metal or non-metallic enclosure constructed with no openings other than those specifically described in Sections 4 and 5.
5. Grounding - All exposed dead-metal parts and all dead-metal parts within the enclosure that are exposed are connected to the grounding lead of the power supply cord .
6. Internal Wiring - Internal wiring is routed away from sharp or moving parts. Internal wiring leads terminating in soldered connections are made mechanically secure prior to soldering. Recognized Component separable (quick disconnect) connectors of the positive detent type, closed loop connectors, or other types specifically described in the text of this report are also acceptable as internal wiring terminals. At points where internal wiring passes through metal walls or partitions, the wiring insulation is protected against abrasion or damage by plastic bushings or grommets.
7. Markings - The product is marked as follows:
  - manufacturer's name, trade name
  - model number
  - date of manufacture
  - electrical ratings (volts, power & frequency)
  - refer to Illustration 1 - Marking for details.
8. Carton Marking - The following are required:
  - The "HOUSEHOLD USE ONLY" or "HOUSEHOLD TYPE" must be located on at least one outside surface.
  - Appear in lettering not less than the height as specified,


The dimension of the carton panel (mm)	Minimum height of lettering (mm)
0~152	3.2
152~254	4.8
more than 254	6.4
9. Cautionary Markings - The following are required:
  - Refer to illustration 1 for details.

## 6.0 Critical Features

10. Installation, Operating and Safety Instructions - Instructions for installation and use of this product are provided by the manufacturer.
- The "IMPORTANT SAFEGUARDS" and "SAVE THESE INSTRUCTIONS" was min. 4.8 mm in height.
  - The letter of contents was: for upper case letter, 2.11 mm high min., for lower case letter, 1.6 mm in height min.
  - Refer to Instruction illustration 2 for details

## 7.0 Illustrations

### Illustration 1 - Marking Label

<p><b>CAUTION: TO ENSURE CONTINUED PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLETS ONLY.</b> <b>MISE EN GARDE : POUR ASSURER LA PROTECTION CONTINUE CONTRE LES RISQUES DE CHOC ÉLECTRIQUE, BRANCHER L'APPAREIL DANS DES PRISES DE COURANT MISES À LA TERRE SEULEMENT.</b> <b>PRECAUCIÓN: PARA ASEGURAR CONTINUA PROTECCIÓN CONTRA EL RIESGO DE DESCARGA ELÉCTRICA, ENCHUFE SOLAMENTE EN UN TOMACORRIENTE DE TIERRA.</b></p> <p><b>WARNING: TO PREVENT ELECTRIC SHOCK, UNPLUG BEFORE CLEANING</b> <b>AVERTISSEMENT : POUR ÉVITER LES CHOCS ÉLECTRIQUES, DÉBRANCHER L'APPAREIL AVANT LE NETTOYAGE</b> <b>ADVERTENCIA: PARA EVITAR UNA DESCARGA ELÉCTRICA, DESENCHUFE ANTES DE LIMPIAR.</b></p> <p>Model NO./N° de modèle/Modelo No. <b>TO1303****</b> 120V~60Hz 1150W <b>MADE IN CHINA/FABRIQUÉ EN CHINE/HECHO EN CHINA</b> SPECTRUM BRANDS INC. 3001 DEMING WAY MIDDLETON, WI53562 HOUSEHOLD USE ONLY USAGE DOMESTIQUE SEULEMENT SOLAMENTE PARA USO DOMÉSTICO DO NOT IMMERSE IN WATER NE PAS IMMERGER DANS L'EAU NO SUMERJA EN AGUA</p>	 <p><b>Intertek</b> <b>3073283</b></p> <p>CONFORMS TO/ CONFORME À LA NORME / CUMPLE CON LOS REQUISITOS UL STD .1026 CERTIFIED TO/CERTIFIÉ /CERTIFICADO PARA CSA STD.C22.2 No.1335.1 &amp; No.1335.2.9</p>	<p>Alternative Control No. 3064128</p>
--	---	--

alternative model No.:  
TO1313\*\*\*\*, TO1322\*\*\*\*,  
TO1332\*\*\*\*, TO1342\*\*\*\* and  
TO1373\*\*\*\*

#### Notes:

- (1). The date code is die stamped on the metal blades of the AC attachment plug. The date code is as follows:  
Y = Last digit of the year  
WW = Week of the year  
Example:523 = 23rd week of year 2005
- (2). "DO NOT IMMERSE IN WATER", "HOUSEHOLD USE ONLY", "TO ENSURE CONTINUOUS PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLET ONLY", "To prevent electric shock, unplug before cleaning" and their French shall be not less than 3/32 inch (2.4 mm) in height.
- (3). "CONFORMS TO UL STD. 1026", "CERTIFIED TO CSA STD. C22.2 NO.1335.1 & 1335.2.9", the lettering shall be not less than 1.5 mm in height.
- (4). The ETL logo shall not be less than 8.0 mm in width and 8.0 mm in height, and the "US", "C", control number "3073283" & "3064128" shall be not less than 2 mm in height. "Intertek" shall be not less than 3.0 mm.
- (5). Models: TO1303\*\*\*\*, TO1313\*\*\*\*, TO1322\*\*\*\*, TO1332\*\*\*\*, TO1342\*\*\*\* and TO1373\*\*\*\*, where '\*' = A to Z, 0 to 9 or Blank.
- (6). The brand name "Black & Decker" or "BLACK + DECKER" will be marked on the Glass door.


## 7.0 Illustrations

### Illustration 1a - Marking Label

**CAUTION: TO ENSURE CONTINUED PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLETS ONLY.**  
**MISE EN GARDE : POUR ASSURER LA PROTECTION CONTINUE CONTRE LES RISQUES DE CHOC ÉLECTRIQUE, BRANCHER L'APPAREIL DANS DES PRISES DE COURANT MISES À LA TERRE SEULEMENT.**  
**PRECAUCIÓN: PARA ASEGURAR CONTINUA PROTECCIÓN CONTRA EL RIESGO DE DESCARGA ELÉCTRICA, ENCHUFE SOLAMENTE EN UN TOMACORRIENTE DE TIERRA.**

**WARNING: TO PREVENT ELECTRIC SHOCK, UNPLUG BEFORE CLEANING**  
**AVERTISSEMENT : POUR ÉVITER LES CHOCS ÉLECTRIQUES, DÉ BRANCHER L'APPAREIL AVANT LE NETTOYAGE**  
**ADVERTENCIA: PARA EVITAR UNA DESCARGA ELÉCTRICA, DESENCHUFE ANTES DE LIMPIAR.**

Model NO./N° de modèle /Modelo No. TO1303 \*\*\*\*  
120V-60Hz 1150W  
MADE IN CHINA  
SPECTRUM BRANDS INC.  
3001 DEMING WAY MIDDLETON, WI53562  
HOUSEHOLD USE ONLY  
DO NOT IMMERSE IN WATER



**Intertek**  
3073283

Alternative Control No. 3064128

CONFORMS TO/  
CONFORME À LA NORME /  
CUMPLE CON LOS REQUISITOS UL STD .1026

alternative model No.: TO1313\*\*\*\*,  
TO1322\*\*\*\*, TO1332\*\*\*\*,  
TO1342\*\*\*\* and TO1373\*\*\*\*

#### Notes:

- (1). The date code is die stamped on the metal blades of the AC attachment plug. The date code is as follows:  
Y = Last digit of the year  
WW = Week of the year  
Example: 523 = 23rd week of year 2005
- (2). "DO NOT IMMERSE IN WATER", "HOUSEHOLD USE ONLY", "TO ENSURE CONTINUOUS PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLET ONLY", "To prevent electric shock, unplug before cleaning" shall be not less than 3/32 inch (2.4 mm) in height.
- (3). "CONFORMS TO UL STD. 1026", the lettering shall be not less than 1.5 mm in height.
- (4). The ETL logo shall not be less than 8.0 mm in width and 8.0 mm in height, and the "US", control number "3073283" & "3064128" shall be not less than 2 mm in height. "Intertek" shall be not less than 3.0 mm.
- (5). Models: TO1303\*\*\*\*, TO1313\*\*\*\*, TO1322\*\*\*\*, TO1332\*\*\*\*, TO1342\*\*\*\* and TO1373\*\*\*\*, where '\*' = A to Z, 0 to 9 or Blank.
- (6). The brand name "Black & Decker" or "BLACK + DECKER" will be marked on the Glass door.

## 7.0 Illustrations

### Illustration 1b - Marking Label

**CAUTION: TO ENSURE CONTINUED PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLETS ONLY.**  
**MISE EN GARDE : POUR ASSURER LA PROTECTION CONTINUE CONTRE LES RISQUES DE CHOC ÉLECTRIQUE, BRANCHER L'APPAREIL DANS DES PRISES DE COURANT MISES À LA TERRE SEULEMENT.**  
**PRECAUCIÓN: PARA ASEGURAR CONTINUA PROTECCIÓN CONTRA EL RIESGO DE DESCARGA ELÉCTRICA, ENCHUFE SOLAMENTE EN UN TOMACORRIENTE DE TIERRA.**

**WARNING: TO PREVENT ELECTRIC SHOCK, UNPLUG BEFORE CLEANING**  
**AVERTISSEMENT : POUR ÉVITER LES CHOCS ÉLECTRIQUES, DÉBRANCHER L'APPAREIL AVANT LE NETTOYAGE**  
**ADVERTENCIA: PARA EVITAR UNA DESCARGA ELÉCTRICA, DESENCHUFE ANTES DE LIMPIAR.**

Model NO./N° de modèle/Modelo No. TO1373\*\*\*\*  
120V~60Hz 1150W  
MADE IN CHINA/FABRIQUÉ EN CHINE/HECHO EN CHINA  
SPECTRUM BRANDS INC.  
3001 DEMING WAY MIDDLETON, WI53562  
HOUSEHOLD USE ONLY  
USAGE DOMESTIQUE SEULEMENT  
SOLAMENTE PARA USO DOMÉSTICO  
DO NOT IMMERSE IN WATER  
NE PAS IMMERGER DANS L'EAU  
NO SUMERJA EN AGUA



Alternative Control No. 3064128

CERTIFIED TO/CERTIFIÉ/CERTIFICADO PARA  
CSA STD.C22.2  
No.1335.1 & No.1335.2.9

alternative model No.: TO1313\*\*\*\*,  
TO1322\*\*\*\*, TO1332\*\*\*\*,  
TO1342\*\*\*\* and TO1303\*\*\*\*

#### Notes:

- (1). The date code is die stamped on the metal blades of the AC attachment plug. The date code is as follows:  
Y = Last digit of the year  
WW = Week of the year  
Example: 523 = 23rd week of year 2005
- (2). "DO NOT IMMERSE IN WATER", "HOUSEHOLD USE ONLY", "TO ENSURE CONTINUOUS PROTECTION AGAINST RISK OF ELECTRIC SHOCK, CONNECT TO PROPERLY GROUNDED OUTLET ONLY", "To prevent electric shock, unplug before cleaning" and their French shall be not less than 3/32 inch (2.4 mm) in height.
- (3). "CERTIFIED TO CSA STD. C22.2 NO.1335.1 & 1335.2.9", the lettering shall be not less than 1.5 mm in height.
- (4). The ETL logo shall not be less than 8.0 mm in width and 8.0 mm in height, and the "C", control number "3073283" & "3064128" shall be not less than 2 mm in height. "Intertek" shall be not less than 3.0 mm.
- (5). Models: TO1303\*\*\*\*, TO1313\*\*\*\*, TO1322\*\*\*\*, TO1332\*\*\*\*, TO1342\*\*\*\* and TO1373\*\*\*\*, where '\*' = A to Z, 0 to 9 or Blank.
- (6). The brand name "Black & Decker" or "BLACK + DECKER" will be marked on the Glass door.

## 7.0 Illustrations

### Illustration 2 - Instruction Manual

Please Read and Save this Use and Care Book.

#### IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision must be exercised when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn timer control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of unit when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

#### SAVE THESE INSTRUCTIONS.

This product is for household use only.

##### GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

##### TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

##### ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used:
  - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel, in Latin America, by an authorized service center.

##### HOW TO USE

This product is for household use only.



## CAUTION

**THIS OVEN GETS HOT.  
WHEN IN USE, ALWAYS USE OVEN MITTS OR  
POT HOLDERS WHEN TOUCHING ANY OUTER  
OR INNER SURFACE OF THE OVEN.**

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

##### GETTING STARTED

- Remove all packing material and any stickers.
- Please go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

##### IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or pot holders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select  $\odot$  STAY ON for the oven to function.

**IMPORTANT:** Be sure food or baking dish does not come within 1 1/2 inches of the top heating elements.

**IMPORTANT:** Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

##### TOASTING

It is not necessary to preheat the oven for toasting.

1. Set temperature selector knob to  $\leftrightarrow$  TOAST position.
2. Set cooking FUNCTION selector knob to  $\leftrightarrow$  TOAST.
3. Open oven door and insert slide rack.

4. Place items to be toasted directly on slide rack and close the door.
  5. Turn toast shade selector knob to 10 and then turn back to desired toast shade.
  6. The  $\odot$  indicator light comes on and remains on until toasting cycle is complete.
  7. When toast cycle is complete, there will be an audible signal. The oven and the  $\odot$  indicator light will go off.
  8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
  9. Unplug appliance when not in use.
- For best results, place the bread in the locations shown.

**NOTE:** You must set the toast shade selector knob as desired for the oven to begin toasting.

##### BAKING

**NOTE:** For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature selector knob to the desired temperature.
  2. Turn FUNCTION selector knob to  $\leftrightarrow$  BAKE.
  3. Turn TIMER selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select  $\odot$  STAY ON to bake longer than 30 minutes or to control cooking time yourself.)
  4. The power indicator light comes on and remains on during the entire baking time.
  5. The heating elements will cycle on and off to maintain even heat distribution.
  6. Once oven has preheated, open oven door and insert food. Close oven door.
- NOTE:** Use a metal, glass or ceramic baking dish placed on the slide rack.
7. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to  $\odot$  OFF once cooking cycle is complete.

8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
9. Unplug appliance when not in use.

##### BROILING

**NOTE:** When broiling, preheat oven for 10 minutes.

1. Set temperature selector knob to  $\leftrightarrow$  BROIL.
2. Turn FUNCTION selector knob to  $\leftrightarrow$  BROIL.
3. Open oven door and using the bake pan as a drip tray, insert it under the slide rack and place food directly on slide rack/broil rack. Close oven door.
4. Set the timer selector knob to 10 then turn back or forward to desired broiling time, including 5-minute preheat or to  $\odot$  STAY ON.

**NOTE:** You can cook your food 3 ways:

- Use the bake pan/drip tray placed on the slide rack.
  - Place the bake pan/drip tray under the slide rack / broil rack.
  - Place the food directly on the slide rack / broil tray.
5. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the  $\odot$  OFF position. The power indicator light goes off.
  6. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
  7. Unplug appliance when not in use.

##### KEEP WARM

1. Turn temperature selector knob to  $\leftrightarrow$  KEEP WARM.
2. Turn function selector knob to  $\leftrightarrow$  KEEP WARM.
3. Turn Toast/Timers selector knob past 10 and then turn back or forward to desired warming time. (Select  $\odot$  Stay On to control cooking time yourself.)

**NOTE:** This function is designed to keep already cooked foods warm after they have been cooked. This function should be used for short periods of time; to prevent food from drying out, cover with foil.

4. When cycle is complete, there will be an audible signal. The oven and the power ON indicator light will go off.
5. If not using the oven timer, turn the Toast/Timer selector knob to Off once cycle is complete.
6. Unplug appliance when not in use.

##### CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

##### CLEANING

**Important:** Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.

##### CRUMB TRAY

1. Grasp handle and pull out tray.
2. Dispose of crumbs and wipe tray with a damp cloth; dry thoroughly before placing back in the oven.

##### EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge, dry thoroughly.

##### COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1 1/2" (3.81 cm) away from the upper heating elements.

##### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

##### Two-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Aplica's liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

Por favor lea este instructivo antes de usar el producto

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD.

Cuando se utilizan aparatos eléctricos, siempre se debe respetar ciertas medidas de seguridad a fin de reducir el riesgo de incendio, descarga eléctrica y/o lesiones a las personas, incluyendo las siguientes:

- Por favor lea todas las instrucciones.
- No toque las superficies calientes. Use las asas o las perillas.
- A fin de protegerse contra un choque eléctrico y lesiones a las personas, no sumerja el cable,

## 7.0 Illustrations

### Illustration 2a - Instruction Manual

REMARQUE : Cette fonction sert à garder des aliments au chaud immédiatement après la cuisson. Elle doit être utilisée pour des durées assez brèves; pour empêcher les aliments de sécher, les couvrir de papier d'aluminium.

4. À la fin du cycle, l'appareil émet un signal audible. Le four et le témoin de fonctionnement s'éteignent.  
5. Si le minuteur n'est pas utilisé, mettre la minuterie/sélecteur du degré de grillage à la position OFF à la fin du cycle de cuisson.  
6. Débrancher l'appareil quand il ne sert pas.

#### ENTRETIEN ET NETTOYAGE

L'utilisateur ne peut effectuer lui-même l'entretien d'aucune pièce de cet appareil. En confier l'entretien à du personnel qualifié.

#### NETTOYAGE

Important : Avant de nettoyer une pièce quelconque, s'assurer que le four est éteint, débranché et froid.

1. Nettoyer la porte en verre avec une éponge, un linge doux ou un tampon en nylon et de l'eau savonneuse. Ne pas utiliser de nettoyant à vitres en vaporisateur.  
2. Pour enlever le grille coulissant, ouvrir la porte, puis tirer le grille et les sortir. Les laver dans de l'eau tiède savonneuse ou au lave-vaisselle. Pour venir à bout des taches tenaces, utiliser un tampon en nylon ou en polyester.

3. Laver le plat de cuisson/bac récupérateur et la grille de l'échelle dans de l'eau tiède savonneuse ou au lave-vaisselle. Utiliser un tampon en nylon ou en polyester pour réduire au minimum les égratignures.

#### Plateau à moiettes

1. Saisir la poignée et tirer le plateau.  
2. Jeter les moiettes et essuyer le plateau avec un linge humide.

#### Surfaces extérieures

Essuyer le dessus et les surfaces extérieures avec un linge humide ou une éponge. Bien assécher.

#### Réceptacles de cuisson

Dans le four, on peut utiliser des plats en métal, des plats en verre allant au four ou des plats en céramique, sans couvercle de verre. Suivre les instructions du fabricant. S'assurer que le dessus du réceptacle se trouve à au moins 3,81 cm (1 1/2 po) des éléments chauffants supérieurs.

#### BESOIN D'AIDE?

Pour communiquer avec les services d'entretien ou de réparation, ou pour adresser toute question relative au produit, composer le numéro sans frais approprié indiqué sur la page couverture. Ne pas retourner le produit où il a été acheté. Ne pas poster le produit au fabricant ni le porter dans un centre de service. On peut également consulter le site web indiqué sur la page couverture.

#### Garantie limitée de deux ans

(Valable seulement aux États-Unis et au Canada)

#### Quelle est la couverture?

\* Tout défaut de main-d'œuvre ou de matériau; toutefois, la responsabilité de la société Applica se limite au prix d'achat du produit.

#### Quelle est la durée?

\* Deux années à compter de la date d'achat initiale, avec une preuve d'achat.

#### Quelle aide offrons nous?

\* Remplacement par un produit raisonnablement semblable nouveau ou réusiné.

\* Comment se prévauf-on du service?

\* Conserver son reçu de caisse comme preuve de la date d'achat.

\* Visiter notre site web au [www.prodprotect.com/applica](http://www.prodprotect.com/applica), ou composer sans frais le 1 800 231-9786, pour obtenir des renseignements généraux relatifs à la garantie.

\* On peut également communiquer avec le service des pièces et des accessoires au 1 800 738-0245.

\* C'est-ce que la garantie ne couvre pas?

\* Des dommages dus à une utilisation commerciale.

\* Des dommages causés par une mauvaise utilisation ou de la négligence.

\* Des produits qui ont été modifiés.

\* Des produits utilisés ou entreposés hors du pays où ils ont été achetés.

\* Des pièces en verre et tout autre accessoire emballés avec le produit.

\* Les frais de transport et de manutention reliés au remplacement du produit.

\* Des dommages indirects (tous toutefois prendre note que certains états ne permettant pas l'exclusion ni la limitation des dommages indirects).

\* Quelles lois régissent la garantie?

\* Les modalités de la présente garantie donnent des droits légaux spécifiques. L'utilisateur peut également se prévaloir d'autres droits selon l'état ou la province qu'il habite.

Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fue comprado.

Argentina  
Servicio Técnico  
Monaco 3351  
CABA Argentina  
Tel: 0800 - 444 - 7296  
[servicio@rayovac.com.ar](mailto:servicio@rayovac.com.ar)

Chile  
SERVICIO DE MAQUINAS Y  
HERRAMIENTAS LTDA.  
Portugal Nº 644  
Santiago - Chile  
Fonos: 02-63552018 / 02-6341169  
Email: [servicio@pedrombrandts.cl](mailto:servicio@pedrombrandts.cl)  
Call center: 800-171-051

Colombia  
Rayovac Varta SA  
Carrera 17 Número 89-40  
Línea gratuita nacional  
018000510012

Costa Rica  
Aplicaciones Electromecánicas,  
S.A.  
Calle 26 Bis y Ave. 3  
San José, Costa Rica  
Tel: (506) 257-5716 / 223-0196

Ecuador  
Servicio Master  
Dirección: Capitán Rafael  
Remos OE 1-85 y Galo plaza Ileso.  
Tel: (593) 2281-3882 / 2240-9870

Sello del Distribuidor:  
Fecha de compra:  
Modelo:

Comercializado por:  
Rayovac de México SA de CV  
KIM 14.5 Carretera Puente de Vigas.  
Col. Lacharia, Tultitlán,  
Estado de México, C.P. 54940  
México  
Tel: (55) 5831-7070  
Servicio y Reparación  
Art. 123 No. 95  
Col. Centro, C.P. 06050  
Del. Cuauhtémoc

El Salvador  
Calle San Antonio Abad 2936  
San Salvador, El Salvador  
Tel: (503) 2284-8374

Guatemala  
MacPartes SA  
3ª Calle 414 Zona 9  
Frente a Tecun  
Tel: (502) 2331-5020 / 2332-2101

Honduras  
ServTotal  
Cortigua a Telecentro  
Tegucigalpa, Honduras,  
Tel: (504) 235-8271

México  
Artículo 123 # 95 Local 109 y 112  
Col. Centro, Cuauhtémoc,  
México, D.F.  
Tel: 01 800 714 2503

Nicaragua  
ServTotal  
De semáforo de portezuelo  
500 metros al sur.  
Managua, Nicaragua,  
Tel: (505) 249-7001

[www.applicaservice.com](http://www.applicaservice.com)  
[servicio@applicamail.com](mailto:servicio@applicamail.com)

Código de fecha / Date Code

1150 W 120 V- 60 Hz

Servicio al Consumidor,  
Venta de Refacciones y Accesorios  
01 800 714 2503

Importado por / Imported by:  
RAYOVAC Argentina s.r.l. Humboldt 2485 Piso# 3  
(C1425FUG) C.A.B.A. Argentina. C.U.I.T. No. 30-70706168-1

Importado por / Imported by:  
Rayovac de México SA de CV, KIM 14.5 Carretera  
Puente de Vigas, Col. Lacharia, Tultitlán, Estado de  
México, C.P. 54940  
México Tel: (55) 5831-7070 Del interior marque sin  
código 01 (800) 714 2503



Model/Modelo/ Modèle: T01303SB

Customer Care Line: 1-800-231-9786

For online customer service: [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

Línea de Atención del Cliente: 1-800-231-9786

Para servicio al cliente en línea: [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

Ligne Service à la Clientèle: 1-800-231-9786

Pour le service à la clientèle en ligne: [www.prodprotect.com/applica](http://www.prodprotect.com/applica)



#### 4-SLICE TOASTER OVEN

Product may vary slightly from what is illustrated.

- |  |  |
|--|--|
| 1. Easy-view glass door                              | 7. Bake pan/drip tray (Part# T01303-05)                |
| 2. Temperature selector knob (Part# T01303-01)       | 8. Slide rack/brot rack (Part# T01303-06)              |
| 3. Cooking FUNCTION selector knobs (Part# T01303-02) | 9. Extra-deep curved interior                          |
| 4. Toast/Timer selector knob (Part# T01303-03)       | Note: † Indicates consumer replaceable/removable parts |
| 5. Power Indicator light                             |  |
| 6. Crumb tray (Part# T01303-04)                      |  |

#### HORNO TOSTADOR DE 4 REBANADAS

El producto puede variar ligeramente del que aparece ilustrado.

- |   |  |
|---|--|
| 1. Puerta de vidrio transparente                              | 7. Bandeja para hornear/de goteo (Pieza no. T01303-05)             |
| 2. Control de temperatura (Pieza no. T01303-01)               | 8. Parrilla corrediza/para asar (Pieza no. T01303-06)              |
| 3. Selector de la función de cocción (Pieza no. T01303-02)    | 9. Interior extra profundo   |
| 4. Selector de tostado/reloj automático (Pieza no. T01303-03) | Note: † Indica piezas reemplazables / removibles por el consumidor |
| 5. Luz indicadora de funcionamiento                           |  |
| 6. Bandeja para migas removible (Pieza no. T01303-04)         |  |

#### GRILLE-PAIN FOUR À 4 TRANCHES

Le produit peut différer légèrement de celui qui est illustré.

- |   |   |
|---|---|
| 1. Porte en verre transparente  | 7. Plateau à moiettes (pièce n° T01303-04)                                  |
| 2. Sélecteur de température pour la cuisson (pièce n° T01303-01)      | 8. Grilles coulissantes / grille de l'échelle (pièce n° T01303-06)          |
| 3. Sélecteur de la fonction de cuisson (pièce n° T01303-02)           | 9. Intérieur courbé   |
| 4. Sélecteur de la fonction GRILLAGE / MINUTERIE (pièce n° T01303-03) | Note: Le symbole † indique une pièce amovible/remplaçable par l'utilisateur |
| 5. Témoin de fonctionnement   |   |

USA/Canada 1-800-231-9786

Accessories/Parts 1-800-738-0245

Register your product at [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

EE.UU./Canada 1-800-231-9786

México 01-800-714-2503

Accessories/Partes 1-800-738-0245

Registre su producto a [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

EE.UU./Canada 1-800-231-9786

Accessories/Pieces 1-800-738-0245

inscrivez votre produit en ligne, [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

#### BLACK & DECKER

Is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

Marque de commerce déposée de la société The Black & Decker Corporation, Towson, Maryland, E.-U.

Made and Printed In People's Republic of China  
Fabricado e Impreso en la República Popular de China  
Fabriqué et Imprimé en République populaire de Chine.

© 2012 Applica Consumer Products, Inc.

2012-11-1\_1920 E/S/F

722-5000077

## 7.0 Illustrations

### Illustration 2b - Instruction Manual

Please Read and Save this Use and Care Book.

#### IMPORTANT SAFEGUARDS.

- When using electrical appliances, basic safety precautions should always be followed, including the following:
- Read all instructions before using.
  - Do not touch hot surfaces. Use handles or knobs.
  - To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
  - Close supervision is necessary when any appliance is used by or near children.
  - Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
  - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
  - The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
  - Do not use outdoors.
  - Do not let cord hang over edge of table or counter, or touch hot surfaces.
  - Do not place on or near a hot gas or electric burner, or in a heated oven.
  - Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
  - To disconnect, turn timer control to OFF, then remove plug from wall outlet.
  - Do not use appliance for other than intended use.
  - Use extreme caution when removing tray or disposing of hot grease.
  - Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
  - Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or increase risk of electric shock.
  - A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of unit when in operation.
  - Extreme caution should be exercised when using containers constructed of other than metal or glass.
  - Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
  - Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
  - Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.

#### SAVE THESE INSTRUCTIONS.

This product is for household use only.

##### GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

##### TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

##### ELECTRICAL CORD

- a) A short power supply cord (or detachable power supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power supply cord or extension cord is used:
  - 1) The marked electrical rating of the detachable power supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel, in Latin America, by an authorized service center.

##### HOW TO USE

This product is for household use only.



#### CAUTION

THIS OVEN GETS HOT.  
WHEN IN USE, ALWAYS USE OVEN MITTS OR  
POT HOLDERS WHEN TOUCHING ANY OUTER  
OR INNER SURFACE OF THE OVEN.

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials. Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

##### GETTING STARTED

- Remove all packing material and any stickers.
- Please go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

#### IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select STAY ON for the oven to function.



**IMPORTANT:** Be sure food or baking dish does not come within 1½ inches of the top heating elements.

**IMPORTANT:** Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

##### TOASTING

- It is not necessary to preheat the oven for toasting.
1. Set temperature selector knob to TOAST position.
  2. Set cooking FUNCTION selector knob to TOAST.
  3. Open oven door and insert slide rack.
  4. Place items to be toasted directly on slide rack and close the door.
  5. Turn toast shade selector knob to 10 and then turn back to desired toast shade.
  6. The on indicator light comes on and remains on until toasting cycle is complete.
  7. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
  8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
  9. Unplug appliance when not in use.



**NOTE:** You must set the toast shade selector knob as desired for the oven to begin toasting.

##### BAKING

**NOTE:** For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature selector knob to the desired setting.
2. Turn FUNCTION selector knob to BAKE.
3. Turn TIMER selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself.)
4. The power indicator light comes on and remains on during the entire baking time.
5. The heating elements will cycle on and off to maintain even heat distribution.
6. Once oven has preheated, open oven door and insert food.
7. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to OFF once cooking cycle is complete.
8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
9. Unplug appliance when not in use.

##### BROILING

**NOTE:** When broiling, preheat oven for 10 minutes.

1. Set temperature selector knob to BROIL.
2. Turn FUNCTION selector knob to BROIL.
3. Open oven door and using the bake pan as a drip tray, insert it under the slide rack and place food directly on slide rack/broil rack.
4. Set the timer selector knob to 10 then turn back or forward to desired broiling time, including 5-minute preheat or to STAY ON.

**NOTE:** You can cook your food 3 ways:

- Use the bake pan/drip tray placed on the slide rack.
  - Place the bake pan/drip tray under the slide rack / broil rack.
  - Place the food directly on the slide rack / broil tray.
5. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the OFF position. The power indicator light goes off.
  6. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
  7. Unplug appliance when not in use.

##### KEEP WARM

1. Turn temperature selector knob to KEEP WARM.
  2. Turn Toast/Timer selector knob past 10 and then turn back or forward to desired warming time. (Select Stay On to control cooking time yourself.)
- NOTE:** This feature is designed to keep already cooked foods warm after they have been cooked. This function should be used for short periods of time; to prevent food from drying out, cover with foil.
3. When cycle is complete, there will be an audible signal. The oven and the power ON indicator light will go off.
  4. If not using the oven timer, turn the Toast/Timer selector knob to Off once cycle is complete.
  5. Unplug appliance when not in use.

##### CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

##### CLEANING

**Important:** Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.

##### CRUMB TRAY

1. Grasp handle and pull out tray.
2. Dispose of crumbs and wipe tray with a damp cloth; dry thoroughly before placing back in the oven.

##### EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge; dry thoroughly.

##### COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1½" (3.81 cm) away from the upper heating elements.

##### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

##### Two-Year Limited Warranty (Applies only in the United States and Canada)

##### What does it cover?

- Any defect in material or workmanship provided; however, Aplica's liability will not exceed the purchase price of product.

##### For how long?

- Two years from the date of original purchase with proof of such purchase.

##### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

##### How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-

**7.0 Illustrations**

**Illustration 2c - Instruction Manual**

Please call the appropriate number listed below to request when warranty becomes effective and where you can call for service, repairs or parts in the country where the product was purchased.

Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fue comprado.

- |   |  |
|---|--|
| <p><b>Argentina</b><br/>Servicio Técnico<br/>Morro 3351<br/>CABA Argentina<br/>Tel: (900)-444-7296<br/>servicio@rayovac.com.ar</p>  | <p><b>México</b><br/>Artículo 123 # 95 Local 109 y 112<br/>Col. Centro, Cuauhtemoc,<br/>México, D.F.<br/>Tel. 01 800 714 2503</p>  |
| <p><b>Chile</b><br/>SERVICIO DE MAQUINAS Y<br/>HERRAMIENTAS LTDA.<br/>Portugal # 644<br/>Santiago - Chile<br/>Fonos: 02-8335208 / 02-6341169<br/>Email: servicio@spectrumbrands.cl<br/>Call center: 800-171-051</p> | <p><b>Nicaragua</b><br/>Serv Total<br/>De semáforo de portezuelo<br/>500 metros al sur.<br/>Managua, Nicaragua,<br/>Tel. (505) 248-7001</p>                                      |
| <p><b>Colombia</b><br/>Rayovac Varta SA<br/>Carrera 17 Número 89-40<br/>Línea gratuita nacional<br/>018001610002</p>  | <p><b>Panamá</b><br/>Servicios Técnicos CAPPI<br/>Juncabuerto Boulevard<br/>El Dorado Panamá<br/>500 metros al sur.<br/>Tel. 3020-490-800 sin costo<br/>(507) 2360-236 / 159</p> |
| <p><b>Costa Rica</b><br/>Aplicaciones Electromecánicas,<br/>S.A.<br/>Calle 26 Bis y Ave. 3<br/>San José, Costa Rica<br/>Tel. (506) 257-5716 / 223-0136</p>  | <p><b>Paraguay</b><br/>Servicio Central Fast Service<br/>Av. Arroyos Este 2401<br/>San Solito, Lima Paro<br/>Tel. (511) 2251-368</p>   |
| <p><b>Ecuador</b><br/>Servicio Master<br/>Dirección: Capitán Rafael<br/>Pezma OE 1-85 y Galo plaza Iasso.<br/>Tel (593) 2281-5882 / 2240-8670</p>   | <p><b>Puerto Rico</b><br/>Buckeye Service<br/>Jesus P. Pintero #1013<br/>Puerto Nuevo, SJ PR 00920<br/>Tel.: (787) 782-8175</p>  |
| <p><b>El Salvador</b><br/>Calle San Antonio Apad 2936<br/>San Salvador, El Salvador<br/>Tel. (503) 2254-8274</p>  | <p><b>República Dominicana</b><br/>Industria Av. Rómulo<br/>Belmonte<br/>Zona Industrial de Herrera<br/>Santo Domingo, República<br/>Dominicana<br/>Tel.: (809) 530-5409</p>     |
| <p><b>Guatemala</b><br/>MacPartes SA<br/>3ª Calle 414 Zona 9<br/>Frente a Iecun<br/>Tel. (502) 2331-5020 / 2332-2101</p>  | <p><b>Venezuela</b><br/>Inversiones BDR CA<br/>Av. Casanova C.C.<br/>City Market Nivel Plaza Local 153<br/>Distrito Hotel Mérida, Caracas.<br/>Tel. (582) 324-0969</p>           |
| <p><b>Honduras</b><br/>Serv Total<br/>Contigua a Telecentro<br/>La granada, Honduras,<br/>Tel. (504) 235-6271</p>   | <p>www.applिकासervice.com<br/>servicio@appliance.com</p>   |



Modelo/Modelo/ Modèle: T01313SBD, T01313SWD  
Customer Care Line: 1-800-231-9786  
For online customer service: www.prodprotect.com/applिकास  
Línea de Atención del Cliente: 1-800-231-9786  
Para servicio al cliente en línea: www.prodprotect.com/applिकास  
Ligne Service à la Clientèle: 1-800-231-9786  
Pour le service à la clientèle en ligne: www.prodprotect.com/applिकास



**4-SLICE TOASTER OVEN**

- Product may vary slightly from what is illustrated.
- |   |  |
|---|--|
| 1. Easy-view glass door                               | †7. Bake pan/drip tray (Part# T01313-05)               |
| †2. Temperature selector knob (Part# T01313-01)       | †8. Slide rack/broil rack (Part# T01313-06)            |
| †3. Cooking function selector knobs (Part# T01313-02) | 9. Extra deep curved interior                          |
| †4. Toast/ther selector knob (Part# T01313-03)        | Note: † indicates consumer replaceable/removable parts |
| 5. Power indicator light                              |  |
| †6. Crumb tray (Part# T01313-04)                      |  |

**HORNO TOSTADOR DE 4 REBANADAS**

- El producto puede variar ligeramente del que aparece ilustrado.
- |   |  |
|---|--|
| 1. Puerta de vidrio transparente                                | †7. Bandeja para hornear/de goteo (Pieza no. T01313-05)            |
| †2. Control de temperatura (Pieza no. T01313-01)                | †8. Parrilla corredera/para asar (Pieza no. T01313-06)             |
| †3. Control de funciones de cocción (Pieza no. T01313-02)       | 9. Interior extra profundo   |
| †4. Selector de tostado/retoje automático (Pieza no. T01313-03) | Note: † indica piezas reemplazables / removibles por el consumidor |
| 5. Luz indicadora de funcionamiento                             |  |
| †6. Bandeja para migas removible (Pieza no. T01313-04)          |  |

**GRILLE-PAIN FOUR À 4 TRANCHES**

- Le produit peut différer légèrement de celui qui est illustré.
- |  |   |
|--|---|
| 1. Porte en verre transparente                                       | †7. Plat de cuisson / Plateau d'égouttage (pièce n° T01313-05)              |
| †2. Sélecteur de température pour la cuisson (pièce n° T01313-01)    | †8. Grilles coulissantes / Grille de lèche-tête (pièce n° T01313-06)        |
| †3. Sélecteur de la fonction de cuisson (pièce n° T01313-02)         | 9. Intérieur courbé   |
| †4. Sélecteur de la fonction GRILLAGE/MINUTERIE (pièce n° T01313-03) | Note: Le symbole † indique une pièce amovible/remplaçable par l'utilisateur |
| 5. Témoin de fonctionnement  |   |
| †6. Plateau à miettes (pièce n° T01313-04)                           |   |

Sello del Distribuidor:  
Fecha de compra:  
Modelo:  
**1150 W 120 V~ 60 Hz**

Comercializado por:  
Rayovac de México SA de CV  
KM. 14.5 Carretera Puente de Vigas.  
Col. Lechería, Tultitlán.  
Estado de México.  
C.P. 54940  
México  
Tel: (55) 5831-7070

Servicio y Reparación  
Art. 123 No. 95  
Col. Centro, C.P. 06050  
Deleg. Cuauhtemoc

Servicio al Consumidor,  
Venta de Refacciones y Accesorios  
01 800 714 2503

Código de fecha / Date Code / Le code de date

Comercializado por:  
Rayovac de México SA de CV  
KM. 14.5 Carretera Puente de Vigas.  
Col. Lechería, Tultitlán.  
Estado de México. C.P. 54940  
México  
Tel: (55) 5831-7070  
Servicio y Reparación  
Art. 123 No. 95  
Col. Centro, C.P. 06050  
Deleg. Cuauhtemoc

Servicio al Consumidor,  
Venta de Refacciones y Accesorios  
01 800 714 2503  
Importado por / Imported by:  
RAYOVAC Argentina s.r.l. Humboldt 2495  
Piso # 3  
(01425FUC) C.A.B.A. Argentina. C.U.I.T  
No. 30-  
70706168-1  
Importado por / Imported by:  
Rayovac de México SA de CV  
KM. 14.5 Carretera  
Puente de Vigas. Col. Lechería, Tultitlán.  
Estado de México. C.P. 54940  
México Tel: (55) 5831-7070 Del interior  
marque un costo 01 (800) 714 2503

**BLACK & DECKER.**  
Is a registered trademark of The Black & Decker Corporation,  
Towson, Maryland, USA  
es una marca registrada de The Black & Decker Corporation,  
Towson, Maryland, E.U.  
Marque de commerce déposé de la société The Black &  
Decker Corporation, Towson, Maryland, E.-U.

Made and Printed In People's Republic of China  
Fabricado e Impreso en la República Popular de China  
Fabriqué et Imprimé en République populaire de Chine.



© 2013 Applica Consumer Products, Inc.  
2012-8-14\_87 E/S/F

T22-5000081

## 7.0 Illustrations

### Illustration 2d - Instruction Manual

Please Read and Save this Use and Care Book.

#### IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn timer control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of unit when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

#### SAVE THESE INSTRUCTIONS. This product is for household use only.

##### GROUNDING PLUG

As a safety feature, this product is equipped with a grounding plug, which will only fit into a three-prong outlet, do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

##### TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

##### ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used:
  - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

##### HOW TO USE

This product is for household use only.



## CAUTION

**THIS OVEN GETS HOT.  
WHEN IN USE, ALWAYS USE OVEN MITTS OR  
POT HOLDERS WHEN TOUCHING ANY OUTER  
OR INNER SURFACE OF THE OVEN.**

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

##### GETTING STARTED

- Remove all packing material and any stickers.
- Please go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

##### IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select  $\odot$  STAY ON for the oven to function.

**IMPORTANT:** Be sure food or baking dish does not come within 1/2" inches of the top heating elements.

**IMPORTANT:** Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

##### TOASTING

It is not necessary to preheat the oven for toasting.

1. Set temperature selector knob to  $\rightarrow$  TOAST position.
2. Open oven door and insert slide rack.
3. Place items to be toasted directly on slide rack and close the door.

4. Turn toast shade selector knob to 10 and then turn back to desired toast shade.
5. The on indicator light comes on and remains on until toasting cycle is complete.
6. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
8. Unplug appliance when not in use.

For best results, place the bread in the locations shown:

**NOTE:** You must set the toast shade selector knob as desired for the oven to begin toasting.

##### BAKING

**NOTE:** For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature selector knob to the desired temperature.
2. Turn TIMER selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select  $\odot$  STAY ON to bake longer than 30 minutes or to control cooking time yourself!)
3. The power indicator light comes on and remains on during the entire baking time.
4. The heating elements will cycle on and off to maintain even heat distribution.
5. Once oven has preheated, open oven door and insert food. Close oven door.

**NOTE:** Use a metal, glass or ceramic baking dish placed on the slide rack.

6. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to  $\odot$  OFF once cooking cycle is complete.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
8. Unplug appliance when not in use.

##### BROILING

**NOTE:** When broiling, preheat oven for 10 minutes.

1. Set temperature selector knob to  $\rightarrow$  BROIL.
2. Open oven door and using the bake pan as a drip tray, insert it under the slide rack and place food directly on slide rack/broil rack. Close oven door.
3. Set the timer selector knob to 10 then turn back or forward to desired broiling time, including 5-minute preheat or to  $\odot$  STAY ON.

**NOTE:** You can cook your food 3 ways:

- Use the bake pan/drip tray placed on the slide rack.
- Place the bake pan/drip tray under the slide rack / broil rack.
- Place the food directly on the slide rack / broil tray.

4. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the  $\odot$  OFF position. The power indicator light goes off.
5. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
6. Unplug appliance when not in use.

##### KEEP WARM

1. Turn temperature selector knob to  $\rightarrow$  KEEP WARM.
2. Turn Toast/Timer selector knob past 10 and then turn back or forward to desired warming time. (Select  $\odot$  Stay On to control cooking time yourself.)

**NOTE:** This feature is designed to keep already cooked foods warm after they have been cooked. This function should be used for short periods of time; to prevent food from drying out, cover with foil.

3. When cycle is complete, there will be an audible signal. The oven and the power ON indicator light will go off.
4. If not using the oven timer, turn the Toast/Timer selector knob to Off once cycle is complete.
5. Unplug appliance when not in use.

##### CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

##### CLEANING

**Important:** Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.

##### CRUMB TRAY

1. Grasp handle and pull out tray.
2. Dispose of crumbs and wipe tray with a damp cloth; dry thoroughly before placing back in the oven.

##### EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge, dry thoroughly.

##### COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1/2" (3.81 cm) away from the upper heating elements.

##### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

##### Two-Year Limited Warranty

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Appliance's liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

Por favor lea este instructivo antes de usar el producto

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD.

Cuando se utilizan aparatos eléctricos, siempre se debe respetar ciertas medidas de seguridad a fin de reducir el riesgo de incendio, descarga eléctrica y/o lesiones a las personas, incluyendo las siguientes:

- Por favor lea todas las instrucciones.
- No toque las superficies calientes. Use las asas o las perillas.
- A fin de protegerse contra un choque eléctrico y lesiones a las personas, no sumerja el cable, los enchufes ni el aparato en agua ni en ningún otro líquido.
- Todo aparato eléctrico usado en la presencia de los niños o por ellos mismos requiere la supervisión de un adulto.
- Desconecte el aparato del tomacorriente cuando no esté en uso y antes de limpiarlo. Espere

**7.0 Illustrations**

**Illustration 2e - Instruction Manual**

5. Débrancher l'appareil quand il ne sert pas.

**ENTRETIEN ET NETTOYAGE**

L'utilisateur ne peut effectuer lui-même l'entretien d'aucune pièce de cet appareil. En confier l'entretien à du personnel qualifié.

**NETTOYAGE**

Important : Avant de nettoyer une pièce quelconque, s'assurer que le four est éteint, débranché et froid.

- Nettoyer la porte en verre avec une éponge, un linge doux ou un tampon en nylon et de l'eau savonneuse. Ne pas utiliser de nettoyant à vitres en vaporisateur.
- Pour nettoyer la grille coulissante, ouvrir la porte, puis tirer la grille et les sortir. Les laver dans de l'eau tiède savonneuse ou au lave-vaisselle. Pour venir à bout des taches tenaces, utiliser un tampon en nylon ou en polyester.
- Laver le plat de cuisson/bac récupérateur et la grille de l'échelle dans de l'eau tiède savonneuse ou au lave-vaisselle. Utiliser un tampon en nylon ou en polyester pour réduire au minimum les égratignures.

**Plateau à miettes**

- Saisir la poignée et tirer le plateau.
- Nettoyer les miettes et essuyer le plateau avec un linge humide.

**Sur faces extérieures**

Essuyer le dessus et les surfaces extérieures avec un linge humide ou une éponge. Bien assécher.

**Réceptacles de cuisson**

Dans le four, on peut utiliser des plats en métal, des plats en verre allant au four ou des plats en céramique, sans couvercle de verre. Suivre les instructions du fabricant. S'assurer que le dessus du récipient se trouve à au moins 3,81 cm (1 1/2 po) des éléments chauffants supérieurs.

**BESOIN D'AIDE?**

Pour communiquer avec les services d'entretien ou de réparation, ou pour adresser toute question relative au produit, composer le numéro sans frais approprié indiqué sur la page couverture. Ne pas retourner le produit où il a été acheté. Ne pas poster le produit au fabricant ni le porter dans un centre de services. On peut également consulter le site web indiqué sur la page couverture. Garantie limitée de deux ans.

(Valable seulement aux États-Unis et au Canada)

**Quelle est la couverture?**

- Tout défaut de main-d'œuvre ou de matériau; toutefois, la responsabilité de la société Appliance se limite au prix d'achat du produit.

**Quelle est la durée?**

- Deux année(s) à compter de la date d'achat initiale, avec une preuve d'achat.
- Quelques aide offrons nous?

- Remplacement par un produit raisonnablement semblable nouveau ou révisé.

**Comment se prévaut-on du service?**

- Conservé son reçu de caisse comme preuve de la date d'achat.
  - Visiter notre site web au [www.prodprotect.com/applca](http://www.prodprotect.com/applca), ou composer sans frais le 1 800 231-9786, pour obtenir des renseignements généraux relatifs à la garantie.
  - On peut également communiquer avec le service des pièces et des accessoires au 1 800 738-0245.
- Qu'est-ce que la garantie ne couvre pas?
- Des dommages dus à une utilisation commerciale.
  - Des dommages causés par une mauvaise utilisation ou de la négligence.
  - Des produits qui ont été modifiés.
  - Des produits utilisés ou entretenus hors du pays où ils ont été achetés.
  - Des pièces en verre et tout autre accessoire emballés avec le produit.
  - Les frais de transport et de manutention reliés au remplacement du produit.
  - Des dommages indirects (il faut toutefois prouver que certains états ne permettant pas l'exclusion ni la limitation des dommages indirects).

**Quelles lois régissent la garantie?**

- Les modalités de la présente garantie donnent des droits légaux spécifiques. L'utilisateur peut également se prévaloir d'autres droits selon l'état ou la province qu'il habite.

Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fue comprado.

<p><b>Argentina</b> Servicio Técnico Monroe 3351 CABA Argentina Tel: 0800 - 444 - 7296 <a href="mailto:servicio@rayovac.com.ar">servicio@rayovac.com.ar</a></p> <p><b>Chile</b> SERVICIO DE MAQUINAS Y HERRAMIENTAS LIDA. Portugal Nº 644 Santiago - Chile Fonos: 02-6352208 / 02-6341169 Email: <a href="mailto:servicio@spectrumbrands.cl">servicio@spectrumbrands.cl</a> Call center: 800-171-051</p> <p><b>Colombia</b> Rayovac Márta S.A Carrera 17 Número 89-40 Línea gratuita nacional 01800051002</p> <p><b>Costa Rica</b> Aplicaciones Electromecánicas, S.A. Calle 26 Bis y Ave. 3 San José, Costa Rica Tel: (506) 257-5716 / 223-0136</p> <p><b>Ecuador</b> Servicio Master Dirección: Capitán Rafael Ramírez DE 1-35 y Bale plaza Ileso. Tel: (509) 2281-3882 / 2240-9870</p>	<p><b>El Salvador</b> Calle San Antonio Abad 2936 San Salvador, El Salvador Tel. (503) 2284-8374</p> <p><b>Guatemala</b> MacPartes SA 3ª Calle 414 Zona 9 Frente a Tecun Tel. (502) 2331-5020 / 2332-2101</p> <p><b>Honduras</b> Servitotal Cintigua a Telecentro Tegucigalpa, Honduras, Tel. (504) 235-8271</p> <p><b>México</b> Artículo 123 # 95 Local 109 y 112 Col. Centro, Cuauhtémoc, México, D.F. Tel. 01 800 714 2503</p> <p><b>Nicaragua</b> Servitotal De aserradero de portazuelo 500 metros al sur. Managua, Nicaragua, Tel. (505) 248-7001</p> <p><b>Paraguay</b> <a href="http://www.applcaservicio.com">www.applcaservicio.com</a> <a href="mailto:servicio@appliance.com">servicio@appliance.com</a></p>	<p><b>Panamá</b> Servicios Técnicos CAPRI Tumbucmuerto Boulevard El Dorado Panamá 500 metros al sur. Tel. 3020-480-900 sin costo (507) 2360-236 / 159</p> <p><b>Perú</b> Servicio Central Fast Service Av. Angamos Este 2431 San Borja, Lima Perú Tel: (51) 2251-388</p> <p><b>Puerto Rico</b> Buckeye Service Jesús P. Piñero #1013 Puerto Nuevo, SJ PR 00920 Tel: (787) 782-6175</p> <p><b>República Dominicana</b> Prolongación Av. Rómulo Betancourt Zona Industrial de Herrera Santo Domingo, República Dominicana Tel.: (809) 530-5409</p> <p><b>Venezuela</b> Inversiones BDR CA Av. Casanova C.C. City Market Nivel Plaza Local 153 Diagonal Hotel Mérida, Caracas. Tel: (582) 324-0969</p>
---	---	---

Sello del Distribuidor:	Código de fecha / Date Code
Fecha de compra:	
Modelo:	1150 W 120 V- 60 Hz

Comerciado por:  
Rayovac de México SA de CV  
Km. 14.5 Carretera Puente de Vigas,  
Col. Lucheria, Tultitlán,  
Estado de México, C.P. 54940  
México  
Tel: (55) 5831-7070  
Servicio y Reparación  
Art. 123 No. 95  
Col. Centro, C.P. 06050  
Deleg. Cuauhtémoc

Servicio al Consumidor,  
Venta de Refacciones y Accesorios  
en 800 714 2503  
Importado por / Imported by:  
RAYOVAC Argentina s.r.l. Humboldt 2425 Piso# 3  
(C1425FUG) C.A.B.A. Argentina. C.U.I.T. No. 30-70701688-1  
Importado por / Imported by:  
Rayovac de México SA de CV Km. 14.5 Carretera  
Puente de Vigas, Col. Lucheria, Tultitlán, Estado de  
México, C.P. 54940  
México Tel: (55) 5831-7070 Del interior marque sin  
costo 01 (800) 714 2503



Model/Modelo/ Modèle: T013228D, T013258D, T013328D  
Customer Care Line: 1-800-231-9786  
For online customer service: [www.prodprotect.com/applca](http://www.prodprotect.com/applca)  
Línea de Atención del Cliente: 1-800-231-9786  
Para servicio al cliente en línea: [www.prodprotect.com/applca](http://www.prodprotect.com/applca)  
Ligne Service à la Clientèle: 1-800-231-9786  
Pour le service à la clientèle en ligne: [www.prodprotect.com/applca](http://www.prodprotect.com/applca)



**4-SLICE TOASTER OVEN**

Product may vary slightly from what is illustrated.

- |   |   |
|---|---|
| 1. Easy-view glass door   | 16. Bake pan/drip tray (Part# T01313-05)  |
| 2. Temperature selector knob (Part# T01313-01)                      | 17. Side rack/brot rack (Part# T01313-06) |
| 3. Toast/timer selector knob with stay on setting (Part# T01313-02) | 8. Extra deep curved interior             |
| 4. Power indicator light  |   |
| 5. Crumb tray (Part# T01313-04)                                     |   |

Note: † indicates consumer replaceable/removable parts

**HORNO TOSTADOR DE 4 REBANADAS**

El producto puede variar ligeramente del que aparece ilustrado.

- |  |   |
|--|---|
| 1. Puerta de vidrio transparente   | 16. Parrilla comedida/pera asar (Pieza no. T01313-05) |
| 2. Control de temperatura (Pieza no. T01313-01)                                | 17. Parrilla comedida/pera asar (Pieza no. T01313-06) |
| 3. Selector de tostado/tiempo automático (TOAST / TIMER) (Pieza no. T01313-02) | 8. Interior extra profundo                            |
| 4. Luz indicadora de funcionamiento  |   |
| 5. Bandeja para migas removible (Pieza no. T01313-04)                          |   |
| 6. Bandeja para migas removible (Pieza no. T01313-05)                          |   |

Note: † indica piezas reemplazables/removibles por el consumidor

**GRILLE-PAIN FOUR À 4 TRANCHES**

Le produit peut différer légèrement de celui qui est illustré.

- |   |   |
|---|---|
| 1. Porte en verre transparente  | 16. Grilles coulissantes / Grille de l'échelle (pièce n° T01313-05) |
| 2. Sélecteur de température pour la cuisson (pièce n° T01313-01)      | 17. Grilles coulissantes / Grille de l'échelle (pièce n° T01313-06) |
| 3. Sélecteur de la fonction GRILLAGE / MINUTERIE (pièce n° T01313-02) | 8. Intérieur courbé   |
| 4. Témoin de fonctionnement   |   |
| 5. Plateau à miettes (pièce n° T01313-04)                             |   |
| 6. Plat de cuisson / Plateau d'égouttage (pièce n° T01313-05)         |   |

Note: Le symbole † indique une pièce amovible/remplaçable par l'utilisateur

USA/Canada 1-800-231-9786  
Accessories/Parts 1-800-738-0245  
Register your product at [www.prodprotect.com/applca](http://www.prodprotect.com/applca)

EE.UU./Canada 1-800-231-9786  
Mexico 01-800-714-2503  
Accesorios/Partes 1-800-738-0245  
Registre su producto a [www.prodprotect.com/applca](http://www.prodprotect.com/applca)

EE.UU./Canada 1-800-231-9786  
Accesorios/Partes 1-800-738-0245  
inscriba votre produit en ligne, [www.prodprotect.com/applca](http://www.prodprotect.com/applca)

**BLACK & DECKER**

Is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

Marque de commerce déposée de la société The Black & Decker Corporation, Towson, Maryland, E.-U.

Made and Printed In People's Republic of China  
Fabricado e Impreso en la República Popular de China  
Fabriqué et imprimé en République populaire de Chine.

© 2012 Appliance Consumer Products, Inc.

2012-11-1\_1919 E/S/F

T22-5000083

## 7.0 Illustrations

### Illustration 2f - Instruction Manual

Please Read and Save this Use and Care Book.

#### IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or baking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn timer control to OFF; then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pads can break off the pad and touch electrical parts, creating a risk of electric shock.
- Overused foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of unit when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

#### SAVE THESE INSTRUCTIONS.

This product is for household use only.

#### GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

#### TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

#### ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
  - b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
  - c) If a long detachable power-supply cord or extension cord is used:
    - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
    - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
    - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

#### HOW TO USE

This product is for household use only.



## CAUTION

THIS OVEN GETS HOT.  
WHEN IN USE, ALWAYS USE OVEN MITTS OR  
POT HOLDERS WHEN TOUCHING ANY OUTER  
OR INNER SURFACE OF THE OVEN.

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

#### GETTING STARTED

- Remove all packing material and any stickers.
- Please go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

#### IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or pot holders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select **STAY ON** for the oven to function.

**IMPORTANT:** Be sure food or baking dish does not come within 1 1/2 inches of the top heating elements.

**IMPORTANT:** Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

#### TOASTING

It is not necessary to preheat the oven for toasting.

1. Set temperature selector knob to **TOAST** position.
2. Set cooking FUNCTION selector knob to **TOAST**.
3. Open oven door and insert slide rack.
4. Place items to be toasted directly on slide rack and close the door.
5. Turn toast shade selector knob to 10 and then turn back to desired toast shade.

6. The on Indicator light comes on and remains on until toasting cycle is complete.
7. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.

8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.

9. Unplug appliance when not in use.

For best results, place the bread in the locations shown.



**NOTE:** You must set the toast shade selector knob as desired for the oven to begin toasting.

#### BAKING

**NOTE:** For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature selector knob to the desired temperature.
2. Turn FUNCTION selector knob to **BAKE**.
3. Turn TIMER selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select **STAY ON** to bake longer than 30 minutes or to control cooking time yourself.)
4. The power indicator light comes on and remains on during the entire baking time.
5. The heating elements will cycle on and off to maintain even heat distribution.
6. Once oven has preheated, open oven door and insert food. Close oven door.

**NOTE:** Use a metal, glass or ceramic baking dish placed on the slide rack.

7. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to **OFF** once cooking cycle is complete.

8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.

9. Unplug appliance when not in use.

#### BROILING

**NOTE:** When broiling, preheat oven for 10 minutes.

1. Set temperature selector knob to **BROIL**.
  2. Turn FUNCTION selector knob to **BROIL**.
  3. Open oven door and using the bake pan as a drip tray, insert it under the slide rack and place food directly on slide rack/broil rack. Close oven door.
  4. Set the timer selector knob to 10 then turn back or forward to desired broiling time, including 5-minute preheat or to **STAY ON**.
- NOTE:** You can cook your food 3 ways:
- Use the bake pan/drip tray placed on the slide rack.
  - Place the bake pan/drip tray under the slide rack / broil rack.
  - Place the food directly on the slide rack / broil tray.
5. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the **OFF** position. The power indicator light goes off.
  6. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
  7. Unplug appliance when not in use.

#### KEEP WARM

1. Turn temperature selector knob to **KEEP WARM**.
2. Turn function selector knob to **KEEP WARM**.
3. Turn Toast/Timer selector knob past 10 and then turn back or forward to desired warming time. (Select **Stay On** to control cooking time yourself.)

**NOTE:** This feature is designed to keep already cooked foods warm after they have been cooked. This function should be used for short periods of time; to prevent food from drying out, cover with foil.

3. When cycle is complete, there will be an audible signal. The oven and the power ON indicator light will go off.

4. If not using the oven timer, turn the Toast/Timer selector knob to Off once cycle is complete.

5. Unplug appliance when not in use.

#### CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

#### CLEANING

**Important:** Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and soapy water. Do not use a spray glass cleaner.

2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.

3. Wash the bake pan in soapy water. To minimize scratching, use a polyester or nylon pad.

#### CRUMB TRAY

1. Grasp handle and pull out tray.

2. Dispose of crumbs and wipe tray with a damp cloth; dry thoroughly before placing back in the oven.

#### EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge; dry thoroughly.

#### COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1 1/2" (3.81 cm) away from the upper heating elements.

#### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

#### Two-Year Limited Warranty

(Applies only in the United States and Canada)

#### What does it cover?

• Any defect in material or workmanship provided; however, Appliance's liability will not exceed the purchase price of product.

#### For how long?

• Two years from the date of original purchase with proof of such purchase.

#### What will we do to help you?

• Provide you with a reasonably similar replacement product that is either new or factory refurbished.

#### How do you get service?

• Save your receipt as proof of date of sale.

• Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786,

for general warranty service.

• If you need parts or accessories, please call 1-800-738-0245.

#### What does your warranty not cover?

• Damage from commercial use

• Damage from misuse, abuse or neglect

• Products that have been modified in any way

• Products used or serviced outside the country of purchase

• Glass parts and other accessory items that are packed with the unit

• Shipping and handling costs associated with the replacement of the unit

• Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

#### How does state law relate to this warranty?

• This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

Por favor lea este instructivo antes de usar el producto

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD.

Quando se utilizan aparatos eléctricos, siempre se debe respetar ciertas medidas de seguridad a fin de reducir el riesgo de incendio, descarga eléctrica y/o lesiones a las personas, incluyendo las siguientes:

- Por favor lea todas las instrucciones.
- No toque las superficies calientes. Use las asas o las perillas.
- A fin de protegerse contra un choque eléctrico y lesiones a las personas, no sumerja el cable, los enchufes ni el aparato en agua ni en ningún otro líquido.
- Todo aparato eléctrico usado en la presencia de los niños o por ellos mismos requiere la

**7.0 Illustrations**

**Illustration 2g - Instruction Manual**

au besoin le temps de temps de réchaud.)  
**REMARQUE :** Cette fonction sert à garder des aliments au chaud immédiatement après la cuisson. Elle doit être utilisée pour des durées assez brèves; pour empêcher les aliments de sécher, les couvrir de papier d'aluminium.  
4. À la fin du cycle, l'appareil émet un signal audible. Le four et le témoin de fonctionnement s'éteignent.  
5. Si la minuterie n'est pas utilisée, mettre la minuterie/sélecteur du degré de grillage à la position OFF à la fin du cycle de cuisson.  
6. Débrancher l'appareil quand il ne sert pas.

**ENTRETIEN ET NETTOYAGE**

L'utilisateur ne peut effectuer lui-même l'entretien d'aucune pièce de cet appareil. En confier l'entretien à du personnel qualifié.  
**NETTOYAGE**  
Important: Avant de nettoyer une pièce quelconque, s'assurer que le four est éteint, débranché et froid.  
1. Nettoyer la porte en verre avec une éponge, un lingé doux ou un tampon en nylon et de l'eau savonneuse. Ne pas utiliser de nettoyant à vitres ni vaporisateur.  
2. Pour enlever la grille coulissante, ouvrir la porte, puis tirer la grille et les sortir. Les laver dans de l'eau tiède savonneuse ou au lave-vaisselle. Pour venir à bout des taches tenaces, utiliser un tampon en nylon ou en polyester.  
3. Laver le plat de cuisson/bac récupérateur et la grille de l'échappement dans de l'eau tiède savonneuse ou au lave-vaisselle. Utiliser un tampon en nylon ou en polyester pour réduire au minimum les égratignures.

**Plateaux à miettes**

1. Saisir la poignée et tirer le plateau (K).
2. Jeter les miettes et essuyer le plateau avec un lingé humide.

**Surfaces extérieures**

Essuyer le dessus et les surfaces extérieures avec un lingé humide ou une éponge. Bien assécher.  
**Réceptacles de cuisson**  
Dans le four, on peut utiliser des plats en métal, des plats en verre allant au four ou des plats en céramique, sans couvercle de verre. Suivre les instructions du fabricant. S'assurer que le dessus du récipient se trouve à au moins 3,81 cm (1 1/2 po) des éléments chauffants supérieurs.

**BESOIN D'AIDE?**

Pour communiquer avec les services d'entretien ou de réparation, ou pour adresser toute question relative au produit, composer le numéro sans frais approprié indiqué sur la page couverture. Ne pas retourner le produit où il a été acheté. Ne pas poster le produit au fabricant ni le porter dans un centre de service. On peut également consulter le site web indiqué sur la page couverture.  
**Garantie limitée de deux ans**  
(Valable seulement aux États-Unis et au Canada)

**Quelle est la couverture?**

- Tout défaut de main-d'œuvre ou de matériel; toutefois, la responsabilité de la société Applica se limite au prix d'achat du produit.
- Deux années(s) à compter de la date d'achat initial, avec une preuve d'achat.

**Quelle aide offrons-nous?**

- Remplacement par un produit raisonnablement semblable nouveau ou révisé.
- Comment se prévaut-on du service?
- Conserver son reçu de caisse comme preuve de la date d'achat.
- Visiter notre site web au [www.prodprotect.com/applica](http://www.prodprotect.com/applica), ou composer sans frais le 1 800 231-9786, pour obtenir des renseignements généraux relatifs à la garantie.
- On peut également communiquer avec le service des pièces et des accessoires au 1 800 738-0245. Qu'est-ce que la garantie ne couvre pas?
- Des dommages dus à une utilisation commerciale.
- Des dommages causés par une mauvaise utilisation ou de la négligence.
- Des produits qui ont été modifiés.
- Des produits utilisés ou entretenus hors du pays où ils ont été achetés.
- Des pièces en verre et tout autre accessoire antérieurs à la date d'achat.
- Les frais de transport et de manutention reliés au remplacement du produit.
- Des dommages indirects (il faut toutefois prendre note que certains États ne permettent pas l'exclusion ni la limitation des dommages indirects).

**Quelles lois régissent la garantie?**

- Les modalités de la présente garantie donnent des droits légaux spécifiques. L'utilisateur peut également se prévaloir d'autres droits selon l'état ou la province qu'il habite.

Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fue comprado.

<p>Argentina Servicio Técnico Monroe 3351 CABA Argentina Tel: 0800-444-7296 <a href="mailto:servicio@rayovac.com.ar">servicio@rayovac.com.ar</a></p>	<p>El Salvador Calle San Antonio Abad 2936 San Salvador, El Salvador Tel: (503) 2284-8374</p>	<p>Panamá Servicios Técnicos CAPPI Turbermo Boulevard El Dorado Panamá 500 metros al sur. Tel: 302-461-800 sin costo (507) 236-236 / 159</p>
<p>Chile SERVICIO DE MAQUINARIAS Y HERRAMIENTAS LTDA. Portugal Nº 64 Santiago - Chile Fonos: 02-6352208 / 02-6341169 Email: <a href="mailto:servicio@spectrumbands.cl">servicio@spectrumbands.cl</a> Call center: 800-771-051</p>	<p>Guatemala MacPartes SA 3ª Calle 414 Zona 9 Frente a Tecun Tel: (502) 2391-5020 / 2392-2101</p>	<p>Perú Servicio Central Post Service Av. Angamos Este 2431 San Borja, Lima Perú Tel: (511) 2251-388</p>
<p>Colombia Rayovac Varta SA Carrera 17 Número 89-40 Línea gratuita nacional 018000510012</p>	<p>Honduras Servitotal Comigua a Telecentro Tegucigalpa, Honduras Tel: (504) 235-6271</p>	<p>Puerto Rico Buckeye Service Jesus P. Pifredo #1013 Puerto Nuevo, SJ PR 00920 Tel: (787) 782-6175</p>
<p>Costa Rica Aplicaciones Electromecánicas, S.A. Calle 26 Bis y Ave. 3 San José, Costa Rica Tel: (506) 257-5716 / 223-0136</p>	<p>México Artículo 123 # 05 Local 109 y 112 Col. Centro, Cuauhtémoc, México, D.F. Tel: 01 800 714 2503</p>	<p>República Dominicana Prolongación Av. Rómulo Betancourt Zona Industrial de Herrera Santo Domingo, República Dominicana Tel: (809) 530-5409</p>
<p>Ecuador Servicio Master Dirección: Capitán Rafael Ramos OE 1-35 y Galo plaza lesso. Tel: (593) 2281-3882 / 2240-9870</p>	<p>Nicaragua Servitotal De semáforo de portazuelo 500 metros al sur. Managua, Nicaragua, Tel: (505) 248-7001</p>	<p>Venezuela Inversiones BDR CA Av. Casanova C.C. City Market Nivel Plaza Local 153 Diagonal Hotel Mela, Caracas. Tel: (582) 324-0969</p>
<p>www.applिकासervice.com <a href="mailto:servicio@appticentral.com">servicio@appticentral.com</a></p>		

Sello del Distribuidor:	Código de fecha / Date Code
Fecha de compra:	
Modelo:	1150 W 120 V- 60 Hz

Comercializado por:  
Rayovac de México SA de CV  
RM, 14.5 Carretera Puente de Vigas,  
Col. Luchania, Tultitlán,  
Estado de México, C.P. 54940  
México  
Tel: (55) 5831-7070  
Servicio y Reparación  
Art. 123 No. 95  
Col. Centro, C.P. 06950  
Deleg. Cuauhtémoc

Servicio al Consumidor,  
Venta de Repuestos y Accesorios  
01 800 714 2503

Importado por / Imported by:  
SOTVAC Argentina s.r.l. Humilitat 2426 Piso # 3  
(C1425FUG) C.A.B.A. Argentina, C.U.I.T No. 30-707016168-1

Importado por / Imported by:  
Rayovac de México SA de CV, RM, 14.5 Carretera  
Puente de Vigas, Col. Luchania, Tultitlán, Estado de  
México, C.P. 54940  
México Tel: (55) 5831-7070 Del interior marque sin  
costo 01 (800) 714 2503



Modelo/Modelo/ Modèle: T01373SSD

Customer Care Line: 1-800-231-9786  
For online customer service: [www.prodprotect.com/applica](http://www.prodprotect.com/applica)  
Línea de Atención del Cliente: 1-800-231-9786  
Para servicio al cliente en línea: [www.prodprotect.com/applica](http://www.prodprotect.com/applica)  
Ligne Service à la Clientèle: 1-800-231-9786  
Pour le service à la clientèle en ligne: [www.prodprotect.com/applica](http://www.prodprotect.com/applica)



**4-SLICE TOASTER OVEN**

Product may vary slightly from what is illustrated.

- |  |  |
|--|--|
| 1. Easy-view glass door (Pieza no. T01373-01)        | 7. Bake pan/drip tray (Part# T01373-05)                |
| 2. Temperature selector knob (Part# T01373-01)       | 8. Slide rack/broil rack (Part# T01373-06)             |
| 3. Cooking function selector knobs (Part# T01373-02) | 9. Extra deep curved interior                          |
| 4. Toast/timer selector knob (Part# T01373-03)       | Note: † Indicates consumer replaceable/removable parts |
| 5. Power indicator light                             |  |
| 6. Crumb tray (Part# T01373-04)                      |  |

**HORNO TOSTADOR DE 4 REBANADAS**

Este producto puede variar ligeramente del que aparece ilustrado.

- |   |  |
|---|--|
| 1. Puerta de vidrio transparente (Pieza no. T01373-01)          | 7. Bandeja para hornear/de goteo (Pieza no. T01373-05)           |
| 2. Control de temperatura (Pieza no. T01373-01)                 | 8. Parrilla comedia/para asar (Pieza no. T01373-06)              |
| 3. Control de funciones de cocción (Pieza no. T01373-02)        | 9. Interior extra profundo                                       |
| 4. Selector de tostador/tiempo automático (Pieza no. T01373-03) | Note: † Indica piezas reemplazables/removibles por el consumidor |
| 5. Luz indicadora de funcionamiento                             |  |
| 6. Bandeja para migas removible (Pieza no. T01373-04)           |  |

**GRILLE-PAIN FOUR À 4 TRANCHES**

Le produit peut différer légèrement de celui qui est illustré.

- |  |  |
|--|--|
| 1. Porte en verre transparent (Pieza n° T01373-01)                   | †6. Plateau à miettes (pièce n° T01373-04)                                 |
| 2. Sélecteur de température pour la cuisson (pièce n° T01373-01)     | 7. Plat de cuisson / Plateau d'égouttage (pièce n° T01373-05)              |
| 3. Sélecteur de la fonction de cuisson (pièce n° T01373-02)          | 8. Grilles coulissantes / Grille de l'échappement (pièce n° T01373-06)     |
| 4. Sélecteur de la fonction GRILLAGE/ MINUTERIE (pièce n° T01373-03) | 9. Intérieur courbé  |
| 5. Témoin de fonctionnement  | Note: Le symbole † indique une pièce amovible/replaçable par l'utilisateur |

USA/Canada 1-800-231-9786  
Accesorios/Parts 1-800-738-0245  
Register your product at [www.prodprotect.com/applica](http://www.prodprotect.com/applica)  
EE/UK/Canada 1-800-231-9786  
México 01-800-714-2503  
Accesorios/Partes 1-800-738-0245  
Registre su producto a [www.prodprotect.com/applica](http://www.prodprotect.com/applica)  
EE/UK/Canada 1-800-231-9786  
Accesorios/Partes 1-800-738-0245  
inscrive votre produit en ligne, [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

**BLACK & DECKER**

is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA  
es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

Made and Printed in People's Republic of China  
Fabricado e Impreso en la República Popular de China  
Fabriqué et imprimé en République populaire de Chine.



© 2012 Applica Consumer Products, Inc.

2012-11-1\_922 E/FS

T22-5000087

7.0 Illustrations

Illustration 3 - Circuit Diagram

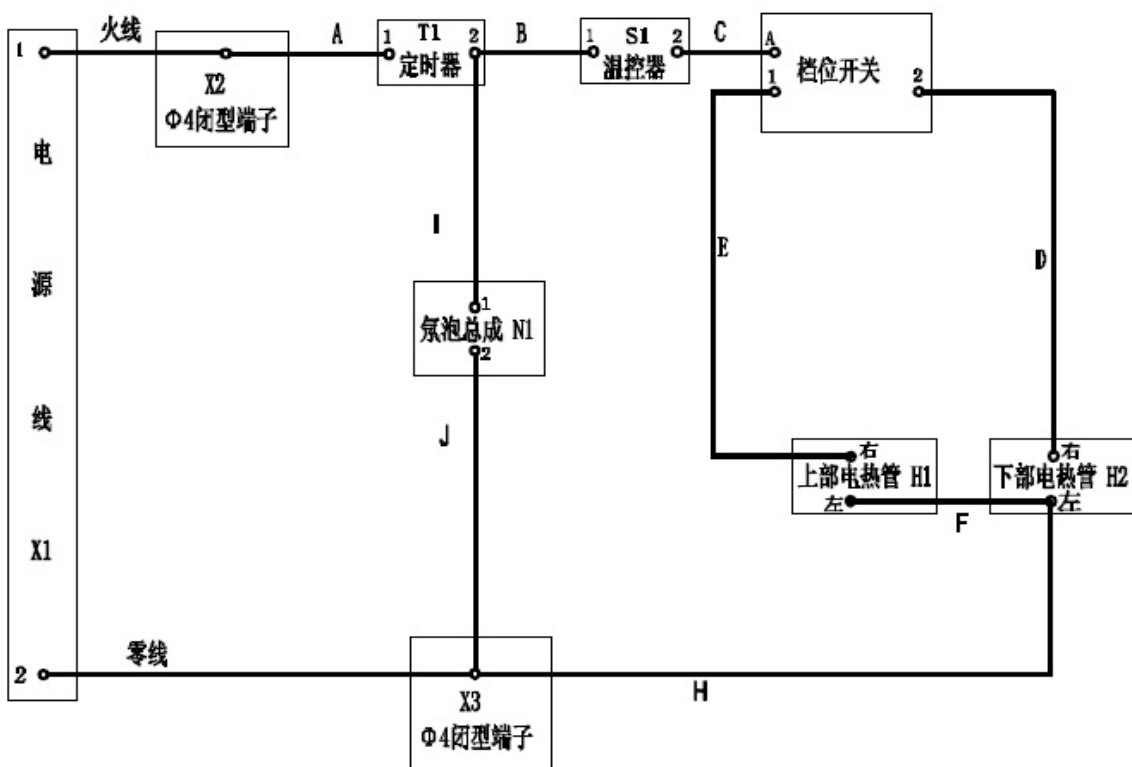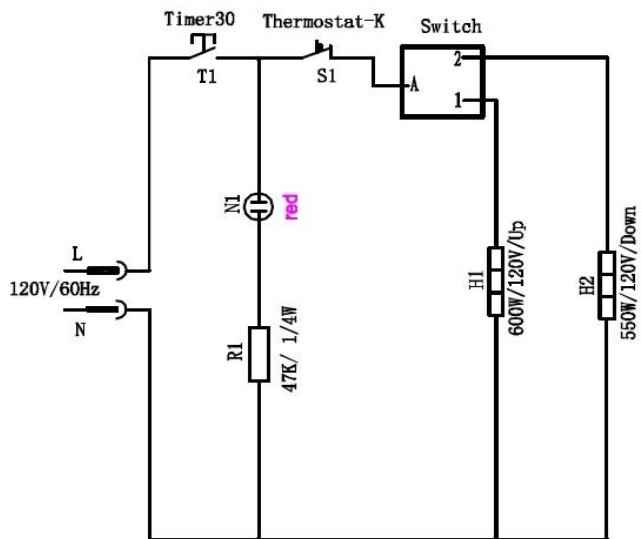



<b>8.0 Test Summary</b>					
Evaluation Period	07-Oct-2013~13-Nov-2013			Project No.	131011061GZU
Sample Rec. Date	07-Oct-2013	Condition	Prototype	Sample ID.	S131011061-001~005, #01~#12
Test Location	Intertek Testing Services Shenzhen Ltd. Guangzhou Branch. (Address: Block E, No.7-2 Guang Dong Software Science Park, Caipin Road, Guangzhou Science City, GETDD, Guangzhou, China) and Elec-Tech International Co., Ltd. (Address: No. 1 Jinfeng Road, Tangjiawan Town, Xiangzhou District, Zhuhai City, Guangdong, China).				
Test Procedure	Testing at Manufacturers Premise				
Determination of the result includes consideration of measurement uncertainty from the test equipment and methods. The product was tested as indicated below with results in conformance to the relevant test criteria.					
The following tests were performed:					
Test Description	UL 1026 6th Edition, Rev. Jan. 27, 2012 clause	CSA C22.2 No. 1335.1-93, Rev. 2008 and CSA C22.2 No. 1335.2.9-93, Rev. 2008 clause	UL 746C, 6th Edition, Rev. Feb. 6, 2013 clause		
Stability Test	8	20.1.2	/		
Strain Relief Test	10	25.15.1	/		
Grounding Test	31	27	/		
Power Input Test	37	10	/		
Leakage Current Test	38	13	/		
Operational Test	39	/	/		
Normal Temperature Test	41	11	/		
Tests for Insulation Resistance and Leakage Current as a Result of Moisture	43	15.3.3	/		
Dielectric Voltage Withstand Test	44	16	/		
Push Back Relief Test	47	/	/		
Glass Window or Door Impact Test	50	/	/		
Metal Enclosure Impact Test	52	21.2	/		
Non-Metal Enclosure Fasteners Test	53	/	/		
Abnormal Operation Test	55	19.4	/		
Component Switch and Control Device	60	18.2.104, 24.15.2	/		
Strain Relief Test after Mold Stress-Relief Distortion Test	/	/	31		
Polymeric Enclosure Impact Test	/	/	56		
Mold Stress-Relief Distortion Test	/	/	61		
Burnout bread test	/	19.101.4-19.101.7	/		
Test Description	UL 635, 3rd Ed., Rev. Mar. 08, 2012 /Clause	/	/		
Strain-Relief Test	11	/	/		
Sharp Bend Protection Test	12	/	/		

<b>8.0 Test Summary</b>			
Evaluation Period	23-Oct-2014~12-Nov-2014		Project No. 141023101GZU
Sample Rec. Date	23-Oct-2014	Condition Prototype	Sample ID. S141023101-003
Test Location	Intertek Testing Services Shenzhen Ltd. Guangzhou Branch. (Address: Block E, No.7-2 Guang Dong Software Science Park, Caipin Road, Guangzhou Science City, GETDD, Guangzhou, China)		
Test Procedure	Testing Lab		
Determination of the result includes consideration of measurement uncertainty from the test equipment and methods. The product was tested as indicated below with results in conformance to the relevant test criteria.			
The following tests were performed:			
Test Description	UL1026, Issued: Jan. 27, 2012, 6th edition, Rev. May 29, 2014 clause	/	/
Glass Window or Door Impact Test	50	/	/
<b>8.1 Signatures</b>			
A representative sample of the product covered by this report has been evaluated and found to comply with the applicable requirements of the standards indicated in Section 1.0.			
Completed by:	Sidney Guo	Reviewed by:	CJ Zhong
Title:	Engineer	Title:	Team Leader
Signature:	<i>Signature on file</i>	Signature:	<i>Signature on file</i>

**9.0 Correlation Page For Multiple Listings**

The following products, which are identical to those identified in this report except for model number and Listee name, are authorized to bear the ETL label under provisions of the Intertek Multiple Listing Program.

BASIC LISTEE	Spectrum Brands Inc
Address	3001 Deming Way, MIDDLETON WI 53562-1431, USA
Country	USA
Product	Toaster Oven

MULTIPLE LISTEE 1	None.
Address	
Country	
Brand Name	

MANUFACTURER	
Address	
Country	

MULTIPLE LISTEE1 MODELS	BASIC LISTEE MODELS

MULTIPLE LISTEE 2	None.
Address	
Country	
Brand Name	

MANUFACTURER	
Address	
Country	

MULTIPLE LISTEE2 MODELS	BASIC LISTEE MODELS

MULTIPLE LISTEE 3	None.
Address	
Country	
Brand Name	

MANUFACTURER	
Address	
Country	

MULTIPLE LISTEE3 MODELS	BASIC LISTEE MODELS

## 10.0 General Information

The Applicant and Manufacturer have agreed to produce, test and label ETL Listed products in accordance with the requirements of this Report. The Manufacturer has also agreed to notify Intertek and to request authorization prior to using alternate parts, components or materials.

### COMPONENTS

Components used shall be those itemized in this Intertek report covering the product, including any amendments and/or revisions.

### LISTING MARK

The ETL Listing mark applied to the products shall either be separable in form, such as labels purchased from Intertek, or on a product nameplate or other media only as specifically authorized by Intertek. Use of the mark is subject to the control of Intertek.

The mark must include the following four items:

- 1) applicable country identifiers "US" and/or "C" or "US", "C" and "EU"
- 2) the word "Listed" or "Classified" or "Recognized Component" (whichever is appropriate)
- 3) a control number issued by Intertek
- 4) a product descriptor that identifies the standards used for certification. Example:

**For US standards**, the words, "Conforms to" shall appear with the standard number along with the word, "Standard" or "Std." Example: "Conforms to UL Std. XX."

**For Canadian standards**, the words "Certified to CSA Standard CXX No. XX." shall be used, or abbreviated, "Cert. to CSA Std. CXX No. XX."

Can be used together when both standards are used.

**Note: A facsimile must be submitted to Intertek, Attn: Follow-up Services for approval prior to use.**

The facsimile need not have a control number. A control number will be issued **after signed Certification Agreements** have been received by the Follow-up Services office, approval of the facsimile of your proposed Listing Mark, satisfactory completion of the Listing Report, and scheduling of a factory assessment in your facility.

### MANUFACTURING AND PRODUCTION TESTS

Manufacturing and Production Tests shall be performed as required in this Report.

### FOLLOW-UP SERVICE

Periodic unannounced audits of the manufacturing facility (and any locations authorized to apply the mark) shall be scheduled by Intertek. An audit report shall be issued after each visit. Special attention will be given to the following:

1. Conformance of the manufactured product to the descriptions in this Report.
2. Conformance of the use of the ETL mark with the requirements of this Report and the Certification Agreement.
3. Manufacturing changes.
4. Performance of specified Manufacturing and Production Tests.

In the event that the Intertek representative identifies non-conformance(s) to any provision of this Report, the Applicant shall take one or more of the following actions:

1. Correct the non-conformance.
2. Remove the ETL Mark from non-conforming product.
3. Contact the issuing product safety evaluation center for instructions.

### **10.1 Evaluation of Unlisted Components**

Because Unlisted Components are uncontrolled, and they do not fall under a third party follow up program, Intertek may require these components to be tested and/or evaluated at least once annually, more often for certain components, as part of the independent certification process. The Unlisted Components in Section 5.0 require testing and/or evaluation as indicated.

**Note to Intertek Follow Up Inspector: The Component Evaluation Center, CEC, will notify you in writing when these components must be selected and sent to the CEC for re-evaluation**

Ship the samples to:

Intertek Testing Services Shenzhen Limited Guangzhou Branch

ETL Component Evaluation Center

Block E, No. 7-2 Guang Dong Software Science Park, Caipin Road, Guangzhou Science City

CETDD Guangzhou, China.

Attn: Ms. Joey Kuang

Sample Disposition: Due to the destructive nature of the testing, all samples will be discarded at the conclusion of testing unless, the manufacturer specifically requests the return of the samples. The request for return must accompany the initial component shipment.

**11.0 Manufacturing and Production Tests**

The manufacturer agrees to conduct the following Manufacturing and Production Tests as specified:

**Required Tests**

- Dielectric Voltage Withstand Test
- Grounding Continuity Test

**11.1 Dielectric Voltage Withstand Test**

Method

One hundred percent of production of the products covered by this Report shall be subjected to a routine production line dielectric withstand test.

The test shall be conducted on products, which are fully assembled. Prior to applying the test potential, all switches, contractors, relays, etc., should be closed so that all primary circuits are energized by the test potential. If all primary circuits cannot be tested at one time, then separate applications of the test potential shall be made.

The test voltage specified below shall be applied between primary circuits and accessible dead-metal parts. The test voltage may be gradually increased to the specified value but must be maintained at the specified value for one second or one minute as required.

Test Equipment

The test equipment shall incorporate a transformer with an essentially sinusoidal output, a means to indicate the applied test potential, and an audible and/or visual indicator of dielectric breakdown.

The test equipment shall incorporate a voltmeter in the output circuit to indicate directly the applied test potential if the rated output of the test equipment is less than 500VA.

If the rated output of the test equipment is 500VA or more, the applied test potential may be indicated by either:

- 1 - a voltmeter in the primary circuit;
- 2 - a selector switch marked to indicate the test potential; or
- 3 - a marking in a readily visible location to indicate the test potential for test equipment having a single test potential output.

In cases 2 and 3, the test equipment shall include a lamp or other visual means to indicate that the test potential is present at the test equipment output. All test equipment shall be maintained in current calibration.

**Products Requiring Dielectric Voltage Withstand Test:**

<u>Product</u>	<u>Test Voltage</u>	<u>Test Time</u>
All products covered by this Report.	1000V	60 s
	or	
	1200V	1 s

**11.2 Grounding Continuity Test**

Method

Each product listed below shall be subjected to a test to determine that there is continuity between accessible dead-metal parts of the product and the grounding pin or blade of the attachment plug.

If all accessible dead metal is connected, only a single test need be performed. A visual or audible device (ohmmeter, buzzer, etc.) may be used to indicate grounding continuity.

**Products Requiring Grounding Continuity Test:**

All products covered by this Report.

