 


Oral-B®

powered by BRAUN

SMARTSERIES 4000-5000

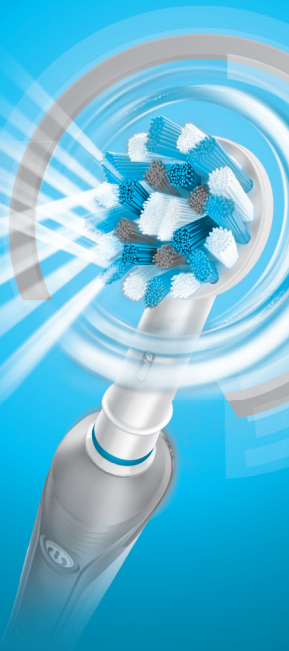

Charger Type 3757
Handle Type 3754



20689216



(CN)



如需了解更多产品信息，
请登陆我们的网站：www.oralb.com

Internet:
www.oralb.com

充电器型号 3757
刷柄型号 3754
220-240 V ac~
50-60 Hz
0.9 W
IP 67

充电器型号 3757
刷柄型号 3754
220-240 V 交流电
50-60赫兹
0.9瓦
IP 67

  91268907/I-17
CN/GB

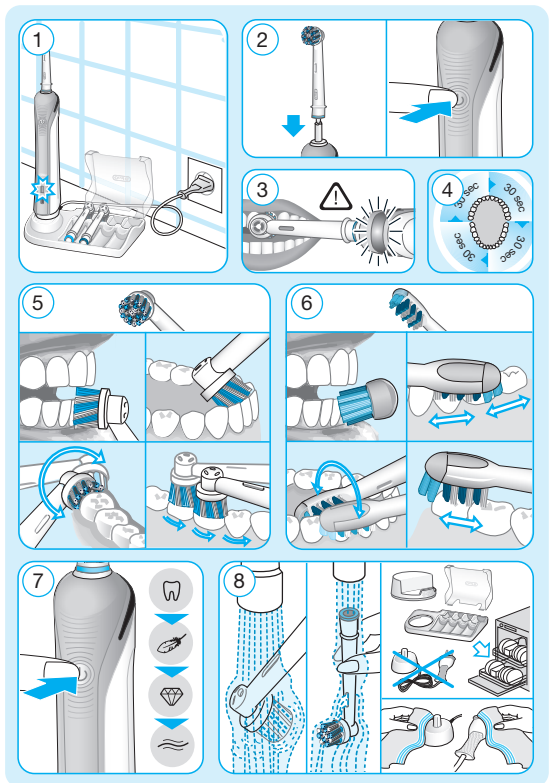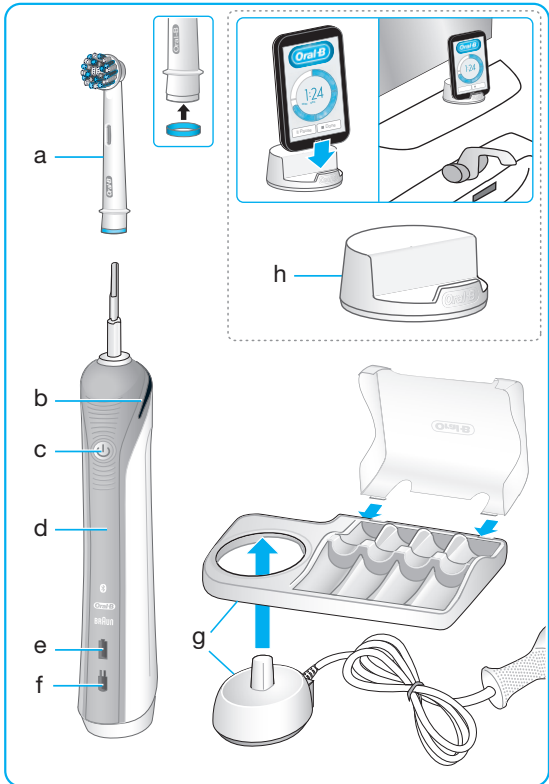

欢迎您使用欧乐B电动牙刷！

在使用本牙刷之前，请仔细阅读本用户手册，并妥善保管以供日后查阅。

重要注意事项

- 定期检查整个产品/电源线有否损坏。已损坏或发生故障的电器不可继续使用。如有损坏请将其送至欧乐B服务中心。不要改装和自行维修本产品。这些行为可能会导致火灾、触电或造成其他伤害。
- 3岁以下儿童请勿使用。儿童、由于身体、感官和精神原因行动不便者及缺乏使用牙刷经验和知识的人群需要在有人监护和指导下安全地使用本产品，并了解可能存在的危险。
- 清洗和维修工作不要交给儿童。
- 不要让儿童玩耍本产品。
- 本产品只能用于本手册说明的用途。不要使用厂商没有推荐使用的零配件。

警告

- 如果产品摔落，即使没有看见损伤也要在下次使用前更换牙刷头。
- 不要将充电器摆放在水里或其他液体中，或储藏在容易跌落浴缸或洗漱台的地方。不要接触已经掉入水中的充电器，而要立即拔出插头。
- 除非拆除电池，不要拆解本产品，取出废旧电池时要小心，不要导致正(+)负(-)极短路。
- 拔出插头时请注意握住插头而不是电源线。不要湿手触碰插头，以免触电。
- 如果您正在接受口腔治疗，请在使用前咨询您的口腔专家。
- 本牙刷是个人护理设备，不是专门针对牙科诊所或者机构设计，不要给多个病人使用。
- 口腔专业护理建议至少每三个月更换一支牙刷，如发现刷头磨损，可提早（或更早）更换。

重要信息

- 您的欧乐B电动牙刷可与你的智能手机相连接，（有关详细信息，请查阅“将牙刷连接到智能手机”）。
- 为避免电磁干扰或兼容性冲突，在受限环境（如飞机或医院特别标示区域）中使用前请关闭无线电传输。
关闭无线电传输的方法是，同时按下开/关键(c)，持续3秒。所有指示灯(b, e & f)会同时闪烁。按照同样操作程序可以重新启动无线电传输。
注意：每次关闭电动牙刷时，若没有使用无线电传输，则指示灯会同时闪烁。
- 若您正在佩戴起搏器，请确保运行中的电动牙刷远离起搏器6英寸(15厘米)以上。当您怀疑起搏器受到干扰时，请关闭电动牙刷的无线电信号。

产品描述

- a 刷头
- b 压力感应指示灯
- c 开/关按键(模式选择)
- d 刷柄(采用蓝牙无线技术)
- e 充电指示灯
- f 低充电指示灯
- g 充电底座(含充电器及带保护罩刷头盒)
- h 智能手机架(取决于选购型号)

规格

电压规格请参考充电器底座信息。

连接电源和充电

您的电动牙刷使用的是防水刷柄，不导电，可以在浴室安全使用。

- 将充电器(g)插入电源插座，将电动牙刷刷柄(d)放在充电底座中。
- 当绿色充电指示灯(e)闪烁时，表示电动牙刷正在充电。当牙刷充满电时，指示灯关闭。牙刷充满一次电需要14小时，电量可供常规刷牙使用7天时间(每天2次，每次2分钟)(图1)。
注意：完全放电后，充电指示灯不会立即开始闪烁，可能需要约10-15分钟才会开始闪烁。
- 当充电电池电量过低时，按牙刷开/关键后，红色充电指示灯(f)会闪烁几秒。
- 日常使用时，刷柄应该放在充电底座中，让牙刷保持充沛电力。电池不会出现过度充电。
- 电池维护：为了保持充电电池的最佳性能，在正常使用情况下，应该至少每半年拔下充电器，将牙刷刷柄完全放电一次。

如何使用电动牙刷

刷牙技巧

打湿刷头挤上牙膏，您可以使用任何种类的牙膏。为免牙膏飞溅，请在启动电动牙刷前先将刷头放置于口腔内(图2)。缓慢地移动刷头，使其在每颗牙齿表面停留数秒。请从牙齿外侧开始，然后牙齿内侧，再到咀嚼面，均匀地清洗您口腔内四个刷牙区间(图5)。您还可以咨询您的牙科医生或口腔卫生专家获得适合您的刷牙技巧。

使用电动牙刷的前几天时，您的牙龈可能会有轻微的出血现象。通常，几天后此现象应会消失。若使用两周后仍持续有出血现象，请咨询您的牙科医生或口腔卫生专家。对于牙齿和牙龈敏感人群，欧乐B推荐您选择“柔和”模式(与可选择欧乐B“柔软敏感型”刷头一起使用)。

刷牙模式(取决于选购型号)

3-模式	4-模式	刷牙模式 (针对刷柄类型3754)
✓	✓	“日常清洁”-日常口腔清洁标准模式
✓	✓	“柔和”-轻柔彻底地清洁口腔敏感区域
	✓	“美白”-美白抛光模式, 可偶尔或者日常使用
✓	✓	“牙龈护理”-轻柔按摩牙龈

您的电动牙刷启动后自动进入“日常清洁”模式。连续按开/关按键(图7), 将转换刷牙的模式。如果你想关闭电动牙刷的某一个模式, 如“柔和”模式, 可推动并向下按开/关按键, 直到停止转动。

专业计时器

专业计时器设置每隔30秒会通过一声短音, 提示您到时间清洗下一区间牙齿(图4)。一声长音表示到达专家推荐的2分钟刷牙时间。即便牙刷刷柄在刷牙过程中短时间暂停, 计时器仍会记录保存之前的刷牙时间。若暂停时间超过30秒, 计时器将重置。

压力感应器

保护您的牙齿和牙龈, 不要用力刷牙, 你的电动牙刷上安装有一个压力控制装置。如果使用过大力, 红色压力感应灯(b)会亮起, 提醒你减少压力(图3)。此外, 在刷牙时你将还会听到不同的声音。请在使用期间定期适度按压刷头以检查压力感应器的运作。

刷头

 
欧乐B为您提供各种不同的牙刷刷头, 以配合您的牙刷刷柄。

我们的摆动-旋转刷头可以精准清洁每颗牙齿。




欧乐B多角度清洁型刷头EB50

这是欧乐B先进的牙刷刷头。刷毛有专门的角度, 以实现精准清洁。能够松动和强力清洁牙菌斑。



欧乐B牙线效果型刷头EB25

 采用微脉冲刷毛, 能够显著清洁牙间隙的牙菌斑。




欧乐B 3D美白型刷头EB18P

含有特殊抛光杯设计, 可以自然美白牙齿。请注意, 十二岁以下儿童不应使用欧乐B 3D美白型刷头。



欧乐B柔软敏感型刷头EB17S

 配有柔软刷毛结构，可以轻柔清洁牙齿和牙龈。



欧乐B精准清洁型刷头EB20

提供有效轻柔的清洁体验，帮助保护牙齿和牙龈。凹面刷毛结构刷头帮助包裹每颗牙齿，同时深度清洁牙齿间隙。

欧乐B电动牙刷头都配有浅蓝色显示®刷毛，帮助您检查是否需要更换刷头。随着每天刷牙两次，每次两分钟的彻底口腔清洁，半数刷毛会在大约3个月内由蓝色褪为白色，提醒您更换刷头。若在褪色前刷毛外张，这也许是您过度用力刷牙和牙龈所致。

我们不推荐使用矫正牙套人群使用欧乐B牙线效果型刷头或欧乐B 3D美白型刷头。你可以使用欧乐B矫正型刷头，该牙刷头专门设计成清洁牙套。

将牙刷连接到智能手机

您可以从应用商店^(SM) 或者Google Play™ 免费下载欧乐B手机应用软件APP。欧乐B手机应用软件APP在苹果或安卓操作系统中都有。

欧乐B手机应用软件APP让您有机会更有效利用刷牙时间，制作刷牙进度图，定制你的刷牙设置(欲知使用软件的更多好处，请查阅欧乐B手机应用软件APP使用说明)。

- 使用欧乐B手机应用软件APP之前，该应用会在整个蓝牙配对过程中给予你指导。
注意：如果手机的蓝牙功能没有激活，欧乐B手机应用软件APP的功能有所限制(相关操作，请查阅你的智能手机用户手册)。
- 一旦从充电器(g)拿起牙刷开始使用，或者按下开/关按键(c)，牙刷自动连接到欧乐B手机应用软件APP。
- 应用更多说明会显示在你的智能手机上。
- 当使用牙刷和智能手机相连时，手机要放在刷柄附近(五米以内)。请确保智能手机安全放置在干燥的地方。
- 智能手机架(h)(取决于选购型号)可在使用电动牙刷时固定你的智能手机。使用前，确保你的手机匹配手机架，保持稳定。

注意：要连接你的电动牙刷，你的智能手机必须支持蓝牙4.0(或者更高)版本。

清洗建议

刷牙后，保持刷柄电源处于打开状态，将牙刷头放置于流水下彻底清洁。关掉电源并移除牙刷头。每次使用后，分别清洁刷柄和刷头，在重新安装前需将它们擦干。清洗前应拆卸充电装置。带保护罩刷头盒和智能手机架适用于洗碗机清洗。充电器只能用湿布清洁(图8)。

 
如有更改，恕不另行通知。

环保提示

本产品包含电池和/或可回收电子废物。为了保护环境，请不要在产品使用期期满后，将本产品与生活垃圾一起处理，请将其送至您本国提供的电子废物回收点。



产品使用寿命结束时移除电池

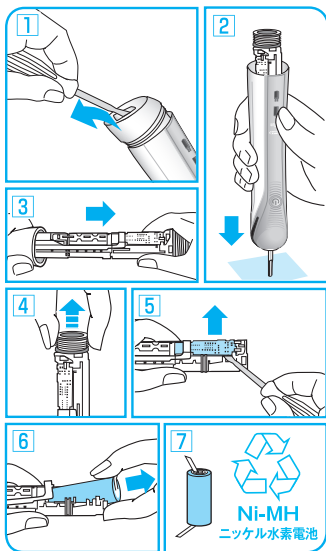

如图所示，打开刷柄，取出电池，根据当地环境法规处理电池。

注意！ 打开刷柄会损坏装置，使保修失效。

保修

我们为产品提供2年的有限保修，保修期从购买之日开始计算。在保修期内对于材料或生产过程所引起的各种瑕疵，我们会免费处理，视情况予以修理或更换整个产品。

本保修适用于全球范围内所有博朗公司及其指定供应商出售的博朗产品。上述保修不包含以下内容：由于使用不当造成的产品损坏；正常使用引起的产品老化、磨损，尤其是刷头，以及对产品的价值或使用功能不产生影响的一些瑕疵。

如果产品经过未经授权的人员修理，或产品使用了非博朗公司的零件，保修期立即终止。

本产品配有蓝牙智能连接无线电组件，无法和某种型号智能手机建立连接不属于设备保修范围，除非是本产品蓝牙智能连接无线电组件损坏造成。蓝牙设备保修由各自制造商而不是博朗公司提供。博朗公司不能影响设备制造商或者向其推荐做出任何改变，因此，欧乐B无法对我们蓝牙系统兼容的蓝牙设备数量承担任何责任。为了确保欧乐B系统可靠运行，欧乐B保留在不事先通知的情况下，对设备功能、接口和菜单结构的系统实现做出必要技术修改或者变更的权利。

若在保修期内需要维修，请在保修期内将本产品和销售单据一同交给授权的欧乐B博朗售后服务中心。

重要信息

蓝牙无线电组件

尽管蓝牙设备所有说明功能都支持，欧乐B也无法确保连接100%的可靠性，100%符合操作功能。

操作性能和连接可靠性直接取决于每个蓝牙设备、软件版本以及承载这些蓝牙设备的操作系统，以及蓝牙设备采用的公司安全规定。

欧乐B坚持并严格实施蓝牙标准，确保蓝牙设备可以和欧乐B牙刷通信并正常运行。

但是，如果设备制造商未能实施这一标准，蓝牙兼容性和功能会受到影响，用户会遇到操作或者与功能相关的问题。请注意，蓝牙设备上的软件可能严重影响兼容性和操作。

1) 质保—排他性与限制

本有限质保仅适用于由宝洁公司及其分公司或附属公司（“P&G”）生产或委托生产且带有博朗/欧乐B商标、商品名称或产品上所附徽标的新产品。本有限质保不包含任何非宝洁公司的产品，包括硬件和软件。本产品以及超出本质保范围的非宝洁公司生产的产品或部件中所保存的任何程序、数据、或其他信息以及媒体如有损坏或丢失，宝洁公司对此不承担任何责任。本有限质保不包含各种程序、数据或其他信息的恢复和安装。

本有限质保不适用于(一)意外、不当使用、滥用、疏忽、误用或非宝洁产品导致的损坏；(二)因博朗或博朗许可服务点以外的其他人员对产品执行检修而导致的损坏；

(三)未经宝洁公司书面许可，进行了改装的产品或部件；以及(四)由于使用或无法使用欧乐B智能手机架/托架、智能手机镜子架或更换旅行装(“配件”)而导致的损坏。

2) 使用您的智能手机架

产品包装内所包含的欧乐B配件旨在当您使用欧乐B手机应用软件APP时，让您能够方便地放置智能手机。使用前，请对您智能手机在欧乐B智能手机架中的朝向进行调整，以确定最佳位置。执行此类操作时，确保如果手机脱离手机架，不会造成您的手机损坏。不要在汽车上使用。

责任限制

在法律许可的范围内，由于欧乐B配件的使用或无法使用而导致的任何形式的直接、间接、意外、非直接、特殊、惩罚性或刑罚性损害，包括但不限于人身伤害、财产损失、因与欧乐B配件一起或在欧乐B配件内使用或无法使用而导致的任何第三方产品的价值丧失，即使宝洁知道发生此类损害的可能性，宝洁及其经销商和供应商亦不会对您或任何第三方承担任何责任。在不限制上一条款的前提下，您了解并同意如果放置于欧乐B配件之中或位于配件之外的任何消费类电子产品或其他个人财产出现损坏或破坏，或者此类产品中的数据出现任何丢失，宝洁公司对此不承担任何责任。在任何情况下，针对欧乐B提出的索赔金额都不应超过购买产品时所实际支付的费用。

刷头保修

如果充电牙刷刷柄损坏是由于使用了非欧乐B品牌刷头，欧乐B的保修终止。

欧乐B不推荐使用非欧乐B品牌刷头，原因是：

- 欧乐B无法控制非欧乐B品牌刷头的质量，因此，我们无法保证非欧乐B品牌刷头的清洁效果，也无法确保刷头与充电刷柄之间通信和最初购买时完全一致。
- 欧乐B不能确保非欧乐B品牌刷头完全匹配欧乐B牙刷。
- 欧乐B不能预测非欧乐B品牌刷头对牙刷刷柄磨损的长期影响。

所有欧乐B品牌刷头都有欧乐B品牌标识，符合欧乐B的高质量标准。欧乐B没有使用其它品牌名称销售刷头或者刷柄零部件。

故障排除

故障现象	可能原因	解决办法
应用软件		
欧乐B手机应用软件APP无法(恰当)操作牙刷。	<ol style="list-style-type: none">1、欧乐B手机应用软件APP没有打开。2、智能手机蓝牙没有激活。3、牙刷无线电传输没有激活。4、蓝牙连接断开。5、你的智能手机不支持蓝牙4.0(或者更高)版本。6、刷柄在即插即用充电器上。	<ol style="list-style-type: none">1、打开欧乐B手机应用软件APP。2、根据智能手机用户手册激活你的智能手机蓝牙功能。3、同时按下开/关按键-(c)持续3秒钟, 激活无线电传输。4、短暂按下开/关按键(c)的功能可以重新连接或通过APP设置进行配对, 配对使用时确保智能手机在刷柄附近范围内。5、为了连接牙刷刷柄, 你的智能手机必须支持蓝牙4.0(或者更高)版本。6. 如果放在即插即用充电器上, 无线传输将关闭。
恢复出厂设置。	想要原有功能。	按下开/关按键(c)10秒, 直到所有指示灯(b, e & f)同时闪烁。 注意: 重置时, 无线传输可能打开(关闭)。重置后, 无线传输重新启动。
牙刷		
牙龈轻度出血。	<ol style="list-style-type: none">1、前几天使用可能会出现。2、牙刷刷头有问题。3、刷牙模式选择不正确。	<ol style="list-style-type: none">1、使用几天后出血会停止, 如果两周后还在流血, 请咨询你的牙医或者口腔卫生专家。2、试试欧乐B“柔软敏感型”刷头。3、切换到“柔和”模式试试。

欧乐B iBrush 5000 3D智能电动牙刷
 进口商/经销商：广州宝洁有限公司
 广州市经济技术开发区滨河路一号
 邮政编码：510730
 热线4008307880或微信关注pgrcare
 限制使用日期(年/月/日)见包装
 刷柄和刷头原产国：德国
 充电器原产国：中国
 充电器标准：GB 4706.1, GB 4706.59

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电动马达	X	0	0	0	0	0
内置电池 (仅适用于 欧乐B清亮 型/亮杰型 系列电动 牙刷)	0	0	X	0	0	0

本表格依据SJ/T 11364的规定编制。

0：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X：表示该有害物质至少在该部件的某一均质材料中的含量超出了GB/T 26572规定的限量要求。

在某些产品中可能包含一次性电池，该电池并非宝洁公司产品，该电池的关于有害物质含量的标识应由电池生产商提供。

Welcome to Oral-B!

Before operating this toothbrush, please read these instructions and save this manual for future reference.

IMPORTANT

- Periodically check the entire product/cord for damage. A damaged or non-functioning unit should no longer be used. If the product/cord is damaged, take it to an Oral-B Service Centre. Do not modify or repair the product. This may cause fire, electric shock or injury.
- Usage by children under age 3 is not recommended. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance shall not be performed by children.
- Children shall not play with the appliance.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.

WARNING

- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Do not place the charger in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.
- Do not disassemble the product except when disposing of the battery. When taking out the battery for disposal of the unit, use caution not to short the positive (+) and negative (-) terminals.
- When unplugging, always hold the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
- Replace brush (head) every 3 months or sooner if brush head becomes worn.

Important Information

- Your Oral-B toothbrush can be used with your Smartphone (find details under «Connecting your toothbrush to your Smartphone»).
- To avoid electromagnetic interference and/or compatibility conflicts, deactivate the radio transmission before using it in restricted surroundings, such as aircrafts or specially marked areas in hospitals. Deactivate radio transmission when your toothbrush is turned off by pressing the on/off button (c) for 3 seconds. All indicator lights (b, e & f) will flash simultaneously. Follow the same procedure to reactivate transmission again. Note: Every time you turn your toothbrush off, when using it without radio transmission, the indicator lights will flash simultaneously.
- Persons with pacemakers should always keep the toothbrush more than six inches (15 centimeters) from the pacemaker while turned on. Anytime you suspect interference is taking place, deactivate the radio transmission of your toothbrush.

Description

- a Brush head
- b Pressure sensor light
- c On/off button (mode selection)
- d Handle (with *Bluetooth*® wireless technology)
- e Charge indicator light
- f Low charge indicator light
- g Charging unit (basic charger and brush head compartment with protective cover)
- h Smartphone holder (depending on model)

Specifications

For voltage specifications refer to the bottom of the charging unit.

Connecting and Charging

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- Plug the charger (g) into an electrical outlet and place the toothbrush handle (d) on the charging unit.
- The green charge indicator light (e) flashes while the handle is being charged. Once it is fully charged, the light turns off. A full charge takes typically 14 hours and enables up to seven days of regular brushing (twice a day, 2 minutes) (picture 1).
- Note: After deep discharge, the charge indicator light might not flash immediately; it can take up to 10–15 minutes.
- If the rechargeable battery is low the red charge indicator light (f) is flashing for some seconds when turning your toothbrush on/off.
- For everyday use, the toothbrush handle can be stored on the charging unit to maintain it at full power. Overcharging is impossible.
- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle with regular use at least every 6 months.

Using your toothbrush

Brushing technique

Wet brush head and apply any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching on the appliance (picture 2). Guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface. Start brushing the outsides, then the insides and finally the chewing surfaces. Brush all four quadrants of your mouth equally (picture 5). You may also consult your dentist or dental hygienist about the right technique for you.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» mode (optional in combination with an Oral-B «Sensitive» brush head).

Brushing modes (depending on model)

3-Modes	4-Modes	Brushing mode (for handle type 3754)
✓	✓	Daily Clean – Standard for daily mouth cleaning
✓	✓	Sensitive – Gentle, yet thorough cleaning for sensitive areas
	✓	Whitening – Exceptional polishing for occasional or everyday use
✓	✓	Gum Care – Gentle massage of gums

Your toothbrush automatically starts in the «Daily Clean» mode. To switch to other modes, successively press the on/off button (picture 7). If you wish to turn off your toothbrush from «Sensitive» mode e.g., push and hold down the on/off button until the motor stops.

Professional Timer

A short stuttering sound at 30-second intervals reminds you to brush all four quadrants of your mouth equally (picture 4). A long stuttering sound indicates the end of the professionally recommended

2-minute brushing time. The elapsed brushing time is memorized even when the handle is briefly switched off during brushing. When pausing longer than 30 seconds the timer resets.

Pressure sensor

 
Protecting your teeth and gums from hard brushing, your toothbrush has a pressure control feature installed. If too much pressure is applied, the red pressure sensor light (b) will light up reminding you to reduce pressure (picture 3). In addition you will also hear a different sound while brushing. Periodically check the operation of the pressure sensor by pressing lightly on the brush head during use.

Brush heads

Oral-B offers you a variety of different brush heads that fit your Oral-B toothbrush handle.

Our **oscillating-rotating brush heads** can be used for tooth-by-tooth precision cleaning.

Oral-B CrossAction brush head



Our most advanced brush head. Angled bristles for a precise clean. Lifts and powers away plaque.

Oral-B FlossAction brush head



features micropulse bristles that allow for an outstanding plaque removal in the interdental areas.

Oral-B 3D White brush head



features a special polishing cup to naturally whiten your teeth. Please note that children under 12 years old should not use the Oral-B «3D White» brush head.

Oral-B Sensitive brush head



features an extra soft bristle structure that is gentle on teeth and gums.

Oral-B Precision Clean brush head



provides effective and gentle cleaning action to help protect both teeth and gums. The brush head cups each tooth with a curved bristle trim and reaches deep between teeth at the same time.

Oral-B brush heads feature light blue INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the blue color will fade halfway approximately within 3 months, indicating the need to exchange your brush head. If the bristles splay before the color recedes, you may exert too much pressure on teeth and gums.

We do not recommend using the Oral-B «FlossAction» or Oral-B «3D White» brush head with braces. You may use the Oral-B «Ortho» brush head, specifically designed to clean around braces and wires.

Connecting your toothbrush to your Smartphone

The Oral-B™ App is available for mobile devices running iOS or Android operating systems. It can be downloaded for free from App Store (SM) or Google Play™.

The Oral-B™ App gives you the opportunity to chart your brushing progress and customize your toothbrush settings (for many more benefits see the Oral-B™ App instructions).

- Start the Oral-B™ App. The App will guide you through the entire *Bluetooth* pairing procedure.
- Note: Oral-B™ App functionality is limited if *Bluetooth* wireless technology is deactivated on your smartphone (for directions please refer to your smartphone's user manual).
- Once you start using your toothbrush by lifting it off the plugged-in charger (g) or briefly turning your toothbrush on and off (c), it automatically connects to the Oral-B™ App.
- Any app instructions will be displayed on your smartphone.
- Keep your smartphone in close proximity (within 5m distance) when using it with the handle. Make sure the smartphone is safely positioned in a dry place.
- The smartphone holder (h) (depending on model) can hold your smartphone while using. Before use, make sure your phone fits the stand and keeps stable.

Note: Your smartphone must support *Bluetooth* 4.0 (or higher)/*Bluetooth* Smart in order to pair your handle.

Cleaning recommendations

After brushing, rinse your brush head under running water with the handle switched on. Switch off and remove the brush head. Clean handle and brush head separately; wipe them dry before reassembling. Unplug the charging unit before cleaning. Brush head compartment/protective cover and smartphone holder are dishwasher-safe. The charger should be cleaned with a damp cloth only (picture 8).

Subject to change without notice.

Environmental Notice

 
Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Ni-MH

Battery removal at the end of the product's useful life

Open the handle as shown, remove the battery and dispose of it according to local environmental regulations.

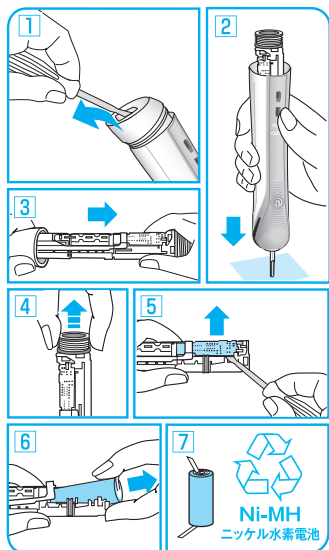

Caution! Opening the handle will destroy the appliance and invalidate the warranty.

Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun parts are not used.

This appliance is equipped with a *Bluetooth* Smart approved radio module. Failure to establish a *Bluetooth* Smart connection to specific smart phones is not covered under the device guarantee, unless the *Bluetooth* radio module of this appliance is damaged. The *Bluetooth* devices are warranted by their own manufacturers and not by Oral-B. Oral-B does not influence or make any recommendations to device manufacturers, and therefore Oral-B does not assume any responsibility for the number of compatible devices with our *Bluetooth* systems.

Oral-B reserves the right, without any prior notice, to make any technical modifications or changes to system implementation of device features, interface, and menu structure changes that are deemed necessary to ensure that Oral-B systems function reliably.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized Oral-B Braun Customer Service Centre.

Information

Bluetooth® radio module

Although all indicated functions on the *Bluetooth* device are supported, Oral-B does not ensure 100% reliability in connection, and feature operation consistency.

Operation performance and connection reliability are direct consequences of each individual *Bluetooth* device, software version, as well as the operating system of those *Bluetooth* devices and company security regulations implemented on the device. Oral-B adheres to and strictly implements the *Bluetooth* standard by which *Bluetooth* devices can communicate and function in Oral-B toothbrushes.

However, if device manufacturers fail to implement this standard, *Bluetooth* compatibility and features will be further compromised and the user may experience functional and feature-related issues. Please note that the software on the *Bluetooth* device can significantly affect compatibility and operation.

1) Warranty – Exclusions and Limitations

This limited warranty applies only to the new products manufactured by or for The Procter & Gamble Company, its Affiliates or Subsidiaries («P&G») that can be identified by the Braun / Oral-B trademark, trade name, or logo affixed thereto. This limited warranty does not apply to any non-P&G product including hardware and software. P&G is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-P&G product or part not covered by this limited warranty. Recovery or reinstallation of programs, data or other information is not covered under this limited warranty.

This limited warranty does not apply to (i) damage caused by accident, abuse, misuse, neglect, misapplication, or non-P&G product; (ii) damage caused by service performed by anyone other than Braun or authorized Braun service location; (iii) a product or part that has been modified without the written permission of P&G, and (iv) damage arising out of the use of or inability to use the Oral-B Smartphone stand/puck, Smartphone mirror holder, or charging travel case («Accessories»).

2) Using your smartphone holder

The Oral-B Accessories included in the package has been designed to provide you with a convenient way to position your smartphone while you are using the Oral-B app. Try multiple orientations of your smartphone in the Oral-B smartphone holder prior to use to determine

the best positioning of your smartphone in the holder. Be sure to try this in a manner which will not harm your smartphone if it falls out of the stand. Do not use in automobiles.

LIMITATION OF LIABILITY

TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL P&G ITS DISTRIBUTORS OR SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES, OF ANY NATURE WHATSOEVER, ARISING OUT OF THE USE OF OR INABILITY TO USE THE ORAL-B ACCESSORIES, INCLUDING, WITHOUT LIMITATION, INJURY TO PERSONS, PROPERTY DAMAGE, LOSS OF VALUE OF ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE ORAL-B ACCESSORIES, OR LOSS OF USE OF THE ORAL-B ACCESSORIES OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE ORAL-B ACCESSORIES, EVEN IF P&G HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. WITHOUT LIMITING THE FOREGOING, YOU UNDERSTAND AND AGREE THAT P&G HAS NO LIABILITY FOR ANY DAMAGE OR DESTRUCTION TO CONSUMER ELECTRONICS DEVICES OR OTHER PERSONAL PROPERTY THAT ARE CONTAINED ON OR EXTERIOR TO THE ORAL-B ACCESSORIES, OR ANY LOSS OF DATA CONTAINED IN THE FOREGOING DEVICES. IN NO EVENT SHALL ANY RECOVERY AGAINST ORAL-B EXCEED THE ACTUAL PRICE PAID FOR THE PURCHASE OF THE PRODUCT.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non-Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

Trouble Shooting

Problem	Possible reason	Remedy
APP		
Handle does not operate (properly) with Oral-B™ App.	<ol style="list-style-type: none"> 1. Oral-B™ App is turned off. 2. <i>Bluetooth</i> interface is not activated on smartphone. 3. Radio transmission is deactivated on handle. 4. <i>Bluetooth</i> connection to smartphone has been lost. 5. Your smartphone does not support <i>Bluetooth</i> 4.0 (or higher)/<i>Bluetooth</i> Smart. 6. Handle on plugged-in charger. 	<ol style="list-style-type: none"> 1. Turn on Oral-B™ App. 2. Activate <i>Bluetooth</i> interface on smartphone (described in its user manual). 3. Activate radio transmission by pressing on/off (c) for 3 seconds. 4. Briefly turn your toothbrush on and off (c) to re-connect or pair handle and smartphone again via app settings. Keep your smartphone in close proximity when using it with handle. 5. Your smartphone must support <i>Bluetooth</i> 4.0 (or higher)/<i>Bluetooth</i> Smart in order to pair handle. 6. Radio transmission is deactivated while handle is placed on plugged-in charger.
Reset to factory settings.	Original functionality wanted.	<p>Press and hold on/off button (c) for 10 seconds until all indicator lights (b, e & f) will double blink simultaneously.</p> <p>Note: radio transmission may be (de)activated while resetting. After reset radio transmission is re-activated.</p>
TOOTHBRUSH		
Gums bleed Slightly.	<ol style="list-style-type: none"> 1. May happen in first days of usage. 2. Brush head. 3. Brushing mode. 	<ol style="list-style-type: none"> 1. Bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. 2. Try using the Oral-B «Sensitive» brush head. 3. Try using the «Sensitive» mode.