

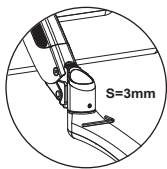


2

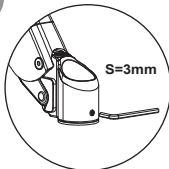


S=3mm
S=5mm
A

Adjust the hexagon socket head cap screw with a 3mm wrench to adjust the damping of swivel

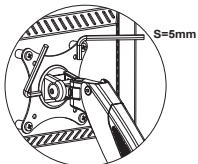


Adjust the Hexagon head screws with a 5 mm wrench to adjust the damping of the swivel

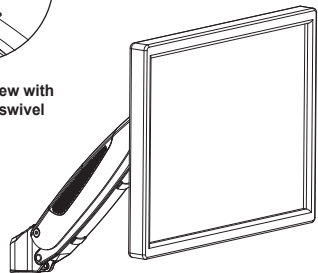





Use a hex wrench to adjust the damping for swiveling. Turn counter-clockwise to reduce damping and clockwise to increase damping.

3

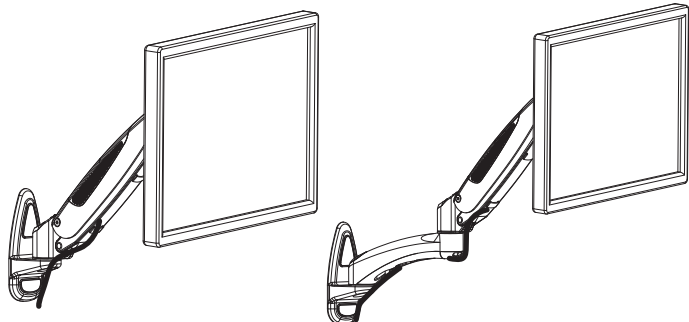

Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.

    Aluminum LCD Monitor Wall Mounts



MODEL: HNWS2


Installation INSTRUCTIONS





If you have any questions, please feel free to contact us at :
customerservice@huanuoav.com Website: www.huanuoav.com


WARNING STATEMENTS


Warning

-  Prior to the installation of this product, the installation instruction must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.


-  Do not install on a structure that is prone to vibration, movement or chance of impact. Reinforce the structure as required before installation.

-  Recommended mounting surfaces: Wooden studs or solid-flat concrete. If the mount is to be installed on any surface other than wooden studs, use suitable hardware.


-  Pay attention to the weight capacity of the mount. Exceeding the limitation can result in function unworkable or even serious personal injury and property damage.

-  Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.


PRODUCT LINE GRAPH

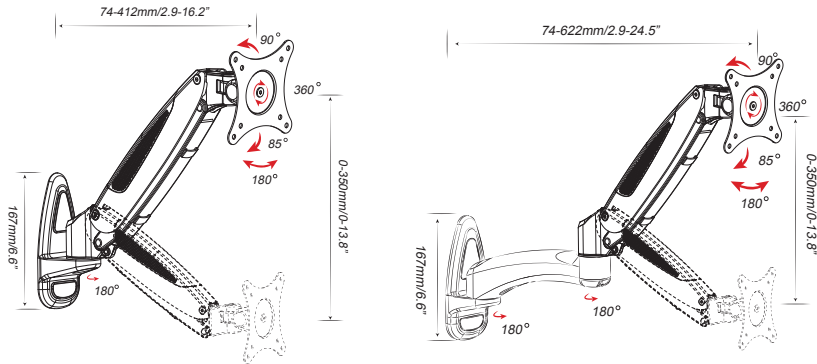

2

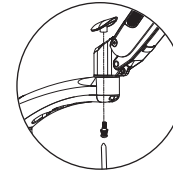


Insert the screw through the hole from extension arm to the decorative cap.

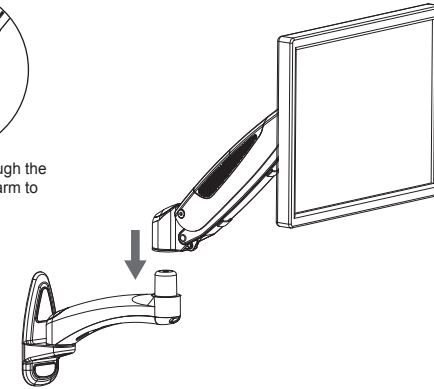


Lift the spring arm along with the monitor and put it on the extension arm.

COMMON STEPS

1

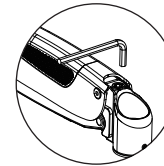

NOTE: Turn clockwise to reduce tension for lighter monitors and counter-clockwise to increase tension for heavier monitors.

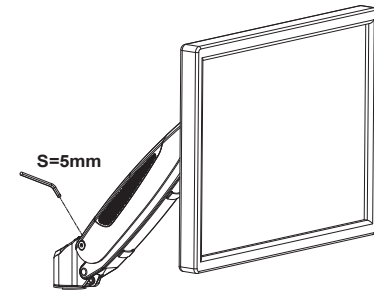


S=5mm
A


Use a hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still at any position.

Installation Steps for Product

1 Components: a、b

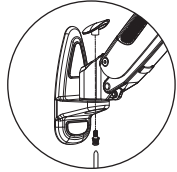


Insert the screw through the hole from the wall plate to the decorative cap.

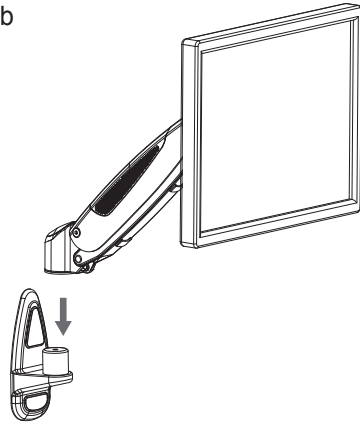



Lift the spring arm along with the monitor and put it on the wall plate.

Installation Steps for Product

1 Components: a、b、c

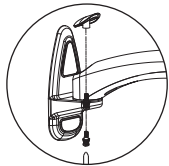

 Insert the screw through the hole from wallplate to the decorative cap.

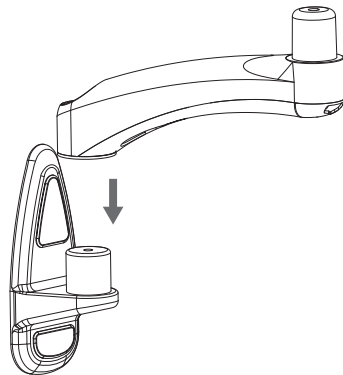








Insert extension arm to the wall plate.

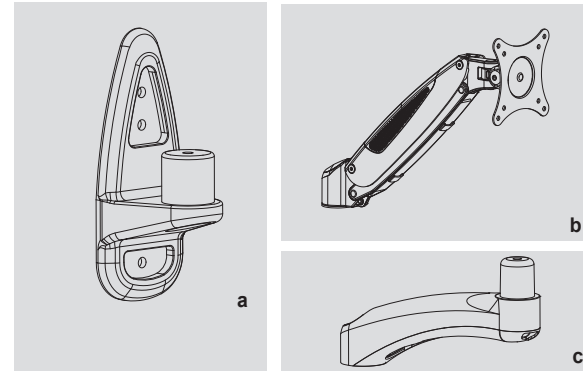









TOOLS REQUIRED NOT INCLUDED




PARTS INCLUDED




A		
	M4x12 (x4)	M4x30 (x4)
		
	M6x50 (x3)	Φ8x40 (x3)
		
	S=3mm (x1)	S=5mm (x1)

B for product			a、b
	13X5.5X16.5 (x4)	(x1)	
			
	M6x25 (x1)	(x1)	(x1)
B for product			a、b、c
	13X5.5X16.5 (x4)	(x1)	
			
	M6x25 (x2)	(x2)	(x1)


COMMON STEPS

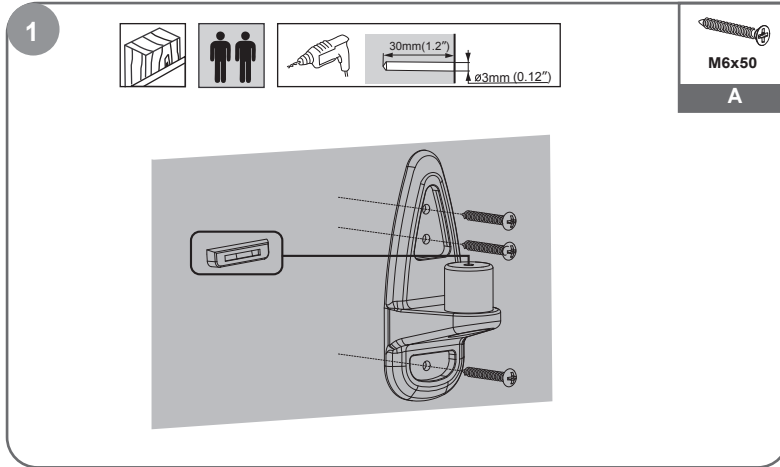


Use a pencil to mark the place for mounting. Make sure the wall structure can support the weight of monitor along with the mount. Avoid dead center for mounting holes.

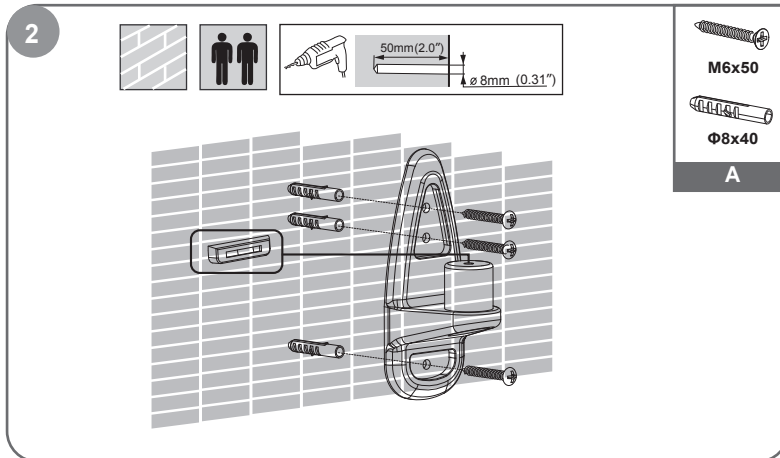

Use a pencil to mark the place for mounting. Make sure the wall structure can support the weight of monitor along with the mount. Avoid electricity for mounting holes.

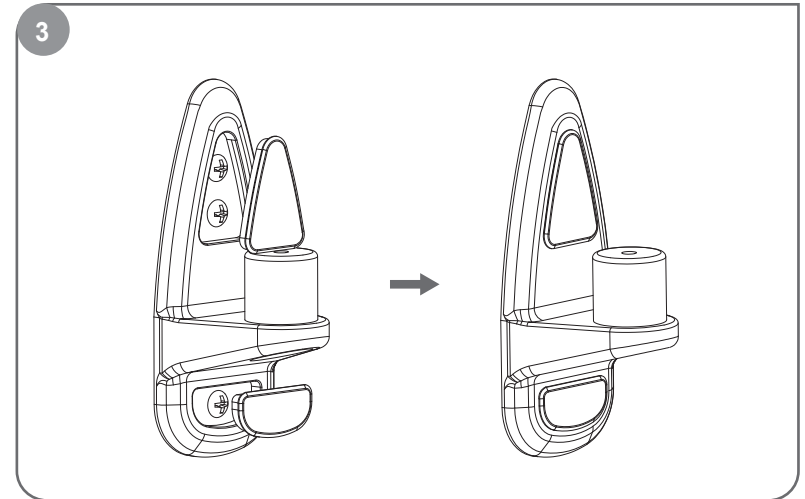

Insert the two plastic covers on wall plate for decorative appearance.

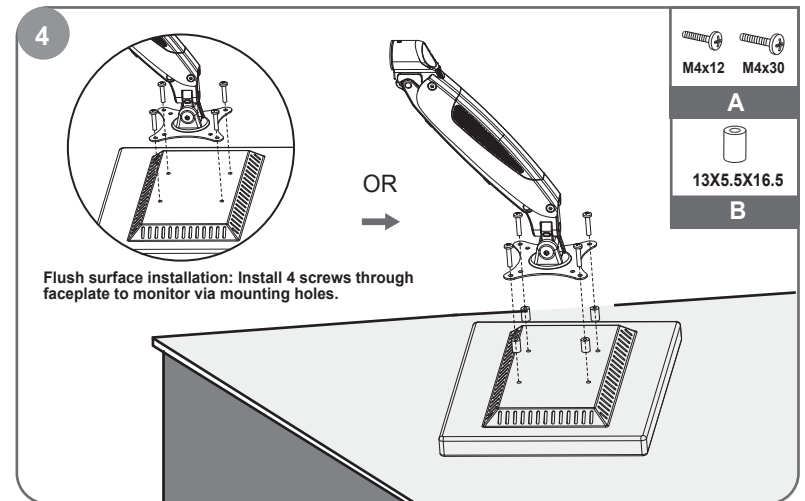

Recessed surface installation: Put 4 spacers between faceplate and monitor. Install 4 screws through faceplate, spacers to monitor via mounting holes.